

Blumate-630

B L U E T OOTH WIRELESS HEADSET

Certification Approval CE/FCC/BQB

USER GUIDE

User Information

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The FCC require the user to be notified that any changes or modification made to this device that are not expressly approved by **Hi-Pro International R&D Co., Ltd.** may avoid the user's authority to operate the equipment.


To comply with FCC RF exposure requirement, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Welcome

1. Thank you for using the Blumate-630 wireless headset.

2. Blumate-630 utilizes the state-of-the-art Bluetooth technology to achieve a wireless connection between your mobile phone and headset. Your mobile phone must be also utilize the same Bluetooth Technology in order to make and receive calls using Blumate-630.

Functions

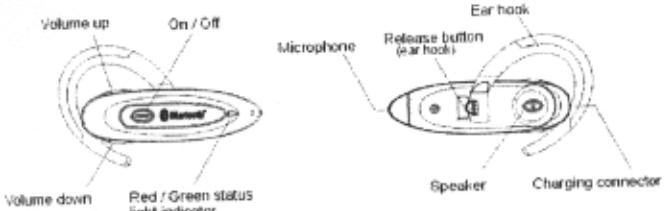


1

2

Your First Use

Battery Charging

1. The headset is equipped with a lightweight and durable Lithium Polymer rechargeable battery.

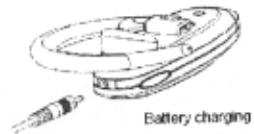

2. We recommend that you charge the battery until the status light indicator turns green before using in the first time.

When charging the indication light will be ...

1. Headset on, the status lights indicator will be → green light flash, red light on. fully Charged, the status lights indicator will be → green light flash, red light off.

2. Headset off, the status lights indicator will be → green light off, red light on. fully Charged, the status lights indicator will be → green light flash, red light off. below the status lights indicator will show on simplify. Ex. (green light on—GL-on red light on—RL-on red light flash—RL-flash).....

▪ Low Battery, the status lights indicator will be → RL-flash

▪ The battery is fully charged when the red light goes off and the green light comes on, it usually takes 2 to 3 hours.

Note: 1. Do not use the headset during charging.

Turn on the headset

Press for 2~3 seconds, you will hear from the speaker. and lighting indicators shall be → GL-flash RL-off

Turn off the headset

Press for 3~4 seconds, you will hear from the speaker. and lighting indicators shall be → GL-off RL-off

Note: Do not hold down too long (more than 2~3 sec.) when turning the headset on. otherwise it may go into pairing mode, if that happens, turn off the headset, wait 3~5 sec, and repeat process for turning the headset on.

Pairing with mobile phone: please follow up the following steps.

1. Turn off the headset, lighting indicators shall be → GL-off RL-off

2. Press the  sequentially, you will hear  ...and then.. Bi.  from the speaker and the lighting indicators shall be \rightarrow GL-On RL-flash

- If your mobile support only Handsfree Profile, please press and release the  again. then you will hear an extra 2 short tones. The Headset Profile is switched to Handsfree Profile.

3. Please take reference from the manual of your mobile phones and turn on the Bluetooth to searching and pairing with Bluemate-630.

4. It means your mobile phone searching with headset successfully when "Bluemate-630" shown on the mobile phone screen. Press the mobile phone YES key and enter PIN number "1 2 3 4" and press "YES". the lighting indicators will be \rightarrow GL-flash RL-off

Note: your mobile phone must be utilized in Bluetooth for making and receiving calls by Bluemate-630

Receiving calls


1. Bluemate-630 stand-by \rightarrow GL-flash RL-off
When the mobile phone rings, please press  to talk.
If the mobile phone rings before the headset, please wait until Bluemate-630 rings and press .
2. Press  again to end the call.
3. During your conversation, the lighting indicators will be \rightarrow GL-on RL-off

- The maximum working distance between Bluemate-630 and mobile phone is 5 meters Indoors, 5 to 10 meters outdoors.
- If Bluemate-630 has been shut down before your conversation with mobile phone, please press  to re-activate Bluemate-630.

③


Volume control

- During conversation press  volume will be up.
- During conversation press  volume will be down.
- When the minimum/maximum volume is reached, a beep chime will be alarmed.
- To mute/un-mute the microphone:
Press  simultaneously until you hear a beep.
Press  simultaneously again to un-mute the microphone.
- If you forget release the mute function when you finished conversation, you will hear chime to remind you release.

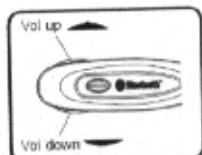

To switch headset on either ear (Placement)

Please put the on earhook behind your ear and the microphone toward your mouth.

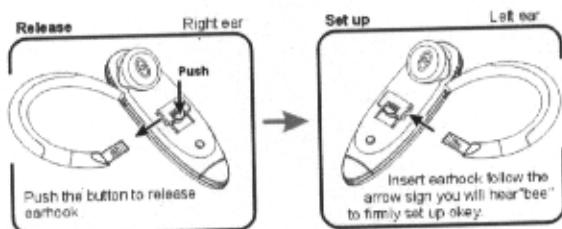

Remarks

1. Battery charging restriction it must be operated in the temperatures range: $+10^{\circ}\text{C} (+50^{\circ}\text{F}) - +45^{\circ}\text{C} (+131^{\circ}\text{F})$.
2. Keep your Bluemate-630 in a dry area all the times and keep it extreme temperature conditions.
3. Do not disassembly Bluemate-630 by yourself. please contact us for after sales service.

④