

Part Name	Part Number	Quantity
Fuse	3A/5.2X20mm	10
Plugs:		
Coaxial Cable Plug (Antenna Plug)	BNC-58/U	2
Power Cable Plug	14P-3F	1
* <sup>1</sup> I/O DATA Plug	FM14-8P	1
* <sup>2</sup> RS-422/232C Plug	HDEB-9S	1
* <sup>3</sup> Coaxial Cable Plug (Extension)	PL-259	1
Active Antenna Unit:		
* <sup>4</sup> Preamplifier Unit	ANT-2000-3F	2
* <sup>4</sup> Whip Element (1.2m)	410298B	1
Printed Circuit Boards (PCBs):		
First Receiver PCB	NT-2000-A	1
* <sup>5</sup> Second Receiver PCB	NT-2000-B	1
* <sup>6</sup> Frequency Converter PCB	N501-F/C-A	1
Power Supply PCB	N501-PWR-A	1
FL Inverter PCB	CXA-L0621A	1
Key PCB	SF-KB02	1

---

*\*<sup>1</sup> Not needed unless the I/O DATA port is used for your applications.*

*\*<sup>2</sup> Not needed unless RS-232C/RS-422 port is used for your applications.*

*\*<sup>3</sup> Dealer-supplied. Not needed unless the cable is extended with a PL-258 connector.*

*\*<sup>4</sup> Not needed if your installation uses a long wire antenna.*

*\*<sup>5</sup> Not needed unless second receiver 490 kHz is used in regular operation.*

*\*<sup>6</sup> Not needed unless second receiver 4209.5 kHz is used in regular operation.*