

Part Name	Part Number	Quantity
Fuse	3A/5.2X20mm	10
Plugs:		
Coaxial Cable Plug (Antenna Plug)	BNC-58/U	2
Power Cable Plug	14-P3F	1
* ¹ I/O DATA Plug	CP111-8P	1
* ² RS-422/232C Plug	HDEB-9S	1
* ³ Coaxial Cable Plug (Extension)	PL-259	1
Active Antenna Unit:		
Preamplifier Unit	ANT-2KM-BASE	2
Whip Element (1.2m)	ANT-2K-RODE	1
Printed Circuit Boards (PCBs):		
Receiver PCB	S602-RCV-X* ⁴	1
Main PCB	M613-MAIN-X* ⁴	1
Keypad PCB	M401-KEY-X* ⁴	1

*¹ Not needed unless the I/O DATA port is used in your applications.

*² Not needed unless RS-232C/RS-422 port is used in your applications.

*³ Dealer-supplied. Not needed unless the cable is extended with a PL-258 connector.

*⁴ The suffix (last digit) will change depending on production lot.