


MODEL: CT-P6200

900MHZ CORDLESS TELEPHONE WITH CALL WAITING CALLER ID

INSTALLATION AND OPERATING GUIDE

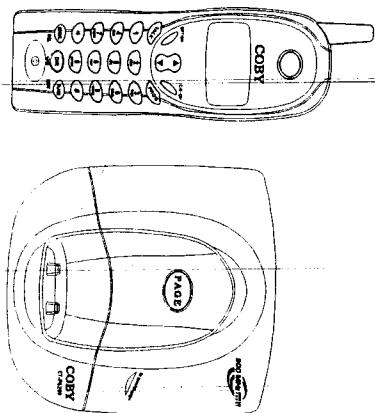

IMPORTANT: To receive Caller ID information on incoming telephone calls, you must subscribe to the Caller ID service provided by your local telephone company; there is a fee for this service and it may not be available in all areas.

CT-P2200 TABLE OF CONTENTS

| | |
|--------------------------------------|-------|
| Important Safety Instructions | 2-3 |
| FCC Regulations | 3-4 |
| Battery Cautionary Instructions | 4 |
| CT-P2200 Parts Checklist | 4 |
| Location of Controls and Features | 5-6 |
| Handset | 5 |
| Bass... | 6 |
| LCD Display | 6 |
| Choosing a Location | 7 |
| Telephone Setup | 7-8 |
| Connecting the Base | 7 |
| Wall Mounting Instruction | 8 |
| ThreePulse Switch | 8 |
| Battery Installation | 8 |
| Battery Duration | 8 |
| When the Battery Needs Charging | 8 |
| When to Purchase a New Battery Pack | 8 |
| Headset and Basic Displays | 9 |
| The Headset Jack | 9 |
| Ball-Clip | 9 |
| Basic Displays | 9 |
| Basic Operation | 9-10 |
| Making Calls | 9 |
| Receiving Calls | 9 |
| Retrieving | 9 |
| Additional Options | 10 |
| Settings | 10-13 |
| Handset Settings | 10 |
| Changing the Language | 11 |
| Turning the First Ring On or Off | 11 |
| Setting the Time and Date | 11 |
| Setting the Area Code | 11-12 |
| Warranty | 21 |
| Speed Dialing | 13-16 |
| Storing Phone Numbers | 13 |
| Letter Table | 14 |
| Viewing the Phone Book | 14 |
| Making Calls from the Phone Book | 14 |
| Deleting a Stored Number | 15 |
| Editing a Stored Number | 15 |
| Priority (VIP) Calls | 15 |
| Blocked (REJ) Calls | 15-16 |
| Caller ID | 16-18 |
| When You Receive a Call | 16 |
| Viewing the Caller ID List | 16 |
| Caller ID Displays | 16 |
| Caller ID with Call Waiting Service | 17 |
| Storing Caller ID Records | 17 |
| Deleting Caller ID Records | 17-18 |
| Returning Caller ID Calls | 18 |
| Message Waiting and Other Features | 18-19 |
| New Call Light | 18 |
| Using the Handset Finder (PAGE) | 18-19 |
| Out-of-Range Warning | 19 |
| Channel Changing | 19 |
| Care Maintenance and Troubleshooting | 19-20 |
| Glossary | 20 |
| Setting the Time and Date | 21 |
| Warranty | 21 |

IMPORTANT SAFETY INSTRUCTIONS

Important Safety Instructions

Adjusting the Contrast

12

Setting the PBX Number

12

Turning PBX Mode On or Off

12

Changing the Pause Time

12

Deleting Message Waiting Indication

12-13

Turning Auto Answer On or Off

13

Disabling the Ring for Private Calls

13

Unavailable Calls

13

Speed Dialing

13-16

Storing Phone Numbers

13

Letter Table

14

Viewing the Phone Book

14

Making Calls from the Phone Book

14

Deleting a Stored Number

15

Editing a Stored Number

15

Priority (VIP) Calls

15

Blocked (REJ) Calls

15-16

Caller ID

16-18

When You Receive a Call

16

Viewing the Caller ID List

16

Caller ID Displays

16

Caller ID with Call Waiting Service

17

Storing Caller ID Records

17

Deleting Caller ID Records

17-18

Returning Caller ID Calls

18

Message Waiting and Other Features

18-19

New Call Light

18

Using the Handset Finder (PAGE)

18-19

Out-of-Range Warning

19

Channel Changing

19

Care Maintenance and Troubleshooting

19-20

Glossary

20

Setting the Time and Date

21

Warranty

21



This symbol is to alert you to important operating or servicing instructions that may appear in the user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electrical shock. When using this product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.

2. Follow all warnings and instructions marked on the product.

3. Use only with class 2 power source DC 9V/300mA.

4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

5. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.

6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.

7. Slots and openings in the cabinet back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.

8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons or animals or persons walking on it.

9. Do not overload wall outlets and extension cords as this can result in risk of fire or electrical shock.

10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in risk of fire or electrical shock.

Never spill liquid on any kind on the product.

11. To reduce the risk of electrical shock, do not disassemble this product. Instead take it to a qualified service person when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause damage.

12. Unplug all cords and refer servicing to qualified service personnel under the following conditions:

A. When the power supply cord or plug is damaged or frayed.

B. If liquid has been spilled into the product.

C. If the product has been exposed to rain or water.

D. If the product does not operate normally by following the operating instructions. Adjust only those controls covered in the operating instructions. Improper adjustment of other controls may result in damage and require work by a qualified technician to restore the product to normal operation.

13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use a telephone to report a gas leak in the vicinity of the leak.

IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:

1. Use only the type and size of batteries specified in the user's manual.

2. Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for specific disposal instructions.

3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.

5. Do not attempt to recharge the batteries with or identify for use with this product. The batteries may leak corrosive electrolyte or explode.

6. Do not attempt to teleport the batteries provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.

7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.

LOCATION OF CONTROLS AND FEATURES


Allows using a handset for hands-free convenience.

New call msg. waiting led indicator

In talk mode, press the key, that let you scroll through menus and keys, and adjust the handset volume, to select the volume level (HI, MID, LOW).

The key is used to change the 7/10/11 digit dialing mode during caller ID call-back.

The key is used to access the telephone line or end a call.

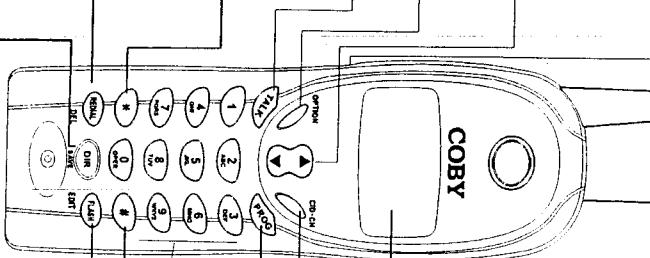

If the base is set to pulse dialing, pressing causes subsequent digits to be dialed out using tone until the line is put back on hook. Also used to view the left part of the display and move the cursor left when editing.

When the phone is idle or off hook, press the key to redial the last number dialed. When viewing or editing menus and keys, the key is used to erase digits on the display and single or multiple entries from the phone book and Caller ID directories.

Use the key to program and retrieve the numbers in the speed dial directory. The key is also used to save numbers into the phone book and other settings.


Handset

LOCATION OF CONTROLS AND FEATURES

Page Button Used to initiate a handset page.

Charge / In Use LED Lights

when the handset is on the cradle is being charged and

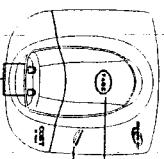

Charging Contacts Used to recharge battery and reset the security code in the handset.

Base

LCD Display

JUHN SMITH
555-555-1212
8:02 10/25 1998

Date/Time Name Character Field
Number Field

Display Name or Entry
Number
RPT for
Total Call
Counter

Name Character Field Displays the caller's name and operational menus. Number Field The number field will display numbers when dialing, viewing Caller ID, and

when viewing the phone book. Date/Time Display Shows the date and time of Caller ID calls or current date & time when idle.

NEW Icon When in idle mode, the NEW call icon will flash slowly when a new Caller ID call has been received. The number of new caller ID calls is listed next to the icon. Call/Entry Number When in any of the menus, a number is listed here, next to the # sign. This number indicates the place in the list, such as the 38th caller ID call or the 7th setting in the menu.

RPT Counter When viewing caller ID entries, the RPT icon indicates that the same Caller ID number has called more than one time since Caller ID memory has last been reviewed. Next the RPT icon is a counter that indicates how many times that caller has called since the last review. Total Call Counter The Total Call Counter will show the total number of Caller ID messages received, the total number of phone numbers stored in the phone book, etc., depending on the menu.


CHOOSING A LOCATION

Do the following:

- Choose the best location

- Connect the phone

- Choose the dialing mode

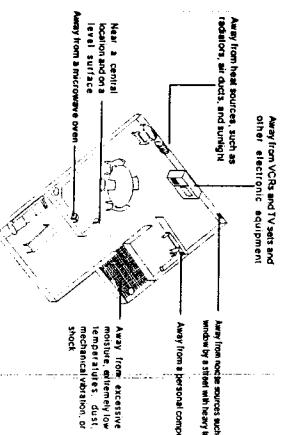

Where you place the phone affects the reception quality of the handset:

Away from another cordless telephone

Place the base near an AC electrical outlet and near telephone line jack


Place the base away from metal walls and metal file cabinets

Caution: The cordless telephone operates at a frequency that may cause interference to nearby TVs and VCRs; the base phone should not be placed near, or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Note: While the 900MHz frequency is inherently clearer, we suggest that you do not use this phone within 20 feet of a working microwave. The microwave produces frequencies in this range which may cause interference. This interference is normal for all 900MHz phones and should not be considered a product defect.

TELEPHONE SETUP

Connecting the Base

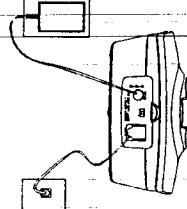

1. Connect the telephone line cord to the "LINE" jack and to a telephone outlet.
2. Connect the AC power adapter to the 9V DC jack and to an AC outlet.

Note: Use only the supplied AC power adapter. Do not use any other AC power adapter.

Connect the AC power adapter to a continuous power supply. Place the phone close to the AC outlet so that you can plug in the AC power adapter easily.

Tip: If your telephone outlet is not modular, contact your telephone company for assistance.

TELEPHONE SETUP

Wall Mounting Instruction:

1. Remove the handset from the base.
2. Turn the base over so the under-side of the base faces you.
3. Adjust the base to the wall mount position.
4. Plug the supplied 7-foot telephone cord into the LINE jack on the telephone.
5. Connect the telephone line cord to the wall jack.
6. Insert the AC adapter into the 9V DC jack on the top of the base.
7. Run the cables down through the cable channel to allow for flush wall mounting.
8. Slip the telephone base onto the wall, lining up the wall mounting holes over the screws. Slide the telephone base down so it is firmly in place.
9. Return the handset to the telephone base.
10. Plug the other end of the AC adapter into the AC outlet.



BATTERY INSTALLATION

To install the 3.6V 600mAh cordless handset battery pack:

1. Slide open the battery compartment door on the back of the handset.
2. Plug the battery connector into the 2-pin connector in the battery compartment, and then insert the battery.
3. Close the battery compartment door.

4. Place the handset on the base unit cradle.
5. Once you have installed the battery pack and placed the handset on the base, you will hear a tone indicating the handset has connected with the base and will successfully charge.

6. **IMPORTANT:** Charge the battery pack for at least 12 hours before using the handset the first time.

7. The CHARGE LED on the base illuminates when the handset is properly making contact with the charge terminals.

Battery Duration

A fully charged battery lasts for approximately:

- 5 hours when you use the handset continuously (talk time).
- 5 days when the handset is not in use (standby).

When the Battery Needs Charging

- The display will show "LOW BATTERY".

When to Purchase a New Battery pack
 If the battery lasts only a few minutes even after a full charge, the usable life of the battery has expired and needs to be replaced. Replacement batteries can be purchased in every supermarket, or you can contact COBY ELECTRONICS CORP. customer service dept for information about how to order a new battery.

HEADSET AND BASIC DISPLAYS

The Headset Jack
The headset jack is located on the side of the handset and is a standard 2.5mm plug. Simply plug the headset into the jack and the handset will be active.


Note: When the headset is plugged into the telephone, the microphone and earpiece on the handset are not active.

Belt-Clip
Be sure to remove the belt-clip filter cap prior to installing Belt-clip. Install the belt-clip as shown.


To remove the belt-clip, squeeze the release at the top of the clip where it attaches to the phone, and gently pull the clip up and out of the handset.

Basic Displays


Handset

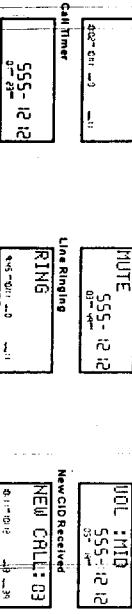

Volume Control

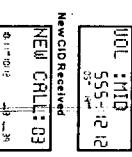

Jack

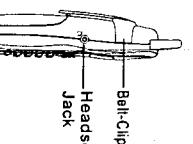

BASIC OPERATION

Redialing

1. Press

2. Wait until you hear a dial tone, and then press to redial the number last dialed (up to 32 digits).

Note: You can also press first to display the number and then press to dial the number displayed.

Additional Options

TO:

Do This:

Adjust the volume in the earpiece
Press during a call until the desired volume level is reached.

Switch to temporary/one dialing
Press to go to the new caller.

Receive a call waiting call
Press again to go back to the original caller.

Multi a call
Press to continue speaking to the caller.

SETTINGS

Handset Settings

You can change the setting on the handset in the options menu. Access the options menu by pressing and holding the key until "ENGLISH" is displayed.

There are 12 settings in the options menu which can be changed. You can scroll through the option menu in the listed order by pressing the key. Settings which have a listed number can be reached directly by pressing that number on the keypad. To edit most settings, press the key, use the keys to toggle between the setting options, and then press to save changes. You can continue programming options by using the dial pad keys or the keys to go to a new setting. Press to exit the options menu.

Key Function
Language: Change the language that appears on the display. Choose between English, French, and Spanish.
First Ring On/Off: Turn the first ring of the phone off so that it does not Ring until caller ID information has been displayed. Particularly useful when using the priority and blocked call features or the private and unavailable ring settings.

Time Set: Change the time and date



Area Code: Allows the programming of a home area code where 7-digit dialing is used for ease of callback and other features. (do not program if you 10-digit to call number in your area.)
Contrast: Provided to adjust the display background lighter or darker.
PBX Number: Number used to access PBX dialing options. The default setting is "g".
PBX Mode On/Off: Determines if the "PBX Number" is used before an on-going number is dialed. When "On", automatically dials the PBX number and a pause, before any speed dial or caller ID callback number. Default setting is "Off".
Pause Time: Allows you to adjust the number of seconds that a pause lasts such as during programmed pauses in your speed dial numbers or after your PBX number is dialed.
MSG Waiting Delete: Clears any current messages waiting indication.

1. Pick up the handset from the base and press .
2. Wait until you hear a dial tone, and then dial the number you wish to dial.
3. When you are finished talking, press the key or place the unit back into the base to end the call.

Note: The IN USE CHARGE light on the base will illuminate when the line is active.

Receiving Calls

When you hear the phone ring:
1. If the handset is in the base, lift the handset from the base. The handset will turn on. There is no need to push the key if the unit is on the base when the call comes in. This auto-answer feature can be programmed off (see handset setting page 13).
2. If the handset is off the base, you will need to press to answer the call. The display will show the caller ID information after the first ring.

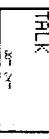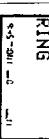

3. When you are finished, push or place the handset back on the base.

SETTINGS

SETTINGS

Auto Answer On/Off: Turns on and off the feature which makes the phone automatically go off-hook when the handset is picked up from the base while the phone is ringing.

Private Ring On/Off: Turns on and off the ring for all calls where the caller has blocked their caller ID. Please note that the phone will ring once even when set to "Off" unless first Ring is programmed "Off" as well.

Unavailable Ring On/Off: Turns on and off the ring for all calls where caller ID information is unavailable. Please note that the phone will ring once even when set to "Off" unless first Ring is programmed "Off" as well.

Note: At any time during options programming you can quit and the settings that you have changed will be saved. Press  to quit or let the options programming time out by not pressing any keys for 20 seconds.

Changing the Language

1. Press and hold the  key.

2. Press  to go to the language programming option.



FIRST RING

ENGLISH

ESPAÑOL

FRANÇAIS

GERMAN

ITALIAN

SPANISH

ENGLISH

SETTINGS

2. Press  to go to the message waiting programming option.

MESSAGE WAITING
DELETE

3. Press  to reset the message waiting indication. "DELETE" will begin flashing.

4. Press  to delete the indication. A double beep will sound to confirm.

5. Continue with programming or press  to return to the idle screen.

Turn on and off the auto answer feature. When on, the phone will automatically answer an incoming call if the handset is in the base.

2. Press  to go to the auto answer programming option.

AUTO ANSWER
On

3. Press  to change the setting. "On" will flash.

4. Use the  keys to toggle between On and Off.

5. When the setting you desire is displayed, press  to save the setting. A double beep will sound to confirm the setting has been saved.

6. Continue with programming or press  to return to the idle screen.

Disabling the Ring for Private Calls

Turns the ringer on and off for all calls where the caller has blocked their caller ID.

2. Press  to go to the private ring programming option.

PRIVATE RING
Off

3. Press  to change the setting. "On" will flash.

4. Use the  keys to toggle between On and Off.

5. When the setting you desire is displayed, press  to save the setting. A double beep will sound to confirm the setting has been saved.

6. Continue with programming or press  to return to the idle screen.

Note: The phone will ring once when set to "Off", unless First Ring is also set to "Off".

Disabling the Ring for Unavailable Calls

Turns the ringer on and off for all calls where caller ID information is unavailable.

1. Press and hold the  key to enter the menu.
2. Press  to go to the unavailable ring programming option.

UNAVAIL. RING
Off

3. Press  to change the setting. "On" will begin flashing.

4. Use the  keys to toggle between On and Off.

5. When the setting you desire is displayed, press  to save the setting. A double beep will sound to confirm the setting has been saved.

6. Continue with programming or press  to return to the idle screen.

Note: The phone will ring once when set to "Off", unless First Ring is also set to "Off".

SPEED DIALING

The CT-F6200 will store up to 20 speed dial numbers in the order that they are programmed. No duplicate numbers can be stored.

Storing Phone Numbers

1. With the handset in the idle state, press .

PHONE BOOK
15

2. Press  to create a new phone book entry.

John S. ■
100-1234567890

SPEED DIALING

3. Enter the name you wish to store using the dial pad to enter the letters (up to 15 letters). See the following letter chart for how to program the letters using the number pad. To add a space between words, press .

JOHN SMITH
100-1234567890

Example: For JOHN SMITH dial this sequence:

JOHN SMITH
100-1234567890

3. Enter the name you wish to store using the dial pad to enter the letters (up to 15 letters). See the following letter chart for how to program the letters using the number pad. To add a space between words, press .

JOHN SMITH
100-1234567890

4. Press  and dial the number you wish to store (up to 16 digits). Press  to insert a dialing pause into the number.

5. Press  when finished to store the number to memory.

Note: If there are no memory locations left in the speed dial directory, the CT-F6200 will display "MEMORY FULL." To continue with memory programming, you must delete or edit existing speed dial numbers.

Note: If you mistype entering the phone number, you can move through the letters and edit it by pressing and holding the  key. To delete a flashing number, press and hold the  key.

Letter Table

| Key | 1st Press | 2nd Press | 3rd Press | 4th Press | 5th Press | 6th Press | 7th Press | 8th Press |
|-----|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 1 | Space | & | ! | ! | * | ! | ! | ! |
| 2 | A | B | C | D | E | F | G | H |
| 3 | D | E | F | G | H | I | J | K |
| 4 | G | H | I | J | K | L | M | N |
| 5 | J | K | L | M | N | O | P | Q |
| 6 | M | N | O | P | Q | R | S | T |
| 7 | P | Q | R | S | T | U | V | W |
| 8 | T | U | V | W | X | Y | Z | Z |
| 9 | W | X | Y | Z | Y | X | Z | Z |
| 0 | O | O | O | O | O | O | O | O |

Viewing the Phone Book

1. Press  to enter the phone book.

PHONE BOOK
15

2. Press  to locate the number you wish to view.

JOHN SMITH
100-1234567890

3. If the name or number is more than 11 characters, press the  key to view the rest of the display (as indicated by the arrows in the top line of the display).

4. Press  to exit the phone book or exit the phone book time out.

Making Calls From the Phone Book

1. To make a call from the phone book, press .

PHONE BOOK
15

2. Locate the number you wish to dial using .

JOHN SMITH
100-1234567890

2. Locate the number you wish to dial using .

JOHN SMITH
100-1234567890

SPEED DIALING

3. Push $\langle\langle$. The display will show the directory.

JOHN SMITH

888-555-1232

Name, and begin dialing the number.

4. When you are finished with your call, press $\langle\langle$, or place the handset back on the base.

Note: Be sure to check that the line is not in use by another extension.

Deleting a Stored Number

1. Press $\langle\langle$.

PHONE BOOK

2. Update the number you wish to delete using $\langle\langle$.

JOHN SMITH

888-555-1232

The display will show "ERASE ITEM?"

ERASE ITEM?

55555-1232

4. Press $\langle\langle$ to delete the phone book memory. The display will briefly show "ERASED" and

return to the previous phone book entry.

5. When you are finished press $\langle\langle$.

Editing a Stored Number

1. Press $\langle\langle$.

PHONE BOOK

2. Locate the number you wish to edit using $\langle\langle$.

JOHN SMITH

888-555-1232

3. Press $\langle\langle$.

The entry will display with a flashing prompt over the first character.

4. Move the cursor to the section you wish to edit using the $\langle\langle$ and $\rangle\rangle$ keys. And $\langle\langle$ and $\rangle\rangle$ keys. When moving through the number field, it will be necessary to press and hold the $\langle\langle$ and $\rangle\rangle$ keys for more than one second until the cursor moves. Since just pressing them enters a * or # into the dialing sequence. Any dial pad key pressed will be inserted in front of the cursor.

5. To delete a character, press the $\langle\langle$ key. To delete a number, press and hold the $\langle\langle$ key for more than one second until the number is deleted, since if the $\langle\langle$ key is just pressed, it inserts a pause in the dialing sequence.

6. When the number is edited as you desire, press $\langle\langle$ to store the edited entry.

Priority (VIP) Calls

You can assign stored numbers as preferred calls. When an incoming call is matched to a stored (caller ID information must be received first).

To mark a phone book entry as preferred:

1. Press $\langle\langle$.

2. Press $\langle\langle$ to go to the desired entry.

3. Press the $\langle\langle$ button once. The LCD will show the "VIP" icon.

JOHN SMITH

888-555-1232

Blocked (REJ) Calls

If you do not want to have the phone ring when a specific number calls, you can store that number in the phone book and assigned it as blocked. When an incoming call is matched to a stored number designated as "REJ", the phone will not ring after the first ring (caller ID information must be received first).

To mark a phone book entry as blocked:

1. Press $\langle\langle$.

CALLER ID

2. Press $\langle\langle$ to go to the entry to be blocked.

3. Press the $\langle\langle$ button twice. The LCD will show the "REJ" icon.

JOHN SMITH

888-555-1232

Note: When the Caller ID information is received, it is stored in memory so that this information can be recalled for later use. Up to 40 Caller ID calls can be stored.

Viewing the Caller ID List

This phone automatically stores the last 40 calls received. If a call is received from the same

caller ID, the repeat icon ("RPT") and the number of repeat calls is displayed.

1. With the handset idle, press $\langle\langle$.

JOHN SMITH

888-555-1232

2. The new Caller ID record includes the name and number of the caller and the time and date the record was received. The New Call light will flash to indicate that you have a new Caller ID call stored in memory.

Note: When the Caller ID information is received, it is stored in memory so that this information can be recalled for later use.

Caller ID Displays

This phone automatically stores the last 40 calls received. If a call is received from the same

caller ID, the repeat icon ("RPT") and the number of repeat calls is displayed.

1. With the handset idle, press $\langle\langle$.

JOHN SMITH

888-555-1232

2. Any unviewed (new) calls will be displayed with the name, number, date, and time that the call was received.

3. If the name or number is more than 11 characters, press the $\langle\langle$ and $\rangle\rangle$ button to view the rest of the display.

4. To scroll to the next call, press $\langle\langle$. The $\langle\langle$ will go through the calls from the last call received to the first. The $\rangle\rangle$ will allow you to view the calls from the first call received to the last.

5. Press $\langle\langle$ or $\rangle\rangle$ to finish.

Display shows name and number, time and date of the call.

JOHN SMITH

888-555-1232

Display shows number only service.

UNAVAILABLE

This call was made from a telephone company that does not offer Caller ID services (including international calls).

PRIVATE

"PRIVATE" will be shown when a call is received from a blocked number. For privacy reasons, some states allow callers the option to prevent their telephone data from being displayed on the other party's Caller ID display.

ERROR

15

MESSAGE WAITING AND OTHER FEATURES

- 2 Place the handset back into the base or press the **“*”** key on the handset to stop the page/finding feature.
- Out-Of-Range Warning:** If you venture too far from the base, the handset will beep and the display will show "OUT RANGE". Reverse your direction to re-establish connection with the base or the call will be dropped. When the base detects that the handset has been out of range for 20 continuous seconds, it will release the engaged line. If you try to access the line when the handset is out of range of the base, the display will show "TRY AGAIN".
- Channel Changing:** If you are experiencing interference during a telephone call, press **CH/CH** the key. The CT-P6200 will scan up to 40 channels and select the clearest one to provide the best possible reception. If the current channel is the clearest available channel, it will keep you on that channel.

CARE MAINTENANCE AND TROUBLESHOOTING

Your CT-P6200 telephone has been designed to give 90 days of trouble-free service. It is a sensitive electronic instrument. To assure its longevity, please read the following maintenance instructions.

- 1 Keep the CT-P6200 away from heat as high temperatures can shorten the life of the electrical components and distort or melt its plastic parts.
- 2 The CT-P6200 should be kept free of dust and moisture. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode electronic circuits.
- 3 Handle your CT-P6200 gently and carefully. Dropping it can cause serious damage to circuitry, or the plastic case which may result in malfunction.
- 4 Do not use any type of chemical or any abrasive powder to clean the cabinet. Use only mild detergents on a soft damp cloth to clean the CT-P6200 telephone.
- 5 The CT-P6200 has built-in surge protection circuits that meet or exceed FCC requirements. However, an incident such as a lightning strike at or near the telephone lines, could cause serious damage.
- 6 If the CT-P6200 is installed in an area with frequent or severe electrical storms, it is suggested that the telephone be disconnected during these storms or that additional surge suppression equipment be added to the installation.
- 7 In the case of trouble with the telephone, do not attempt to repair the telephone yourself. It is the responsibility of users requiring service to report the need for service to our Service Department. They will make the necessary arrangements for repair or replacement.
- 8 If you should have any questions about the operation of your CT-P6200 telephone, you may contact COBY ELECTRONICS CORP customer service dept for technical assistance.
- 9 Please register your product online at www.customerservice@cobyusa.com

No dial tone/phone will not dial out:
Check that the AC power adapter is plugged into a working AC power outlet.
Check all telephone cord connections or try another wall jack.
Do a basic reset of the phone. Disconnect the phone from the wall and remove the battery. Leave for 30 minutes and then re-install as instructed by the manual.

Can't hear the ring signal:
Check the ringer volume controls, at the lowest level the ring may not be heard.
While on a call, you hear another call on the line or experience radio frequency interference.
Switch channels to a clear channel!
Check the wiring for bad connections.

Do not use this phone within 20 feet of a working microwave. The microwave produces 900MHz phones and should not be considered a product defect.

The caller's name and/or phone number does not appear on the display.
Make sure you have subscribed to Caller ID service from your local telephone company and that service has been activated.

CARE MAINTENANCE AND TROUBLESHOOTING

Caller ID service may not work when the phone is connected to a Private Branch Exchange (PBX). The caller has requested that their phone number be suppressed from Caller ID service. or Caller ID service is not available in their area. "Private" or "Unavailable" will appear on the display. You answered the call before Caller ID data was displayed, which usually occurs after the first ring. **New Call/Message Waiting Indicator doesn't work properly.**
Make sure you have subscribed to voice mail compatible with "FSK" type signaling (check with your local phone company). Verify that both the On and Off signals are activated. If your voice mail product from the local phone company does not support "FSK" signaling you may use this feature as a New Call Indicator only.

Can't receive or make phone calls.
Check to be sure the phone is set to the correct type of service, either Tone or Pulse.

GLOSSARY

Useful Feature and Terms

Calendar/Clock .. Visual display of date and time.

Caller ID .. Enables users to view name and number of callers. Contact your local telephone company to subscribe to Caller ID Service.

Caller ID Log .. Stores up to 40 Caller ID entries.

Call Timer .. Allows timing of phone conversations.

Dial from Display.. One-button dialing from the Caller ID log.

Display.. The Liquid Crystal Display (LCD) shows clock and calendar, number dialed, low battery indicator, Caller ID information and call timer.

Flash.. A signal sent by the phone to the local telephone company supporting services such as call waiting.

Message Waiting Indicator .. A visual indicator that there are new messages in your voice mail box. Requires FSK signaling by phone company. Contact your local telephone company to subscribe to Voice Mail Service.

Mute .. Prevents the party on the other end of the line from hearing local conversation. Allows still allowing that party to be heard.

New Calls Indicator .. A visual indicator that new calls have been received.

Redial .. Performs single button dialing of last number dialed.

Speed Dialing .. Allows programming of frequently dialed numbers so that they can be dialed with the two touch speed dial button (20 entries).

Tone/Pulse Option .. Enables you to switch from pulse (rotary) to tone dialing.

Volume Level Control.. Permits volume adjustment of the handset and ringer during a conversation.

FSK type Signalling .. A signal used to turn on and off the message waiting indicator can be sent by the telephone company with a ringing signal or without.

WARRANTY

FULL 90 DAYS LIMITED WARRANTY

COBY ELECTRONICS CORP. (COBY) warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. COBY agrees at our option under this warranty, to repair or replace it with a new or reconditioned product at no additional charge. Our warranty, of course, does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operating instructions, or any product that has been repaired or modified by an unauthorized service agent.

To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclose \$6.00 for each item in the form of money order made payable to COBY ELECTRONICS CORP. to cover the cost of postage and handling. Also, include a copy of the sales receipt to show the proof of purchase and a detailed description of the problem. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damage. For further information write to:

COBY ELECTRONICS CORP.

Customer Service Dept.

56-65 Rust Street

Maspeth, N.Y. 11378

Coby's liability under any legal theory for any loss or damage in any way related to this product shall in no event exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchantability or fitness for a particular purpose on this product shall not extend beyond the period of this warranty. Some states prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitations or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights which may vary from state to state.

WARRANTY

FULL 90 DAYS LIMITED WARRANTY

COBY ELECTRONICS CORP. (COBY) warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. COBY agrees at our option under this warranty, to repair or replace it with a new or reconditioned product, at no additional charge. Our warranty, of course, does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operating instructions, or any product that has been repaired or modified by an unauthorized service agent.

To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclose \$6.00 for each item in the form of money order made payable to COBY ELECTRONICS CORP. to cover the cost of postage and handling. Also, include a copy of the sales receipt to show the proof of purchase and a detailed description of the problem. The unit(s) must be packed in such a way as to reasonably protect it from possible shipping damage. For further information write to:

COBY ELECTRONICS CORP.

Customer Service Dept.

56-65 Rust Street

Maspeth, N.Y. 11378

Coby's liability under any legal theory for any loss or damage in any way related to this product shall in no event exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchantability or fitness for a particular purpose on this product shall not extend beyond the period of this warranty. Some states prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitations or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights which may vary from state to state.