

CT-P8800 TABLE OF CONTENTS

FCC Regulations.....	2	Priority (VIP) Calls.....	18
Important Safety Instructions.....	3-4	Blocked (REJ) Calls.....	19
Battery Cautionary Instructions.....	4	Caller ID.....	19-21
CT-P8800 Parts Checklist.....	4-5	When You Receive a Call.....	19
Location of Controls and Features.....	5-8	Viewing the Caller ID List.....	19
Handset.....	5-6	Caller ID Displays.....	19-20
Base.....	7	Caller ID with Call Waiting Service.....	20
LCD Display.....	8	Storing Caller ID Records.....	20
Choosing a Location.....	8-9	Deleting Caller ID Records.....	21
Telephone Setup.....	9-10	Returning Caller ID Calls.....	21
Connecting the Base.....	9	Answering System Setup.....	22-23
Wall Mounting.....	10	Setting the Ring Count.....	22
Tone/Pulse Switch.....	10	Setting the Day and Time.....	22
Handset Ringer Volume.....	10	Setting a Remote Access Code.....	22
Battery Installation.....	10-11	Setting the Announce Mode.....	22
Battery Duration.....	11	Recording an Announcement.....	22-23
When the Battery Needs Charging.....	11	Answering System Operation.....	23-25
When to Purchase a New Battery Pack.....	11	Two-Digit Counter Display.....	23
Headset and Data Jack.....	11	Base Volume Control.....	24
The Data Jack.....	11	Answering Calls with Answer On.....	24
The Headset Jack.....	11	Answering Calls in Announce Only Mode.....	24
Belt-Clip.....	11	Answer Off.....	24
Basic Displays.....	12	Playing Back New Messages.....	24
Basic Operation.....	12-13	Pausing During Playback.....	25
Making Calls.....	12	Reviewing Messages.....	25
Receiving Calls.....	12	Deleting Messages.....	25
Redialing.....	13	Memory Full.....	25
Additional Options.....	13	Call Interrupt.....	25
Settings.....	13-16	Recording a Memo.....	25
Handset Settings.....	13	Remote Operation.....	26
Changing the Language.....	14	Remote Access.....	26
Turning the First Ring On or Off.....	14	Remote Access Options.....	26
Setting the Time and Date.....	15	Headset Answering System Operation.....	27-28
Setting the Area Code.....	15	Handset Remote Operation.....	27
Adjusting the Contrast.....	26	Screening Incoming Calls.....	27-28
Deleting Message Waiting Indication.....	15	Other Features.....	28-29
Turning Auto Answer On or Off.....	16	New Call Light.....	28
Disabling the Ring for Private Calls.....	16	Message Waiting.....	28
Disabling the Ring for Unavailable Calls.....	16	Using the Handset Finder (PAGE).....	28
Speed Dialing.....	16-19	Out-of-Range Warning.....	28
Storing Phone Numbers in the Phone Book.....	16	Channel Changing.....	28
Letter Table.....	17	New Message Light.....	29
Viewing the Phone Book.....	17	Care and Maintenance.....	29
Making Calls from the Phone Book.....	17	Warranty.....	30
Deleting a Number Stored in the Phone Book.....	18	Troubleshooting.....	31
Editing a Number Stored in the Phone Book.....	18	Glossary.....	32
		Wall Mount Template.....	33

FCC REGULATIONS

WARNING: Modifying or tampering with the telephone's internal components can cause a malfunction and might invalidate the telephone's warranty and void your FCC authorization to operate it. If the trouble is harming the telephone lines, the telephone company might ask you to disconnect the telephone until you have resolved the problem.

CAUTION: Any changes or modifications not expressly approved by Coby Electronics Co., Ltd. will void the user's authority to operate this device.

As it complies with Part 68 of the FCC rules, your unit has been registered with the FCC. The FCC requires us to provide you with the following information:

1. Connection and use with the nationwide telephone network:
The FCC requires that you connect to a nationwide telephone network through a modular telephone outlet which is Part 68 compliant.
This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Check with your local telephone company.

2. Notification to the telephone company:

FCC rules require that upon request you provide the following information to the phone company:
A. The line (telephone number) to which you will connect the telephone equipment
B. The Registration Number and Ringer Equivalence Number (REN). These numbers are found on the back or bottom of your telephone equipment. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum all RENs should be 5 or less. To determine the number of devices permitted in your area, contact your local telephone company.

3. Repair instructions:

If it is determined that your telephone equipment is malfunctioning, the FCC requires that it not be used and be unplugged from the modular outlet until the problem has been corrected. Repairs to this telephone equipment can be made only by the manufacturer or its authorized agents, or by others who may be authorized by The FCC. Unauthorized repairs void registration and warranty.

4. Rights of the telephone company.

If your product is causing harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem, and you will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your telephone equipment. If such changes are planned, you will be notified in advance.

5. This product is compatible with inductively coupled hearing aids.

Note: This applies only if this product is equipped with a corded or cordless handset.

6. Programming/testing emergency numbers:

- A. When programming emergency numbers and/or making test calls to emergency numbers
A. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
B. Perform such activities in the off-peak hours, such as early morning or late evening.

INTERFERENCE INFORMATION: PART 15 OF FCC RULES

Some telephone equipment generates and uses radio frequency energy which if not properly installed, may cause interference to radio and television reception.

This unit has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, when it's in use, the user is encouraged to try to correct the interference by one or more of the following measures:

- A. Where it can be done safely, reorient the radio or TV receiving antenna.
- B. To the extent possible, relocate the television, radio, or other receiver with respect to the telephone equipment.
- C. If your telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as the one used by the radio or television.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT SAFETY INSTRUCTIONS



This symbol is to alert you to important operating or servicing instructions that may appear in the user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electrical shock.

When using this product, basic safety precautions should always be followed to reduce the risk of fire, electric shock And injury to persons, including the following:

1. Read and understand all instructions.
 2. Follow all warnings and instructions marked on the product.
 3. Use only with class 2 power source DC 9V 300mA.
 4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
 5. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
 6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the Product.
 7. Slots and openings in the cabinet back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
 8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by animals or persons walking on it.
 9. Do not overload wall outlets and extension cords as this can result in risk of fire or electrical shock.
 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the product.
 11. To reduce the risk of electrical shock, do not disassemble this product. Instead take it to a qualified service person when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electrical shock when the appliance is subsequently used.
 12. Unplug all cords and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls covered in the operating instructions. Improper adjustment of other controls may result in damage and require work by a qualified technician to restore the product to normal operation.
 13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
 14. Do not use a telephone to report a gas leak in the vicinity of the leak.
- IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:**
1. Use only the type and size of batteries specified in the users manual.
 2. Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
 3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
 4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
 5. Do not attempt to recharge the batteries with or identified for use with this product.

IMPORTANT SAFETY INSTRUCTIONS

The batteries may leak corrosive electrolyte or explode.

6. Do not attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.
8. When inserting the batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, which may result in leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the batteries could leak, damaging the product.
10. Discard "dead" batteries as soon as possible since they are more likely to leak in a product.
11. Do not store this product, or the batteries provided with or identified for use with this product, in high temperature areas.
12. If your product uses a rechargeable battery, charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.

BATTERY CAUTIONARY INSTRUCTIONS

BATTERIES: CAUTION


To reduce the risk of fire or injury to persons, read and follow these instructions:

- For the cordless handset, use only 3.6V 600mAh Nickel-Metal Hydride(Ni-MH), PM-38BAT cordless telephone battery pack (included).
 - Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
 - Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
 - Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
 - Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
 - When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.
 - Remove the batteries from this product if the product will not be used for a long period of time(several months or more) since during this time the battery could leak in the product.
 - Do not store this product, or the batteries identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for its purpose of extending shelf should be protected from condensation during storage and defrosting.
- Batteries should be stabilized at room temperature prior to use after cold storage.**

CT-P8800 PARTS CHECKLIST



1. Handset

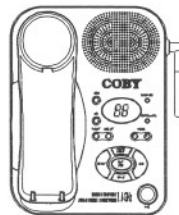

2.Base



3.Long telephone line cord



4. AC power adapter




5. Mounting bracket



6. Battery pack

LOCATION OF CONTROLS AND FEATURES

Handset

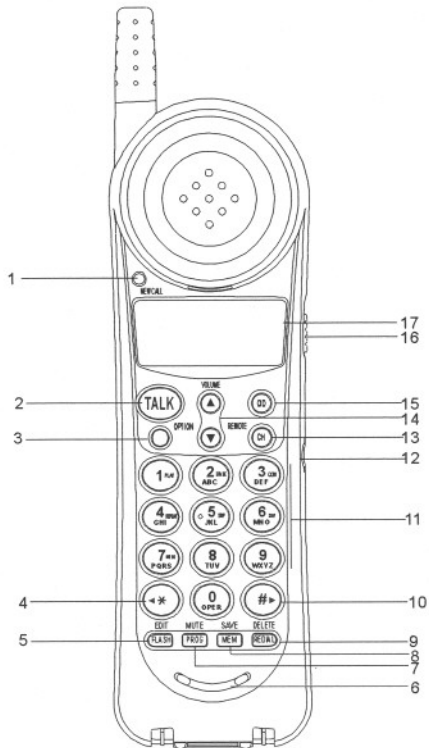

LOCATION OF CONTROLS AND FEATURES

1. New Call Light

2. **Talk** (TALK): The (TALK) Key is used to access the telephone line or end a call on the handset.
3. **Option Key**: The Option key is used to change the 7/10/11 digit dialing mode during caller ID callback.
4. **Temporary Tone/View Left key** (◀): If the base is set to pulse dialing, pressing (◀) cause s subsequent digits to be dialed out using tone until the line is put back on hook. Also used to view the left part of the display and move the cursor left when editing.
5. **Flash Key** (FLASH) /EDIT: The (FLASH) /EDIT key is used to access telephone company service, like call waiting. It is also used to create and edit phone book entries.
6. **Microphone**
7. **Mute Key** (Mute) /PROG: The (Mute) /PROG key is used to temporarily mute the handset microphone. This key is also used to access the programmable functions of your phone.
8. **Memory Key** (MEM) /SAVE: Use (MEM) /SAVE to program and retrieve the numbers in the speed dial directory. The (MEM) /SAVE key is also used to save numbers into the phone book and other settings.
9. **Redial Key** (RECALL) /DELETE: When the phone is idle or off-hook, press (RECALL) to redial the last number dialed. When viewing or editing menus and logs, the (RECALL) /DELETE key is used to erase digits and single or multiple entries from the phone book and Caller ID directories, is also used to insert a programmable pause into a number stored in the phone book.
10. **View Right Key** (▶): Used to view the right part of the display and move the cursor right when editing.
11. **Dial pad**: Numeric key are used in the conventional manner for dialing on the handset. Also used to operate the answering machine when in remote mode.
 - (▶) /Play Plays any messages.
 - (▶) /Erase Erases the currently playing message.
 - (▶) /OGM Begins OGM recording.
 - (▶) /Repeat Repeats the currently playing message.
 - (▶) /Stop Stops the current activity.
 - (▶) /Skip Skips the currently playing message.
 - (▶) /Menu Plays a list of the commands available from remote mode.
12. **Headset Jack**: Allows using a headset for hands-free convenience.
13. **Channel/Remote Key** [CH/Remote]: The [CH/Remote] key, if pressed when the line is off-hook, will scan up to 50 channels and select the clearest one to provide the best possible reception. If the handset is idle, press the [CH/Remote] key on the handset to access the answering machine remotely; the secondary functions of the dial pad become available.
14. **Up/Down Key** (▲▼): The (▲▼) Key lets you scroll through menus and logs, and adjust the handset volume.
15. **Caller ID Key** (CID): The (CID) Key is used to review Caller ID information stored in memory.
16. **Ringer Switch** (Hi/Low/Off): Adjust the switch to select the handset ringer volume-choose OFF, LOW, or HI.
17. **LCD Display**.

4. Memo key

14. OGM key


2. Code Set Key

3. Time Set Key

11. Repeat Key

5. Erase Key

18. Charge Contacts

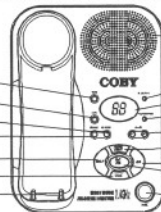

17. Speaker

1. Antenna

10. 16. Charge LED/In Use

8. Two Digital Counter Display

7. New Message LED

15. Volume Up/Down Keys

9. Answer On/Off

12. Skip Key


6. Play/Stop key

13. Page Key

LOCATION OF CONTROLS AND FEATURES


1. Antenna
2. **Code Set Key:** The [Code Set] key is used to set the answering machine's remote access code.
3. **Time Set Key:** The [Time set] key is used to set the time and day for the voice day/time coding of each message.
4. **Memo Key:** Enables recording of a memo message on the answering machine.
5. **Erase Key:** Press [Erase] during playback to delete an answering machine message.
6. **Play/Stop Key:** To play the messages recorded on the answering machine, press Playback can also be paused by pressing this key.
7. **NEW Message LED:** Flashes when new messages have been left on the answering machine.
8. **Two Digit Counter Display:** Displays the number of messages stored in the answering machine. Also displays various other information about the base and answering machine.
9. **Answer On/Off Key:** Press [ANS On/Off] to select between the answer modes: answer on, answer off, and announcement only.
10. **In Use LED:** Lights red when the handset is in use. Flashes when the phone is ringing.
11. **Repeat Key:** Press [Repeat] /Repeat during message playback to repeat the current message. Also used for scrolling during Time Set, and Code Set modes.
12. **Skip Key:** Press [Skip] /Skip during message playback to skip to the next message. Also used for scrolling during Time Set, and Code Set modes.
13. **Page Key:** Used to initiate a handset page-aids in finding a misplaced handset.
14. **OGM key:** Play back the current outgoing message and allows selection and recording of new outgoing messages.
15. **Volume Up/Down Keys** [Volume Up] [Volume Down]: The [Volume Up] [Volume Down] keys let you adjust the speakerphone and ringer volume.
16. **Charge LED:** Lights red when the handset is on the cradle being charged.
17. **Speaker**
18. **Charging Contacts:** Used to recharge battery and reset the security code in the handset.

Base Back View

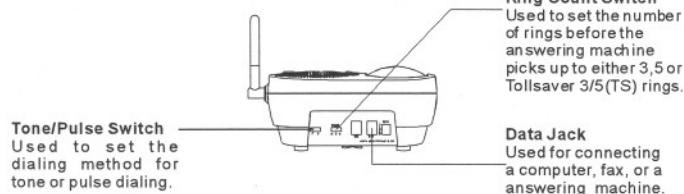

LOCATION OF CONTROLS AND FEATURES

LCD Display

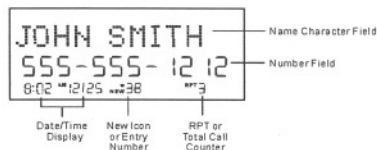

Name Character Field

Display caller name and operational menus.

Number Field

The number field will display numbers when dialing, viewing Caller ID, and when viewing the phone book.

Data/Time Display

Shows the date and time of Caller ID calls or current date & time when idle.

NEW Icon

When in idle mode, the **NEW** call icon will flash slowly when a new Caller ID call has been received. The number of new caller ID calls is listed next to the icon.

Call/Entry Number

When in any of the menus, a number is listed here, next to the # sign. This number indicates the place in the list, such as the 38th caller ID call or the 7th setting in the menu.

RPT Counter

When viewing caller ID entries, the **RPT** icon indicates that the same Caller ID number has called more than one time since Caller ID memory has last been reviewed. Next to the **RPT** icon is a counter that indicates how many times that caller has called since the last review.


Total Call Counter

The Total Call Counter will show the total number of Caller ID messages received, the total number of phone numbers stored in the phone book, etc. Depending on the menu.

CHOOSING A LOCATION

Do the following:

- Choose the best location
- Connect the phone
- Choose the dialing mode

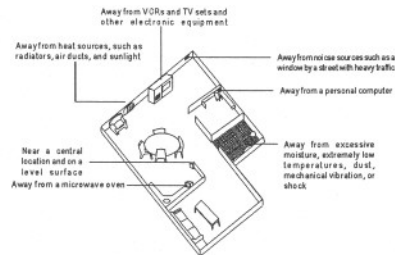

CHOOSING A LOCATION

Where you place the phone affects the reception quality of the handset.


- Away from another cordless telephone
- Place the base near an AC electrical outlet and near telephone line jack
- Place the base away from metal walls and metal file cabinets

CAUTION: The cordless telephone operates at a frequency that may cause interference to nearby TVs and VCRs; the base phone should not be placed near, or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Note: While the 2.4GHz frequency is clearer, we suggest that you do not use this phone within 20 feet of a working microwave. The microwave produces frequencies in this range which may cause interference. This interference is normal for all 2.4GHz phones and should not be considered a product defect.

TELEPHONE SETUP

Connecting the Base

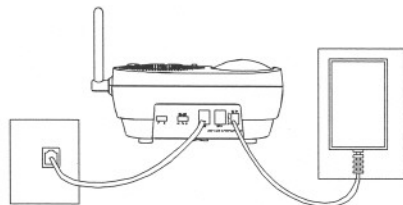

1. Connect the telephone line cord to the " Line " jack and to a telephone outlet.
2. Connect the AC power adapter to the 9V DC jack and to an AC outlet.

Note: Use only the supplied AC power adapter. Do not use any other AC power adapter, Connect the AC power adapter to a continuous power supply. Place the phone close to the AC outlet so that you can plug in the AC power adapter easily.

Tip: If your telephone outlet is not modular, contact your telephone company for assistance.


Wall Mounting

The CT-P8800 telephone may be installed onto two screws(not included) fastened into the wall. When installing screws into plasterboard walls, use wall anchors(not included) to ensure that the screws remain secure. Insert the screws into the wall leaving 3/16" of each screw extending out from the wall. See the wall mounting template on page 58 to properly space the screws in the wall for mounting.. The CT-P8800 is not compatible with mounting on a standard telephone wall plate.

TELEPHONE SETUP


Wall Mounting Instructions:

1. Remove the handset from the Base.
2. Adjust the base to the wall mount position.
3. Plug the supplied 7-foot telephone cord into the Line jack on the telephone.
4. Connect the telephone line cord to the wall jack.
5. Insert the AC adapter into the 9V DC jack on the top of the base.
6. Run the cables down through the cable channel to allow for flush wall mounting.
7. Slip the telephone base onto the wall, lining up the wall mounting holes over the screws. Slide the telephone base down so it is firmly in place.
8. Return the handset to the telephone base.
9. Plug the other end of the AC adapter into the AC outlet.

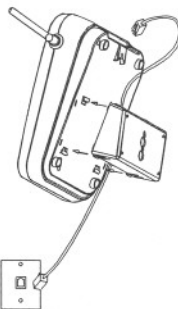

1. Choose the correct dialing mode.
2. Select the dialing mode Tone or Pulse by setting the switch at the back of the base unit.

Note: Changes to the switch position during a call do not take effect until the call has ended.

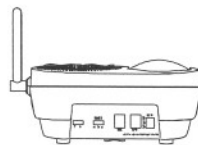

Tip: If you are unsure of the proper dialing mode, make a trial call with the dial mode setting to **TONE**. If the call connects, leave the switch as is (**TONE** mode), otherwise, set to **PULSE**.

Handset Ringer Volume

Adjust the handset ringer volume using the RINGER Switch on the right side of the handset. Select between Hi ringer, Low ringer, and ringer Off.



BATTERY INSTALLATION

To install the 3.6V 600mAh cordless handset battery pack:

1. Slide open the battery compartment door on the back of the handset.
2. Plug the battery connector into the 2-pin connector in the battery compartment, and then insert the battery.

BATTERY INSTALLATION

- Close the battery compartment door.
- Place the handset on the base unit cradle.
- Once you have installed the battery pack and placed the handset on the base you will hear a tone indicating the handset has connected with the base and will successfully charge.
- IMPORTANT:** Charge the battery pack for at least 12 hours before using the handset the first time.
- The **CHARGE** LED on the base illuminates when the handset is properly making contact with the charge Terminals.

Battery Duration

A fully charged battery lasts for approximately:

- 5 hours when you use the handset continuously (talk time)
- 5 days when the handset is not in use (standby)


When the Battery Needs Charging

- The display will show "LOW BATTERY".




When to Purchase a New Battery Pack

If the battery lasts only a few minutes even after a full charge, the usable life of the battery has expired and needs to be replaced. Replacement batteries can be purchased directly from <https://www.ttsystems.com/ShoppingCart/shop.asp>, or you can contact TT Systems LLC customer support center at 1-866-592-1336 for information about how to order a new battery.

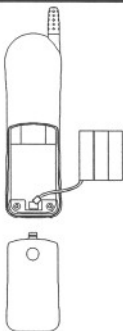

HEADSET AND DATA JACK

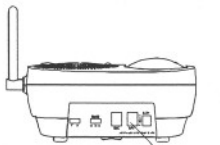

Data Jack


The Data Jack

The jack located on the side of the telephone labeled "DATA" is a convenience jack. It is useful for connecting a fax machine or modem when there is no telephone jack available for that device.

The Headset Jack

The headset jack is located on the side of the handset and is a standard 2.5mm plug. Simply plug the headset(not included) into the jack and the headset will be active.

Note: When the headset is plugged into the telephone, the microphone and earpiece on the handset are not active.

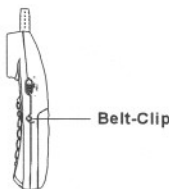

Belt-Clip

BASIC DISPLAYS

Headset Idle



Line Muted



Volume Control



Call Timer



 
Line Ringing



New CID Received




Off-hook



BASIC OPERATION

Making Calls

 - Pick up the handset from the base and press **TALK**.



- Wait until you hear a dial tone, and then dial the number you wish to dial. The call timer will appear 10 seconds after dialing.
- When you are finished talking, press the **TALK** key or place the unit back into the base to end the call. The call timer will disappear immediately after disconnecting.

Note: The **IN USE** light on the base will illuminate when the line is active.

Receiving Calls

When you hear the phone ring:

- If the handset is in the base, lift the handset from the base. The handset will turn on, There is no need to push the **TALK** key if the unit is one the base when the call comes in.

BASIC OPERATION

 
2. If the handset is off the base, you will need to press **(CALL)** to answer the call. The display will show the Caller ID information after the first ring. The call timer will display as soon as the call is answered.



3. When you are finished, push **(END)** or place the handset back on the base.

Redialing

1. Press **(CALL)**.



2. Wait until you hear a dial tone, and then press **(RECALL)** to redial the last number dialed using the handset (up to 32 digits).

Additional Options

To:	Do This:
Adjust the volume of the Other party	Press the volume (VOL+) / (VOL-) during a call until the desired Volume level is reached.
Switch to temporary tone dialing	Press the (TONE) key after the phone is in use. The phone will remain in tone dialing mode for the duration of the call.
Receive a call waiting call	Press (FLASH) to go to the new caller. Press (FLASH) again to go back to the original caller.
Mute a call	Press the (MUTE) key. Press (MUTE) to continue speaking to the caller.

SETTINGS

Handset Settings

You can change the setting on the handset in the options menu. To access the menu, press and hold the **(MENU)** / **(PROG)** key until "ENGLISH" is displayed.

There are nine settings in the options menu which can be changed. You can scroll through the menu in the listed order by pressing the **(UP)** key. Settings can also be reached directly by pressing the listed number on the keypad.

To edit most settings, press the **(FLASH)** / **(EDIT)** key, use the **(UP)** / **(DOWN)** key to toggle between the setting options, and then press **(MEM)** / **(SAVE)** to save changes. You can continue programming options by using the dial pad keys or the **(UP)** / **(DOWN)** key to go to a new setting. Press **(MENU)** / **(PROG)** to exit the options menu.

Note: The ringer options do not affect the base ringer in any way.

 
SETTINGS

Key Function

- 1. **Language:** Change the language that appears on the display. Choose between English, French, and Spanish.
- 2. **First Ring On/Off:** Turn the first ring of the phone off so that it does not ring until caller ID information has been displayed. Particularly useful when using the priority and blocked call features or the private and unavailable ring settings.
- 3. **Time Set:** Change the time and date.
- 4. **Area Code:** Allows the programming of a home area code where 7-digit dialing is used for ease of callback and other features.
- 5. **Contrast:** Provided to adjust the display background lighter or darker.
- 6. **MSG Waiting Delete:** Clears any current message waiting indication.
- 7. **Auto Answer On/Off:** Turns on and off the feature which makes the phone automatically go off-hook when the handset is picked up from the base while the phone is ringing.
- 8. **Private Ring On/Off:** Turns on and off the ring for all calls where the caller has blocked their caller ID. Please note that the phone will ring once even when set to "Off" unless First Ring is also programmed "Off".
- 9. **Unavailable Ring On/Off:** Turn on and off the ring for all calls where caller ID information is unavailable. Please note that the phone will ring once even when set to "Off" unless First Ring is also programmed "Off".

Changing the Language

- Press and hold the **(MENU)** / **(PROG)** key.
- Press **(1)** to go to the language programming option.



- Press **(FLASH)** / **(EDIT)** to change the setting. "ENGLISH" will begin flashing.
- Use the **(UP)** / **(DOWN)** key to toggle between ENGLISH, ESPANOL, and FRANCAIS.
- When the setting you desire is displayed, press **(MEM)** / **(SAVE)** to save the setting. A double beep will sound to confirm the setting has been saved.
- Continue with programming or press **(MENU)** / **(PROG)** to return to the idle screen.

Turn the First Ring On or Off

You can turn off the first ring of the phone so that it does not ring until caller ID information has been displayed.

- Press and hold the **(MENU)** / **(PROG)** key.
- Press **(2)** to go to the first ring programming option.



- Press **(FLASH)** / **(EDIT)** to change the setting. "On" will begin flashing.
- Use the **(UP)** / **(DOWN)** key to toggle between On and Off.
- When the setting you desire is displayed, press **(MEM)** / **(SAVE)** to save the setting. A double beep will sound to confirm the setting has been saved.
- Continue with programming or press **(MENU)** / **(PROG)** to return to the idle screen.

SETTINGS

Setting the Time and Date

1. Press and hold the **[MMA]** /PROG key to enter the Menu.

ENGLISH
7 11:59.9

2. Press **[F5]** to go to the time set programming option.

TIME SET
8:02* 12/25 * 3 11:59.9

3. Press **[FLASH]** /EDIT to change the setting. The month will begin flashing.
 4. Use the dial pad to enter the month in two-digit format. The date will begin flashing.
 5. Use the dial pad to enter the date in two -digit format. The hour will begin flashing.
 6. Use the dial pad to enter the hour in two-digit format. The minutes will begin flashing.
 7. Use the dial pad to enter the minutes in two-digit format. AM and PM begin flashing.
 8. Use the dial pad to choose between AM and PM. Where **[←]** is AM and **[→]** is PM.
 9. When the final setting is programmed, the time and date are automatically saved. A double beep will sound and you are returned to the options menu.
 10. Continue with programming or press **[MMA]** /PROG to return to the idle screen.
- Note: Time is automatically set after the first call if you subscribe to caller ID service.*

Setting the Area Code

Area code programming is used for caller IDcallback purposes. It allows people who dial only 7 digits for local numbers to avoid extra work when dialing from caller ID memories. DO NOT use the area code programming if you are required to dial 10 digits(e.g. 555-555-1212) to call a local number.

1. Press and hold the **[MMA]** /PROG key.

2. Press **[F5]** to go to the area code programming option.

AREA CODE

7 11:59.9

3. Press **[FLASH]** /EDIT to change the setting. "---" will begin flashing.
4. Use the dial pad to enter the three digit area code that your phone number begins with.
5. When the setting you desire is displayed, press **[MEM]** /SAVE to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **[MMA]** /PROG to return to the idle screen.

Adjusting the Contrast

The contrast is optimized for viewing and will probably not need to be changed from the default setting. It will adjust the display background lighter or darker.

1. Press and hold the **[MMA]** /PROG key.

2. Press **[F5]** to go to the contrast programming option.

CONTRAST
2
7 11:59.9

3. Press **[FLASH]** /EDIT to change the setting. "2" will begin flashing.
4. Use the **[▲▼]** key to toggle between the three levels of contrast.
5. When the setting you desire is displayed, press **[MEM]** /SAVE to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **[MMA]** /PROG to return to the idle screen.

Deleting Message Waiting Indication

Clears any current message waiting indication. See page 50 for more information about message waiting.

1. Press and hold the **[MMA]** /PROG key to enter the menu.

2. Press **[F5]** to go to the message waiting programming option.

MSG WAITING
DELETE
7 11:59.9

3. Press **[FLASH]** /EDIT to reset the message waiting indication. "DELETE" will begin flashing.
4. Press **[MEM]** /SAVE to delete the indication. A double beep will sound to confirm.

SETTINGS

5. Continue with programming or press **[MMA]** /PROG to return to the idle screen.

Turning Auto Answer On or Off

Turn on and off the auto answer feature. When on, the phone will automatically answer an incoming call if the handset is in the base.

1. Press and hold the **[MMA]** /PROG key.

2. Press **[F5]** to go to the auto answer programming option.

AUTO ANSWER
On
7 11:59.9

3. Press **[FLASH]** /EDIT to change the setting.
4. Use the **[▲▼]** key to toggle between On and Off.
5. When the setting you desire is displayed, press **[MEM]** /SAVE to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **[MMA]** /PROG to return to the idle screen.

Disabling the Ring for Private Calls

Turns on and off the ring for all calls where the caller has blocked their caller ID.

1. Press and hold the **[MMA]** /PROG key.

2. Press **[F5]** to go to the private ring programming option.

PRIVATE RING
OFF
7 11:59.9

3. Press **[FLASH]** /EDIT to change the setting.
 4. Use the **[▲▼]** key to toggle between On and Off.
 5. When the setting you desire is displayed, press **[MEM]** /SAVE to save the setting. A double beep will sound to confirm the setting has been saved.
 6. Continue with programming or press **[MMA]** /PROG to return to the idle screen.
- Note: The phone will ring once when "OFF" unless First Ring is also set to "OFF".*

Disabling the Ring for Unavailable Calls

Turn on and off the ring for all calls where caller ID information is unavailable.

1. Press and hold the **[MMA]** /PROG key.

2. Press **[F5]** to go to the unavailable ring programming option.

UNAVAIL RING
On
7 12:00:12

3. Press **[FLASH]** /EDIT to change the setting. "On" will begin flashing.
4. Use the **[▲▼]** key to toggle between On and Off.
5. When the setting you desire is displayed, press **[MEM]** /SAVE to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **[MMA]** /PROG to return to the idle screen.

Note: The phone will ring once when "OFF" unless First Ring is also set to "OFF".

SPEED DIALING

Storing Phone Numbers in the Phone Book

The CT-P8800 will store up to 20 speed dial numbers in the handset phone book, in the order that they are programmed. No duplicate numbers can be stored.

1. With the handset in the idle state, press **[MEM]** .

PHONE BOOK
1 11:59.9

2. Press **[FLASH]** /EDIT to create a new phone book entry.

John S
8:02* 12/25 11:59.9

3. Enter the name you wish to store using the dial pad to enter the letters(up to 15 letters). See the following letter table for how to program the letters using the number pad. To add a space between words, push **[←]** .