




Encore

Bluetooth Speaker Model S122

Location of Controls

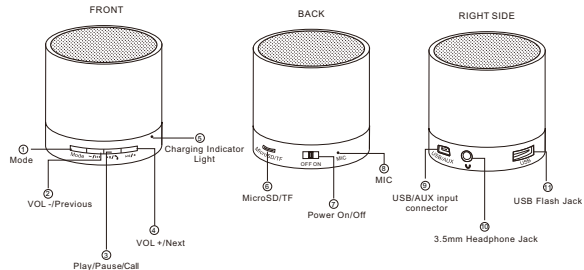

1. Mode. When powered on it will automatically enter Bluetooth mode. Short press to skip to Aux mode.
2. Volume Down/Previous. Short press to skip to the previous music. Long press to decrease volume.
3. Play/Pause/Call. Press to play and pause music. Press to answer or hang up incoming phone call. Quick press twice to call back to the last incoming call.
4. Volume Up or Next. Short press to skip to the next music. Long press to increase volume.
5. Charging indicator light. When charging, the LED indicator will turn red.
6. Micro SD/TF: Insert your TF card. You can listen to MP3 music stored in TF card (supports maximum capacity of 16GB).
7. Power on/off. Slide to "on" to start the Bluetooth speaker. Slide to "off" to turn off.
8. MIC. Microphone for hands free phone calls.
9. USB/AUX input connector. Use the USB cable (included) to charge. Connect the speaker and the mobile phone with USB /Aux in cable (included) to play the music stored in the phone.
10. 3.5 mm headphone jack. Insert your headphone with 3.5mm jack (not included). You can listen to the music stored in TF card or on USB flash.
11. USB flash. Insert your USB flash. You can listen to MP3 music stored on USB flash.

Charging The Bluetooth Speaker

1. Make sure the unit is in Off mode.
2. Connect the Bluetooth Speaker to the Computer with the USB cable (included).
3. When charging, the LED indicator will turn red.
4. Charge for 2-3 hours to fully charge the rechargeable battery.
5. When charging is completed, disconnect the USB cable.

Bluetooth Speaker Pairing / Reconnecting

1. Turn the speaker On. When powered on it should automatically enter Bluetooth mode. If it does not, press the Bluetooth button.
2. Now, turn ON the Bluetooth function of your device.
3. For the first time pairing a new mobile device, search for "BT122" and select it to begin Bluetooth pairing.
4. The speaker will reconnect automatically if your mobile phone has been paired previously. (Note: Depending on the device's type and configuration, manual reconnection may be required each time.)
5. If pairing is successful, you will hear the tone "the device is paired" to confirm.
6. Slide to the Power Off to turn the unit Off. (Note: If you can not search for the speaker, this means the last device is reconnecting automatically. Try again to pair with speaker.)

Hands Free Function

1. When you have an incoming call, a message sounds. It will announce "the phone number" of the person who is calling you and the playing music will pause automatically.
2. Press the Play/Pause button (3) to answer the call.
3. Now you have the hands free function with the Bluetooth speaker.
4. Press the Play/Pause button again to hang up the call and music will resume normal playback.

NOTE: Speak into the MIC Hole (8) directly within 2"-4" distance to get the best speakerphone performance when desired.

Specifications

Bluetooth version: EDR+2.1
 Working range: up to 33 ft.
 Dimensions: 2-3/8" x 2-3/8" x 2-1/4"
 Net weight: 6 oz.
 Speaker: ϕ 45mm
 Loudspeaker Output: 3W, 4Q
 Frequency Response: 280HZ-16KHz
 Signal-to-Noise: \geq 95dB
 Distortion: \leq 0.5%
 Battery Capacity: 300mAh
 Battery Charging Voltage: DC 5V, 500MA



Encore

3-YEAR LIMITED WARRANTY

ELECTRO BRAND INC. (EBINC) warrants to the original consumer of this Encore product that it will furnish a replacement for, or, at its sole option, repair any part which proves (upon inspection by EBINC) to be defective under normal use within 3 years of the original purchase date.

This warranty does not apply to appearance items, including, but not limited to, antennas, knobs, cabinets or cases, and in the case of batteries, for damage caused by leaking batteries. It also does not apply to the product, or to any part thereof, that has been damaged through misuse or negligence.

Furthermore, this warranty will become invalid if, in the judgment of EBINC the product or any part thereof has been installed incorrectly, repaired or altered by other than EBINC Warranty Service Department.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

For Service, Warranty, or Product Information,

Please contact the Electro Brand, Inc.,

Customer Service Department at:

Distributed by Electro Brand Inc.

Westchester, IL 60154

1-800-982-3954, Ext. 117

between the hours of 8:00 a.m. and 4:00 p.m. Central Standard Time

Monday through Friday.

PLEASE SAVE THIS CARD TOGETHER WITH ORIGINAL DATED PROOF OF PURCHASE FOR YOUR RECORDS AND FOR CUSTOMER SERVICE.

Date purchased _____ Model number _____

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.