



## (6.4) Music playback

(6.5) When preview pictures or video, you can use Zoom Key to switch to Full-Screen mode

(6.6) You can also download when previewing single photo or video

MP3 files, MP4 files, Video, photographs and other files can be played and browsed online as well as downloaded to software for playing and browsing as you like.

7) Download: Used to copy data from SD/TF/U disk to iPad/iPhone. In Preview status, you can click Edit to select and download/delete one or more files, or you can browse individual photograph and click Download.

Note: (Pictures can be saved in the photograph program of iPad/iPhone) Picture files are saved under "Local Files" directory of WiFi CARD READER software.

8) Upload: Used to copy data from iPad/iPhone to SD/TF/U disk. In Preview status, you can click Edit and pictures you want to upload to upload one or more files to SD/TF/U disk. Due to the copyright protection of IOS system, only photographs can be copied and other files cannot be exported. However, you can export MP3 files, MP4 files, Video and Office documents downloaded to WiFi CARD READER software by WiFi CARD READER.

9) Select the storage path.

10) Copy completed.

11) Setup Option: You can modify the network name and password by Setup option. Note please, you need to restart hardware and reconnect network after modification.

12) WiFi reader also supports communication with Android mobile phones and laptops and other devices with WiFi function, after connected WiFi CARD READER. Simply use your browser's address bar and enter any key. You can access the information in the WiFi CARD READER, but not download for Android system, Windows system can upload and download files with the WiFi CARD READER easy.

### III) Specifications:

- 1) Dimensions: 7X5.6X1.65 CM
- 2) Battery capacity: 1200MAH
- 3) Battery life: 3-4 hours
- 4) Input voltage: 5V
- 5) Output current: 1A
- 6) WiFi transmission speed: 150Mbps
- 7) Charged by USB cable.

### IV) Cautions

- 1) Insert SD card, TF card or U disk before moving the switch to the position marked ON. (Startup will take 30s, Blue LED lighting is working)
- 2) When copy is interrupted, you can restart WiFi CARD READER software.
- 3) Low power is indicated when the red light is on, and the user need to charge the battery in time. The red light is on during charging. The red light is off when battery is fully charged.
- 4) Turn the power off timely when not using..
- 5) If you uninstall WiFi CARD READER software, all files in WiFi CARD READER software will also be deleted. Therefore, do not uninstall WiFi CARD READER software lightly.

NOTE:

Changes or Modifications not expressly approved by the party responsible could void the user's

authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.