

## 1. DEVICE LAYOUT



## 2. CHARGING DEVICE


Take Charging Cable (I) that is included in the package and insert Micro USB Connector (J) into the Charging Port (D), located on the bottom of the device (Fig. 1).

Take the USB Connector (K) end of the cable and insert into your computer's USB port. (Fig. 1).

**Note:** Computer must be turned on in order for device to charge.

When device is connected, the Display Screen (E) will turn on and display the Battery Icon (H) with the bars blinking. This indicates the device is charging (Fig. 1).

Charge device for 4 hours before use for full charge. Battery life is approx. 8 hours when fully charged.

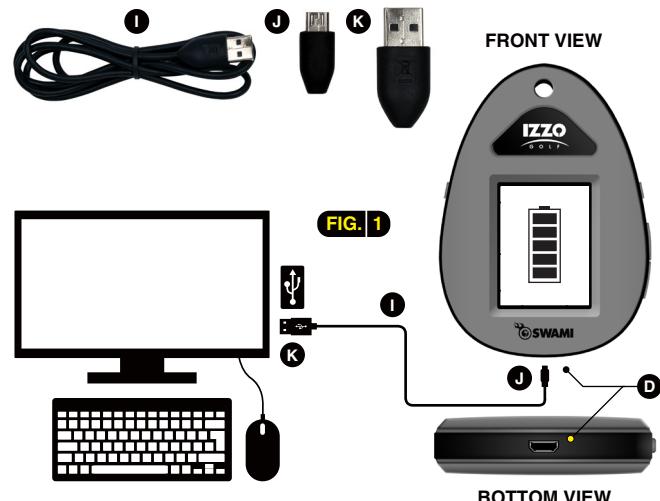

## 3. GETTING STARTED

**Turn On** your Swami Sport by pressing the **Power (A)** key once. The screen will turn on and bring you to the **Main Menu**. (Fig.1)

To toggle between options on the **Main Menu**, use the **Up/Down Keys (C)**. To select desired option, press the **Select Key (B)**.

To return to the **Main Menu** at anytime, press and hold the **Select Key (B)** for 3 seconds and then release.

To start round, select the **Play Golf** option on the **Main Menu** by pressing the **Select Key (B)** once (Fig. 1). The GPS will begin acquiring signal (Fig. 2).

## 4. PLAY GOLF!

After GPS has found a signal, the surrounding courses in the area will populate in a list. Use the **Up/Down Keys (C)** to toggle between courses. Press the **Select Key (B)** to choose the desired course. (Fig. 3)

**Note:** The **Satellite Icon (G)**, located in the top left corner will appear when there is a signal during play mode. (Fig. 3)

After the desired course is selected the screen will display Hole Yardages, Hole Number, Hole Par and Time for that course. (Fig. 4)

**Note:** You must be at the course selected to view hole yardages.

To navigate between holes, use the **Up/Down Keys (C)**.

When finished **Turn Off** the device. Press and hold the **Power (A)** key until display screen turns off, then release.

## 5. REGISTRATION

To register your Swami Sport and qualify for the limited 1 year warranty, please visit: [www.izzo.com/swamiregistration](http://www.izzo.com/swamiregistration)

## 6. USER GUIDE

The full Swami Sport User Guide goes into detail of all the features the device offers. The User Guide is available in PDF format and is downloadable at: [www.izzo.com/products/swami-sport](http://www.izzo.com/products/swami-sport)

POWERED BY



## FCC STATEMENT

Modifications not expressly approved by Izzo Golf could void authority to operate the equipment.




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

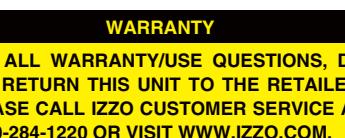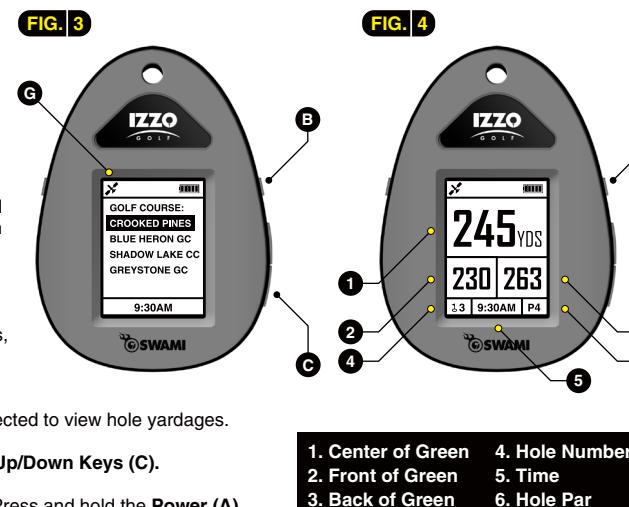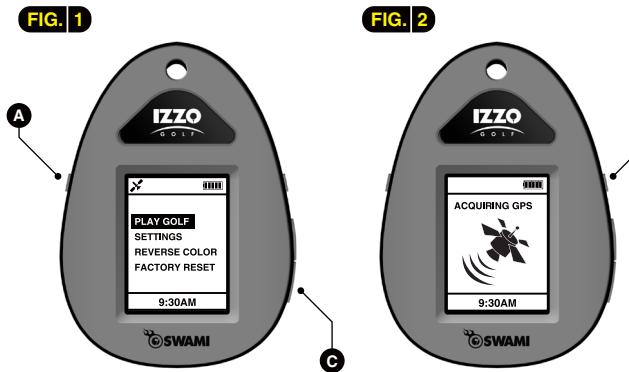

**FC** **SWAMI SPORT**  
A44000  
FCC ID: R06-SPORT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.