


# INSTRUCTIONS FOR THE BIG RED BUTTON

Congratulations on your purchase of The Big Red Button - The wireless, one touch instant alarm system. The Big Red Button is a security system that you can place anywhere - on your night stand, in your bedroom, in your child's room or even in your office. The Big Red Button requires virtually no installation - place it anywhere that is convenient. The alarm base unit can be placed comfortably on a piece of furniture, mounted on a wall or even hidden - the choice is yours - simply find the desired location up to 100 feet away! Please follow these simple set-up instructions and enjoy Security at your fingertips!

1. The BIG Red Button consists of 2 parts:  
the Transmitter and the Alarm Base Unit. Gently lift the transmitter out of the Alarm Base Unit (see Figure 1).

Figure 1

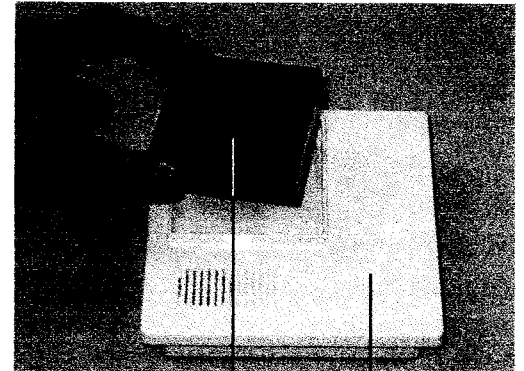

Transmitter Alarm Base Unit

2. Remove the screws from the battery compartment door located on the bottom of the Alarm Base Unit and install 4 new Alkaline "C" size batteries per the polarity markings inside the battery compartment (see Figure 2A, 2B & 2C). Replace the battery cover and screws.

Figure 2A

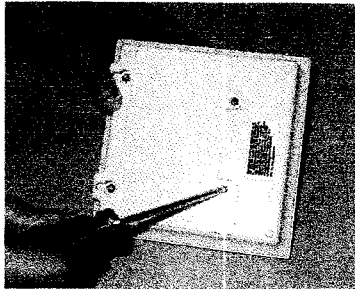


Figure 2B


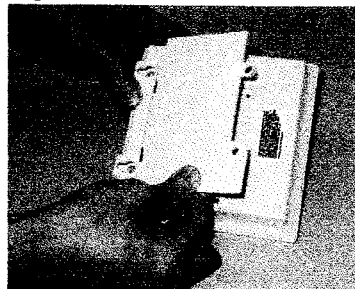


Figure 2C

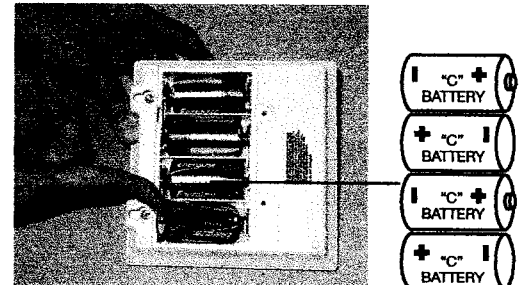

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent types as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.

3. The transmitter already has a 23 AE 12 volt battery installed. To activate the transmitter carefully remove the battery saver tab (see Figure 3A & 3B).

Figure 3A



Figure 3B



Transmitter

HPI Tx P.6/9

**PLEASE NOTE: Warning - NEVER place the Alarm Base Unit near your ears**

4. To activate the alarm just press and hold the Big Red Button (The Transmitter) for 1 second (see Figure 4). Push once more to shut off the alarm.
5. The Alarm Base Unit can either be wall mounted or simply set on a table. If you want to mount The Big Red Button on a wall, you can use the Hole Locating Template provided. Drill two holes into your wall using a 4.5 mm drill bit, insert the wall anchors into the holes and screw in the 2 screws, leaving a small gap between the screw head and the anchor. This will allow you to hang The Big Red Button to the wall using the slots on the back side of The Big Red Button (see Figure 5A & 5B).

**Please Note** that there are distance limitations but the receiver and transmitter will work in almost any location in an average size house or apartment.

Figure 4

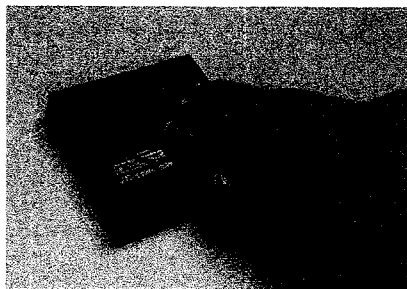


Figure 5A


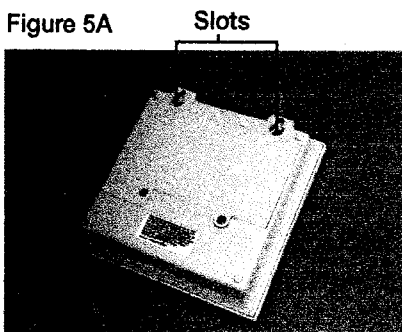


Figure 5B

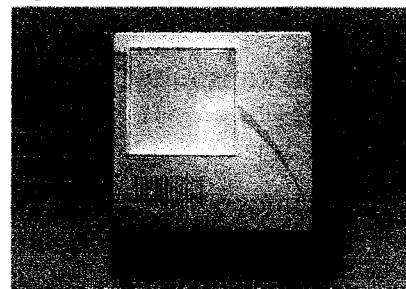

6. To replace the battery of The Big Red Button (the transmitter), simply remove the screw and the battery cover door and install 1 new alkaline 23 AE 12 volt battery (see Figure 5A, 5B & 5C). Replace the battery cover door and the screws.

Figure 5A


 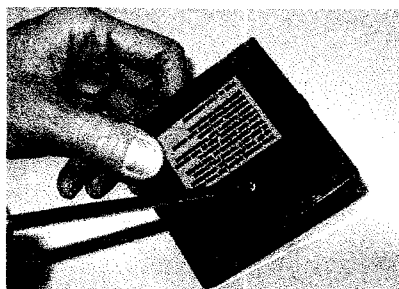


Figure 5B



Figure 5C



**Note :**

“Effective Distance” may vary from home to home depending on walls and configuration of the home. 100 foot distance is measured in an outdoor environment with no obstacles to impede the signal between the Alarm Base Unit and the Transmitter.

**Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Manufactured by  
Can You Imagine  
Chatsworth, CA 91311