

# INSTRUCTIONS FOR THE HOLIDAY DOORBELL

 
Congratulations on your purchase of the Holiday Doorbell. The Holiday Doorbell has been created to temporarily replace your existing doorbell for special occasions such as parties, holiday dinners, joyful gatherings of family & friends or anytime during the season you want to create a festive holiday feeling.

## IMPORTANT NOTE:

**Your Holiday Doorbell was not created for permanent use or to leave outdoors during times of bad weather.**

Your Holiday Doorbell comes complete with:

- Main Body
- Self-Adhering Big Red Doorbell Button
- Self-Adhering "Doorbell Out of Order" Sign

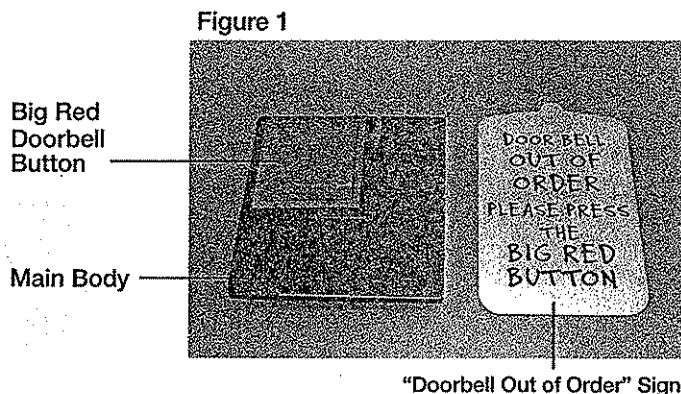

## Basic Set-Up

Gently lift the Big Red Doorbell Button out of the Main Body and set aside. install 4 new Alkaline "C" size Batteries:

- Remove the Screws from the Battery Compartment Door & then the door (see Figure 2A, 2B & 2C).
- Install the batteries following the polarity guide.
- Replace the Battery Compartment Door and screws.

Figure 2A


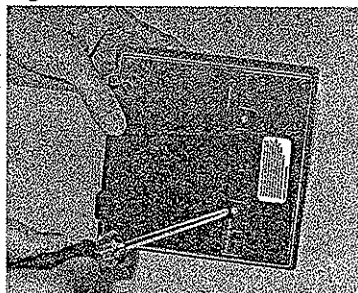 


Figure 2B

 

Figure 2C

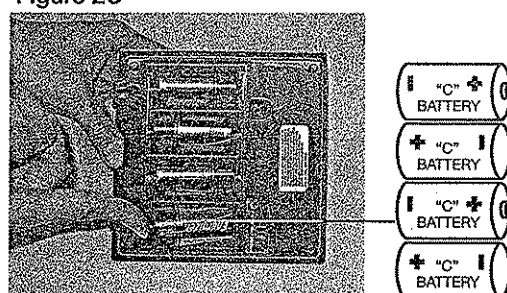

Battery insertion must be done by an adult.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if removable).

Rechargeable batteries are only to be charged under adult supervision (if removable).

Different types of batteries (alkaline & standard) or new and used batteries are not to be mixed.

Only batteries of the same or equivalent types as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the product.

The supply terminals are not to be short-circuited.

Dispose of batteries safely and correctly.

Do not attempt to burn batteries.

Remove batteries if the product will not be used for a long period of time.

The Big Red Doorbell Button already has a 23 AE 12 Volt Battery Installed. To activate it, carefully remove the battery saver tab (see Figure 3A & 3B).

Figure 3A


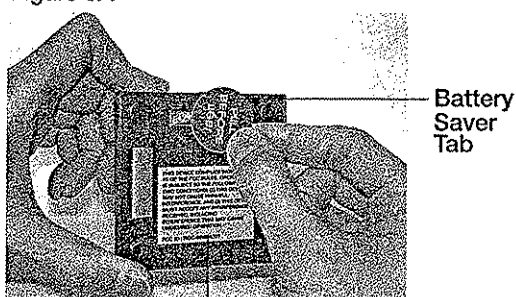 


Figure 3B

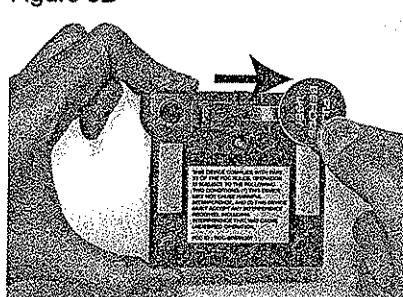 

Big Red Doorbell Button

Now you are ready to use your Doorbell!

 
On the back of the Holiday Doorbell Main Body you will see the 3-Position Selector Switch. This is used to select the Christmas Mode, New Years Mode or Normal Mode (regular doorbell) (see Figure 4).

Move the Selector Switch to the desired position. Now, when the Big Red Doorbell Button is pressed, your Holiday Doorbell will play 1 of 6 Christmas Songs, 1 of 3 New Years Songs or you will hear a simple Doorbell chime (depending on which mode you have selected).

The Main Body can either be wall mounted or set on a table.

We suggest placing the unit where your guests will hear it - they will be entertained every time the doorbell is pressed by a new arrival. Since the Holiday Doorbell is completely wireless and will transmit through walls, the possibilities for placement are almost endless.

We have also put key hole slots on the back of the main body if you would like to wall mount, but it is not necessary. If you choose to wall mount the main body, you can use the Hole Locating Template provided. Drill 2 holes into your wall using a 4.5 mm drill bit, insert the wall anchors into the holes and screw in the 2 screws, leaving a small gap between the screw head and the anchor. This will allow you to hang the Main Body on the wall using the slots on the back (see Figure 5A & 5B).

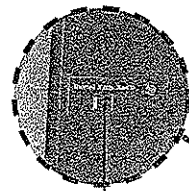

3-Position  
Selector Switch  
Normal Mode  
(regular doorbell)/  
Christmas Mode/  
New Year Mode

Figure 4

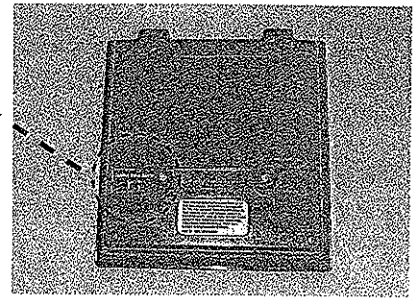 


Figure 5A


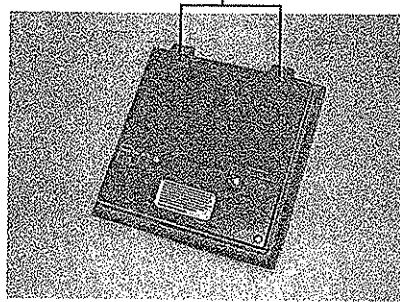 


Figure 5B

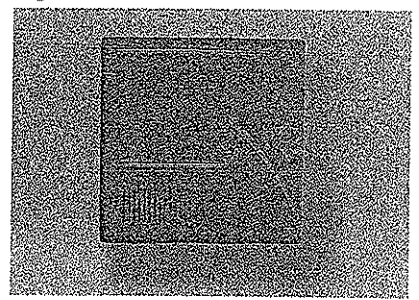 

To replace the battery of The Big Red Doorbell Button, simply remove the screw and the battery cover door and install 1 new alkaline 23 AE 12 volt battery (see Figure 6A, 6B & 6C). Replace the battery cover door and the screws.

Figure 6A


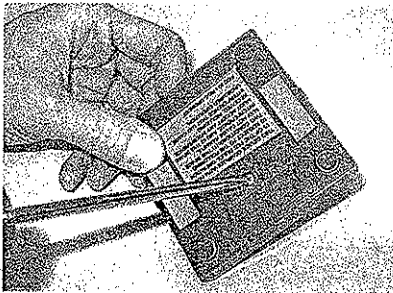 


Figure 6B

 

Figure 6C

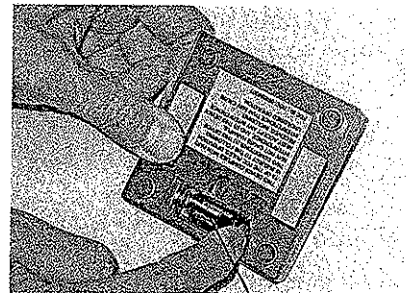

**Please Note that there are distance limitations but the Main Body and the Big Red Doorbell Button will work in almost any location in an average size house or apartment.**

Now, on the night of your Holiday Party, simply take your Big Red Doorbell Button outside of your front door. Using the 2 Velcro strips on the back, simply attach it to the wall near your current doorbell or anywhere near the front door in plain sight.

Next, take the "Doorbell Out of Order" sign and place it, if possible, OVER your current doorbell using the Velcro on the back of the sign. This way, your party guests will have no choice BUT to use the BIG RED DOORBELL BUTTON! Every time the Big Red Doorbell Button is pressed, you and your guests inside of the house will be alerted of every new arrival with a different holiday song!

#### Note :

"Effective Distance" may vary from home to home depending on walls and configuration of the home. 100 foot distance is measured in an outdoor environment with no obstacles to impede the signal between the Alarm Base Unit and the Transmitter.

#### Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In an environment with electrostatic discharge, your unit may malfunction and need to be reset. To reset the unit, simply remove all batteries and then replace them.



Manufactured by  
**Can You Imagine**