 


INSTRUCTIONS FOR THE HAND

Congratulations on your purchase of THE HAND! Please follow the instructions below for a quick set-up and to learn how to use THE HAND.

THE HAND comes complete with :

- 1 Main Unit (with 2 Suction Cups)
- 1 Remote Control (with battery)
- 1 Velcro Tape (for remote)

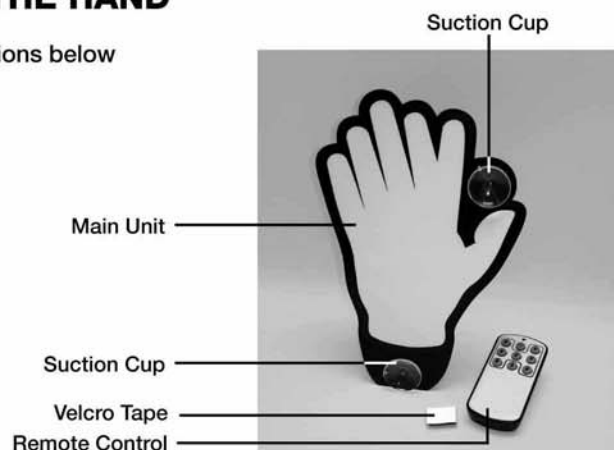

BATTERY INSTALLATION

THE HAND requires 4 AA batteries (not included). To install the batteries, simply remove the screw from the battery compartment door at the back of the unit, remove the door & install the batteries following the polarity guide (see Figure 1A to 1C). Replace the battery compartment door & screw.

Figure 1A



Figure 1B



Figure 1C



The remote control also requires 1 A23 12 volt battery which is included. To install, please remove the screw from the battery compartment door at the back of the remote, remove the door & install the included battery following the polarity guide (see Figure 2A to 2C). Replace the battery compartment door & screw.

Figure 2A



Figure 2B



Figure 2C



Battery insertion must be done by an adult.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if removable).

Rechargeable batteries are only to be charged under adult supervision (if removable).

Different types of batteries (alkaline & standard) or new and used batteries are not to be mixed.

Only batteries of the same or equivalent types as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the product.

The supply terminals are not to be short-circuited.


Dispose of batteries safely and correctly.

Do not attempt to burn batteries.

Remove batteries if the product will not be used for a long period of time.

THE HAND comes with a DC Adapter Jack for use with a 6V DC, xxx mA, positive center, 2.5 mm pin hole adapter (sold separately and available at most electronic stores).

Adapter Jack

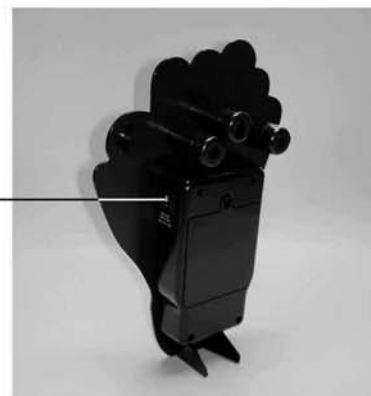


SUCTION CUPS:

THE HAND comes with 2 suction cups that can be used to attach it to any smooth surface (such as a Car Window or a mirror or a window in your house or apartment). Depending on where you want to put THE HAND will determine on which side of the unit you will need to install the suction cups. You can remove and re-insert the suction cups on either side of THE HAND whenever you want to move THE HAND to a different location, window or smooth surface.

Once you have placed the Suction Cups in THE HAND, please make sure to clean the smooth surface to which you want to stick it. Then, simply stick it to the smooth surface (such as a mirror or window) and enjoy.

THE HAND can also stand on its own (without using the suction cups) and any level surface like a desk or a bookshelf, etc. or it hung on the wall using the Keyhole Slot on the back of the unit.

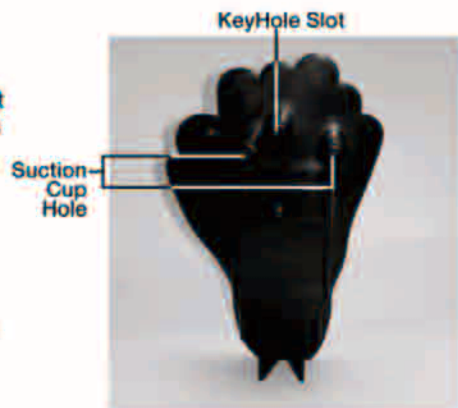

NOW YOU'RE READY TO USE THE HAND:


THE HAND can display 1 of 7 different "gestures" or it can display all of them in sequence (please see right for all of the gestures).

To turn the unit ON, move the ON/OFF/TIMER Switch located on the side of the unit to the ON position.

The remote control has an OFF BUTTON located at the TOP-MIDDLE LOCATION. The remote control also has one button for each gesture. To activate a gesture simply press the corresponding button. To activate another gesture simply press another button, and so on.

To activate all of the gestures in sequence simply press the button located on the lower left of the remote control.

To turn THE HAND off, simply press the OFF Button.

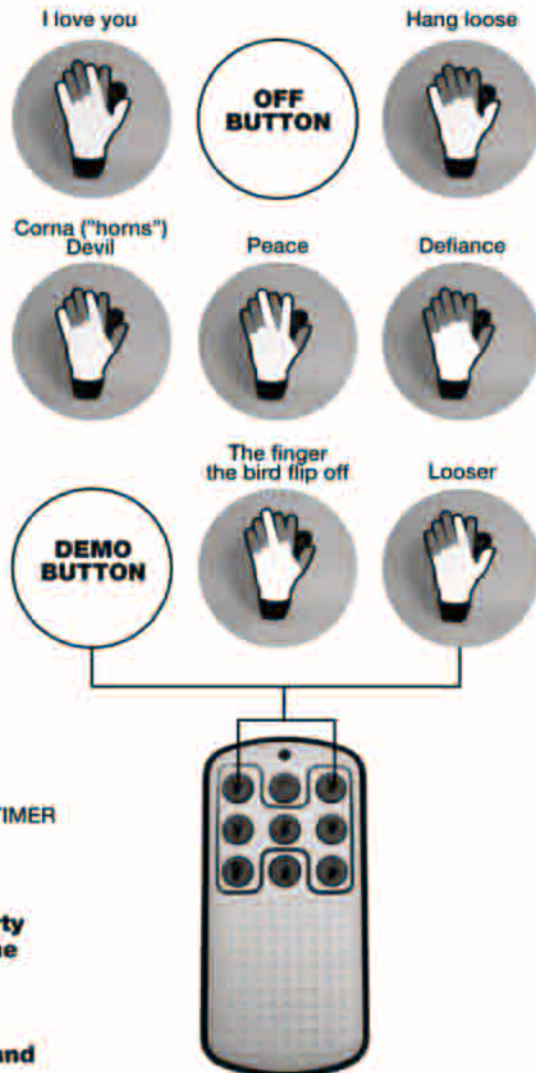

TIMER MODE:

THE HAND also has a 15-minute timer. To use the TIMER MODE, simply move the ON/OFF/TIMER Switch on the side of the unit to the TIMER position. In this mode, when you press any button, the selected gesture will remain on for 15 minutes. If during the 15 minutes you want to select another gesture, simply press the desired gesture button on the remote and now THAT gesture will remain on for 15 minutes. To turn THE HAND Off, press the OFF button on the remote.



ON/OFF/TIMER Switch

CARE AND MAINTENANCE

- Never let THE HAND come in contact with water or other liquids.
- Clean only with a soft damp cloth.
- If you are not planning to use THE HAND for an extended period of time, store THE HAND in a dry place. Do not store it in locations of extreme heat or cold. When possible, store using its original packaging.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

"Effective Distance" may vary from home to home depending on walls and configuration of the home.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In an environment with electrostatic discharge, your unit may malfunction and need to be reset. To reset the unit, simply remove all batteries and then replace them.

This device complies with RSS-210 rules.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID : ROC-TH2288T

IC : 5996A-TH2288T



Manufactured by
Can You Imagine
Chatsworth, CA 91311