

KTC® 设计稿、样稿确认

(相同样稿以最新承认日期为准)

物料编号: 7311-07P11A-10200111

物料描述: 700P11A 中性英文说明书(平板电脑 Rk2906 方案)
(40P 规格 80x130 mm)

设计申请人: 设计人:

承认人: 承认日期:

备注: 内页: 80g 双胶纸、单黑印刷
封面: 157g 铜版纸、四色印刷、过光膜

7" *PAD*

User Manual



CONTENTS

Special Features	1
Important Safety Attentions	1
Accessories List	5
Buttons and Ports	6
Installation Instruction	7
TF Card Installation and Uninstallation	7
3G Network Card Installation & Connection	8
QuickStart	9
Battery Charging	9
Power-on	9
Unlocking	9
Locking	9
Power-off	10
Volume Adjustment	10
Touch Screen Operation	10
Introduction to Icons of the System Notification Bar	10
Basic Operation Method	11
System Time and Date Setting	12
Input Method Selection	12
Application	12
Browser	13
Video Player	17
Music Player	18
Image Player	19
Explorer	20
APK Installer	21
Camera	23
E-mail	24
System Settings	25
Set the Wi-Fi Network	25
Set the Virtual Private Network (VPN)	27
Set the Portable Hotspot	27

Connect and Set the Mobile Network	27
Connect the Mobile Data Network Card	28
Set the Mobile Traffic Warning	28
Ethernet Settings	29
System Display Settings	30
Storage	30
Battery	30
APPS	30
Accounts and Sync	31
Safety	31
Backup and Reset	31
Date and Time	31
Troubleshooting	31
Important Statements	33
Technical Specifications	34

Special Features

1. Includes a LED backlit screen with a high resolution ratio.
2. Includes a capacitive touch screen with high sensitivity, supporting 5 point touch at most.
3. Employs ARM Cortex A8 core, with CPU dominant frequency at 1.20GHz,
4. Employs the Google Android4.0 system.
5. A built-in Wi-Fi module supports the 802.11 b/g wireless standard.
6. A built-in front camera of 0.3 megapixel has the features of video chatting, taking photos and camera shooting;
7. A built-in microphone can realize the functions of recording and making voice call by a third-party software;
8. Includes a built-in speaker with high quality.
9. Supports output of high-fidelity stereo headphone;
10. A built-in 3-axis gravity sensor supports the screen to auto rotate in 4 directions;
11. Main audio & video formats in markets are supported to display, with a high-definition video resolution ratio at 1080P.
12. A built-in lithium battery with high capacity.

Important Safety Attentions

Thank you for purchasing our high performance & multi-function tablet PC. It will bring you a better visual & aural experience. To make sure safety, extend the service life of the product, and give full play to the best performance of the product, please read all the instructions and nameplates carefully, follow the safety

attentions, and keep the user manual for future use.

Medical Device

Electromagnetic wave produced by the device in working condition may interfere with the normal work of implantable medical devices or personal medical devices like pacemaker, embedding cochlea, hearing-aid, etc. If you are using the above mentioned medical devices, please consult with the manufacturer for the conditions or limitations of using the product.

Hearing Protection

- Please plug the earphone with the audio source and turn down volume of the device before putting the earplugs into ears.

- To avoid damaging hearing, it is suggested to use the lowest volume when listening to music or making a voice call by earphone.

- Please don't use earplugs for a prolonged period.

Traffic Safety

- Please don't use the device when crossing the road, riding a bike or driving, which may get you distracted and cause accident.

- Wireless devices may interfere with the flight system of a plane, so please comply with relevant rules of airline companies; turn off the device in places where wireless devices are prohibited.

Operation Environment

- Please don't use the device in places with water source, such as bathtubs, pools, washing machines or moist basements and other similar environments. Once

the device is with splash, please turn off the device at once, and don't use it before being aired.

- To avoid internal circuit fault of the device, please don't charge or use the device in places of dusty, moist, dirty or places near magnetic fields.

- Please don't put the device and its accessories with flammable liquid, flammable gas or explosive objects in the same case for storage or transportation.

- Please turn off the device in places where using of wireless devices are expressly prohibited.

- Working environment temperature for the device is $-10^{\circ}\text{C}\sim 45^{\circ}\text{C}$. Please don't use The device when the temperature goes out of the range, otherwise, fault may occur.

Child Health

The device and its accessories may include several small parts, please keep them out of children reach. Or else children may damage the device and its accessories by accident, or swallow small parts, resulting in apnea or other damage.

Environment Protection

Please comply with the local laws of disposing of the device, battery and its accessories, and support recycling. Don't dispose of the device, battery and its accessories as ordinary household garbage.

Accessory Requirement

It is only allowed to use the charger and accessories authorized by the device manufacturer and compatible with the model number of the device. If other type of chargers and accessories are used, it may violate the

guarantee clause and related provisions of the country where the device located, resulting in safety accidents. If authorized batteries, chargers and accessories are needed, please contact with Dealers.

Safety Use of Battery and Charger

- After charging completes or in none-charging conditions, please cut off the connection with the device and unplug the charger from the power socket.
- Don't place the device around any heating devices like microwave ovens, ovens or radiators, etc. Overheated battery may cause explosion.
- Don't disassemble or refit the batteries, so as not to cause leaking liquid, overheating, fire or explosion.
- If the battery leaks, please keep your skin or eyes away from the leaking liquid; if you skin or eyes get touch with the leaking liquid, please wash it with clean water, and go to hospital for medical handling.
- If the power cord of the charger has been damaged, don't continue to use it, so as to avoid electric shock or fire.

Maintenance

- Please keep the device and its accessories dry, and don't use external heating devices like microwave ovens to dry them.
- Don't make the device and its accessories impacted intensively or shocked, so as not to damage the device and its accessories, or cause fire or explosion to the batteries.
- Don't place the device and its accessories in areas with over-high or over-low temperature, or else it may cause accident, fire or explosion to the device, battery

and charger. When the temperature is lower than 0oC, the performance of the battery may be limited.

- Don't place sharp metal objects like large-head pins near the speaker; it may suck such kind of objects by its magnetism, resulting in damage when using the device.

- Don't use strong chemicals, abluent or detergent to clean with the device or its accessories. Before cleaning or maintenance, please turn off the device and cut off the connection between the charger and the device.

- Don't disassemble the device and its accessories by yourself; the damage caused in this case won't be covered by maintenance.

- If the device impacts hard objects or gets intense impact from outside, causing crush to the screen, don't touch or try to remove the broken part, please stop using it and contact with the specific maintenance point at once.

Screen Protection

- Don't place any objects on the device, so as to avoid laceration.

- Don't use a sharp object to touch the screen.


Proper Use

Don't indulge in the cyber world and games, as using the internet and playing games for a prolonged period will be harmful for your health.

Accessories List

- Tablet PC (1)
- Power Adapter (1)
- User Manual (1)
- USB Data Cable (1)


Buttons and Ports

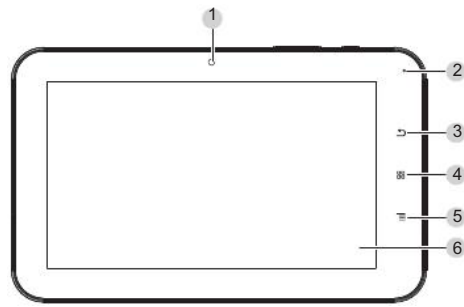

Front View



Vertical View

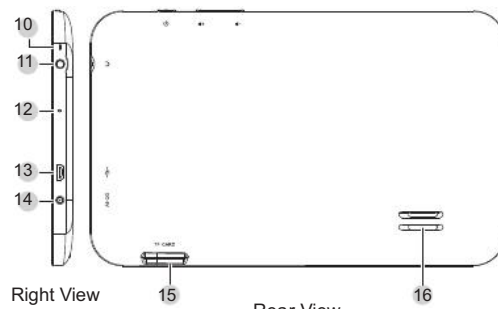

Right View

Rear View

1	Front Camera	9	Voice-
2	Charging Indicator	10	Microphone
3	Return Button	11	Earphone
4	Home Page Button	12	Hard Reset Button Hole
5	Setting Button	13	Mini USB Port
6	Capacitive Touch Screen	14	Power Input Port
7	Power Button	15	TF Card Slot
8	Voice+	16	Speaker

Notes:


Hard Reset Button Hole: In case of dead halt etc., insert a toothpick or similar object to the port, and press the Reset key in the port to execute the forced shutdown operation.

Installation Instruction**☆TF Card Installation and Uninstallation**

The device supports a standard MircoSD storage card


Installation:

Push a TF card into the bottom of the slot as shown in the figure below until you hear a "Tap" sound, which means the TF card is successfully installed.

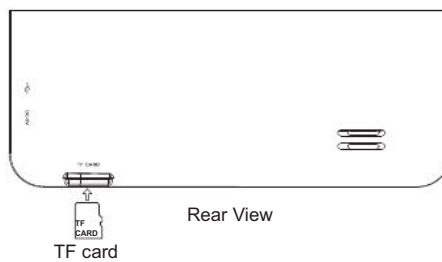

Uninstallation:

1. Tap **Setting>Storage** in the application list.
2. Find out the TF card in the Storage details, and tap **Unmount storage**.

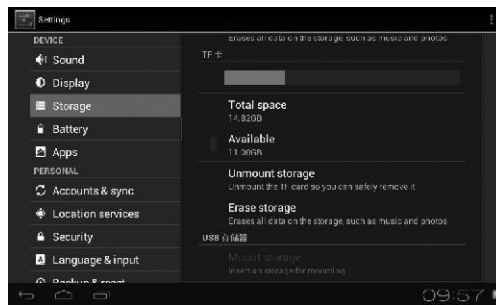


3. Push the TF card towards the inner side of the slot until it can be moved ahead, release the TF card, then the TF card will be popped out.

☆3G Network Card Installation & Connection

Connection: Connect the USB data card with the Mini USB port of the device by a patch cord (as shown in the figure below)

 Setting: Tap **Settings>More...>Mobile Network(3G) > Data enabled**, after the data traffic is activated, tap **Network Operators > Select automatically** to auto select a network and register it.



QuickStart

☆Battery Charging

Before the first use, charging for the battery is a must. Plug the power socket port of the adapter supplied with the device into an AC socket of 220V, and plug the output port into the power input interface of the device; while the charging is normal, the charging indicator lights up; while the indicator lights off, the charging completes; then unplug the charger.

Note: To make sure the battery is fully charged, please ensure that the first charging time is over 4 hours.

☆Power-on

Long press the power button for about 4 seconds to start the device.

☆Unlocking

When the system is locked, press the power button, the screen will become bright, then press the lock icon, and right-drag it towards the unlock icon to unlock the touch screen and the system.

☆Locking

1. When the system is powered-on, press the power button, the screen will become dark; you can't get any response from the capacitive screen when you touch it, and now the system is unlocked.
2. When there is not any operation on the screen for 2 minutes, the system will be auto locked.

Note: you can adjust the standby time in the **System Setting>Display**.

☆Power-off

When the system is powered-on, long press the Power button for 2 seconds, then the power-off dialog box will display on the screen, tap the "Confirm" option in the box to auto power-off the system.

☆Volume Adjustment

Press the volume+/ volume- key in the device to adjust the volume.

☆Touch Screen Operation

The Android system defines several touch operations, so as to give you a more convenient and efficient experience.

Tap: Tap a target file with your finger.

Double-Tap: Double-tap a target file fast.

Long-Tap: Long-tap a target file for 2 seconds or more.

Drag: Drag a target file and slide to a new position.




Slide: Tap the blank place on the screen and fast move in the up/down/left/right direction to browse a webpage or turn to another page etc.










Zoom in/out: Put two fingers on the screen, and pinch them together to zoom out or move them apart to zoom in.

Note: Please use the fingertip to tap the screen; the touch screen doesn't respond if you tap with the fingernail.


☆Introduction to Icons of the System


Notification Bar


	The device is connected with a PC.
	Charging for the battery.
	Downloading/Uploading files.

 	Notification for new emails.
	WIFI has been activated.
	Indication for battery power.
	Uploading/Downloading Data by WIFI
	Warning Information
	Indication of received signal strength by a mobile data card
	Software update notification
	Indication of AP hotspot enabled
	Current system time

☆ Basic Operation Method

 **Return:** tap the icon to return to the previous page.

 **Desktop:** tap the icon to return to the desktop.

 : tap the icon to view recently visited applications.


1. Long-tap the screen and left-slide it to turn to the previous page; right-slide it to turn to the next page.

2. Tap a system notification icon to view details of the notification icon.


 

3. Long-tap the blank space on the desktop to display

Choose wallpaper form, tap **Wallpaper/Live Wallpaper /Gallery** to select a wallpaper.

4. Long-tap icon on the desktop and drag it to other location: drag an icon to the **X** icon on the top of the screen to delete the icon; drag the icon to the box on the left or right side of the screen to drag it to the previous page or the next page; drag the icon on another icon to put these two icons together, and the system will create a new folder for them; if they are game applications, tap the folder and tap the **Unnamed Folder** to name the folder as "game".

5. Tap the  option on the upper right of the desktop to enter the application list.
6. Long-tap an application icon to place the icon to the desktop.
7. Tap an application icon to run the application.

☆System Time and Date Setting

1. Tap the  option on the upper right of the desktop to enter the application list.
2. Tap **Settings** > **Date & time** > **Set date/Set time** in the application list.
3. Tap the /  icon to set date/time. After the setting completes, tap **Set** to confirm and exit.
4. Tap **Use 24-hour format** and **Select date format** to set a time display format.

Note: If the device is connected with the internet, you can tap **Select time zone** to select the area where you locate, and tap **Automatic date & time** to auto obtain the current time by the system from the internet.

☆Input Method Selection

Tap **Settings** > **Language & Input**, and tap an input method desired in the **KEYBOARD & INPUT METHOD**.

Application

Notes: The device has very complicated functions; you can install an application by yourself. Operation methods differ according to different applications. Please operate applications according to the computer knowledge you possess; the operation of applications in the manual is only for reference.

☆Browser

Tap the browser icon in the application list to run the browser.

Introduction to the option icon of the browser



1	Return to the previous webpage
2	Go ahead to the next webpage
3	Refresh webpage
4	Window of a browser webpage
5	Close the current webpage window
6	Create a new webpage window
7	URL input box
8	Add Bookmark option
9	Input URL option
10	Browser Menu option
11	View Bookmark option

Basic Operations for Browser

Visit Websites

Before visiting websites, please connect your device to

the Internet via Wi-Fi, mobile Internet or Ethernet (refer to "**System Settings**" for specific settings).

1. Tap the address bar in the browser, and you will see a virtual keyboard.



2. Tap the virtual keyboard to input the correct address and then tap the [Enter] key at the virtual keyboard to visit the relevant website.


Touch Screen Operations for Webpage Browsing

1. **Zoom in the webpage:** put two fingers closely together on the target part of the webpage and separate them quickly, or double tap the target part of the webpage.
2. **Drag the webpage:** put a finger on the screen and slide it upwards, downwards, leftwards or rightwards quickly to drag the webpage upwards, downwards, leftwards or rightwards.
3. Long press **Text/Link/Image** to display and edit the editable items.


Use of Bookmark

You can use the bookmark to save your favorite webpages so that you can find and open them easily next time.


■ Save a Webpage as a Bookmark

1. Tap the add bookmark icon  in the browser.
2. Tap the virtual keyboard to input the browser tabs, and then tap the [Enter] key.
3. Make sure the address displayed in the address bar is correct and then tap the [Enter] key at the virtual keyboard.
4. Tap **Account** and **Add to** to display the relevant drop-down lists, tap **account** and **target storage location**, and then tap **OK**.

■ View a Bookmark

1. Tap the view bookmark icon  in the browser.
2. Tap the target bookmark to open it.

■ Delete or Edit a Bookmark


1. Tap the *View Bookmark* icon  in the browser.
2. Long-tap the target bookmark.
3. Edit the relevant editable items.

Copy and Paste the Text from the Internet

1. Long-tap the target text on the Internet page, and you will see the editing options on the upper part of the screen. Drag the cursor select the text that you want to copy.
2. Tap the **Copy** option on the browser toolbar.



3. Long tap the textbox to display the option paste. Tap **PASTE** to paste the copied text into the textbox.

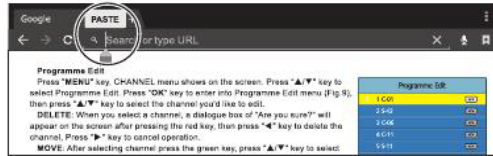


Save the Image from the Internet

1. Long tap the target image on the Internet page, and then tap **Save image** in the editing option.
2. Tap the system notification bar to check the downloading progress. When the downloading finishes, please tap **View Details**.

Download the Information from the Internet

1. Input the relevant link address in the address bar.
2. Open the link to find and tap the **Save/Download** option, and the system will auto start downloading.
3. Tap the system notification bar to check the downloading progress and details.

Browser Settings


1. Tap the menu icon  at the upper right corner of the browser and then tap the **Settings** option.
2. Tap **General > Set Homepage** to set the homepage address for the browser.
3. Tap **Privacy & Security > Clear cache** to clear the browser's locally stored cache files.

Please complete other settings as per your specific needs.

☆Video Player

Tap video player in the application list. tap a video file to play it.

Introduction to the Icons on the Video Player

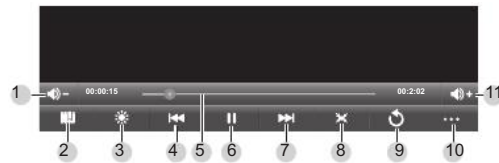


1 / 11	Volume -/+: decrease/increase the volume.
2	Set to bookmark: next time the system will ask you whether to play from the bookmark position.
3	Video brightness: adjust the video brightness.
4	Previous/Fast Rewind: tap it to play the previous video file, or long tap it to fast rewind.
5	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
6	Play/Pause: tap it to pause when a video file is played, and tap it again to resume.
7	Next/Fast Forward: tap it to play the next video file, or long tap it to fast forward.
8	Screen size: adjust the screen size to Original Size, Full Screen, 16:9, or 4:3.
9	Return to the play list.
10	More: delete a bookmark, set as loop playback mode, etc.

☆Music Player

Tap Music player in the application list.

The music player supports the *artist* list, *album* list and *song* list. Select a song from the song list to play it.

Introduction to the Icons on the Music Player

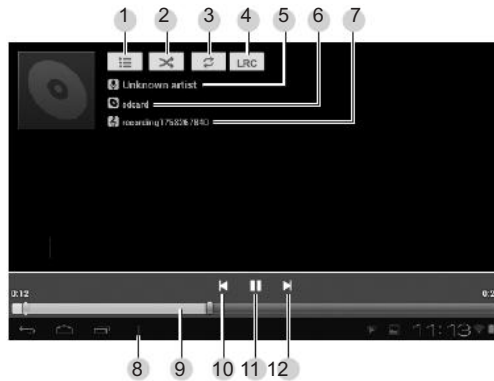

1	Display the play list.
2	Play songs at random.
3	Set the loop playback mode.
4	Display the lyric of the current song.
5	Artist name of the current song.
6	Album name of the current song.
7	Name of the current song.
8	Settings: tap it to set the sound effect.

9	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
10	Previous/Fast Rewind: tap it to play the previous song, or long tap it to fast rewind.
11	Play/Pause
12	Next/Fast Forward: tap it to play the next song, or long tap it to fast forward.

☆Image Player

Tap **Gallery** in the application list and then tap a file to play it.

Introduction to the Icons on the Image Player



1	Share the image.
2	Delete the image.
3	Settings.

Basic Operations for Image Player

1. **Zoom in the image:** put two fingers closely together on the screen and separate them quickly, or double tap the screen.

2. **Zoom out the image:** put two separated fingers on the screen and quickly pinch them together, or double tap the screen.

Note: *The image can not be zoomed out when played in original size.*

3. **Page up/down:** long tap the screen and slide it leftwards/rightwards quickly to play the previous/next image.

☆Explorer

Tap **Explorer** in the application list.

Edit a File

1. Tap the disk where the target file is located.
2. Tap the folder where the target file is located.
3. Tap the target file to run it;
4. Long tap the target file to display such editing options as **Copy**, **Delete**, **Move**, **Rename** and **Send**. Tap an option to complete the relevant operation;

5. Tap **Multi** and then tap multiple files or folders continuously to select them (the names of the selected files or folders will turn to light blue). Tap the editing options in the toolbar to do such operations as Copy, Delete, Move and Send to these files or folders.

☆APK Installer


Tap **APK Installer** in the application list.

You can use the APK installer to install applications and manage the installed applications.


Install an Application

1. Tap **Install**.

2. Find the path of the target application and tap the target application in the installable application list on the right.

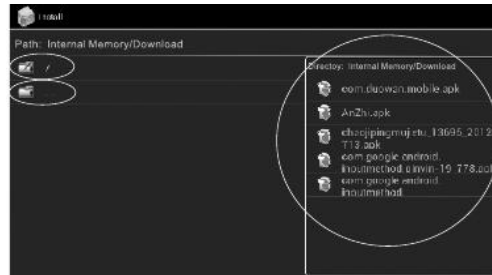


Tap  to return to the main page of the disk.

Tap  to return to the parent folder.

3. The system prohibits you installing any application from unknown sources by default. You need to tap **Settings > Security > DEVICE ADMINISTRATION** to

check the **Unknown sources** option.

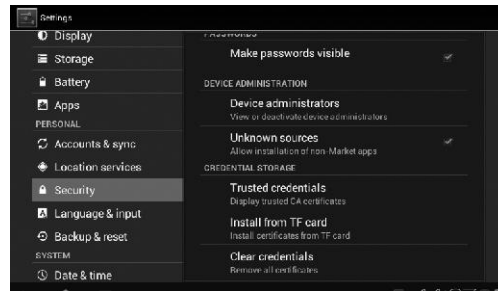

4. Tap **Back** to return to the installation page, tap **Install Application**, and tap **Finish** when the installation is finished. The icon of the installed application will appear in the application list. You can tap the relevant icon to start the application.

Manage Applications


1. Tap **Manage**.
2. Tap the target application and then tap an option, like **Launch**, **Export**, **Uninstall** or **Cancel**.

Launch: launch this application.
Export: export this application to the root directory.
Cancel: cancel the current operation.

☆Camera

Tap **Camera** in the application list.

Introduction to the Icons on the Camera

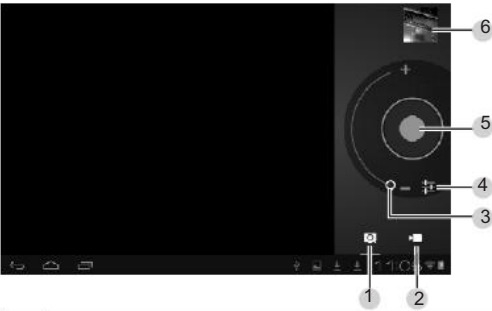

1	Camera mode: tap it to switch to the camera mode.
2	Video recording mode: tap it to switch to the video recording mode.
3	Zooming: slide it towards " + " / " - " to zoom in/out the focal length.
4	Settings: enter the settings mode. AW : set the white balance. SCN : set the view finding mode (the white balance does not work in Night mode). ⋮: Camera settings: set the photo size. ⌂: exit the camera settings.

5	Shoot: tap it to shoot a photo.
6	View: tap it to view the photos.

☆E-mail

Tap **Email** in the application list.

Set and add your E-mail account at first use.

1. Input your E-mail address and password and then tap **Next**.

2. Select an account type from POP, IMAP and Exchange based on the service provided by your E-mail provider.


3. Confirm the settings for the receiving server and then tap **Next**.


4. Confirm the settings for the sending server and then tap **Next**.

5. Now your E-mail account has been set successfully. tap **Gave this account a name** to set the account name and tap your name to set your signature for outbox E-mails.

6. Tap **Inbox** to receive E-mails.

Send an E-mail


1. Login your E-mail account and then tap the icon  on the upper part of the screen.

2. Complete the Receiver and Subject, input the E-mail text, tap the icon  to add attachments, and then tap the option *Send* on the upper part of the screen to send the E-mail.



System Settings


Here you can configure the wireless network, change the system time, set the input method, and the like.

☆Set the Wi-Fi Network

1. Tap **Settings** in the application list.
2. Tap the Wi-Fi switch to enable the Wi-Fi function. tap **Scan** at the upper right corner of the screen to search the Wi-Fi network. When the searching is finished, please tap the target network. If the target Wi-Fi network is encrypted, the icon  will appear at the lower right side of the signal strength icon.
3. Tap the password box to input the connection password. If you use DHCP on your router, just tap **Connect** to complete the network connection after inputting the password. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network connection.



4. Tap  to hide the input method and then tap  on the left of **Show advanced options**

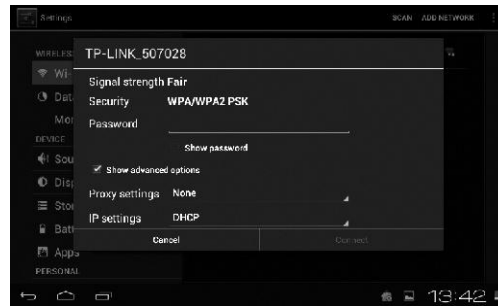

5. Tap the **IP settings** box to select **Static**, complete the **IP address**, **Gateway**, **Network prefix length**, Domain 1 and Domain 2 (the settings in the figure below are for reference only), and then tap **Connect** to complete the network connection.




☆Set the Virtual Private Network (VPN)

The VPN can access the internal network resources of your company via public network. To set the VPN, the IP address of the server provided by the network manager of your company is required.

1. Tap **Settings** > **More...** > **VPN**.
2. Tap **Add Network** and enter **Change VPN** to add network: input the VPN name, type and server address, and then tap **Save**.
3. The network set in step 2 will be added to the network list. Tap this network, input the user name and password, and then tap **Connect**.

☆Set the Portable Hotspot

The portable hotspot allows your device to act as Wi-Fi hotspot. Any device connected to your hotspot can access the Internet through the mobile data traffic of your device.

1. Tap **More...** and then tap **Portable hotspot** in the list on the right.
2. Tap  on the right of the option **Portable Wi-Fi Hotspot** to enable the portable Wi-Fi hotspot, and then tap **Configure Wi-Fi hotspot**.
3. Tap **Network SSID** to input the network name, tap **Security** to select an encryption method, tap **Password** to input the password, and then tap **Save** to complete the setting process. The Wi-Fi hotspot indicator icon will appear in the notification bar.

☆Connect and Set the Mobile Network

Your device supports external wireless broadband network cards, but you need to complete the relevant

settings first.

Data enabled: enable the mobile data traffic function.

Data roaming: select to allow or disallow the use of mobile data traffic in roaming state.

Access Point Names: set the mobile data access point based on the data provided by your mobile provider.

Use only 2G networks: using 2G networks only will reduce the data uploading and downloading rates, but will save the battery loss.

Network operator: manually or automatically search the network operator.

☆ **Connect the Mobile Data Network Card**

1. Connect the 3G data network card to the mini USB port of your device via an extension cable.

2. Tap **Network Operators** > **Select automatically**.


When the system indicates "Registered on the Network Successfully", that means the data network card has been recognized by your device. The network signal icon of the mobile data network card will appear in the notification bar.


3. Tap **Data enabled** to connect your device to the Internet.

Note: Some network cards may be incompatible with or may not be recognized by your device as different data network card manufacturers and chip manufacturers may have different standards or drives, so you will have to replace them.

☆ **Set the Mobile Traffic Warning**

To use the mobile data traffic, please set the traffic warning to avoid extra expenses incurred by excessive mobile data traffic.

1. Tap **ON** on the right of the mobile data to enable the mobile data traffic.
2. Tap  on the right of the option **Set mobile data limit**, tap **Data usage cycle** to select a monthly payment cycle for the traffic package, long tap the time axis and drag it leftwards/rightwards to adjust the days of a traffic cycle, and long tap the traffic limit axis and drag it upwards/downwards to adjust the traffic warning and limit.

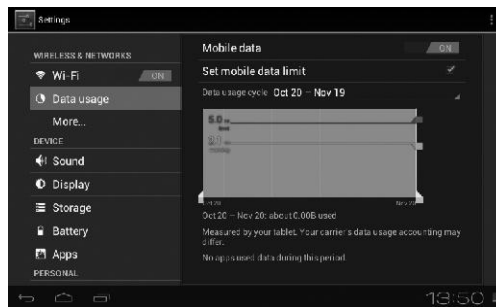


☆ Ethernet Settings

Prepare a USB-type Ethernet adapter before setting the Ethernet.

1. Connect the Ethernet adapter to the mini USB port of your device and insert the crystal terminal of the network cable into the RJ45 socket of the Ethernet adapter.
2. Tap **More...** > **Ethernet settings** > **Ethernet** to enable the Ethernet function. If you use DHCP on your router, the system will automatically assign an IP address and gateway for you. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network settings.

3. Tap **Static IP setting** > **Use Static IP**.

4. Input the IP address, gateway, network masks, DNS1, and DNS2, tap the menu icon  at the upper right corner of the screen, and then tap **Save** in the menu.

☆**System Display Settings**

Brightness: adjust the screen brightness.

Wallpaper: select an image as the wallpaper.

Auto Rotate Screen: select to allow or disallow the auto screen rotation.

Sleep Mode: set the time for the screen to be auto locked in case of no operation.

Font: set the font size.

☆**Storage**

Check the details of the internal storage space, NAND Flash TF card or USB memory, or uninstall/format the memory.

Note: Please backup your important personal files before formatting the memory.

☆**Battery**

Check the battery state.

☆**APPS**

Enter the *Application* option, and you can check downloaded applications, applications stored in the TF card, running applications, storage space, etc. You can also tap an application to stop it running or uninstall it.

☆Accounts and Sync

Check the local accounts and synchronize them by connecting them to the Internet.

☆Safety

Set the safety options for device protection.

Screen lock: set the unlocking icon.

Make the icon visible: display the unlocking icon while unlocking.

Real-time lock by power key: press the power key to lock.

☆Backup and Reset

Restore factory settings: clear all the data on your device and restore the factory Settings.

☆Date and Time

Auto determine date and time: use the time on the Internet.

Set date: manually set the date.

Set time: manually set the time.

Select time zone: manually select a time zone.

Troubleshooting

■ Your device can't be turned on.

The battery power is used up. Please fully charge your device.

■ Your device cannot access the Internet via Wi-Fi.

1. Check whether your device can receive any Wi-Fi signal.
2. Check whether the wireless router supports DHCP.

If not, please configure a static IP address.

3. Check whether the wireless router has been connected to the Internet.

■ **Your device responds to operations slowly.**

1. Check whether too many applications are running in the background.

2. Check whether any incompatible-version application has been installed.

3. Use the antivirus software to scan and kill the malicious programs (if any).

■ **Your device gets warm in use.**

It is normal that your device get warm in a long-time use or in charging.

■ **Your device crashes and its keys do not work.**

Long press the power key for 6 seconds, and the system will ask you whether to turn off your device. Select to shut down the device and then restart your device. If this fails, insert a slim needle to the reset button hole to realize the forced shutdown.

■ **The total memory is smaller than the actual memory.**

A certain space has been used to store the system files and install user applications, so it appears that the total memory is smaller than the actual memory.

■ **Some video files can't be played.**

Your device supports most of the common audio and video file formats, except a few special formats. We suggest that you download a third-party player from the application market to play those exceptional files.

Important Statements

All contents and services obtained through your device shall belong to a third party under the protection of copyright, patent, trademark or other intellectual properties, and shall be used for your personal non-commercial purposes only. You are not allowed to use any content or service in any way without the authorization of the content or service provider.

In no case shall we be held liable for any direct, indirect or accidental loss or damage caused by your accessing any content, service, information or third-party software through your device.

Third-party services are subject to change, deletion or stop without prior notice. We shall not imply or assure that all services and contents will be kept available at all time.

We shall not be responsible for providing any related customer service for any third-party service or content. Please refer your questions and service requests directly to the relevant content or service provider.

Please remember to backup the data when using your device. We shall not be held liable for any personal data loss or damage caused by software or hardware misoperation, product repair, battery replacement or any other unexpected situations, or for any other indirect loss arising thereof. Any of your misunderstandings for this Manual shall be beyond our control, so we shall not bear any liability for any accidental loss caused by the use of this Manual or for any third-party claim caused by the use of your device.

Trademark

"Android" is the trademark of Google Inc.

"Micro SD" is the trademark of SD Card Association.

Other company names, product names or services may be also the registered trademarks of other companies, and shall be subject to the applicable laws, regulations and international conventions, whether indicated and marked on the product and in this Manual or not.

Technical Specifications

Basic Parameters	
CPU Frequency	1.2GHz
DDR-RAM	512MB DDR3
NAND FLASH	8G
Operating System	Android 4.0
Network Access	Wi-Fi, 802.11b/g
USB Port	Mini USB 2.0
Camera	Front Camera, 0.3 Mega Pixel
Standard Battery	Li-polymer Battery, 3.7V, 2500mA
Power Adapter	Input: 100-240V AC, 50-60 Hz Output: DC 5V \approx 2A
TF Card	32G max.
Main Screen	7-inch TFT LCD Screen, Resolution: 800 x 600
Product Size	194.5mm x 120.6mm x 10.4mm
Product Weight	336g

Application	
System Management	APK Installer, System Settings, Global Time
Network	Google Chrome, E-mail, Gmail, Google Market
Input Method	Standard Android Keyboard, Supporting Third-party Input Methods
Tool	Alarm Clock, Calculator, Memo, Voice Recorder
Entertainment	3D Gallery, Music, Youtube.

Disclaimer: These specifications are for reference only and shall not constitute any commitment in any way. Considering the product improvement, we shall reserve the right to change the product specifications without further notice.

CE 0168

Hereby, [Shenzhen KTC Technology Co., Ltd.], declares that this [7" PAD] is
in compliance with the essential requirements and other relevant provisions of Directive
1999/5/EC.

FCC Statement:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.