

## KTC<sup>®</sup> 设计稿、样稿确认

(相同样稿以最新承认日期为准)

物料编号: 7311-10P11C-10200111

物料描述: 101P11C 中性英文说明书 (平板电脑RK3066方案)  
(44P 80mmX130mm)

设计申请人: 设计人:

承认人: 承认日期:

备注: 内页: 80g 双胶纸、单黑印刷

封面: 157g 铜版纸、四色印刷、过光膜

# 10.1"PAD

## User Manual



## CONTENTS

<b>Special Features .....</b>	<b>1</b>
<b>Important Safety Attentions .....</b>	<b>1</b>
<b>Accessories List .....</b>	<b>5</b>
<b>Buttons and Ports .....</b>	<b>6</b>
<b>Installation Instruction .....</b>	<b>8</b>
Micro SD Card Installation and Uninstallation .....	8
3G Network Card Installation & Connection .....	9
HDMI Output to TV .....	9
<b>QuickStart .....</b>	<b>9</b>
Battery Charging .....	9
Power-on .....	10
Unlocking .....	10
Locking .....	10
Power-off .....	10
Volume Adjustment .....	10
Touch Screen Operation .....	11
Introduction to the Home Screen of PAD.....	11
Basic Operation Method .....	12
System Time and Date Setting .....	13
Input Method Selection .....	13
<b>Application .....</b>	<b>14</b>
Browser .....	14
Video Player .....	18
Music Player .....	19
Image Player .....	20
Explorer .....	21
APK Installer .....	22
Camera .....	24
E-mail .....	25
<b>System Settings .....</b>	<b>26</b>
Set the Wi-Fi Network .....	26

Set Bluetooth .....	27
Set Ethernet .....	29
Set the Mobile Traffic Warning .....	30
Set the Virtual Private Network (VPN) .....	31
Set the Portable Hotspot .....	31
Connect and Set the Mobile Network .....	31
Sound .....	32
Display .....	33
HDMI Settings .....	33
Storage .....	33
Battery .....	33
Apps .....	33
Location service .....	34
Security .....	34
Language & input .....	34
Backup & reset .....	34
ACCOUNTS .....	35
Date & Time .....	35
Accessibility .....	35
Developer options .....	35
About tablet .....	36
<b>Troubleshooting .....</b>	<b>36</b>
<b>Important Statements .....</b>	<b>37</b>
<b>Technical Specifications .....</b>	<b>38</b>

## **Special Features**

1. Includes a LED backlit screen with a high resolution ratio.
2. Includes a capacitive touch screen with high sensitivity, supporting 10 point touch at most.
3. Employs ARM Cortex A9 core, with CPU dominant frequency at 1.5GHz,
4. Employs the Google Android4.1 system.
5. A built-in Wi-Fi module supports the 802.11 b/g/n wireless standard.
6. Built-in bluetooth module.
7. Built-in 2 million pixel front camera and 2 million pixel rear camera, which can have the functions of video chatting, photographing and shooting.
8. A built-in microphone can realize the functions of recording and making voice call by a third-party software;
9. Includes a built-in speaker with high quality.
10. Supports output of high-fidelity stereo headphone;
11. A built-in 3-axis gravity sensor supports the screen to auto rotate in 4 directions;
12. Main audio & video formats in markets are supported to display, with a high-definition video resolution ratio at 1080P.
13. With HDMI output, large screen display can be realized by connecting to a TV.
14. A built-in lithium battery with high capacity.

## **Important Safety Attentions**

Thank you for purchasing our high performance & multi-function tablet PC. It will bring you a better visual & aural experience. To make sure safety, extend the

service life of the product, and give full play to the best performance of the product, please read all the instructions and nameplates carefully, follow the safety attentions, and keep the user manual for future use.

### **Medical Device**

Electromagnetic wave produced by the device in working condition may interfere with the normal work of implantable medical devices or personal medical devices like pacemaker, embedding cochlea, hearing-aid, etc. If you are using the above mentioned medical devices, please consult with the manufacturer for the conditions or limitations of using the product.

### **Hearing Protection**

- Please plug the earphone with the audio source and turn down volume of the device before putting the earplugs into ears.
- To avoid damaging hearing, it is suggested to use the lowest volume when listening to music or making a voice call by earphone.
- Please don't use earplugs for a prolonged period.

### **Traffic Safety**

- Please don't use the device when crossing the road, riding a bike or driving, which may get you distracted and cause accident.
- Wireless devices may interfere with the flight system of a plane, so please comply with relevant rules of airline companies; turn off the device in places where wireless devices are prohibited.

### **Operation Environment**

- Please don't use the device in places with water source, such as bathtubs, pools, washing machines or moist basements and other similar environments. Once the device is with splash, please turn off the device at once, and don't use it before being aired.

- To avoid internal circuit fault of the device, please don't charge or use the device in places of dusty, moist, dirty or places near magnetic fields.

- Please don't put the device and its accessories with flammable liquid, flammable gas or explosive objects in the same case for storage or transportation.

- Please turn off the device in places where using of wireless devices are expressly prohibited.

- Working environment temperature for the device is -10℃~45℃. Please don't use The device when the temperature goes out of the range, otherwise, fault may occur.

### **Child Health**

The device and its accessories may include several small parts, please keep them out of children reach. Or else children may damage the device and its accessories by accident, or swallow small parts, resulting in apnea or other damage.

### **Environment Protection**

Please comply with the local laws of disposing of the device, battery and its accessories, and support recycling. Don't dispose of the device, battery and its accessories as ordinary household garbage.

### **Accessory Requirement**

It is only allowed to use the charger and accessories

authorized by the device manufacturer and compatible with the model number of the device. If other type of chargers and accessories are used, it may violate the guarantee clause and related provisions of the country where the device located, resulting in safety accidents. If authorized batteries, chargers and accessories are needed, please contact with Dealers.

### **Safety Use of Battery and Charger**

- After charging completes or in none-charging conditions, please cut off the connection with the device and unplug the charger from the power socket.
- Don't place the device around any heating devices like microwave ovens, ovens or radiators, etc. Overheated battery may cause explosion.
- Don't disassemble or refit the batteries, so as not to cause leaking liquid, overheating, fire or explosion.
- If the battery leaks, please keep your skin or eyes away from the leaking liquid; if you skin or eyes get touch with the leaking liquid, please wash it with clean water, and go to hospital for medical handling.
- If the power cord of the charger has been damaged, don't continue to use it, so as to avoid electric shock or fire.

### **Maintenance**

- Please keep the device and its accessories dry, and don't use external heating devices like microwave ovens to dry them.
- Don't make the device and its accessories impacted intensively or shocked, so as not to damage the device and its accessories, or cause fire or explosion to the batteries.



- Don't place the device and its accessories in areas with over-high or over-low temperature, or else it may cause accident, fire or explosion to the device, battery and charger. When the temperature is lower than 0°C, the performance of the battery may be limited.

- Don't place sharp metal objects like large-head pins near the speaker; it may suck such kind of objects by its magnetism, resulting in damage when using the device.

- Don't use strong chemicals, abluent or detergent to clean with the device or its accessories. Before cleaning or maintenance, please turn off the device and cut off the connection between the charger and the device.

- Don't disassemble the device and its accessories by yourself; the damage caused in this case won't be covered by maintenance.

- If the device impacts hard objects or gets intense impact from outside, causing crush to the screen, don't touch or try to remove the broken part, please stop using it and contact with the specific maintenance point at once.

### **Screen Protection**

- Don't place any objects on the device, so as to avoid laceration.

- Don't use a sharp object to touch the screen.


### **Proper Use**

Don't indulge in the cyber world and games, as using the internet and playing games for a prolonged period will be harmful for your health.


## **Accessories List**

- Tablet PC (1)
- Power Adapter (1)
- User Manual (1)
- USB Data Cable (1)

## 按键及接口 Buttons and Ports

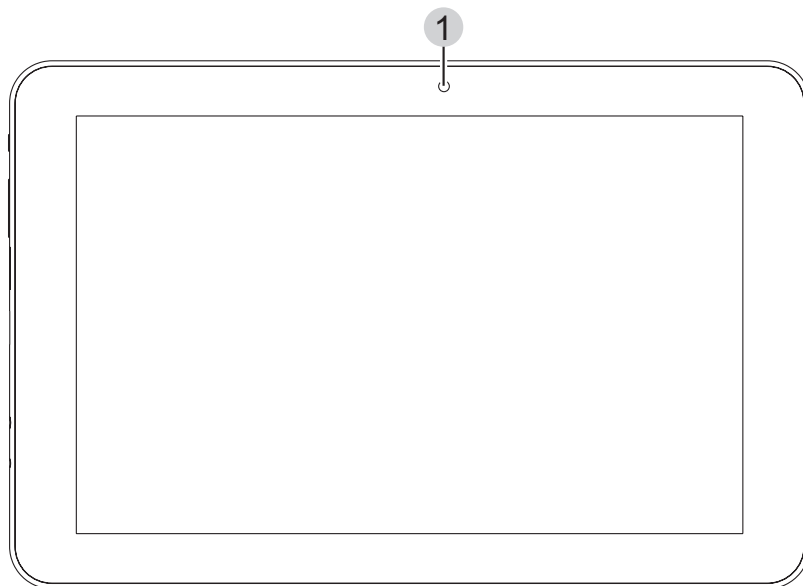


Front View

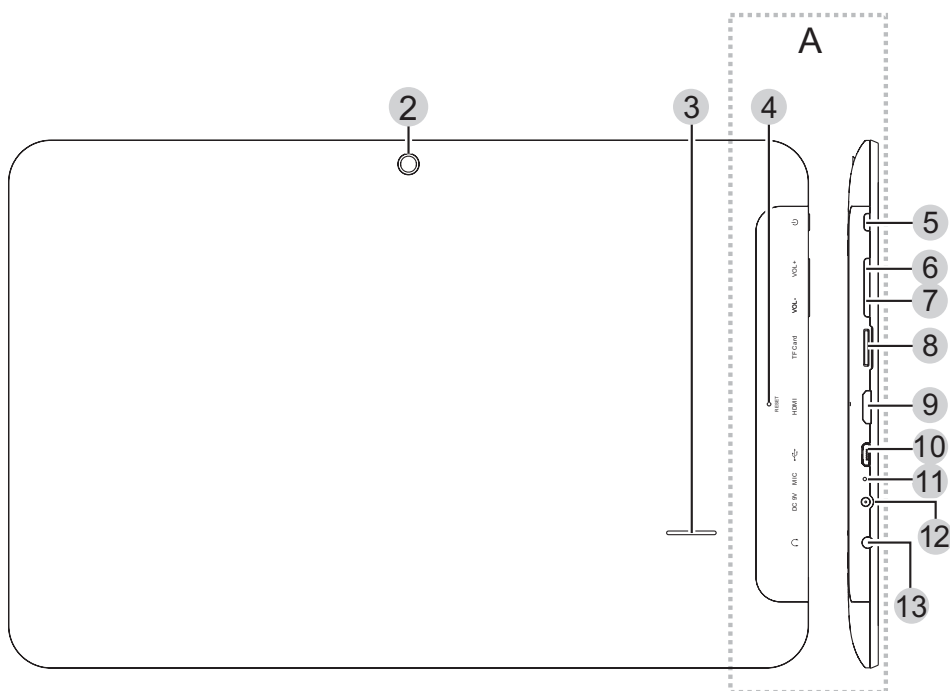

Rear View

Left View

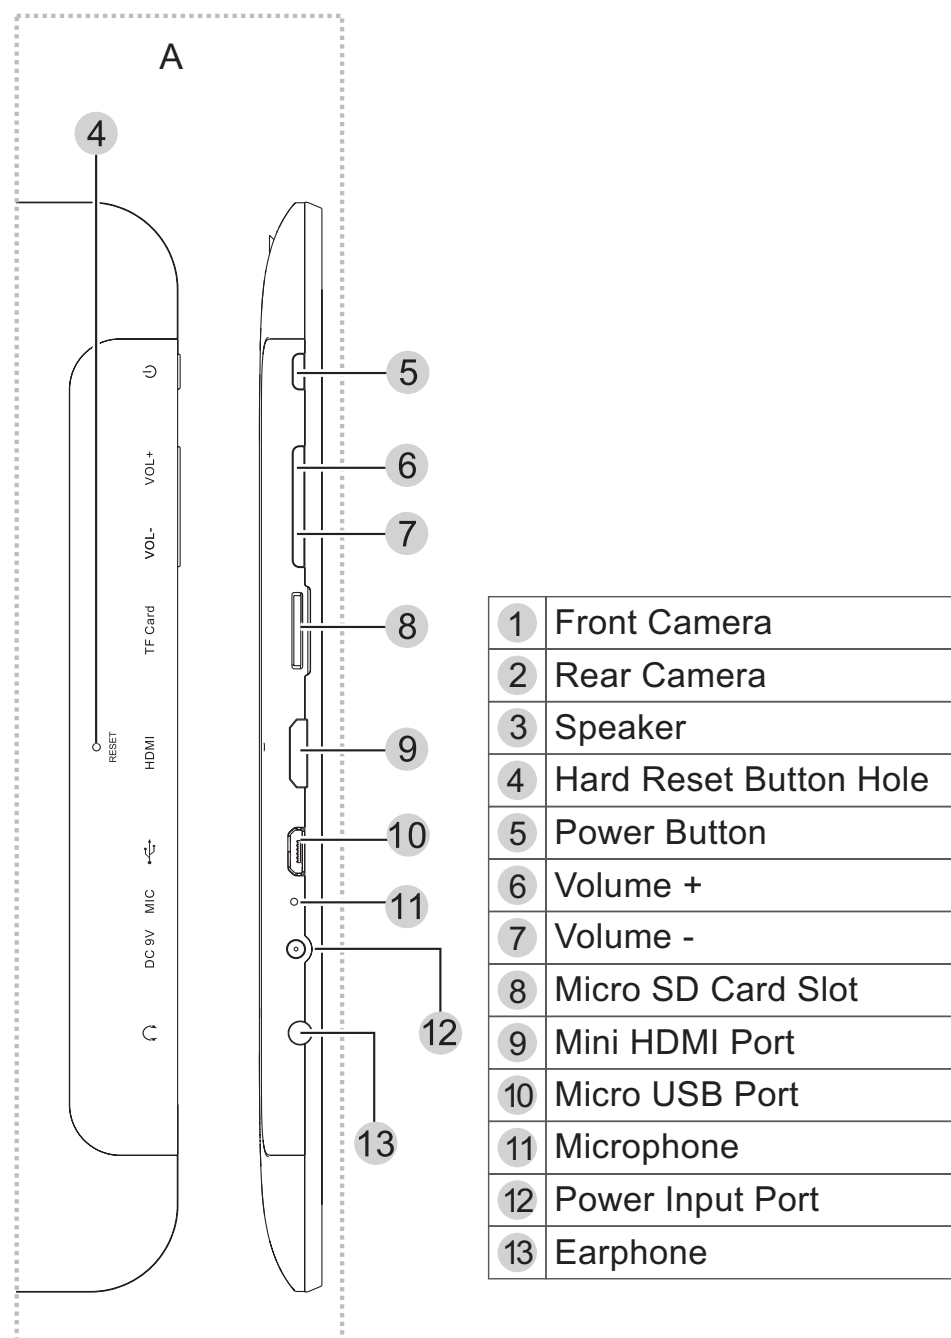

### Notes:

**Hard Reset Button Hole:** In case of dead halt etc., insert a toothpick or similar object to the port, and press the reset button in the port to execute the forced shutdown operation.


## Installation Instruction

### ☆Micro SD Card Installation and Uninstallation

The device supports a standard Micro SD storage card

#### Installation:

Push a SD card into the bottom of the slot as shown in the figure below until you hear a "Tap" sound, which means the SD card is successfully installed.

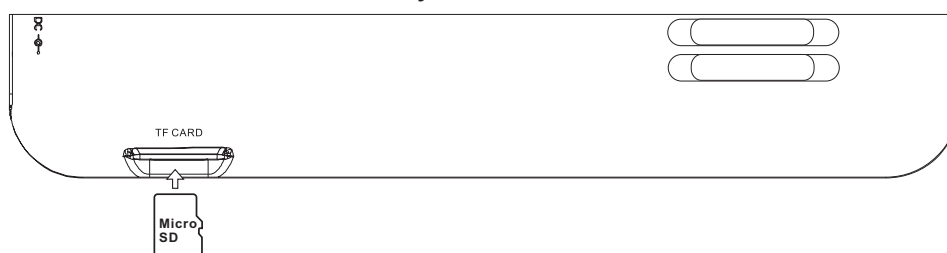


Micro SD card

#### Uninstallation:

1. Tap **Setting>Storage** in the application list.
2. Find out the SD card in the Storage details, and tap

**Unmount storage.**

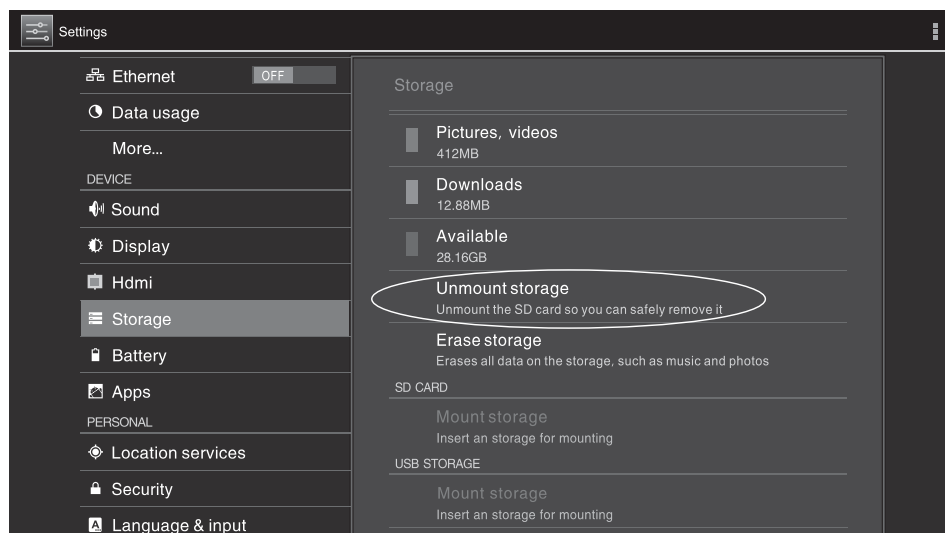


3. Push the SD card towards the inner side of the slot until it can be moved ahead, release the SD card, then the SD card will be popped out.

### ☆ 3G Network Card Installation & Connection

**Connection:** Connect the USB data card with the Micro USB port of the device by a patch cord (as shown in the figure below)

**Setting:** Tap **Settings>More...>Mobile Network > Data enabled**, after the data traffic is activated, tap **Network Operators > Choose automatically** to auto select a network and register it.

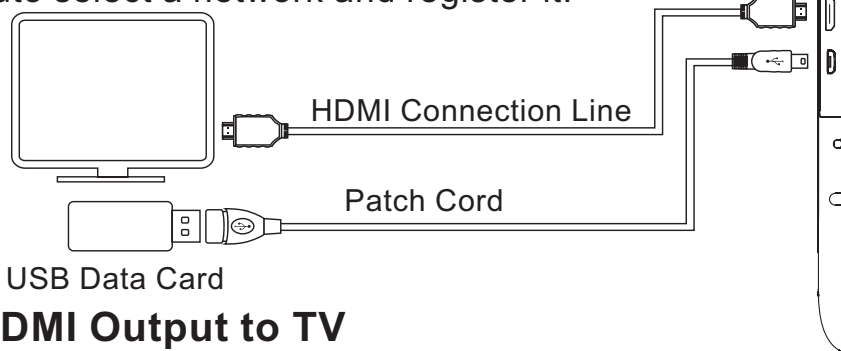

### ☆ HDMI Output to TV

**Connection:** Connect one end of the HDMI cable to the Mini HDMI port of the device, and the other end to the HDMI port of the TV.


**Setting:**

1. Tap **Settings > Hdmi > Turn on HDMI**.
2. Press the **SOURCE** button on the TV remote control, and select a corresponding HDMI signal source.

**Note:** For details, please refer to the **System Setting** part of the manual.

## QuickStart

### ☆ Battery Charging

Before the first use, charging for the battery is a must. Plug the power socket port of the adapter supplied with the device into an AC socket of 100-240V, and plug the output port into the power input interface of the device; When the charging is normal, the icon  in the status bar


indicates charging battery; when the charging is finished, the status bar will prompt electric quantity 100%.

**Note:** *To make sure the battery is fully charged, please ensure that the first charging time is over 4 hours.*


### ☆ **Power-on**

Long press the power button for about 4 seconds to start the device.

### ☆ **Unlocking**

When the system is locked, press the power button , and the screen become bright, then press the lock icon, and right-drag it towards the unlock icon to unlock the touch screen and the system.

### ☆ **Locking**

1. When the system is powered-on, press the power button , and there is no display on screen, then system is locked.

2. When there is not any operation on the screen for 2 minutes, the system will be auto locked.

**Note:** *you can adjust the standby time in the **Settings** > **Display**.*

### ☆ **Power-off**

When the system is powered-on, long press the Power button for 2 seconds, then the power-off dialog box will display on the screen, tap the **OK** option in the box to auto power-off the system.

### ☆ **Volume Adjustment**

Press the **VOL+ / VOL-** key in the device to adjust the

volume.

## ☆ Touch Screen Operation

The Android system defines several touch operations, so as to give you a more convenient and efficient experience.

**Tap:** Tap a target file with your finger.

**Double-Tap:** Double-tap a target file fast.

**Long-Tap:** Long-tap a target file for 2 seconds or more.


**Drag:** Drag a target file and slide to a new position.

**Slide:** Tap the blank place on the screen and fast move in the up/down/left/right direction to browse a webpage or turn to another page etc.







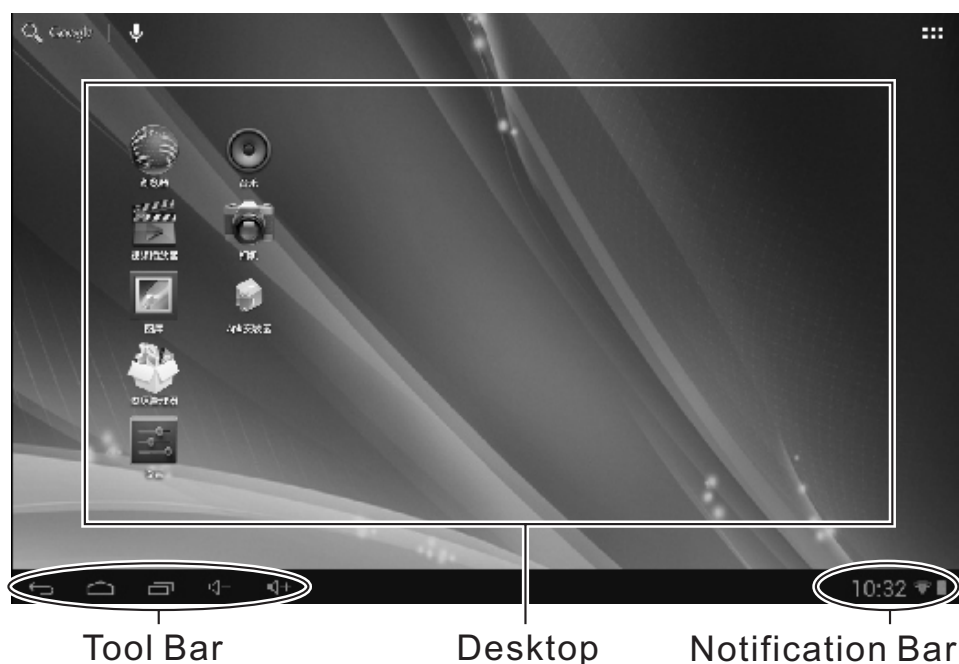






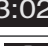
**Zoom in/out:** Put two fingers on the screen, and pinch them together to zoom out or move them apart to zoom in.

**Note:** Please use the fingertip to tap the screen; the touch screen doesn't respond if you tap with the fingernail.






## ☆ Introduction to the Home Screen of PAD



### Introduction to Icons of the Notification Bar

	The device is connected with a PC.
	Charging for the battery.
	Downloading/Uploading files.
	Notification for new emails.
	Wi-Fi has been activated.
	Indication for battery power.
	Uploading/Downloading Data by Wi-Fi
	Warning Information
	Indication of received signal strength by a mobile data card
	Software update notification
	Indication of AP hotspot enabled
	Current system time
	bluetooth-on
	bluetooth transferring file


### Introduction to Icons of the Tool Bar

-  Return: tap the icon to return to the previous page.
-  Desktop: tap the icon to return to the desktop.
-  : tap the icon to view recently visited applications.
-  /  Volume +/ Volume-: Adjust the volume.


### ☆ Basic Operation Method

1. Tap the screen and left-slide it to turn to the previous page; right-slide it to turn to the next page.
2. Tap a system notification icon to view details of the notification icon.
3. Press the blank space on the desktop to display  
**Choose wallpaper form, tap Wallpaper/Live Wallpaper /Gallery** to select a wallpaper.



4. Press an icon on the desktop and drag it to other location: drag an icon to the **X** icon on the top of the screen to delete the icon; drag the icon to the box on the left or right side of the screen to drag it to the previous page or the next page; drag the icon on another icon to put these two icons together, and the system will create a new folder for them; if they are game applications, tap the folder and tap the **Unnamed Folder** to name the folder as "game".
5. Tap the  option on the upper right of the desktop to enter the application list.
6. Long-tap an application icon to place the icon to the desktop.
7. Tap an application icon to run the application.

### ☆ **System Time and Date Setting**

1. Tap the  option on the upper right of the desktop to enter the application list.
2. Tap **Settings > Date & time > Set date/Set time** in the application list.
3. Tap the ▲/▼ icon to set date/time. After the setting completes, tap **Set** to confirm and exit.
4. Tap **Use 24-hour format** and **Choose date format** to set a time display format.

**Note:** *If the device is connected with the internet, you can tap **Select time zone** to select the area where you locate, and tap **Automatic date & time** to auto obtain the current time by the system from the internet.*

### ☆ **Input Method Selection**

Tap **Settings > Language & Input**, and tap an input method desired in the **KEYBOARD & INPUT METHOD**.

## Application

**Notes:** The device has very complicated functions; you can install an application by yourself. Operation methods differ according to different applications. Please operate applications according to the computer knowledge you possess; the operation of applications in the manual is only for reference.

### ☆ Browser

Tap the browser icon in the application list to run the browser.

#### Introduction to the option icon of the browser




1	Return to the previous webpage
2	Go ahead to the next webpage
3	Refresh webpage
4	Window of a browser webpage
5	Close the current webpage window
6	Create a new webpage window
7	URL input box
8	Add Bookmark option
9	Input URL option
10	Browser Menu option
11	View Bookmark option

## Basic Operations for Browser

### Visit Websites

Before visiting websites, please connect your device to the Internet via Wi-Fi, mobile Internet or Ethernet (refer to "**System Settings**" for specific settings).

1. Tap the address bar in the browser, and you will see a virtual keyboard.

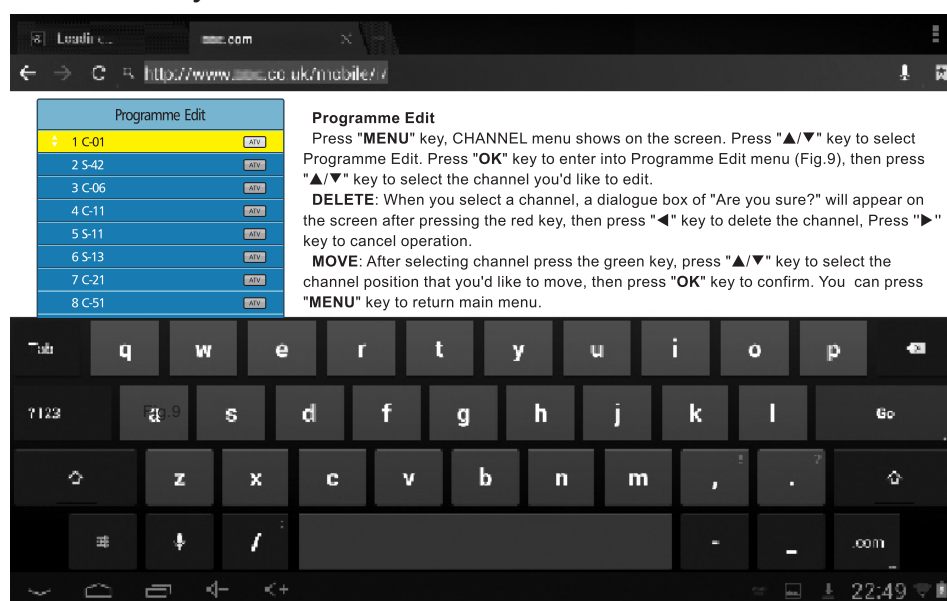

2. Tap the virtual keyboard to input the correct address and then tap the [Enter] key at the virtual keyboard to visit the relevant website.

### Touch Screen Operations for Webpage Browsing

1. **Zoom in the webpage:** put two fingers closely together on the target part of the webpage and separate them quickly, or double tap the target part of the webpage.


2. **Drag the webpage:** put a finger on the screen and slide it upwards, downwards, leftwards or rightwards quickly to drag the webpage upwards, downwards, leftwards or rightwards.

3. Long-tap **Text/Link/Image** to display and edit the editable items.


### **Use of Bookmark**

You can use the bookmark to save your favorite webpages so that you can find and open them easily next time.


#### **■ Save a Webpage as a Bookmark**

1. Tap the add bookmark icon  in the browser.
2. Tap the virtual keyboard to input the browser tabs, and then tap the [Enter] key.
3. Make sure the address displayed in the address bar is correct and then tap the [Enter] key at the virtual keyboard.
4. Tap **Account** and **Add to** to display the relevant drop-down lists, tap **account** and **target storage location**, and then tap **OK**.

#### **■ View a Bookmark**


1. Tap the view bookmark icon  in the browser.
2. Tap the target bookmark to open it.

#### **■ Delete or Edit a Bookmark**


1. Tap the view bookmark icon  in the browser.
2. Long-tap the target bookmark.
3. Edit the relevant editable items.

### **Copy and Paste the Text from the Internet**

1. Long-tap the target text on the Internet page, and you will see the editing options on the upper part of the screen. Drag the cursor select the text that you want to copy.
2. Tap the **COPY** option on the browser toolbar.

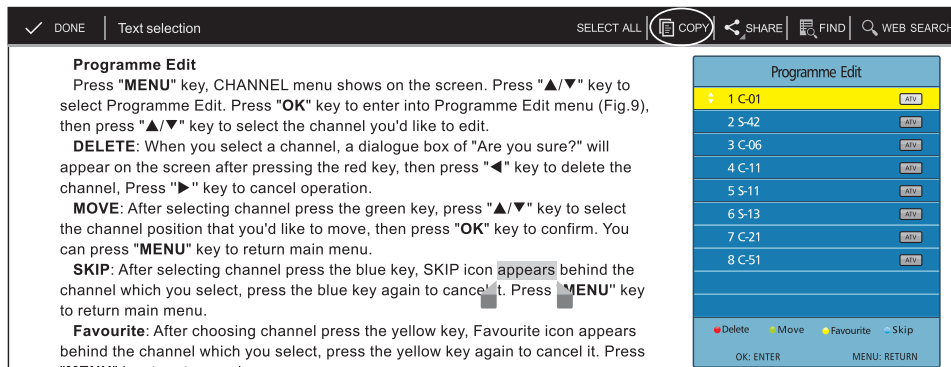

3. Long tap the textbox to display the option paste. Tap **PASTE** to paste the copied text into the textbox.

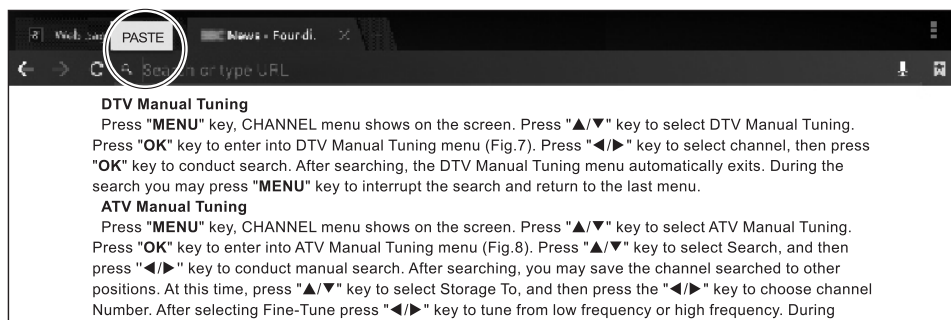

### Save the Image from the Internet

1. Long tap the target image on the Internet page, and then tap **Save image** in the editing option.

2. Tap the system notification bar to check the downloading progress. When the downloading finishes, please tap **View Details**.

### Download the Information from the Internet

1. Input the relevant link address in the address bar.  
2. Open the link to find and tap the **Save/Download** option, and the system will auto start downloading.

3. Tap the system notification bar to check the downloading progress and details.

### Browser Settings

1. Tap the menu icon  at the upper right corner of the browser and then tap the **Settings** option.

2. Tap **General > Set Homepage** to set the homepage address for the browser.


3. Tap **Privacy & Security > Clear cache** to clear the browser's locally stored cache files.

Please complete other settings as per your specific needs.

### ☆Video Player

Tap video player in the application list. tap a video file to play it.

#### Introduction to the Icons on the Video Player

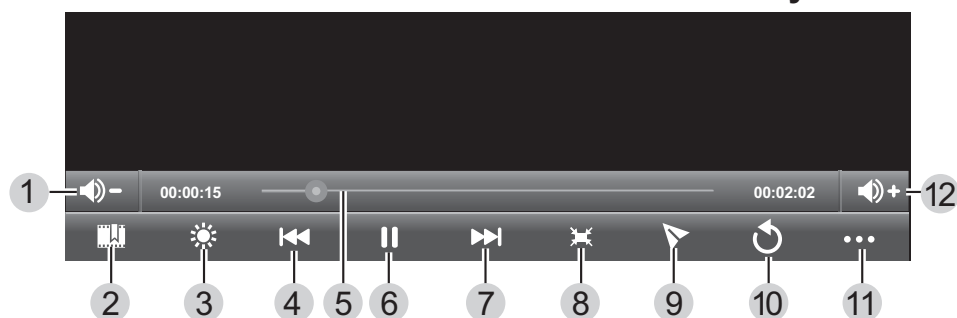

1 / 12	Volume -/+ : decrease/increase the volume.
2	Set to bookmark: next time the system will ask you whether to play from the bookmark position.
3	Video brightness: adjust the video brightness.
4	Previous/Fast Rewind: tap it to play the previous video file, or long tap it to fast rewind.
5	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
6	Play/Pause: tap it to pause when a video file is played, and tap it again to resume.
7	Next/Fast Forward: tap it to play the next video file, or long tap it to fast forward.


8	Screen size: adjust the screen size to Original Size, Full Screen, 16:9, or 4:3.
9	To top the player: place video player to the top. Tap the playing window until the icon ⊗ appears, then tap ⊗ to quit playing.
10	Return to the play list.
11	More: delete a bookmark, set as loop playback mode, etc.

### ☆ Music Player

Tap Music player in the application list.

The music player supports the artist list, album list and song list. Select a song from the song list to play it.

#### Introduction to the Icons on the Music Player

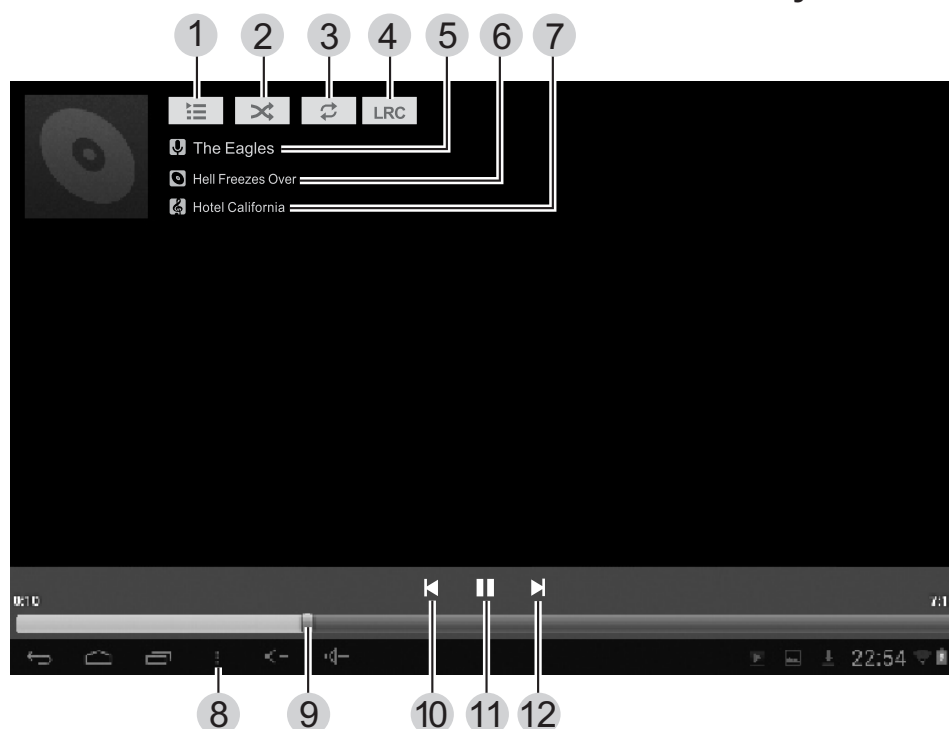


1	Display the play list.
2	Play songs at random.
3	Set the loop playback mode.

4	Display the lyric of the current song.
5	Artist name of the current song.
6	Album name of the current song.
7	Name of the current song.
8	Settings: tap it to set the sound effect.
9	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
10	Previous/Fast Rewind: tap it to play the previous song, or long tap it to fast rewind.
11	Play/Pause
12	Next/Fast Forward: tap it to play the next song, or long tap it to fast forward.

### ☆Image Player

Tap **Gallery** in the application list and then tap a file to play it.

#### Introduction to the Icons on the Image Player

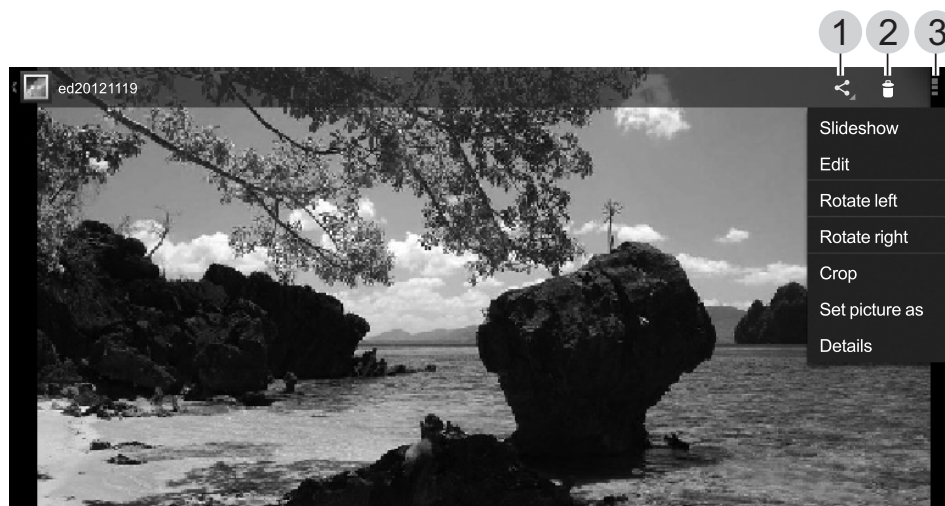

1	Share the image.
2	Delete the image.
3	Settings.



## Basic Operations for Image Player

1. **Zoom in the image:** put two fingers closely together on the screen and separate them quickly, or double tap the screen.

2. **Zoom out the image:** put two separated fingers on the screen and quickly pinch them together, or double tap the screen.

**Note:** *The image can not be zoomed out when played in original size.*


3. **Page up/down:** long tap the screen and slide it leftwards/rightwards quickly to play the previous/next image.

## ☆ Explorer

Tap **Explorer** in the application list.

## Edit a File

1. Tap the disk where the target file is located.
2. Tap the folder where the target file is located.
3. Tap the target file to run it.
4. Long tap the target file to display such editing options as **Copy**, **Delete**, **Move**, **Paste**, **Rename** and **Send**. Tap an option to complete the relevant operation.

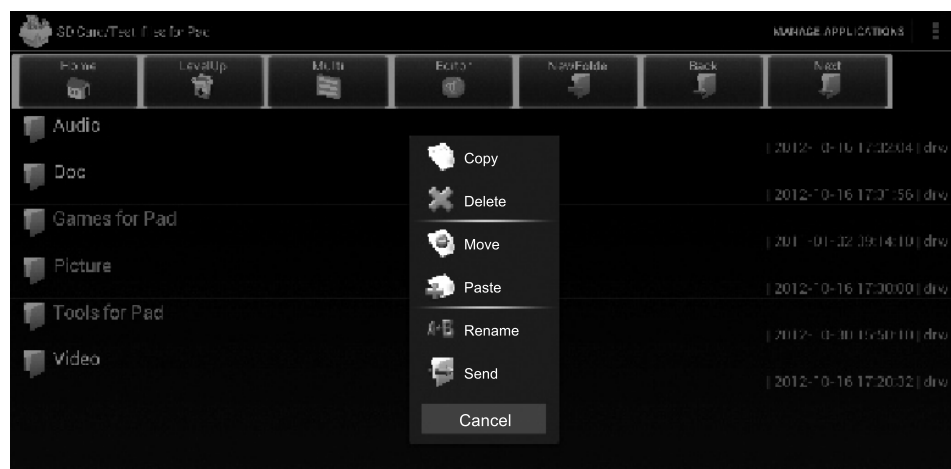

5. Tap **Multi** and then tap multiple files or folders continuously to select them (the names of the selected files or folders will turn to light blue). Tap the editing options in the toolbar to do such operations as Copy, Delete, Move and Send to these files or folders.


### ☆ **APK Installer**

Tap **APK Installer** in the application list.

You can use the APK installer to install applications and manage the installed applications.

### **Install an Application**

1. Tap **Install**.
2. Find the path of the target application and tap the target application in the installable application list on the right.

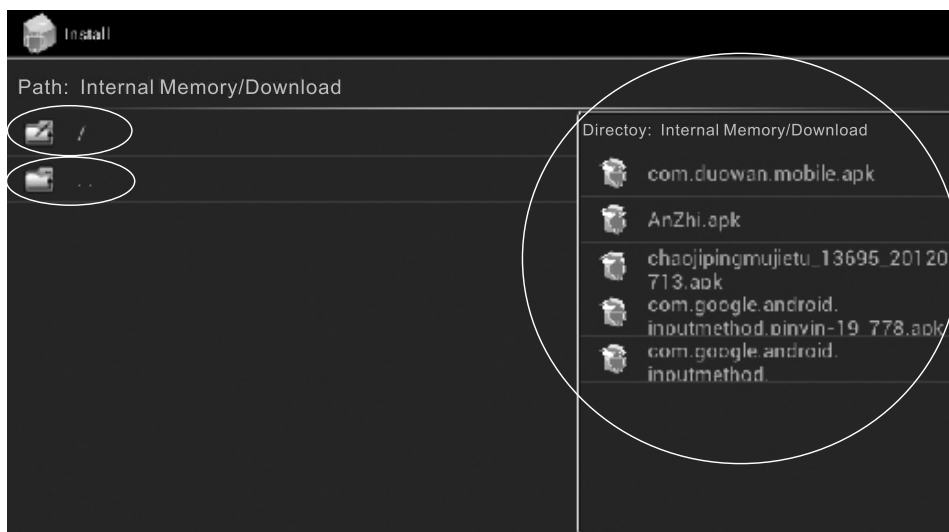



Tap  to return to the main page of the disk.

Tap  to return to the parent folder.

3. The system prohibits you installing any application from unknown sources by default. You need to tap **Settings > Security > DEVICE ADMINISTRATION** to


check the **Unknown sources** option.

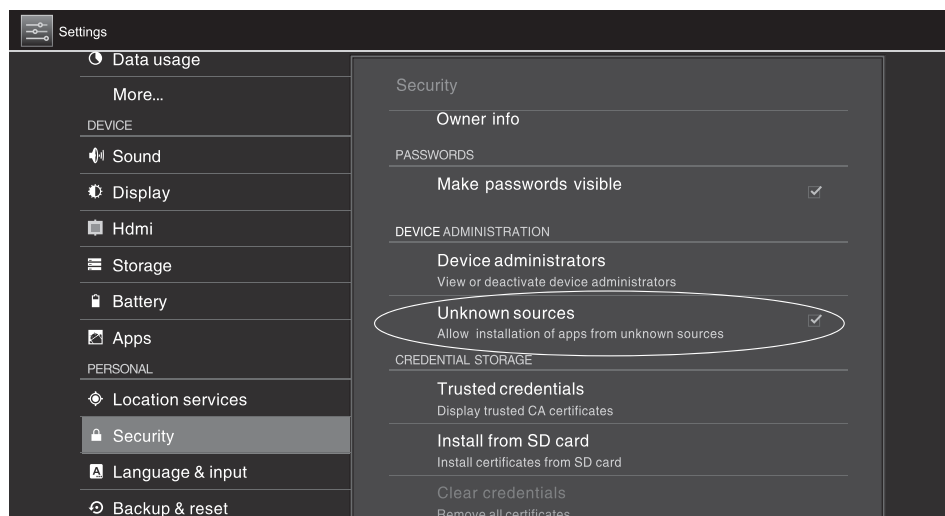

4. Tap  to return to the installation page, tap **Install Application**, and tap **Done** when the installation is finished. The icon of the installed application will appear in the application list. You can tap the relevant icon to start the application.

## Manage Applications

1. Tap **Manage**.
2. Tap the target application and then tap an option, like **Launch**, **Export**, **Uninstall** or **Cancel**.

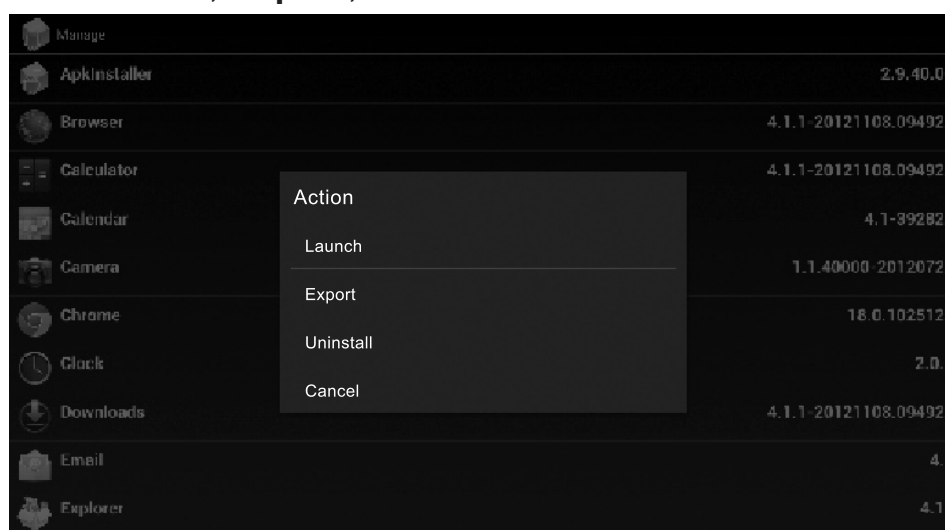

**Launch:** launch this application.


**Export:** export this application to the root directory.

**Cancel:** cancel the current operation.


## ☆ Camera


Tap **Camera** in the application list.

### Introduction to the Icons on the Camera

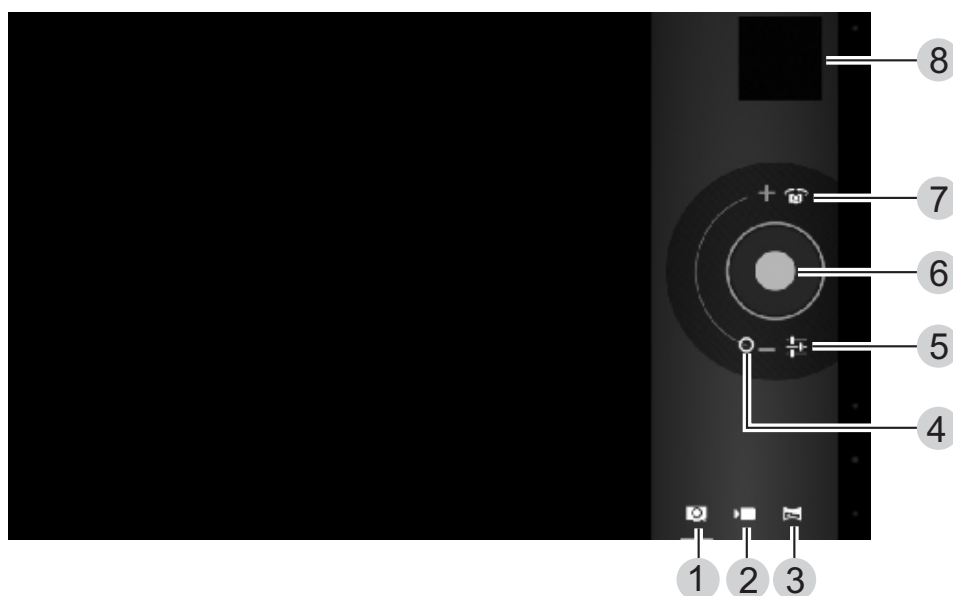

1	Camera mode: tap it to switch to the camera mode.
2	Video recording mode: tap it to switch to the video recording mode.
3	Panoramic shooting, tap this item to switch to panoramic shooting model.
4	Zooming: slide it towards " + " / " - " to zoom in/out the focal length.
5	Settings: enter the settings mode. <b>AW</b> : set the white balance. <b>SCN</b> : set the view finding mode (the white balance does not work in Night mode). <b>⋮</b> : Camera settings: set the photo size.

5	 : exit the camera settings.
6	Shoot: tap it to shoot a photo.
7	Front/rear camera switch key.
8	View: tap it to view the photos.

**Note:** Tap on the tool bar to pop out operation icons, and tap  to exit **Camera**.

### ☆ E-mail

Tap **Email** in the application list.

Set and add your E-mail account at first use.

1. Input your E-mail address and password and then tap **Next**.

2. Select an account type from POP, IMAP and Exchange based on the service provided by your E-mail provider.


3. Confirm the settings for the receiving server and then tap **Next**.


4. Confirm the settings for the sending server and then tap **Next**.

5. Now your E-mail account has been set successfully. tap **Gave this account a name** to set the account name and tap your name to set your signature for outbox E-mails.

6. Tap **Inbox** to receive E-mails.

### Send an E-mail



1. Login your E-mail account and then tap the icon  on the upper part of the screen.


2. Complete the Receiver and Subject, input the E-mail text, tap the icon  to add attachments, and then tap the option *Send* on the upper part of the screen to send the E-mail.


## System Settings

Here you can configure the wireless network, change the system time, set the input method, configure the HDMI output, etc.


### ☆ Set the Wi-Fi Network

1. Tap **Settings** in the application list.
2. Tap the Wi-Fi switch to enable the Wi-Fi function. tap  at the upper right corner of the screen, then tap **Scan** to search the Wi-Fi network. When the searching is finished, please tap the target network. If the target Wi-Fi network is encrypted, the icon  will appear at the lower right side of the signal strength icon.
3. Tap the password box to input the connection password. If you use DHCP on your router, just tap **Connect** to complete the network connection after inputting the password. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network connection.

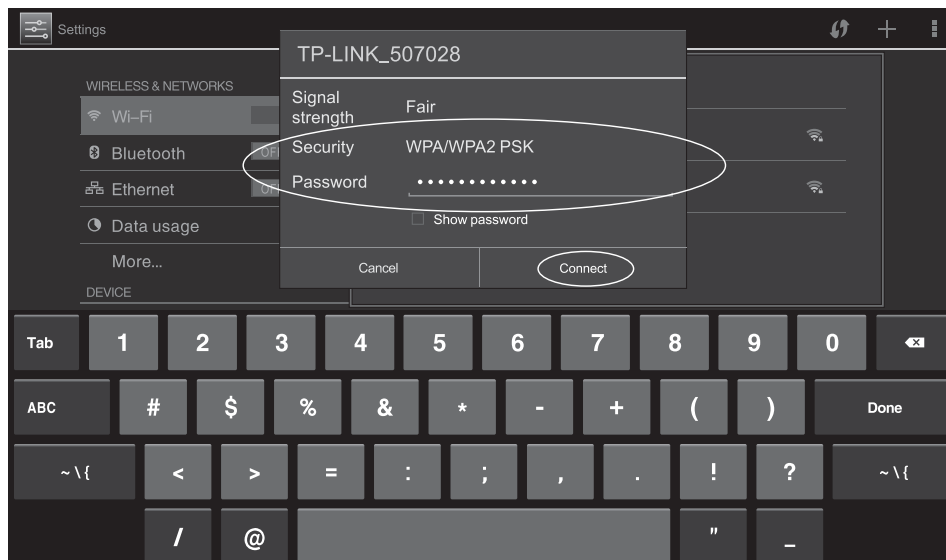


4. Tap  to hide the input method and then tap  on

the left of **Show advanced options**.

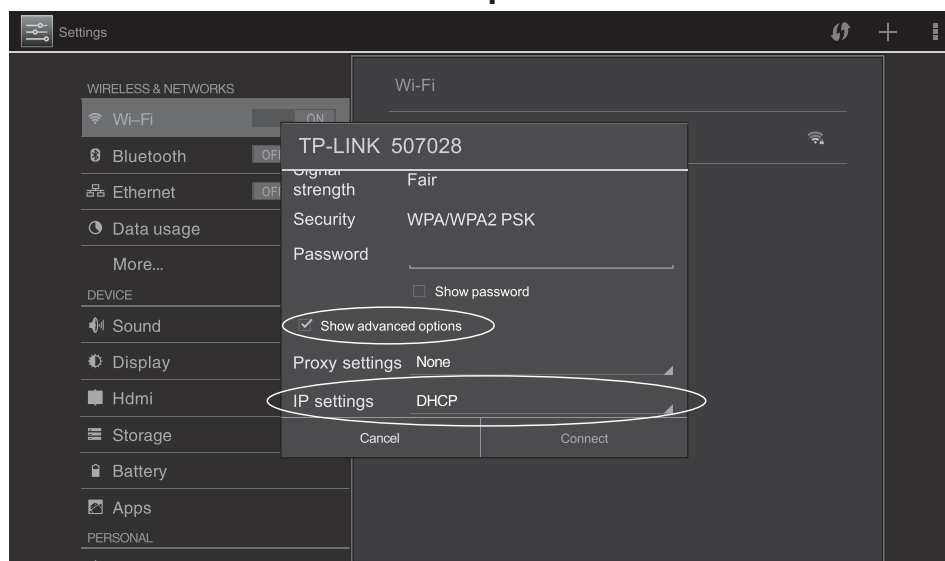

5. Tap the **IP settings** box to select **Static**, complete the **IP address**, **Gateway**, **Network prefix length**, Domain 1 and Domain 2 (the settings in the figure below are for reference only), and then tap **Connect** to complete the network connection.

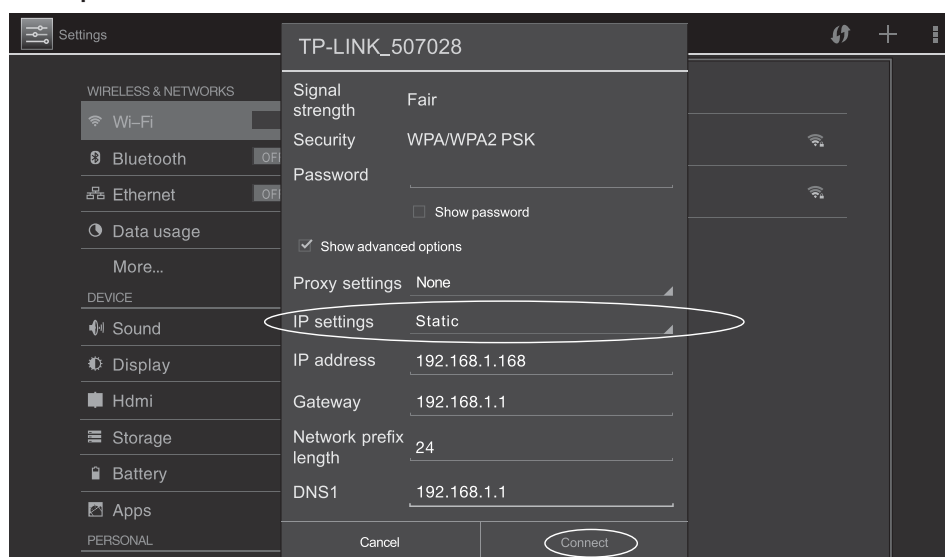

### ☆ Set Bluetooth

**Bluetooth** is a wireless technology enabling devices to communicate over a short distance. Keep the distance

between devices within 10m and make sure no solid barrier between them, so as to receive the best signal.

### **Enable Bluetooth and Pair Devices**

1. Tap **Bluetooth** in **Settings**, and set Bluetooth switch to on to enable it to search for Bluetooth devices nearby automatically. (Make sure that the target device enables **Visible to All nearby Bluetooth devices** before searching.)
2. After tapping the target device in the list of available devices, the system will display the dialog box of **Bluetooth pairing request**.
3. Tap **Pairing** after confirming the connection key in the dialog box.


### **Send Files**

1. Tap **Explore** in the application list, and long tap the target file in the file catalog.
2. Tap **Send > Bluetooth** in the displayed menu, and the **Bluetooth device chooser** menu will be shown;
3. After tapping **Scan for devices** in **Bluetooth device chooser**, the device starts to scan for the Bluetooth devices nearby.
4. Tap the receiver's name in the list of visible devices.
5. Tap **Receive File** in the receiver.

### **Receive Files**

1. Tap **Bluetooth** in **Settings**.
2. Switch **Not visible to other Bluetooth devices** in the right setting area to **Visible to all nearby Bluetooth devices**, and be ready to receive files.
3. When any file arrivals, **Bluetooth share: Incoming file** will be shown in the notification bar.



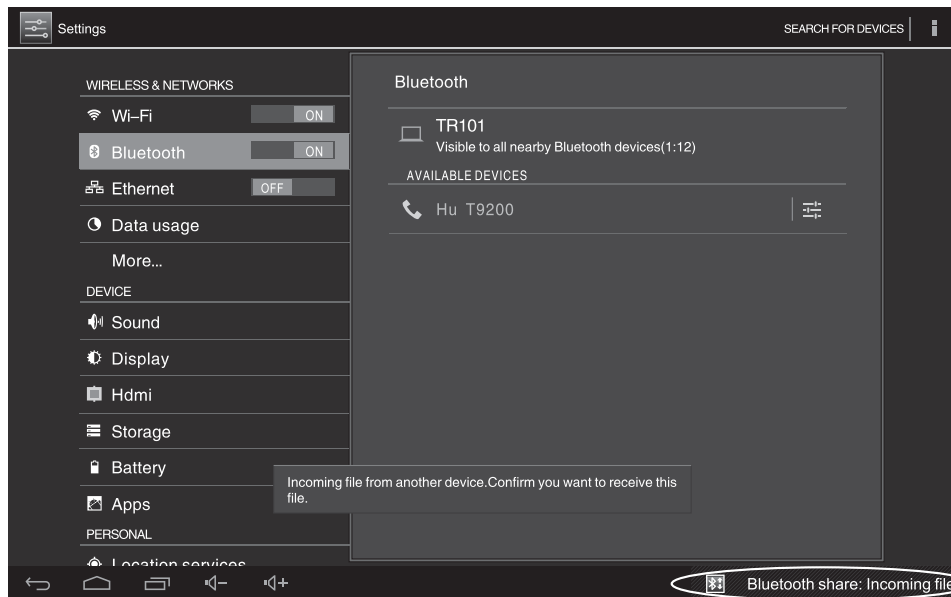

4. Tap the notification message to display the **File transfer** dialog box.

5. Tap **Accept** in the dialog box to receive the files.

6. Tap **Notification Bar** to check the receiving progress.

7. Tap **Explorer** in the application list, open the **Bluetooth** folder in the **Internal Memory** to check the received files.

**Note:** *The files may fail to transfer between different Bluetooth devices due to problems of interoperability and compatibility.*

### ☆ **Set Ethernet**

Prepare a USB-type Ethernet adapter before setting the Ethernet.

1. Connect the Ethernet adapter to the Micro USB port of your device and insert the crystal terminal of the network cable into the RJ45 socket of the Ethernet adapter.

2. Tap **Settings > Ethernet > OFF/ON** to turn on the

Ethernet function. If you use DHCP on your router, the system will automatically assign an IP address and gateway for you. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network settings.


3. Tap **Static IP setting > Use Static IP**.


4. Input the IP address, gateway, network masks, DNS1, and DNS2, tap **Save** at the upper right corner of the screen.

### ☆Set the Mobile Traffic Warning

To use the mobile data traffic, please set the traffic warning to avoid extra expenses incurred by excessive mobile data traffic.

1. Tap **ON** on the right of the mobile data to enable the mobile data traffic.

2. Tap  on the right of the option **Set mobile data limit**, tap **Data usage cycle** to select a monthly payment cycle for the traffic package, long tap the time axis and drag it leftwards/rightwards to adjust the days of a traffic cycle, and long tap the traffic limit axis and drag it upwards/downwards to adjust the traffic warning and limit.

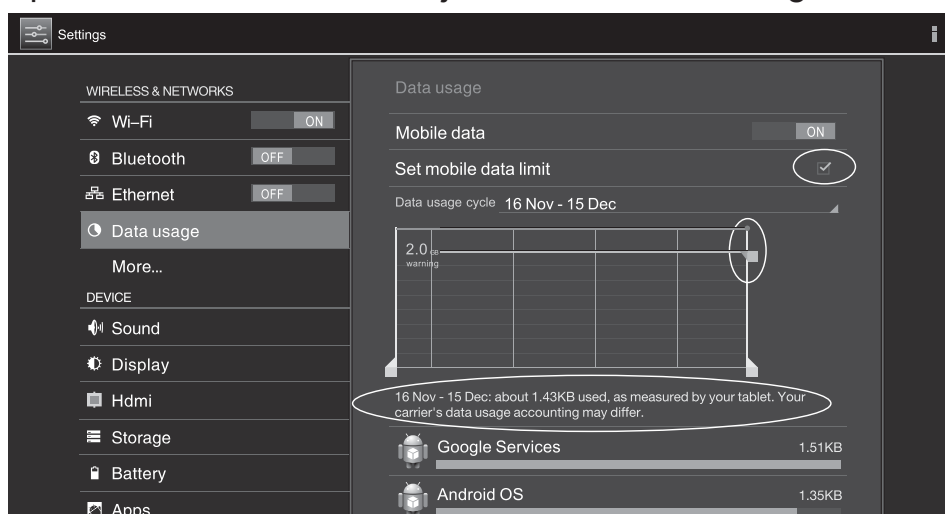


### ☆ **Set the Virtual Private Network (VPN)**

The VPN can access the internal network resources of your company via public network. To set the VPN, the IP address of the server provided by the network manager of your company is required.

1. Tap **Settings** > **More...** > **VPN**.
2. Tap **Add Network** and enter **Change VPN** to add network: input the VPN name, type and server address, and then tap **Save**.
3. The network set in step 2 will be added to the network list. Tap this network, input the user name and password, and then tap **Connect**.

### ☆ **Set the Portable Hotspot**

The portable hotspot allows your device to act as Wi-Fi hotspot. Any device connected to your hotspot can access the Internet through the mobile data traffic of your device.

1. Tap **More...** and then tap **Portable hotspot** in the list on the right.
2. Tap  on the right of the option **Portable hotspot** to enable the portable Wi-Fi hotspot, and then tap **Set up Wi-Fi hotspot**.
3. Tap **Network SSID** to input the network name, tap **Security** to select an encryption method, tap **Password** to input the password, and then tap **Save** to complete the setting process. The Wi-Fi hotspot indicator icon will appear in the notification bar.

### ☆ **Connect and Set the Mobile Network**

Your device supports external wireless broadband network cards, but you need to complete the relevant

settings first.

**Data enabled:** enable the mobile data traffic function.

**Data roaming:** select to allow or disallow the use of mobile data traffic in roaming state.

**Access Point Names:** set the mobile data access point based on the data provided by your mobile provider.

**Use only 2G networks:** using 2G networks only will reduce the data uploading and downloading rates, but will save the battery loss.

**Network operator:** manually or automatically search the network operator.

### **Connect the Mobile Data Network Card**

1. Connect the 3G data network card to the Micro USB port of your device via an extension cable.

2. Tap **Network Operators > Choose automatically**. When the system indicates "Registered on the Network Successfully", that means the data network card has been recognized by your device. The network signal icon of the mobile data network card will appear in the notification bar.

3. Tap **Data enabled** to connect your device to the Internet.

**Note:** *Some network cards may be incompatible with or may not be recognized by your device as different data network card manufacturers and chip manufacturers may have different standards or drives, so you will have to replace them.*

### ☆ **Sound**

Set the Volume and Warning tone.

## ☆ Display

**Brightness:** adjust the screen brightness.

**Wallpaper:** select an image as the wallpaper.

**Sleep Mode:** set the time for the screen to be auto locked in case of no operation.

**Font:** set the font size.

## ☆ HDMI Settings

Your device supports the video output via HDMI. You can connect your device to the TV via HDMI to realize the multi-screen display.

**Turn on HDMI:** tap this option to realize the video output via HDMI.

**HDMI Resolution:** set the resolution for the video output via HDMI.

**Screen Zooming:** zoom in/out the output video image.

## ☆ Storage

Check the details of the internal storage space, NAND Flash, SD card or USB memory, or uninstall/format the memory.

**Note:** *Please backup your important personal files before formatting the memory.*

## ☆ Battery

Check the battery state.

## ☆ Apps

Enter the **Apps** option, and you can check downloaded applications, applications stored in the SD card, running applications, storage space, etc. You can also tap an application to stop it running or uninstall it.

## ☆ **Location service**

**Google's location service:** By this function, the system can send anonymous location data to Google; and the authorized applications can receive data from Wi-Fi and mobile network, so as to locate your position.

**Location & Google search:** By this function, Google can use your location information for a better search results and other services.

## ☆ **Security**

Protect the security options for the device.

**Screen Lock:** set the lock mode for the screen.

**Owner info:** after the Owner info is set, it will be shown under the lock mode.

**Make passwords visible:** under the password lock mode, you will be requested to input the unlock passwords to unlock the device. In this mode the password you input will be displayed.

**Device administrators:** view or stop the device administrators.

**Unknown source:** enable the device to install applications from unknown source.

**Trusted credentials:** display the trusted credentials.

**Install from SD card:** install credentials from SD card

**Clear credentials:** delete all credentials.

## ☆ **Language & input**

Set the system language and input method.

## ☆ **Backup & reset**

**Back up my data:** back up the application data, Wi-Fi passwords and other settings to the Google Server.

**Factory data reset:** delete all settings on the tablet PC and restore to the factory settings.

## ☆ **ACCOUNTS**

Add or Check the local accounts and synchronize them by connecting them to the Internet.

## ☆ **Date & Time**

**Automatic data & time:** : use the time on the Internet.

**Set date:** manually set the date.

**Set time:** manually set the time.

**Select time zone:** manually select a time zone.

**Use 24-hour format**

**Choose date format:** set the date format.

## ☆ **Accessibility**

**TalkBack:** After enabling the "**Voice Prompt**", the system will offer voice feedback for users who are visually impaired: such as the detail content on what you touch, select and enable.

**Large text:** display text in large font.

**Auto-rotate screen:** the system will auto rotate the screen if you change the direction of the screen.

**Enhance web accessibility:** the scripts from Google can be installed by apps, so that you can browse the apps content in the webpage.

## ☆ **Developer options**

These options are only used for developers. Once enabled, the system and applications may crash or work abnormally.

### ☆ **About tablet**

Check the information about tablet like system update, model, system version, and core version.

## **Troubleshooting**

### ■ **Your device can't be turned on.**

The battery power is used up. Please fully charge your device.

### ■ **Your device cannot access the Internet via Wi-Fi.**

1. Check whether your device can receive any Wi-Fi signal.
2. Check whether the wireless router supports DHCP. If not, please configure a static IP address.
3. Check whether the wireless router has been connected to the Internet.

### ■ **Your device responds to operations slowly.**

1. Check whether too many applications are running in the background.
2. Check whether any incompatible-version application has been installed.
3. Use the antivirus software to scan and kill the malicious programs (if any).

### ■ **Your device gets warm in use.**

It is normal that your device get warm in a long-time use or in charging.

### ■ **Your device crashes and its keys do not work.**

Long press the power button for 6 seconds, and the power-off dialog box will display on the screen, then tap the **OK** option in the box to auto power-off the system. After that restart your device. If this fails, insert a slim needle to the reset button hole to realize the forced shutdown.



■ **The total memory is smaller than the actual memory.**

A certain space has been used to store the system files and install user applications, so it appears that the total memory is smaller than the actual memory.

■ **Some video files can't be played.**

Your device supports most of the common audio and video file formats, except a few special formats. We suggest that you download a third-party player from the application market to play those exceptional files.

## **Important Statements**

All contents and services obtained through your device shall belong to a third party under the protection of copyright, patent, trademark or other intellectual properties, and shall be used for your personal non-commercial purposes only. You are not allowed to use any content or service in any way without the authorization of the content or service provider.

In no case shall we be held liable for any direct, indirect or accidental loss or damage caused by your accessing any content, service, information or third-party software through your device.

Third-party services are subject to change, deletion or stop without prior notice. We shall not imply or assure that all services and contents will be kept available at all time.

We shall not be responsible for providing any related customer service for any third-party service or content. Please refer your questions and service requests directly to the relevant content or service provider.

Please remember to backup the data when using your

device. We shall not be held liable for any personal data loss or damage caused by software or hardware misoperation, product repair, battery replacement or any other unexpected situations, or for any other indirect loss arising thereof. Any of your misunderstandings for this Manual shall be beyond our control, so we shall not bear any liability for any accidental loss caused by the use of this Manual or for any third-party claim caused by the use of your device.

### Trademark

"Android" is the trademark of Google Inc.

"Micro SD" is the trademark of SD Card Association.

Other company names, product names or services may be also the registered trademarks of other companies, and shall be subject to the applicable laws, regulations and international conventions, whether indicated and marked on the product and in this Manual or not.

## Technical Specifications

Basic Parameters	
CPU Frequency	Dual-core 1.5GHz
DDR-RAM	1GB
NAND FLASH	16GB
Operating System	Android 4.1
Network Access	Wi-Fi, 802.11b/g/n
USB Port	Micro USB 2.0
HDMI	Mini HDMI
Camera	Front/rear Camera, 2 Mega Pixel
Standard Battery	Li-polymer Battery, 7.4V, 3000mAh

— | —  
**CE 0168**

**101P11C 中性英文说明书(平板电脑 RK3066 方案)1211024**

Hereby, [Shenzhen KTC Technology Co., Ltd.], declares that this  
  
[10.1” PAD] is In compliance with the essential requirements and  
  
other relevant provisions of Directive 1999/5/EC.

## 101P11C 中性英文说明书(平板电脑 RK3066 方案)1211024

### **FCC Statement:**

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.