

# 8.0" PAD

## User Manual



Please read this manual carefully for proper usage before using.  
It is recommended to keep this manual properly for future check.

## CONTENTS

<b>Special Features .....</b>	<b>1</b>
<b>Important Safety Attentions .....</b>	<b>2</b>
<b>Accessories List .....</b>	<b>6</b>
<b>Buttons and Ports .....</b>	<b>7</b>
<b>Installation Instruction .....</b>	<b>9</b>
Micro SD Card Installation and Uninstallation .....	9
HDMI Output to TV .....	11
Connecting the Tablet to PC .....	11
<b>QuickStart .....</b>	<b>12</b>
Battery Charging .....	12
Power-on .....	12
Unlocking .....	13
Locking .....	13
Power-off .....	13
Volume Adjustment .....	13
Touch Screen Operation .....	13
Introduction to the Home Screen of PAD.....	14
Basic Operation Method .....	16
System Time and Date Setting .....	17
Input Method Selection .....	17
<b>Application .....</b>	<b>18</b>
Browser .....	18
Video Player .....	22
Music Player .....	24
Image Player .....	25
Explorer .....	26
Apk Installer .....	27
Camera .....	29
E-mail .....	30

<b>System Settings</b>	<b>31</b>
Set the Wi-Fi Network	32
Set Bluetooth	34
Set Multi window	35
Set Ethernet	35
Set the Virtual Private Network (VPN)	36
Set the Portable Hotspot	37
Sound	37
Display	37
HDMI	38
ScreenshotSetting	39
Storage	39
Battery	39
Apps	39
Location access	39
Security	39
Language & input	40
Backup & reset	40
ACCOUNTS	41
Date & Time	41
Accessibility	41
Developer options	41
About tablet	42
<b>Troubleshooting</b>	<b>42</b>
<b>Important Statements</b>	<b>43</b>
<b>Technical Specifications</b>	<b>45</b>

## **Special Features**

1. Includes a LED backlit screen with a high resolution ratio.
2. Slim and lightweight design.
3. Includes a capacitive touch screen with high sensitivity, supporting multi-touch.
4. Employs ARM Cortex A9 core, with CPU dominant frequency at 1.4GHz,
5. Employs the Google Android 4.2 system.
6. A built-in Wi-Fi module supports the 802.11 b/g/n wireless standard.
7. Built-in bluetooth module.
8. Built-in 2 million pixel front camera and 5 million pixel rear camera, which can have the functions of video chatting, photographing and shooting.
9. A built-in microphone can realize the functions of recording and making voice call by a third-party software;
10. Wireless screen-to-screen display: display the contents on the screen of your unit on another device.
11. Supports output of high-fidelity stereo headphone;
12. A built-in 3-axis gravity sensor supports the screen to auto rotate in 4 directions;
13. Main audio & video formats in markets are supported to display, with a high-definition video resolution ratio at 1080P.
14. With HDMI output, large screen display can be realized by connecting to a TV.
15. Built-in high-capacity lithium battery, supporting a longer working time.

16. Support external USB disk, mouse and keyboard.

## **Important Safety Attentions**

Thank you for purchasing our high performance & multi-function tablet PC. It will bring you a better visual & aural experience. To make sure safety, extend the service life of the product, and give full play to the best performance of the product, please read all the instructions and nameplates carefully, follow the safety attentions, and keep the user manual for future use.

### **Medical Device**

Electromagnetic wave produced by the device in working condition may interfere with the normal work of implantable medical devices or personal medical devices like pacemaker, embedding cochlea, hearing-aid, etc. If you are using the above mentioned medical devices, please consult with the manufacturer for the conditions or limitations of using the product.

### **Hearing Protection**

- Please plug the earphone with the audio source and turn down volume of the device before putting the earplugs into ears.
- To avoid damaging hearing, it is suggested to use the lowest volume when listening to music or making a voice call by earphone.
- Please don't use earplugs for a prolonged period.

### **Traffic Safety**

- Please don't use the device when crossing the road, riding a bike or driving, which may get you distracted and cause accident.

- Wireless devices may interfere with the flight system of a plane, so please comply with relevant rules of airline companies; turn off the device in places where wireless devices are prohibited.

### **Operation Environment**

- Please don't use the device in places with water source, such as bathtubs, pools, washing machines or moist basements and other similar environments. Once the device is with splash, please turn off the device at once, and don't use it before being aired.

- To avoid internal circuit fault of the device, please don't charge or use the device in places of dusty, moist, dirty or places near magnetic fields.

- Please don't put the device and its accessories with flammable liquid, flammable gas or explosive objects in the same case for storage or transportation.

- Please turn off the device in places where using of wireless devices are expressly prohibited.

- Working environment temperature for the device is  $-5^{\circ}\text{C} \sim 40^{\circ}\text{C}$ . Please don't use The device when the temperature goes out of the range, otherwise, fault may occur.

### **Child Health**

The device and its accessories may include several

small parts, please keep them out of children reach. Or else children may damage the device and its accessories by accident, or swallow small parts, resulting in apnea or other damage.

### **Environment Protection**

Please comply with the local laws of disposing of the device, battery and its accessories, and support recycling. Don't dispose of the device, battery and its accessories as ordinary household garbage.

### **Accessory Requirement**

It is only allowed to use the charger and accessories authorized by the device manufacturer and compatible with the model number of the device. If other type of chargers and accessories are used, it may violate the guarantee clause and related provisions of the country where the device located, resulting in safety accidents. If authorized batteries, chargers and accessories are needed, please contact with Dealers.

### **Safety Use of Battery and Charger**

- After charging completes or in none-charging conditions, please cut off the connection with the device and unplug the charger from the power socket.
- Don't place the device around any heating devices like microwave ovens, ovens or radiators, etc. Overheated battery may cause explosion.
- Don't disassemble or refit the batteries, so as not to cause leaking liquid, overheating, fire or explosion.

● If the battery leaks, please keep your skin or eyes away from the leaking liquid; if you skin or eyes get touch with the leaking liquid, please wash it with clean water, and go to hospital for medical handling.

● If the power cord of the charger has been damaged, don't continue to use it, so as to avoid electric shock or fire.

### **Maintenance**

● Please keep the device and its accessories dry, and don't use external heating devices like microwave ovens to dry them.

● Don't make the device and its accessories impacted intensively or shocked, so as not to damage the device and its accessories, or cause fire or explosion to the batteries.

● Don't place the device and its accessories in areas with over-high or over-low temperature, or else it may cause accident, fire or explosion to the device, battery and charger. When the temperature is lower than 0℃, the performance of the battery may be limited.

● Don't place sharp metal objects like large-head pins near the speaker; it may suck such kind of objects by its magnetism, resulting in damage when using the device.

● Don't use strong chemicals, abluent or detergent to clean with the device or its accessories. Before cleaning or maintenance, please turn off the device and cut off the connection between the charger and the device.

● Don't disassemble the device and its accessories by yourself; the damage caused in this case won't be



covered by maintenance.

- If the device impacts hard objects or gets intense impact from outside, causing crush to the screen, don't touch or try to remove the broken part, please stop using it and contact with the specific maintenance point at once.

### **Screen Protection**

- Don't place any objects on the device, so as to avoid laceration.

- Don't use a sharp object to touch the screen.

### **Proper Use**

 
Don't indulge in the cyber world and games, as using the internet and playing games for a prolonged period will be harmful for your health.


## **Accessories List**





- Tablet PC (1)
- User Manual (1)
- Power Adapter (1)
- USB Data Cable (1)
- Earphone cable (1) (optional)

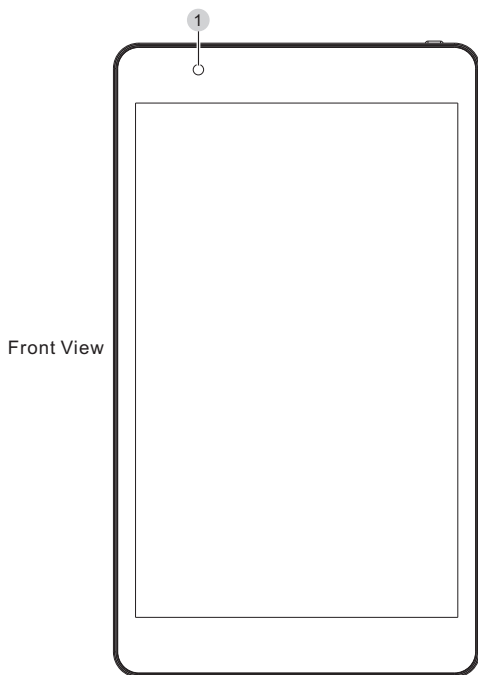 **Note:** *specific accessory in accordance with actual.*
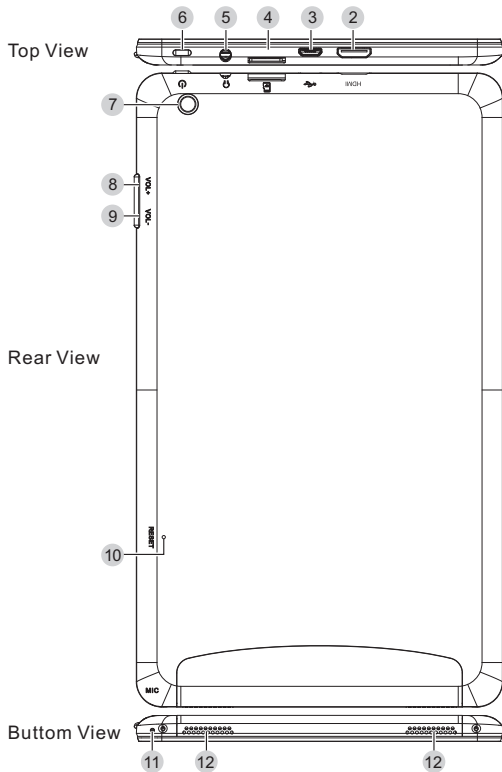
## Buttons and Ports





1	Front Camera
2	<b>HDMI:</b> Mini HDMI Port
3	 : Micro USB Port / Power Input Port
4	 : Micro SD Card Slot
5	 : Earphone Port
6	 : Power Button
7	Rear Camera
8	<b>VOL+:</b> Volume +
9	<b>VOL-:</b> Volume -
10	<b>RESET:</b> Hard Reset Button Hole
11	<b>MIC:</b> Microphone
12	Speaker

**Notes:**

**Hard Reset Button Hole:** In case of dead halt etc., Insert a toothpick or similar object to the port, and press the **RESET** button in the port to execute the forced shutdown operation.

 
## Installation Instruction

### ☆Micro SD Card Installation and Uninstallation

The device supports a standard Micro SD storage card.


**Installation:**

Push a SD card into the bottom of the slot as shown in the figure below until you hear a "Tap" sound, which means the SD card is successfully installed.

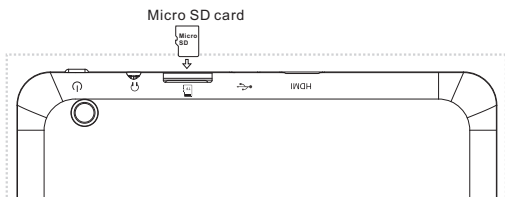

### Uninstallation:

 1. Tap **Settings** > **Storage** in the application list.
2. Find out the SD card in the Storage details, and tap **Unmount storage**.

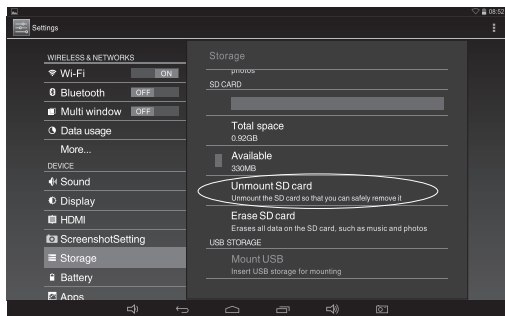

3. Push the SD card towards the inner side of the slot until it can be moved ahead, release the SD card, then the SD card will be popped out.


### ☆HDMI Output to TV

 **Connection:** Connect one end of the HDMI cable to the Mini HDMI port of the device, and the other end to the HDMI port of the TV.

**Setting:**

1. Tap **Settings > HDMI > Turn on HDMI**.
2. Press the **SOURCE** button on the TV remote control, and select a corresponding HDMI signal source.

**Note:** For details, please refer to the **System Settings** part of the manual.

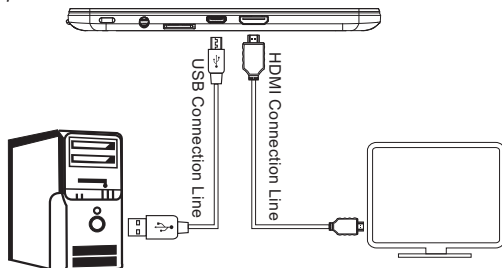

### ☆Connecting the Tablet to PC

**Connection:** Connect the USB terminal of the cable to PC, and connect the micro USB terminal to the tablet.

**Settings:**

1. Connect your tablet to a PC through the USB cable, and you will find a prompt message in the system notification bar on the upper left corner of the PC screen, saying **USB connected**.
2. Click and down swipe the system notification bar to

view the notification windows, and then click **USB connected**.

3. Tap **Turn on USB storage**.


4. Follow the instruction on the screen to tap **OK**. Now your tablet is successfully connected to the PC and you can find a new drive letter in **My Computer** on the PC.

5. After copying files, tap **Turn off USB storage**, and unmount the SD card and built-in storage of Android device from PC.

**Note:** *When the USB mass storage device is turned on, certain applications you are using may be stopped, and are unavailable until you turn off the USB mass storage device.*

## QuickStart

### ☆Battery Charging


Before the first use, charging for the battery is a must. Plug the power socket port of the adapter supplied with the device into an AC socket of 100-240V, and plug the output port into the power input interface of the device; When the charging is normal, the icon  in the status bar indicates charging battery; when the charging is finished, the status bar will prompt electric quantity 100%.

**Note:** *To make sure the battery is fully charged, please ensure that the first charging time is over 5 hours.*

### ☆Power-on


Long press the power button  for about 6 seconds to start the device.

### ☆Unlocking

When the system is locked, press the power button , and the screen become bright, then long tap the lock icon, and right-drag it towards the unlock icon to unlock the touch screen and the system.

**Note:** Other screen locking/unlocking modes can be set in **Settings > Security > Screen lock**.


### ☆Locking

1. When the system is powered-on, press the power button , and there is no display on screen, then system is locked.

2. When there is not any operation on the screen for 1 minutes, the system will be auto locked.

**Note:** you can adjust the standby time in the **Settings > Display > Sleep**.

### ☆Power-off

When the system is powered-on, long press the Power button  for 2 seconds, then the power-off dialog box will display on the screen, tap the **OK** option in the box to auto power-off the system.

### ☆Volume Adjustment

Press the **VOL+/VOL-** key in the device to adjust the volume.

### ☆Touch Screen Operation

The Android system defines several touch operations, so as to give you a more convenient and efficient



experience.

**Tap:** Tap a target file with your finger.

**Double-Tap:** Double-tap a target file fast.

**Long-Tap:** Long-tap a target file for 2 seconds or more.

**Drag:** Drag a target file and slide to a new position.

**Slide:** Tap the blank place on the screen and fast move in the up/down/left/right direction to browse a webpage or turn to another page etc.


















**Zoom in/out:** Put two fingers on the screen, and pinch them together to zoom out or move them apart to zoom in.

**Note:** Please use the fingertip to tap the screen; the touch screen doesn't respond if you tap with the fingernail.





## ☆ Introduction to the Home Screen of PAD



## Introduction to Icons of the Notification Bar and Quick Setup Bar

	Playing music
	Screenshot taken
	Input method selectable
	Wireless network available nearby
	The device is connected with a PC.
	Warning Information
	Downloading/Uploading files.
	Notification for new E-mails.
	Software update notification
	bluetooth transferring file
	Wi-Fi has been activated.
	Portable Wi-Fi hotspot enabled
	Uploading/Downloading Data by Wi-Fi
	Charging for the battery.
	Indication for battery power.
	Current system time
	bluetooth-on

## Introduction to Icons of the Tool Bar

-  Return: tap the icon to return to the previous page.
-  Desktop: tap the icon to return to the desktop.
-  Tap the icon to view recently visited applications.
-  Screenshot: Capture the current screen image and save it in the folder "Internal Memory/Screenshots". (The screenshot icon will not be available unless you enter the

menu **Settings > ScreenshotSetting** to check the item **Show the screenshot button in the statusbar.**)

 /  Volume - / Volume +: Adjust the volume.

### ☆**Basic Operation Method**


1. Tap the screen and left-slide it to turn to the previous page; right-slide it to turn to the next page.

2. Tap and down swipe the system notification bar on the upper left corner of the screen to view the notification windows.

3. Tap and down swipe the quick setup bar on the upper right corner of the screen to view the quick setup windows.

4. Long-tap the blank space on the desktop to display **Choose wallpaper form**, tap **Gallery/Live Wallpapers/Wallpapers** to select a wallpaper.

5. Long-tap an icon on the desktop and drag it to other location: drag an icon to the **X Remove** icon on the top of the screen to delete the icon; drag the icon to the box on the left or right side of the screen to drag it to the previous page or the next page; drag the icon on another icon to put these two icons together, and the system will create a new folder for them; tap the folder and tap the **Unnamed Folder** to name the folder.

6. Tap the icon  on the bottom of the desktop to enter the application list.


7. Long-tap the icon of an application in the application list to copy it to the desktop.

8. You can tap and drag the icon of an application to the shortcut bar to create a shortcut for such application.

Similarly, you can tap and drag the icon of an application from the shortcut bar to another location to remove it from shortcut bar.

9. Tap an application icon to run the application.

### ☆ **System Time and Date Setting**

1. Tap the  icon on the bottom of the desktop to enter the application list.

2. Tap **Settings > Date & time > Set date/Set time** in the application list. After the setting completes, tap **Done** to confirm and exit. (The item **Set date/Set time** will not be available if you check the item **Automatic date & Time**.)

3. Tap **Use 24-hour format** and **Choose date format** to set a time display format.

**Note:** *If the device is connected with the internet, you can tap **Select time zone** to select the area where you locate, and tap **Automatic date & time** to auto obtain the current time by the system from the internet.*

### ☆ **Input Method Selection**

1. Tap **Settings > Language & input** in the application list.

2. Enter **KEYBOARD & INPUT METHODS** to check the input methods installed on your unit. Then you can choose an input method to add it to the default input method list.

3. Tap **Default**, and then tap such input method in the default input method list to set it as the default input method.

## Application

**Notes:** The device has very complicated functions; you can install an application by yourself. Operation methods differ according to different applications. Please operate applications according to the computer knowledge you possess; the operation of applications in the manual is only for reference.

### ☆Browser

Tap the browser icon in the application list to run the browser.

#### Introduction to the option icon of the browser



1	Return to the previous webpage
2	Go ahead to the next webpage
3	Refresh webpage
4	Window of a browser webpage
5	Close the current webpage window
6	Create a new webpage window
7	URL input box
8	Add Bookmark option

 
9	Input URL option
10	Browser Menu option
11	View Bookmark option

## Basic Operations for Browser

### Visit Websites

Before visiting websites, please connect your device to the Internet via Wi-Fi, mobile Internet or Ethernet (refer to **"System Settings"** for specific settings).

1. Tap the address bar in the browser, and you will see a virtual keyboard.

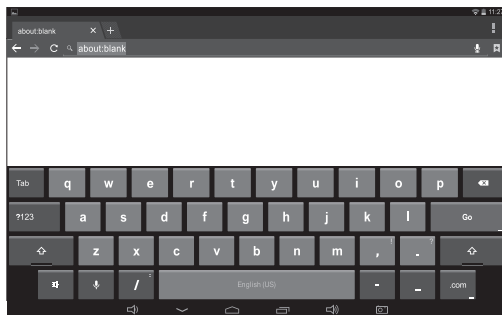

2. Tap the virtual keyboard to input the correct address and then tap the **[Go]** key at the virtual keyboard to visit the relevant website.

**Note:** the virtual keyboard may be slightly different, please consider the real display as standard.

### **Touch Screen Operations for Webpage Browsing**

1. **Zoom in the webpage:** put two fingers closely together on the target part of the webpage and separate them quickly, or double tap the target part of the webpage.


2. **Drag the webpage:** put a finger on the screen and slide it upwards, downwards, leftwards or rightwards quickly to drag the webpage upwards, downwards, leftwards or rightwards.

3. Long-tap **Text/Link/Image** to display and edit the editable items.


### **Use of Bookmark**

You can use the bookmark to save your favorite webpages so that you can find and open them easily next time.

#### **■ Save a Webpage as a Bookmark**

1. Tap the add bookmark icon  in the browser.
2. Tap the virtual keyboard to input the webpage label name.
3. Make sure the address displayed in the address bar is correct.
4. Tap **Account** and **Add to**, and select a user account and storage location in the drop-down options, then tap **OK**.

#### **■ View a Bookmark**

1. Tap the view bookmark icon  in the browser.
2. Tap the target bookmark to open it.


#### **■ Delete or Edit a Bookmark**

1. Tap the view bookmark icon  in the browser.


2. Long-tap the target bookmark.
3. Edit the relevant editable items.

### **Copy and Paste the Text from the Internet**

1. Long-tap the target text on the Internet page, and you will see the editing options on the upper part of the screen. Drag the cursor select the text that you want to copy.
2. Tap the **COPY** option on the browser toolbar.

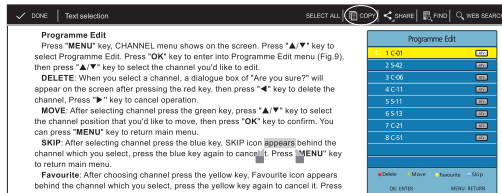

3. Long tap the textbox to display the option paste. Tap **PASTE** to paste the copied text into the textbox.

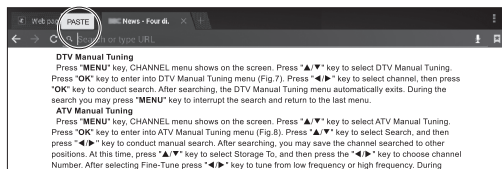

### **Save the Image from the Internet**

1. Long tap the target image on the Internet page, and then tap **Save image** in the editing option.




2. Tap and down swipe the system notification bar to check the downloading progress and details.

### **Download the Information from the Internet**

1. Input the relevant link address in the address bar.
2. Open the link to find and tap the **Save/Download** option, and the system will auto start downloading.
3. Tap and down swipe the system notification bar to check the downloading progress and details.

### **Browser Settings**

1. Tap the menu icon  at the upper right corner of the browser and then tap the **Settings** option.
2. Tap **General > Set homepage** to set the homepage address for the browser.
3. Tap **Privacy & security > Clear cache** to clear the browser's locally stored cache files.

Please complete other settings as per your specific needs.

### **☆Video Player**

Tap **RKMULTIPLAYER** in the application list. tap a video file to play it.

#### **Introduction to the Icons on the Video Player**



1/13	Volume +/-: decrease/increase the volume.
2	Screen shot
3	Set to bookmark: next time the system will ask you whether to play from the bookmark position.
4	Video brightness: adjust the video brightness.
5	Previous/Fast Rewind: tap it to play the previous video file, or long tap it to fast rewind.
6	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
7	Play/Pause: tap it to pause when a video file is played, and tap it again to resume.
8	Next/Fast Forward: tap it to play the next video file, or long tap it to fast forward.
9	Screen size: adjust the screen size to Original Size, Full Screen, 16:9, or 4:3.
10	To top the player: place video player to the top. Tap the playing window until the icon ⊗ appears, then tap ⊗ to quit playing.
11	Return to the play list.
12	More: delete a bookmark, set as loop playback mode, etc.

 
**Note:** if a video can not be played smoothly by the video player of your unit, probably it is too large in size or incompatible with the decoder hardware of your unit in format; please try to download a third-party video player from the Android Market.

## ☆ Music Player

Tap **Music** in the application list.

The music player supports the artist list, album list and song list. Select a song from the song list to play it.

### Introduction to the Icons on the Music Player

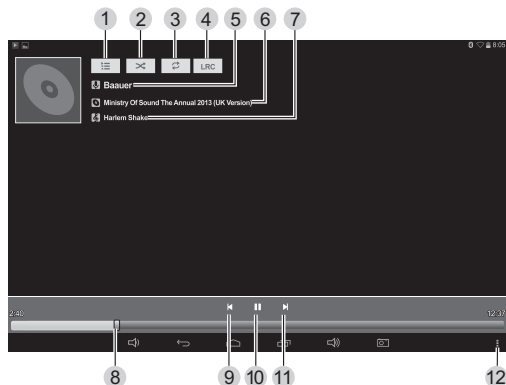

1	Display the play list.
2	Play songs at random.
3	Set the loop playback mode.
4	Display the lyric of the current song.
5	Artist name of the current song.
6	Album name of the current song.
7	Name of the current song.

8	Progress bar: long tap it and slide the cursor leftwards or rightwards to adjust the playing progress.
9	Previous/Fast Rewind: tap it to play the previous song, or long tap it to fast rewind.
10	Play/Pause
11	Next/Fast Forward: tap it to play the next song, or long tap it to fast forward.
12	Settings: tap it to set the sound effect.

### ☆ Image Player

Tap **Gallery** in the application list and then tap a file to play it.

#### Introduction to the Icons on the Image Player



1	Share the image.
2	Setup options.
3	Edit the image.

### Basic Operations for Image Player

1. **Zoom in the image:** put two fingers closely together on the screen and separate them quickly, or double tap the screen.

2. **Zoom out the image:** put two separated fingers on the screen and quickly pinch them together, or double tap the screen.

**Note:** *The image can not be zoomed out when played in original size.*

 
3. **Page up/down:** long tap the screen and slide it leftwards/rightwards quickly to play the previous/next image.

### ☆ Explorer

Tap **Explorer** in the application list.

#### Edit a File

1. Tap the disk where the target file is located.
2. Tap the folder where the target file is located.
3. Tap the target file to run it.
4. Long tap the target file to display such editing options as **Copy**, **Delete**, **Move**, **Paste**, **Rename**, **Send** and **Create shortcut**. Tap an option to complete the relevant operation.

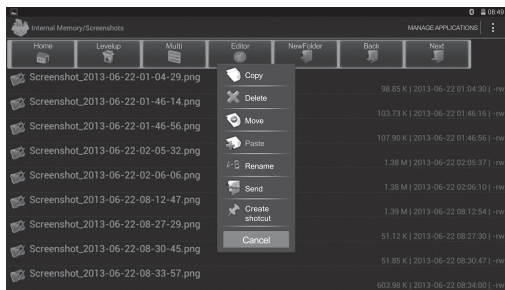

5. Tap **Multi** and then tap multiple files or folders continuously to select them (the names of the selected files or folders will turn to light blue). Tap the editing options in the toolbar to do such operations as **Copy**, **Delete**, **Move**, **Send** and **Create shortcut** to these files or folders.

## ☆ **Apk Installer**

 
Tap **Apk Installer** in the application list.

You can use the ApkInstaller to install applications and manage the installed applications.

### **Install an Application**

1. Tap **Install**.


2. Find the path of the target application and tap the target application in the installable application list on the right.

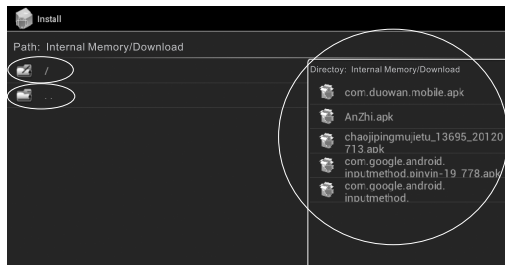


Tap  to return to the main page of the disk.

Tap  to return to the parent folder.

 3. The system prohibits you installing any application from unknown sources by default. You need to tap **Settings > Security > DEVICE ADMINISTRATION** to check the **Unknown sources** option.

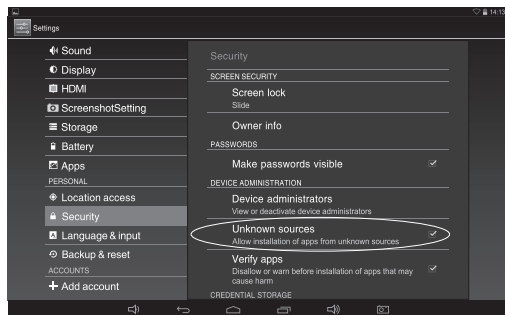

4. Tap the icon  to return to the installation page, tap **Install Application**, and tap **Done** when the installation is finished. The icon of the installed application will appear in the application list. You can tap the relevant icon to start the application.

### Manage Applications

 
1. Tap **Manage**.
2. Tap the target application and then tap an option, like **Launch**, **Export**, **Uninstall** or **Cancel**.

**Launch**: launch this application.

**Export**: export this application to the root directory.

**Uninstall**: uninstall this application.

**Cancel**: cancel the current operation.

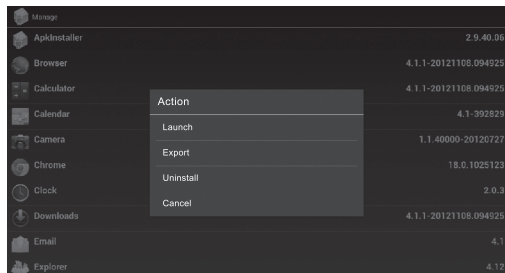




### ☆ Camera

Tap **Camera** in the application list.
 
### Introduction to the Icons on the Camera

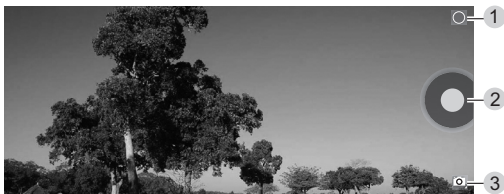



1	<p>Setup options (enter the setup mode)</p> <p> : switch between the front camera and back camera.</p> <p><b>AW</b>: set the white balance.</p> <p> : camera settings, including the view mode, photo size, storage location, etc.</p>
2	Shoot: tap it to shoot a photo.
3	Switch among the panorama, video recording and photo shooting mode.

### Basic Operations for Camera

1. Left swipe the screen to view the photos or recorded videos.
2. Long-tap the screen to show the setup options.
3. Hold two fingers together, use them to long-tap the screen, and then spread them to increase the focal length. Similarly, hold two fingers apart, use them to long-tap the screen, and then draw them together to reduce the focal length.

### ☆E-mail

Tap **Email** in the application list.

Set and add your E-mail account at first use.

1. Input your E-mail address and password and then tap **Next**. (As for a normal E-mail account, you will directly skip to step 5 after tapping **Next**; as for an enterprise E-mail account, you have to go through step 2, 3 and 4.)

2. Select an account type from **POP3**, **IMAP** and **Exchange** based on the service provided by your E-mail provider.


3. Confirm the settings for the receiving server and then tap **Next**.


4. Confirm the settings for the sending server and then tap **Next**.

5. Now your E-mail account has been set successfully. tap **Gave this account a name** to set the account name and tap your name to set your signature for outbox E-mails.

6. Tap **Inbox** to receive E-mails.

#### **Send an E-mail**



1. Login your E-mail account and then tap the icon . On the upper part of the screen.

2. Complete the Receiver and Subject, input the E-mail text, tap the icon  to add attachments, and then tap the option **SEND** on the upper part of the screen to send the E-mail.



## **System Settings**

 
Here you can configure the wireless network, change the system time, set the input method, configure the HDMI output, etc.

## ☆ Set the Wi-Fi Network

1. Tap **Settings** in the application list.
2. Tap the Wi-Fi switch to enable the Wi-Fi function. Tap  at the upper right corner of the screen, then tap **Scan** to search the Wi-Fi network. When the searching is finished, please tap the target network. If the target Wi-Fi network is encrypted, the icon  will appear at the lower right side of the signal strength icon.
3. Tap the password box to input the connection password. If you use DHCP on your router, just tap **Connect** to complete the network connection after inputting the password. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network connection.



4. Tap the icon  to hide the input method and then tap  on the left of **Show advanced options**.

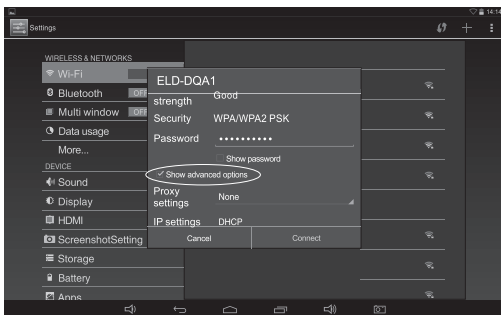

5. Tap the **IP settings** box to select **Static**, complete the **IP address**, **Gateway**, **Network prefix length**, **DNS 1** and **DNS 2** (the settings in the figure below are for reference only), and then tap **Connect** to complete the network connection.



## ☆ **Set Bluetooth**

**Bluetooth** is a wireless technology enabling devices to communicate over a short distance. Keep the distance between devices within 10m and make sure no solid barrier between them, so as to receive the best signal.

### **Enable Bluetooth and Pair Devices**

1. Tap **Bluetooth** in **Settings**, and set Bluetooth switch to on to enable it to search for Bluetooth devices nearby automatically. (Make sure that the target device enables **Visible to all nearby Bluetooth devices** before searching.)

2. After tapping the target device in the list of available devices, the system will display the dialog box of **Bluetooth pairing request**.

3. Tap **Pair** after confirming the connection key in the dialog box.

### **Send Files**

1. Tap **Explore** in the application list, and long tap the target file in the file catalog.


2. Tap **Send > Bluetooth** in the displayed menu, and the **Bluetooth device chooser** menu will be shown;

3. After tapping **Scan for devices** in **Bluetooth device chooser**, the device starts to scan for the Bluetooth devices nearby.

4. Tap the receiving device's name in the list of visible devices.

5. Confirm to receive the file or not on the receiving device.

### Receive Files

1. Tap **Bluetooth** in **Settings**.
2. In the displayed menu, tap the  icon in the upper right corner, then tap **Visibility timeout**, and select the time length of detection timeout, so that this device will be visible.
3. When any file arrivals, **Bluetooth share: Incoming file** will be shown in the notification bar.
4. Tap the notification message to display the **File transfer** dialog box.
5. Tap **Accept** in the dialog box to receive the files.
6. Tap **Notification Bar** to check the receiving progress.
7. Tap **Explorer** in the application list, open the **Bluetooth** folder in the **Internal Memory** to check the received files.

**Note:** *The files may fail to transfer between different Bluetooth devices due to problems of interoperability and compatibility.*

### ☆Set Multi window

Open multi window mode, specific operation please refer to **Settings > Multi window > Multi window manual**.

### ☆Set Ethernet

Prepare a USB-type Ethernet adapter before setting the Ethernet.

1. Connect the Ethernet adapter to the Micro USB port

of your device and insert the crystal terminal of the network cable into the RJ45 socket of the Ethernet adapter.

2. Tap **Settings > More... > Ethernet > Use Ethernet** to turn on the Ethernet function. If you use DHCP on your router, the system will automatically assign an IP address and gateway for you. If your router has no DHCP or does not support DHCP, please follow the steps below to complete the network settings.


3. Tap **Static IP setting > Use Static IP**.

4. Input the **IP address**, **Gateway**, **Netmask**, **DNS1**, and **DNS2**, and then tap **Save** at the upper right corner of the screen.

### ☆ **Set the Virtual Private Network (VPN)**

The VPN can access the internal network resources of your company via public network. To set the VPN, the IP address of the server provided by the network manager of your company is required.

1. Tap **Settings > More... > VPN**. (Please set up a **PIN or Password for Locked Screen** at initial use.)


2. Tap the icon  on the upper right corner of the screen to enter **Edit VPN profile** to add network. Input the **VPN name**, **Type** and **Server address**, and then tap **Save**.

3. The network set in step 2 will be added to the network list. Tap this network, input the user name and password, and then tap **Connect**.

## ☆ **Set the Portable Hotspot**

The portable hotspot allows your device to act as Wi-Fi hotspot. Any device connected to your hotspot can access the Internet through the mobile data traffic of your device.

1. Tap **Settings > More...** and then tap **Tethering & portable hotspot** in the list on the right.

2. Tap  on the right of the option **Portable Wi-Fi hotspot** to enable the portable Wi-Fi hotspot, and then tap **Set up Wi-Fi hotspot**.

3. Tap **Network SSID** to input the network name, tap **Security** to select an encryption method, tap **Password** to input the password, and then tap **Save** to complete the setting process. The Wi-Fi hotspot indicator icon will appear in the notification bar.

## ☆ **Sound**

Set the Volume and Warning tone.

## ☆ **Display**

**Brightness:** adjust the screen brightness.

**Wallpaper:** select an image as the wallpaper.

**Sleep:** set the time for the screen to be auto locked in case of no operation.

**Daydream:** enable the screensaver function and set the screensaver wallpaper and conditions.

**Font size:** set the font size.

**Wireless display:** it is based on Wi-Fi Display technology, namely deliver the contents on the screen of



one device supporting Wi-Fi Display technology to the screen of another without connecting to a router.

1. Tap **Settings > Wi-Fi** to enable the Wi-Fi function.
2. Tap **Display > Wireless display > SEARCH FOR DISPLAYS** to search the nearby available devices (make sure the target device also supports the Wi-Fi Display technology and its Wi-Fi function is enabled).
3. Tap a target device in the available device list, and the system will send a connection request to it; if the target device accepts the connection request, it will display the contents from the screen of your unit.
4. If your unit is at the connected end rather than connecting end, you can tap the **On/Off** key to discontinue the connection.

***Note:** if the two devices are different in software version or Wi-Fi module, there could be a Wi-Fi signal search failure, connection failure, etc.*

## ☆HDMI

Your device supports the video output via HDMI. You can connect your device to the TV via HDMI to realize the multi-screen display.

**Turn on HDMI:** tap this option to realize the video output via HDMI.

**HDMI Resolution:** set the resolution for the video output via HDMI.

**Screen Zoom:** zoom in/out the output video image.

**Sleep Timeout:** reduce the screen brightness at a preset time to save power.

## ☆ScreenshotSetting

Screenshot settings.

## ☆Storage

Check the details of the INTERNAL STORAGE, NAND FLASH, SD CARD or USB STORAGE, or install/uninstall/format the memory.

**Note:** *Please backup your important personal files before formatting the memory.*

## ☆Battery

Check or update the battery state.

## ☆Apps

Enter the **Apps** option, and you can check downloaded applications, applications stored in the SD card, running applications, all applications, etc. You can also tap an application to stop it running or uninstall it.

## ☆Location access

**Access to my location:** Let apps that have asked your permission use your location information

**Wi-Fi & mobile network location:** Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.

## ☆Security

Protect the security options for the device.

**Screen lock:** set the lock mode for the screen.

**Owner info:** after the Owner info is set, it will be shown under the lock mode.

**Make passwords visible:** under the password lock mode, you will be requested to input the unlock passwords to unlock the device. In this mode the password you input will be displayed.

**Device administrators:** view or stop the device administrators.

**Unknown sources:** enable the device to install applications from unknown source.

**Verify apps:** disallow you to install any potentially hazardous application or give an alarm in advance.

**Trusted credentials:** display the trusted credentials.

**Install from SD card:** install credentials from SD card

**Clear credentials:** delete all credentials.

## ☆Language & input

Set the system language and input method.

## ☆Backup & reset

**Back up my data:** back up the application data, Wi-Fi passwords and other settings to the Google Server.

**Factory data reset:** delete all settings on the tablet PC and restore to the factory settings.

**Note:** *please backup the important data before restoring the factory settings, or all data will be lost after the factory settings are restored.*

## ☆ **ACCOUNTS**

Add or Check the local accounts and synchronize them by connecting them to the Internet.

## ☆ **Date & Time**

**Automatic data & time:** synchronize the network time when your unit is connected to the internet.

**Set date:** manually set the date.

**Set time:** manually set the time.

**Select time zone:** manually select a time zone.

**Use 24-hour format:** switch between the 12h and 24h format.

**Choose date format:** set the date format.

## ☆ **Accessibility**

**TalkBack:** After enabling the “**Voice Prompt**”, the system will offer voice feedback for users who are visually impaired: such as the detail content on what you touch, select and enable.

**Large text:** display text in large font.

**Auto-rotate screen:** the system will auto rotate the screen if you change the direction of the screen.

**Enhance web accessibility:** the scripts from Google can be installed by apps, so that you can browse the apps content in the webpage.

## ☆ **Developer options**

These options are only used for developers. Once enabled, the system and applications may crash or work

abnormally.

### ☆ **About tablet**

Check the information about tablet like System update, Model number, Android version, and core version.

## **Troubleshooting**

### ■ **Your device can't be turned on.**

The battery power is used up. Please fully charge your device.

### ■ **Your device cannot access the Internet via Wi-Fi.**

1. Check whether your device can receive any Wi-Fi signal.

2. Check whether the wireless router supports DHCP. If not, please configure a static IP address.

3. Check whether the wireless router has been connected to the Internet.

### ■ **Your device responds to operations slowly.**

1. Check whether too many applications are running in the background.

2. Check whether any incompatible-version application has been installed.

3. Use the antivirus software to scan and kill the malicious programs (if any).

### ■ **Your device gets warm in use.**

It is normal that your device get warm in a long-time use or in charging.

### ■ **Your device crashes and its keys do not work.**

Long press the power button for 2 seconds, and the power-off dialog box will display on the screen, then tap

the **OK** option in the box to auto power-off the system. After that restart your device. If this fails, insert a slim needle to the reset button hole to realize the forced shutdown.

■ **The total memory is smaller than the theoretical memory.**

A certain space has been used to store the system files and install user applications, so it appears that the total memory is smaller than the theoretical memory.

■ **Some video files can't be played.**

Your device supports most of the common audio and video file formats, except a few special formats. We suggest that you download a third-party player from the application market to play those exceptional files.

## **Important Statements**

All contents and services obtained through your device shall belong to a third party under the protection of copyright, patent, trademark or other intellectual properties, and shall be used for your personal non-commercial purposes only. You are not allowed to use any content or service in any way without the authorization of the content or service provider.

In no case shall we be held liable for any direct, indirect or accidental loss or damage caused by your accessing any content, service, information or third-party software through your device.

Third-party services are subject to change, deletion or stop without prior notice. We shall not imply or assure that

all services and contents will be kept available at all time.

We shall not be responsible for providing any related customer service for any third-party service or content. Please refer your questions and service requests directly to the relevant content or service provider.

Please remember to backup the data when using your device. We shall not be held liable for any personal data loss or damage caused by software or hardware misoperation, product repair, battery replacement or any other unexpected situations, or for any other indirect loss arising thereof. Any of your misunderstandings for this Manual shall be beyond our control, so we shall not bear any liability for any accidental loss caused by the use of this Manual or for any third-party claim caused by the use of your device.

### **Trademark**

"Android" is the trademark of Google Inc.

"Micro SD" is the trademark of SD Card Association.

Other company names, product names or services may be also the registered trademarks of other companies, and shall be subject to the applicable laws, regulations and international conventions, whether indicated and marked on the product and in this Manual or not.

## Technical Specifications

CPU Frequency	Quad-core 1.4GHz
DDR-RAM	1GB
NAND FLASH	8GB
Operating System	Android 4.2
Wi-Fi	Supports 802.11 b/g/n
Bluetooth	Bluetooth 4.0
USB Port	Micro USB 2.0
HDMI Port	Mini HDMI 1.4
Audio Port	3.5mm earphone jack
Camera	Front Camera, 2 Mega Pixel Rear Camera, 5 Mega Pixel
Standard Battery	Li-polymer Battery, 3.7V, 4200mAh
Power Adapter	Input: 100-240VAC, 50-60 Hz Output: DC 5V $\overline{\text{---}}$ 2A
Micro SD Card (to expand capacity)	32G max.
Main Screen	8-inch LED backlight screen, Resolution: 1280 x 800
Product Size	213.8mm x 123.9mm x 8.7mm

*Disclaimer: These specifications are for reference only and shall not constitute any commitment in any way. Considering the product improvement, we shall reserve the right to change the product specifications without further notice.*



## **CE Statement**

### **Notices for the use of pad**

Your pad is a product of superior design and craftsmanship and should be treated with care. The following suggestions can help you comply with the terms of repair kits, to extend the life of mobile pad.

1) Place the mobile pad and their parts and components out of reach of small children.

2) Keep the pad dry, rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.

3) Don't touch the pad with wet hands when charging, it will cause electric shock or damage the pad.

4) Avoid place the device in high temperature environment. Temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. Avoid place the device in too low temperature environment. When the temperature rises, the pad will produce water vapor that may damage electronic circuit.

5) Avoid place the pad in dusty, dirty places, otherwise parts may be damaged.

6) To avoid the pad in a lit cigarette, near open flame or any heat source.

7) Do not open the device, non-professional approach will do damage to the pad.

8) Do not throw it from height, knock or shake the pad, rough handling can damage internal circuit boards.

9) Do not paint the pad, because the paint will block

headphones, microphones or other removable parts, and lead it not work.

10) Use clean, soft, dry cloth to clean the camera, light sensor lenses. Prohibit the use of harmful chemicals and cleaning agents, cleaning fluids to clean the pad.

11) If mobile pad, battery, charger, or mobile pad accessories are defective, send to the nearest qualified service center for inspection.

12) If necessary, Service Centre staff will assist you and will arrange for pad repairs.

13) To prevent possible hearing damage, do not listen at high volume levels for long periods.

### **Caution:**

Use the Mobile pad in the environment with the temperature between  $-5^{\circ}\text{C}$  and  $40^{\circ}\text{C}$  , For the following equipment: Mobile pad is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The DoC may be consulted at Shenzhen KTC Technology Co., Ltd. Northern Wuhe Road, Gangtou, Buji, Longgang, Shenzhen, China.

Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.



The product shall only be connected to a USB interface of version USB 2.0 or higher and that the connection to a power USB is prohibited.

Adapter shall be installed near the equipment and shall be easily accessible.

The device complies with RF specifications when the

device used at 15mm from your body.

Risk Of Explosion If Battery Is Replaced By An Incorrect Type.

Dispose Of Used Batteries According To The Instructions.

The plug considered as disconnect Device of Adapter.

## **FCC Warnings**

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **SAR**

### **SAR Exempt Statement:**

This device maximum RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR is not necessary.