

This product is a rechargeable submarine toy with 27MHZ multi-function remote control. Its patent diving device enable it to dive vertically, and completely freely move forwards, backwards, left, right, overcoming the defect of ineffective control of the same products in the market. Due to its unique type of and small size, you can play with it in fish jar, bath, brook with still water and swimming pool.

● Specification

1. The 27.145MHz transmittal signal is for the use of remote-control toy.
2. SUM-3(AA) batteries 1.5V× 3 is used in the remote-control box, and rechargeable batteries 1.2V×2 "AA" is used in submarine.
3. In the open air with no interference, the remote-control distance on the water reaches 5M, and under water is about 3M. Diving depth ≤ 1 m is recommended.
4. The submarine can use rechargeable batteries. Please recharge them when there is little power. Generally speaking you can play 40-50minutes after recharging the batteries 6 hours.

The specification of adaptor : AC 120V or 240 V 60Hz IN/DC 6V 200mA output, DC Plug Φ 3.5× 1.35mm, anode insides and negative pole outsides .

● Direction:

1. Open the power switch of submarine with the red director light on, then put the submarine into the water.
2. Pull out the antenna in the remote-control box. Press the Key for forward with the red director light on indicating the sending out of the signal and then the submarine begins to go forwards. The same, pressing any key for backward, left, right, downward, the submarine will response.
3. Loose the key for diving in order for the floating up of the submarine in water.
4. Control the keys for left and right to correct the direction if the submarine turns after move forwards or backwards a distance.



● Remarks:

1. When using the adaptor, please remove the plug for waterproof in the interface of the bottom of submarine. After recharging , please put back the plug to ensure the function of waterproof of this product.

of submarine and in 45° ~90. to ensure that it can reach formal
remote-control distance.

03. 1

3. To prolong the life of batteries, we suggest recharging them when the power is used up. And the power director light on the head of submarine becomes darkened. Please use right adaptor in case of damage of the product.
4. To ensure the function of waterproof of this product ,please do not disassembly all parts

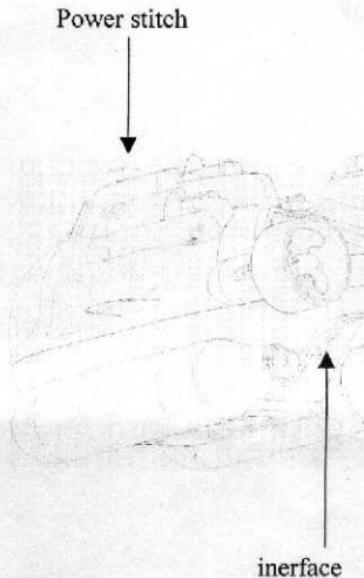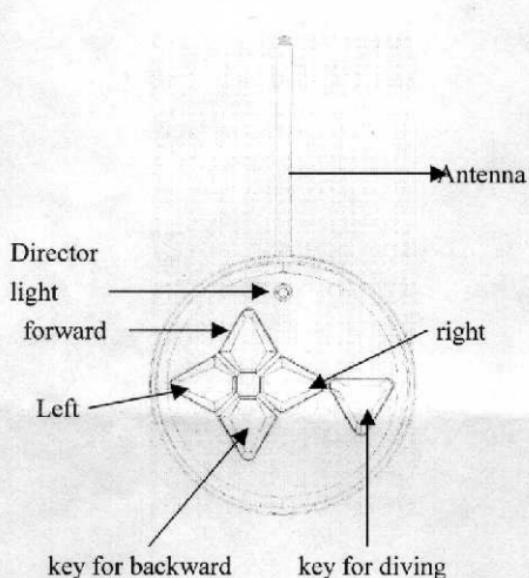

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY
TO OPERATE THE EQUIPMENT.