

SAFETY INFORMATION



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire or electric shock.

Warning! Consumerware DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock or damage to the unit, DO NOT expose this unit to rain or moisture.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft, damp cloth for cleaning.
4. Do not use this product near water, such as a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand or table. This product may fall, causing serious damage to the product.
6. Install this product in a protected location where no one can step on or trip over the line cord. Protect cords from damage or abrasion.
7. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceperson when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

8. Unplug this product from the wall jack and refer servicing to qualified service personnel under the following conditions:
 - a) If liquid has been spilled into the product.
 - b) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - c) If the product has been exposed to rain or water.
 - d) If the product has been dropped or the cabinet has been damaged.
 - e) If the product exhibits a distinct change in performance.
9. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
10. Do not use the telephone to report a gas leak in the vicinity of the leak.

Battery Safety Precautions:

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the Consumerware battery pack specified in the user's manual. Do not use Alkaline or Lithium batteries, or mix batteries of different sizes or from different manufacturers in this product. Do not use non-rechargeable batteries.
2. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.

3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets and keys. The batteries or conducting material may overheat and cause burns or fire.
5. Change the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitation specified in the user's manual. Do not attempt to charge the batteries with any means that are not specified in the user's manual.
6. Periodically clean the charge contacts on both the charger and handset.

Rechargeable Nickel-Metal-Hydride Battery Warning:

- This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- Nickel is a chemical known in the state of California to cause cancer.
- The rechargeable Nickel-Metal-Hydride battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable Nickel-Metal-Hydride battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

SAVE THESE INSTRUCTIONS

For questions regarding the operation of this product, customer care or for problem resolution, call the Consumerware Customer Service Center at 1-800-456-6076 (TTY 1-888-373-3373).

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Consumerware representatives are happy to help you with any issue relating to the operation of this product, set-up or installation.

Information subject to change since Consumerware reserves the right, without notice, to make changes in equipment design or components as progress in engineering or manufacturing methods warrant.

1003 Part Number: CW800-DSS0001-00

© 2003 Consumerware, Inc. All rights reserved.