


///ADVENT®

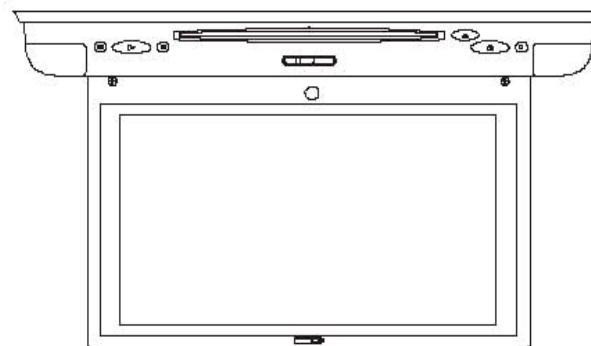

Owner/ Installation Manual

ADV8SR

8" DROP DOWN LCD MONITOR & DVD PLAYER

Note:

This Product incorporates copyright protection technology that is protected by method claims of certain patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Warnings

Do not use any solvents or cleaning materials when cleaning the video monitor.

Do not use any abrasive cleaners, they may scratch the screen.

Use only a lightly dampened lint free cloth to wipe the screen if it is dirty.

Lock the LCD screen in the fully closed position when not in use.

Before putting on headphones always adjust the volume setting to the lowest position.

Remember to leave the dome light switch in the off or auto positions when the vehicle is unattended, as the dome lights, if left on, can drain the vehicle's battery.

Do not put pressure on the screen.

Licensed under one or more of the following patents,
Patent NOS. 5,775,762 and 5,927,784

Important Notice

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

A. Introduction

Thank you for selecting the ADV8SR. The main features include a 8" Wide Screen (16:9 Aspect Ratio) Liquid Crystal Display (LCD) monitor and a built-in DVD player. The unit applies the latest state of the art electronics. The unit is constructed to provide years of reliable, trouble-free service. Please read the entire instruction manual supplied with this product prior to operation. The documentation will assist you in installing the system properly to obtain the best equipment performance. Please store this manual for later use.

B. Cautions and Warnings***1. Installation***

Ensure that the ADV8SR is installed in accordance with the instructions and illustrations provided in this manual.

2. Objects and Liquids

Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). To ensure proper ventilation and proper operation, never cover or block the ventilation slots and openings

3. Disassembly

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system is in need of repair.

4. Cleaning Unit

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

5. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources such as hot air ducts. Do not touch the surface of disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

C. Contents

1. 8" LCD Monitor & DVD Player Combo
2. A/V Adapter Cable
3. 8 Pin Connect to RCA AV Cable
4. Power/Dome light Harness
5. Hardware Package
 - 4 pcs M4 x 8mm Machine Screws
 - 4 pcd M2 x 8mm Screws
 - 4 pcs Rubber Plugs
 - 4 pcs Small Rubber Ring
6. Remote Control
7. Mounting Plate
8. Owner/Installation Manual
9. Game Controller
10. Trim Ring
11. Connecting axis

D. Installation and Powering

TOOLS REQUIRED:

- #2 Philips Screwdriver
- #1 Philips Screwdriver
- Utility or Razor Knife or Shears
- Wire Strippers
- Upholstery hook tool (for removal of panels as necessary)
- Electrical Tape
- Masking Tape
- Multimeter (to verify 12 volt DC and continuity: Do not use a test light or logic probe)
- Marker pen – to mark headliner
- Scribe (to mark trim ring if used)
- Misc. electrical connectors (to connect to vehicle power source). Requirements will vary from vehicle to vehicle.


GENERAL INSTALLATION APPROACH:

- 1) Decide upon system configuration and options that will be installed (i.e.: what components, VCP, Tuner, RF Modulator/external amp, remote headphones, DVD, etc.).
- 2) Review all manuals to become familiar with electrical requirements and hook ups.
- 3) Decide upon mounting locations of all components and method of mounting.
- 4) Prep the vehicle by removing any interior trim necessary to gain access to vehicle's wiring as well as all areas where interconnecting wire harnesses will need to be located. If any access holes need to be cut into the vehicle (headliner, other trim components etc.), this should be done now as well.
- 5) Route the wiring harnesses throughout the vehicle as necessary. (Refer to the Wiring Diagrams on page 10 of this manual as well as the wiring instructions for the individual components and accessory options being installed). Be sure that all wiring is protected from sharp edges and is routed in such a manner that it will not be pinched when all components and interior trim are fully installed. Be sure to leave enough slack in the wiring at each component to allow working room.
- 6) Remove all A/V system components from their packaging and place them loosely in the vehicle at their respective locations.
- 7) Connect all components together (electrically) and verify proper operation of all system functions. Note: This is best done BEFORE components have been permanently mounted.
- 8) After verifying proper operation of the system, proceed to mount each of the components.
- 9) When all components are mounted, recheck function of entire system again to ensure that no wiring was pinched or connected improperly during final installation.

Notes : The ADV8SR video system is only intended for an overhead, drop down installation. It is not intended for seat back or any other type of mounting. The hinging mechanism is designed for horizontal, drop down use only.

VEHICLE PREPARATION:


- 1) Locate an accessory power source (+12v when key is in the ACC. and run positions, and 0v when key is off). Generally, this wire can be found at the ignition switch or fuse-box.
- 2) The mounting method and location will vary from vehicle to vehicle, so this manual will only focus on the installation of the video monitor and related console accessories.
- 3) Generally, the best location for the video monitor is where the vehicle's factory dome light is installed. The monitor should be located in such a manner that it can be comfortably viewed by rear seat passengers. NEVER INSTALL THE MONITOR IN A PLACE WITHIN THE DRIVER'S VIEW. THIS IS NOT ONLY DANGEROUS, BUT IT IS ALSO ILLEGAL.
- 4) Once the mounting location of the monitor has been determined, there may be additional preparation work necessary, depending on the vehicle structure and installation method. Some of the steps that may be required are:
 - A) Removal of the vehicle's dome light.
 - B) The headliner may need to be trimmed.

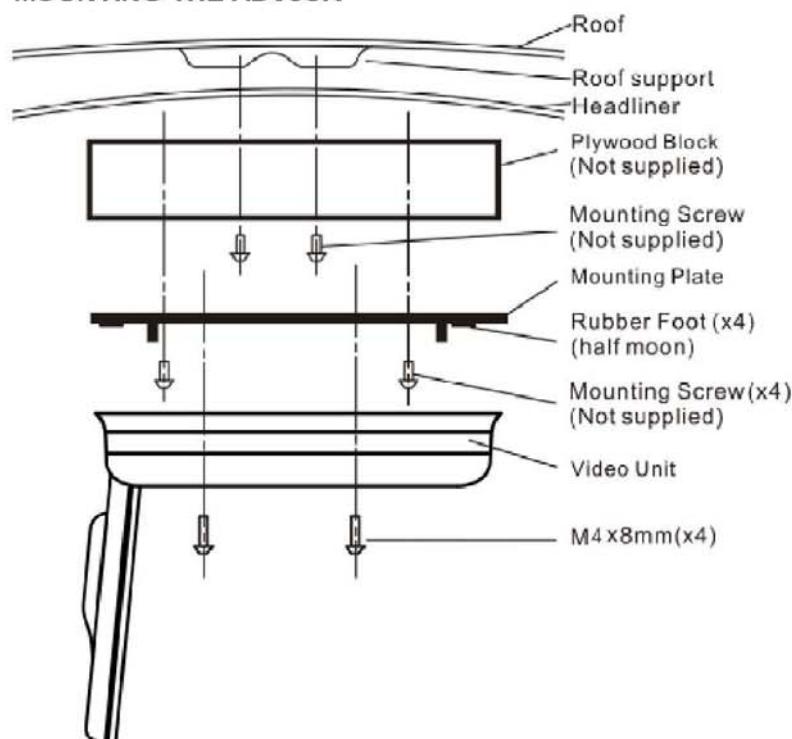MOUNTING THE ADV8SR**Figure 2**

NOTE: Two of the mounting holes are located under the domelight covers.

Trim Ring Installation

The Trim Ring Installation is accomplished using the four (4) 2 X 8mm screws supplied. Please refer to the illustration below.

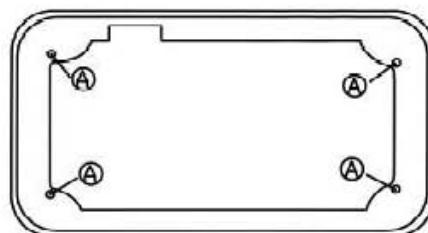

1. Place the ADV8SR on a soft surface with the rubber gasket facing up. Use care to avoid scratching the unit's exterior surface.
2. Place the trim ring on the unit and note the location of the four mounting screws.
3. Remove the four screws that are in the unit.
4. Remove the rubber gasket that is attached to the unit.
5. Attach the trim ring to the unit using the longer four (4) 2 X 8mm screws supplied.
6. Remove the four (4) rubber spacers from the bracket.



7. Attach the four (4) post extensions to the bracket.



8. Attach the four (4) rubber spacers on the post extensions



9. Refer to the Owner/Install Manual for the ADV8SR to complete the installation.

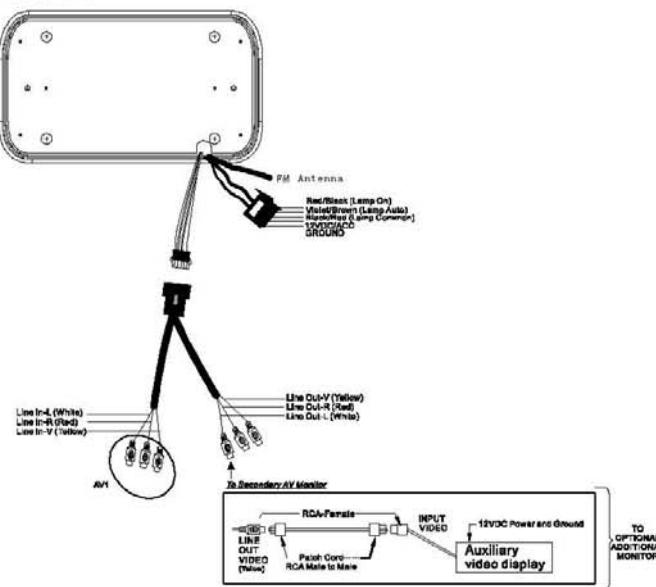
ADV8SR

Figure 3

- 1) Make the connections to the vehicle with the 5 pin wiring harness.
- 2) Connect the 5 pin harness to the mating connector on the Video Monitor.
- 3) Connect power harness to vehicle's electrical system by tapping into an accessory hot line.
- 4) Verify all functions of the system before final mounting of the finished assembly.

NOTE: A VCP or other A/V Component can be connected to the video monitor system using an RCA A/V cable. This second harness would plug into the AV1 inputs or AUX jack.

A/V Source Definitions :

- 1 = Built-in DVD
- 2 = AV1 input (VCP, DVD, etc)
- 3 = AV2 Input (VCP, Game, DVD, etc)

CONNECTING THE DOME LIGHTS



The dome lights in the video monitor require three connections to the vehicle's wiring. There are two common types of dome light circuits used, positive or negative switched. Positive systems supply voltage to the interior lights to turn them on, negative switched systems apply ground to illuminate the bulbs. To determine which system you have you must locate the wires at the dome light. On a positive switched system, with all the doors closed and the lights out, both wires at the dome light will rest at ground. When the light is activated, one of these wires will switch to +12V DC. This is the vehicle's switching wire. On a negative switched system, with all the doors closed and the lights out, both wires at the dome light will rest at + 12V DC. When the light is activated, one of these wires will switch to ground. This is the switching wire.


For positive systems, connect the violet / brown (Lamp auto) wire to the vehicle's switched wire. Then connect the red / black (lamp on) wire to a fused constant 12 volt source and the black / red (lamp common) wire to a good ground. Positive systems are commonly found on Ford vehicles.

For negative systems, connect the violet / brown (Lamp auto) wire to the vehicle's switched wire. Then connect the red / black (lamp on) wire to a good ground and the black / red (lamp common) wire to fused constant 12 volt source. Negative systems are commonly found on General Motors and import vehicles.

Note:

Some vehicles which incorporate transistorized control of the dome light circuit, such as the 1999 Dodge Caravan, may require that the violet / brown (Lamp auto) wire be connected to the door pin switch wire, as the additional current draw of the Monitor's lights may not be supported by the output of the vehicle's body control computer.

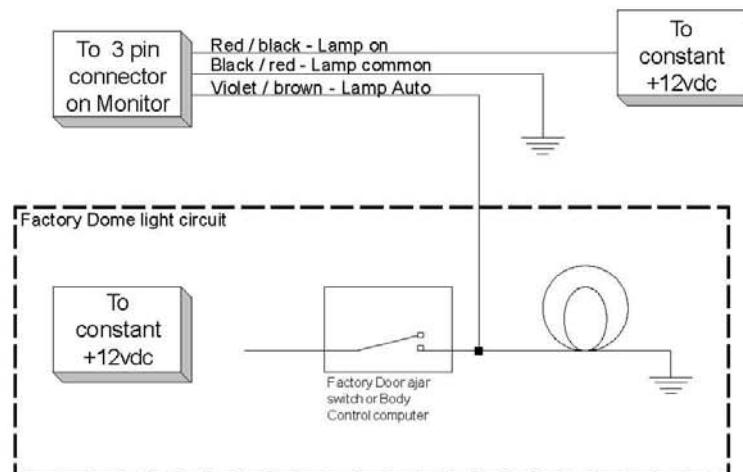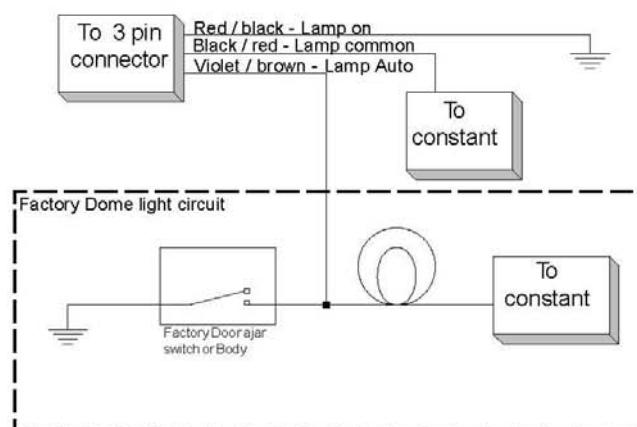
Positive Switched Dome lighting**Figure 4****Negative Switched Dome lighting****Figure 5**

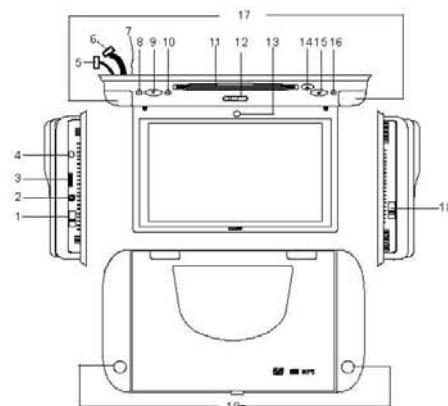E. Controls, Indicators, and Connectors**1. Unit View (Refer to Figure 6)****Figure 6**

- 1) FM Modulator Switch
- 2) AV 2 In Jack
- 3) Game Port
- 4) Headphone Jack
- 5) Power and Dome Light Connector
- 6) 6pin connector
- 7) FM Antenna
- 8) Previous Button
- 9) Play Button
- 10) Next Button
- 11) Disc Insertion Slot
- 12) Monitor Open Button
- 13) IR Sensor
- 14) Eject Button
- 15) Power Button
- 16) Stop Button
- 17) IR Transmitter for Wireless Headphones
- 18) Auto/Off/On Dome Light Switch
- 19) Dome Lights

2. Remote Control View (Refer to Figure 7)

- 1) Power Button
- 2) Display Button
- 3) Angle Button
- 4) Subtitle Button
- 5) A-B Button
- 6) Slow Button
- 7) Pause Button
- 8) Reverse Scan Button
- 9) Stop Button
- 10) Picture Button
- 11) DVD/AV1/AV2
- 12) Zoom Button
- 13) Eject Button
- 14) Numeric Buttons
- 15) Audio Button
- 16) Repeat Button
- 17) Menu Button
- 18) Setup Button
- 19) Up/Down/Left/Right / Enter Buttons
- 20) Forward Scan Button
- 21) Return Button
- 22) Play Button
- 23) Skip- Button
- 24) Skip+ Button
- 25) Vol Down Button
- 26) Vol Up+ Button
- 27) Wide Button

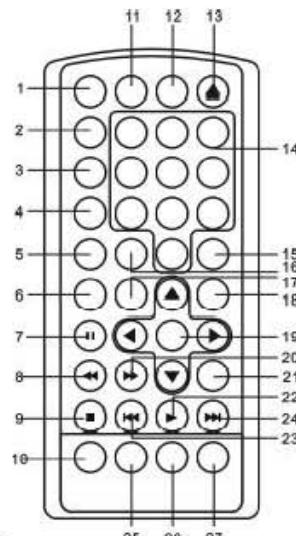**Figure 7****F. Loading and Playing a Disc**

- a. Turn the power on by pressing the power button on the unit or the remote control. Select DVD using the DVD/AV1/AV2 button on the remote.
- b. Place a disc into the disc insertion slot with the label side facing up.
- c. Playback will start automatically.
- d. Pivot the LCD Screen for a good viewing angle.

G. BASIC OPERATION

POWER	Turn the unit on/off
PLAY	Start Playback
SLOW	Play at 1/2,1/4,1/8, or 1/16 normal speed
PAUSE	Still Picture
STOP	(1 time) Stop at the present playing point / (2 times) Stop playing
FORWARD	Scan forward at 2, 4, 8, 16 or 32 times normal speed
REVERSE	Scan backward at 2, 4, 8, 16 or 32 times normal speed
UP/DOWN/LEFT /RIGHT	Used for Menu Navigation
ENTER	Confirm item or setting
NUMBERS	Select item or password setting
RETURN	Not used in this model
MENU	Display the root menu of the disc
REPEAT	Repeat playback of a title, chapter, or track
A-B	Repeat a specific portion from point A to point B of the disc
DISPLAY	Display disc information (title, chapter, track, time, etc.)
ANGLE	Change the angle on a scene
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
ZOOM	Enlarge an image to 2, 3 or 4 times the original size
SETUP	Display the setup menu to select and set items, and exit the setup menu.
DVD/AV1/AV2	Source selection DVD, AV1, AV2
EJECT	Eject disc
PICTURE	Brightness/Contrast/Tint/Color
VOLUME-	Reduce volume/Lower picture setting
VOLUME+	Increase volume/Raise picture setting
SKIP-	Previous chapter/track
SKIP+	Next chapter/track

H. Setup

1. General Setup Page

- 1) With no disc inside the player, press 'SETUP' to display the Main screen of the Setup Menu on the screen and "General Setup Page" appears. At the same time, "  " is highlighted. Press 'SETUP' again to exit the Setup Menu.
- 2) Press the ENTER button, "TV Display" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in general setup page.
- 4) Press ► to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press ◀ to return the previous menu.

a) TV Display

- * Normal/PS: When the player outputs signal to a normal TV, a normal picture is shown on the full screen.
- * Normal/LB: When the player outputs signal to a normal TV, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
- * Wide: When the player outputs signal to a wide screen TV, a wide picture is shown on the full screen.

b).Angle Mark

- * On: The screen will show the angle mark icon. (*If an angle option is available).
- * Off: The screen will not display the Angle Mark

NOTE: Not all discs contain above features. The above features are disc dependent.

c) OSD Language

Choose the different language as the OSD Setup language

d). Screen Saver

*On: Enables screen saver

***NOTE:** The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

*Off: Disables screen saver (off)

e). Last Memory

*On: The unit will return to the last position on the disc.

*Off: The unit will not return to the last position on the disc.

Note: The Last position memory function only effect when switching AV In/Out switch.

2. Video Quality Setup

1) In Setup menu, Press the **◀** or **▶** button to select "Video Quality Setup" and  is highlighted. Press **ENTER** to enter the video quality setup page.

2) Press the **ENTER** button, "Brightness" is highlighted.

3) Press the **▲** or **▼** button to select the other menus in the video quality setup page.

4) Press **▶** to enter the sub menu.

5) Press the **◀** or **▶** button to adjust the quantity and press the **ENTER** to confirm your selection.

6) Repeat steps 3-5 for other menus.

Note: Press **ENTER** to return the previous menu.

a) Brightness

b) Contrast

c) Hue

d) Saturation

3. Password

With no disk inside the player, press **SETUP** to enter the Setup menu.

Press the **◀** or **▶** button to select "Password Setup Page" and  is highlighted. Press **ENTER** to enter the password page.

Press **ENTER** twice to enter the Password Change Page. Input the

Old Password or the Default Password, the New Password, and the Confirmed New Password. Press ENTER to confirm the change.

Note: In case you forget newly-input password, you can use 3308 as a password.

4. Preference Page

- 1) With no disk inside press "SETUP" to enter Setup menu, use the ▲ or ▼ button to select "Preference Page" and  is highlighted. Press ENTER to enter the preference page.
- 2) Press the ENTER button, "TV type" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in the preference page.
- 4) Press ▶ to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press ◀ to return the previous menu.

a) TV type

NTSC: The standard TV system used in the USA, Canada, Japan and many other countries.

PAL: The standard system used in Europe, Africa and the Middle East, among other places.

b) Audio

c) Subtitle

d) Disc Menu

Note: Language and subtitle selection is only available for discs that are recorded in some languages. If the selected language is not available, the player will play and display on the screen the original recorded language contained in the disc.

e) Parental

Select 'Parental' by pressing the ▲ or ▼ button in the preference page. And Press ► to enter the sub menu.

Select the parental level you desire using ▲ or ▼ button for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 Kid Safe) to the highest level (8 Adult). Press ENTER and input 4 digit password, then press ENTER again to confirm the parental level setting.

- 1 Kid SAF (Kid safe)
- 2 G (General audiences)
- 3 PG (Parental guidance suggested)
- 4 PG 13 (Parents strongly cautioned)
- 5 PGR (Parents very strongly cautioned)
- 6 R (Restricted)
- 7 NC-17 (No one 17 and under admitted)
- 8 Adult (Adult)

NOTE: The level of 8 Adult is the factory default.

f) Default

Select 'Default' by pressing the ▲ or ▼ button in preference page. And Press ► to enter the sub menu. Press ENTER to make the setting return to the factory-set mode.


NOTE: The parental setting is not affected by the default reset function. The master password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this master password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

I. Menu

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playback to display the menu. Some DVDs only allow you to select disc playback options using the DVD root menu.

J. Display**1. PLAYING TIME AND REMAINING TIME**


a. During playback press the 'DISPLAY' button to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing elapsed Time for the title (5). The heading will disappear automatically after 3 seconds if DISPLAY button is not pressed.

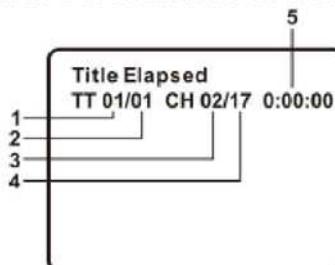

Title, Chapter Number, and Time Screen Display

b. Each time 'DISPLAY' is pressed the following options will become available.


- Title Elapsed: The elapsed time of the title
- Title Remain: The remaining time of the title
- Chapter Elapsed: The elapsed time of the chapter
- Chapter Remain: The remaining time of the chapter
- Display Off: The DVD's time information will not be displayed.

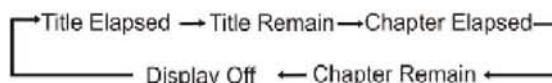

2. ANGLE

During playback of a disc, press 'ANGLE' to display the available angles for discs containing multi-angles*, with the current angle number (1) and the total number of angles (2) displaying. Press 'ANGLE' to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the 'ANGLE' button is not pressed again within 3 seconds.


*NOTE: Not all discs contain this feature.

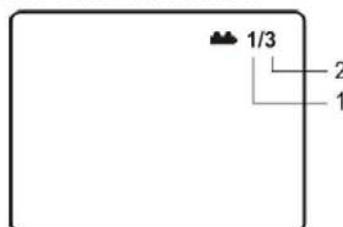

Angle Screen Display

3. SUBTITLE

During disc playback press 'SUBTITLE' to select the subtitle language you desire*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'Subtitle Off' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

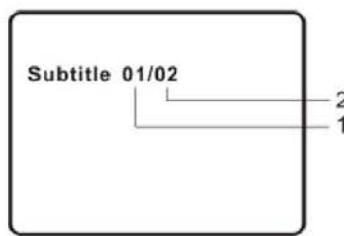


Subtitle Screen Display

* Some DVDs only allow access to this function through the DVD menu

4. AUDIO

During playback press 'AUDIO' to select the audio language you desire*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed within for 3 seconds.

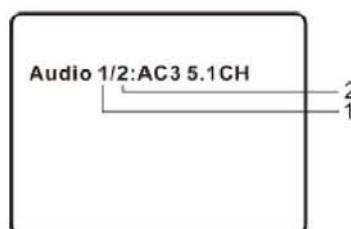


Audio Language Screen Display

* Some DVDs only allow access to this function through the DVD menu.

5. ZOOM

During playback press 'ZOOM' to enlarge the picture by 2x, 3x or 4X with the current zoom multiple.(1)Press "zoom" once, the picture will be enlarged 2X.(2)Press "zoom" a second time ,the picture will be enlarged 3X.(3)Press "zoom" a 3rd time ,the picture will be enlarged 4X.(4)Press "zoom" a 4th time ,the picture will return to normal size.

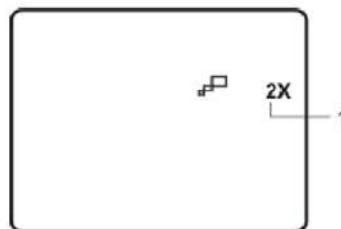

Zoom Screen Display


6. A-B REPEAT

a. During playback press a first time 'A-B' to set the Starting Point A.




A-B Repeat Starting Point Screen Display

b. Press 'A-B' a second time to set the Ending Point B and the player will repeatedly play the part between Point A and Point B.

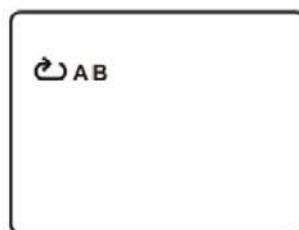

A-B Repeat Ending Point Screen Display


c. Press 'A-B' a third time to cancel A-B repeat and resume normal playback.

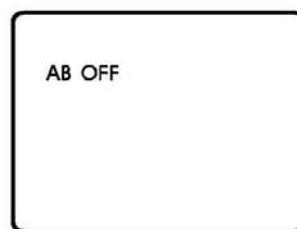


A-B Repeat Cancelled Screen Display

7. REPEAT

During playback each time '1/ALL REPEAT' is pressed, the following modes will become available.

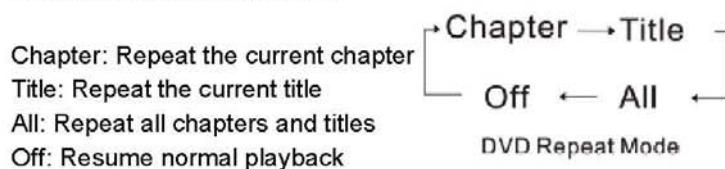


The 'Chapter' repeat display shows below for example:

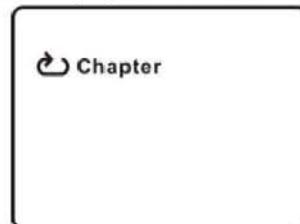

Chapter Repeat Screen Display

K. Playing Audio CDS

When playing an audio CD press the DISPLAY button repeatedly on the remote to view time information. The options below appear on screen display circularly to show you what information is available using this function.

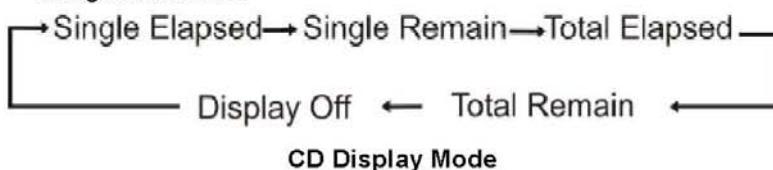

CD Display Mode

Single Elapsed: The current track playing and playing time of that track will display on the screen.

Single Remain: The current track playing and the amount of time left.

Total Elapsed: The current track playing and the total time that the CD has been playing.

Total Remain: The current track playing and the amount of time remaining on the CD.

Display Off: The CD time information will not be displayed.

Take 'Single Elapsed' display as an example:



Single Elapsed Screen Display

USING THE REPEAT FEATURE


The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *Track*- repeats the track that is playing.
- *All*- repeats the disc that is playing.
- *Off*

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

L. Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

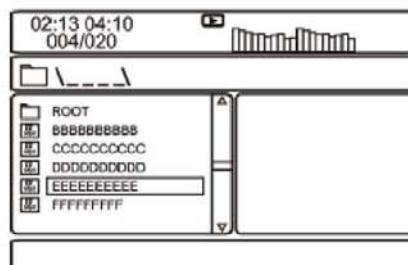

MP3 MENU Screen Display

When an MP3 disc is inserted into the unit, the menu screen appears automatically. You can use the menu screen to select your desired folders and songs or the system plays the songs in the order they were burned onto the disc.

1. Press the **▲** or **▼** button to choose a folder from the folder list on the left side of the screen.
2. Press **ENTER** to select the highlighted folder. The songs available under the folder will be listed.
3. Use **▲** or **▼** button to choose a song from the list. Press **ENTER** to select and begin playback of the highlighted song.

4. Use the **▶▶** (NEXT) button to move to the next song. Press the **◀◀** (PREVIOUS) button to move to the beginning of the previous song.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF(Folder). Pressing REPEAT consecutively changes the repeat options:

- Repeat One (repeat playback of a song)
- Repeat Folder (repeat playback of a specific folder)
- Folder (normal playback)

As you toggle through the options, the repeat mode changes. The selected repeat mode loops repeatedly until you turn it off.

NOTICE


- “” icon in front of a file name indicates that this is a folder, not an MP3 file.
- “MP3” icon in front of a file name indicates that this is an MP3 file.

Note:

Due to the company's policy of constant improvement and technical refinement, the company reserves the right to change or alter software.

N. Playing a Video Game (Refer to Figure 8)

Change the source by pressing the DVD/AV1/AV2 button on the remote. The AV2 input jack is located on the left side of the unit. The AV1 input is the RCA connectors located on the top of the unit.

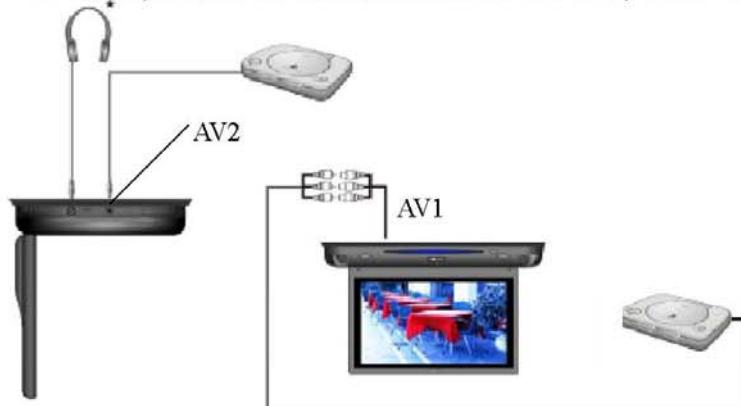**Figure 8**

Connect the A/V output from your game system to the RCA inputs (AV1) or the 1/8 (AV2)* input. Adjust the volume and picture for individual preference.

O. Wired Headphones and Wireless headphones

(Refer to Figure 8)


1. Optional wired Headphones may be used. Connect the headphones to the Headphone Jack on the left side of the unit (Part Number MMWHS).
2. Optional wireless headphones can also be used (Part Number MMIRHS).

NOTE: Refer to the Owner's Manual with the headphones for complete instructions.

*AV2 requires the use of the supplied AV adaptor cable.

P.Wireless FM Modulator

The ADV8SR is equipped with built-in wireless FM Modulator*, that allows you to listen to the ADV8SR audio signal by tuning your vehicle's radio to the selected frequency, (88.3, 88.5, or 88.7MHz). This feature is accessed by using the FM Select switch on the left side of the unit. Slide the FM Select switch to one of the three frequencies above that is not used or is weak in your area. Select the same frequency on the vehicle's radio. Adjust the vehicle's radio volume to a comfortable listening level. When the FM Modulator is not used set the FM Select switch to the OFF position.

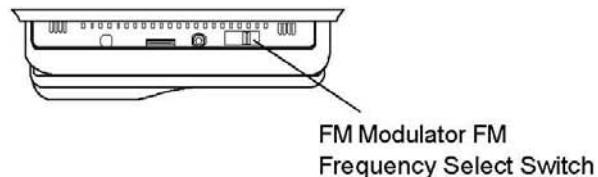


**NOTE: In certain areas where there are a large number of FM radio stations (e.g. large cities, urban areas), the reception of the FM signal from the overhead pod may not be satisfactory, resulting in static, distorted sound or signal bleed thru from strong local radio stations. This is not a defect in the product, but the result of a stronger local radio station overpowering the wireless FM transmitter in your overhead pod.*

Q. Specification

Disc format: DVD/CD/MP3
Color system: NTSC/PAL
Screen size: 8"
Resolution: 1440 x 234
Frequency response: 20 Hz to 20 kHz
Video output: 1 Vp-p/75 Ohm, unbalanced
Audio output: 1.4Vrms/10kOhm
Audio S/N: Better than 60 dB
Dynamic range : Better than 85 dB
Laser: Semiconductor Laser, Wave Length: 650 nm/790 nm
Power source: DC 12V
Power consumption: 2.5 Amps
Operating temperature: 5~45°C
Storage temperature: -20~60°C (4~140°F)
Dimensions (L x W x D): 282 x 165 x 50 mm (11.1" x 6.5" x 1.97")


R. Troubleshooting:

<u>SYMPTOM:</u>	<u>REMEDY:</u>
No power at Video Monitor	-Verify +12 VDC on Red wire at 2 pin Power Harness behind video monitor. Verify ground connection with continuity test from known good ground to black wire at 2 pin Power Harness.
Power but no video or sound	-Verify that the correct source is selected (i.e.: DVD, AV1 or AV2). Verify that the source is on and playing a known good media (such as a DVD). Verify connections at both ends of the harness.
Picture, but no sound	-Verify that the headphones are turned on; check headphone batteries. -Verify that power is available to the FM Modulator; make sure the FM modulator and the vehicle radio are set to the same FM station.

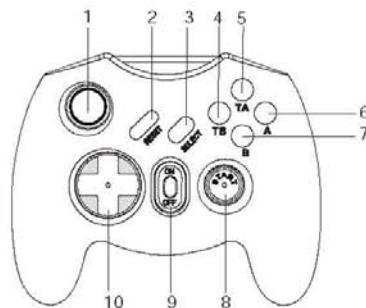Game Controller Function Description

- 1.Direction PADS**-Up, Down,Left,Right 4 directions control.
Control the direction of the game.
- 2.Reset Button**-Reset the Games to the Opening Screen.
- 3.Select Button**-Select the 30 Wireless Games.Select the Game's level and option select in Games.
- 4.TB Key**-TURBO"B" Function Key.
- 5.TA Key**-TURBO"A" Function Key.
- 6.A Key**-A Function Key -Normally act the Jump and optional weapons.
- 7.B Key**-B Function Key -Normally act the Bullet fire and attack .
- 8.Start**-Start the 30 Games
- 9.Power on/off switch**-Control the unit's Power ON/OFF Features.
- 10.Direction PADS**-Up, Down,Left,Right 4 directions control.
Control the direction of the game.

Connecting the Game Controller

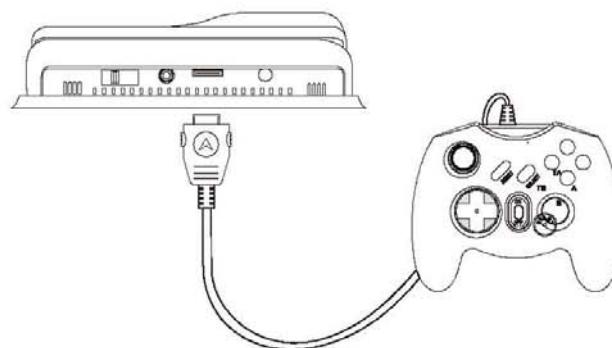

- 1) Plug the game controller into the game port.
- 2) Press the DVD/AV1/AV2 button on the remote until AV2 is displayed.

Game Button Functions

1.SUPER FIGHT 1

Wonderful shooting + best Xtreme exciting game.
8 stage to be passed.
A key Jump and B Key Fire Bullet
Passing Key. Take as many weapons as possible.

2.EXIST

Wonderful venture game.
Key – Eat smaller fish as much as possible.
Shark – can eat it's tale.
Eat more, gross more.

3.WATER FIRE

Interesting Shooting + Brain games.
Move UP / Down to adjust the direction.
Move Left / Right adjust the force.
Press "A" key

4.HITTING MICE

Interesting Brain games.
The Giant move left / right and throw the bone to hit down the mouse.
Don't let the Mouse reach the cave.

5.HIGHWAY RACING

Fantastic Racing Game.
Press A Key – Speed Up.
Release A Key – Break.

6.POP MONSTER

Interesting POP game.
In the right interval – press the A Key to POP!

7.TABLE TENNIS

Interesting SPORT game.
Move the Bat to hit the Pingpong Ball back.

8.EDACITY SNAKES

Move the Snake to eat the treasure ball.

Be careful – a,Not to hit the stone.

- b,Not to eat own body.

9.TRIPLE

Interesting Brain Game.

Make 3 same subject s in same line – will vanish.

Press "A" key to one subject and then, move to another, it will change.

10.SHOOTING BALLOONS

Interesting Shooting games.

Shoot down the balloons.

The clock and Lightning – need to shoot down 100%.

11.ROBOT

Interesting Shooting games.

Shoot down the aero-plane and UFOs.

12.M DAY

Shoot down the aero-space enemies.

Protect well and not to be shot.

13.DANGER ZONE

Helicopter Fire shooting game.

Move left / right to shoot down the enemies.

14.HUA RONG DAO

An interesting PUZZLE Game.

Can reference from DEMO to see how to play.

15.AETHER FIGHTER

Interesting shooting game.

Press A key to fire the bullet to shot down the enemies.

Note – one bullet can be on air only.

16.HELLIMISSION

Interesting Venture game.

Press "A" Key – will lift the helicopter up. Release the key will fly "Down"

Not easy to control – practice well.

17.FINAL MAN

Interesting defense game.

Enemies come from 5 direction. Adjust the Machine Gun direction to beat away the enemies.

18.TWIN CARDS

Make same two pictures – then, the pair vanish.

Good exercise games for the brain + memory games.

19.ARCHER

Good shooting games.

Move the Hunter left / right to shoot down the birds.

20.CORRIDOR

Interesting venture games.

Press A key to speed up and release to slow down.

Be careful, don't hit the fish and stone and the octopussy.

21.HORRIBLE AREA

Draw the line as much as possible and be careful for the Monster chasing.

Make the square as much as possible. Not easy to pass, use your brain well.

22.MAZE PUZZLE

Interesting puzzle games.

Move the block well to form the formal picture properly.

23.CONVECTION

The Brave Boy will take the Lollipop

Need to be careful for the Lightening and out of another door.

Take easy – don't rush – always have enough time!

24.CLOSE QUARTERS

Interesting Aerospace shooting game.

Move the window to the enemy's craft and press A key to shoot it down.

25.PULVERIZE

Interesting Tank War Game.

Be careful for the bullet which the enemy's shoot. Shoot the Enemy in the first instance.

26.DIAMOND

Move the bat left / right to hit back the ball.

Not easy to play well – good exercise for the re-action!

27.UNDERSEA

Press B Key to release the Bomb. Will explosive after 2 second.

Always push the enemy to dead corner – then, put the Bomb. To bombard the enemy

28.TWIN COPTERS

Make same two pictures – then, the pair vanish.

Good exercise games for the brain + memory games.

29.WAY OUT

Make the easiest and quickest way out.

Be careful for the hall and wall – don't hit it.

30.HOT SPEED

Press A key to speed up – release to slow down.

Be careful for the subject that put in the half way – don't touch it.

 **ADVENT LIMITED WARRANTY** 

Applies to ADVENT Mobile Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that, should this product or any part thereof (except game controllers), under normal use and conditions, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

If your new vehicle's radio, CD/DVD player is covered by the manufacturer's warranty for a period of 48 months as set forth in the OEM Warranty Booklet, the company will extend the Advent Mobile Video product warranty for the same period of time. This is not applicable to extended warranty purchases beyond the original manufacturer's warranty. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory cards, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THE WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 1-800-645-4994
CANADA: CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

© 2005 Audiovox Electronics Corporation 128-7562A



For Customer Service
Visit Our Website At
www.audiovox.com
Product Information, Photos,
FAQ's Owner's Manuals

© 2006 AUDIOVOX Electronics Corp., Hauppauge, NY 11788

128-7562A

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S
AUTHORITY TO OPERATE THE EQUIPMENT.