

SKYFi2[™] Satellite Radio Receiver JIDE

Warning: This manual contains important safety and operating information. Please read and follow the instructions in this manual. Failure to do so could result in personal injury, death, and/or damage to your SKYFi2 Receiver and/or to your vehicle or other property.



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Important: The FCC and FAA have not certified the Delphi XM SKYFi2 Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Delphi cannot support this type of application or installation.

Welcome

Thank you for purchasing a Delphi XM SKYFi2 Satellite Radio Receiver. Your SKYFi2 gives you access to over 120 XM Satellite Radio channels of music, news, and information from coast to coast.*

((SKYFi2))

*XM subscription required for reception. Not available in Alaska or Hawaii.

SKYFi2 improves upon the awardwinning SKYFi Satellite Radio Receiver by offering these new features:

- Built-in FM wireless modulator. Listen to XM through any nearby FM radio without using any wires.
- LivePause. Hear an instant replay or take a break (up to 30 minutes) without missing a beat.
- **TuneSelect.** Finds your favorite songs by artist name or song title if they're playing on any XM channel.
- Personal stock and sports tickers. Track your favorite stocks and sports scores right on SKYFi2's display.
- A brighter, white LED backlit display for even better visibility.
- More versatile vehicle mounting options.

To use the SKYFi2 Satellite Radio Receiver, you must have a Vehicle Kit [PART NUMBER], Home Kit [PART NUMBER], or Marine Kit [PART NUMBER].



Caution: Your SKYFi2 must be used with the enclosed connecting devices or other approved accessories to ensure maximum performance and safety. Do not modify or alter wires or connections in any way. Shortening wires or connections may prevent proper functioning of a protection circuit, which may damage your receiver and will void your warranty.

About Delphi

Delphi is a worldwide leader in mobile electronics, vehicle components, and audio technology. Delphi created the first in-dash car radio in 1936 and continues its strong tradition of innovation in the audio industry. With its exciting line of satellite radio products, Delphi offers a broad portfolio of products to answer a wide variety of information and entertainment needs.

About XM

One big idea can change everything. And XM Satellite Radio is one big idea: Radio to the Power of X[®]. America's most popular satellite radio service offers over 120 digital channels of sheer variety: music, sports, talk, comedy, drama, news, traffic and weather, kids programming, and more. All 68 XM music channels are 100 percent commercial-free, and XM's instant traffic and weather channels provide the most comprehensive, in-depth information on traffic incidents, delays, and road conditions available on radio. These services are available for a low monthly subscription, and additional devices may qualify for a reduced fee through the XM Family Plan.

Contents

Getting Started

Activating SKYFi24

SKYFi2 Receiver

SKYFi2 Display Screen6
SKYFi2 Controls6
SKYFi2 Remote Control7

Basic Operations

Turning SKYFi2 On and Off8
Selecting Channels
5
Scroll Wheel 8
Direct Entry9
Using Presets9
Changing the Display 10
Memorizing Song Information 10

Advanced Features
Listening to XM Over an
FM Radio 12
Adjusting the Screen
Brightness and Contrast 13
Adjusting Audio Level 13
Auto-On14
Auto-Off and Sleep Timer 14
Aiming the Home Antenna 14
TuneSelect 15
Stock Ticker 16
Info Extras 17
LivePause 17
Recall Last Channel
Direct Tune 18
Search
Skipping Channels While Tuning . 18
Setting the Clock 19
Restoring Factory Default 19
- · · · · · · · · · · · · · · · · · · ·

Reference

Care
Accessories
Troubleshooting 22
Contacting Technical Support
and Customer Service24
Technical Information24

Warranty

XM Satellite	Radio Limited
Consumer	Warranty 24

Getting Started

Activating SKYFi2

To quickly begin enjoying XM Satellite Radio with your SKYFi2, follow these simple steps:

 Set up your SKYFi2 Receiver using the installation instructions included in the SKYFi Home Kit, SKYFi Vehicle Kit, Delphi XM SKYFi Marine Kit, or with the help of a professional installer.

Warning: Failure to properly follow all installation instructions could result in personal injury, death, and/or damage to your SKYFi2 Receiver and/or to your vehicle or other property.

- Press the power button to turn on your SKYFi2 and verify that it is playing Channel 1, the XM Preview Channel.
- Select Channel 0. The receiver's eight-character XM Satellite Radio ID will appear on the display. Write the ID here:



Note: Carefully check your XM Radio ID. The letters I, O, S, and F are not used.

- Activate your XM Satellite Radio service. To subscribe, make sure you have your XM Satellite Radio ID and a major credit card. Contact XM at http://activate.xmradio.com or by calling 1.800.852.9696.
- After subscribing, make sure you keep your receiver on for at least one hour in order to activate the full channel lineup.


Warning: When using this product it is always important to keep your hands on the wheel. Not doing so could result in personal injury, death, and/or damage to your SKYFi2 Receiver and/or to your vehicle or other property.

SKYFi2 Receiver

SKYFi2 Receiver Controls Use your SKYFi2 control buttons to operate various functions.

> Display button Changes information on display.

Memory button ______ Saves and recalls song information such as artist and title.

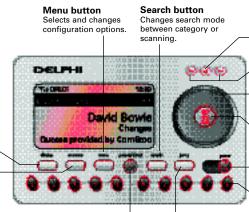

Preset/direct button Selects between direct channel entry or presets. Jump button Switches to previous channel. LivePause Pause or instant replay.

Category search Immediately selects a different channel.

Scroll wheel Previews channels; also selects various menu options.

Enter button Confirms selected channel or menu option.

Power button Powers on and off.

Number keys Selects a channel directly or selects presets.

SKYFi2 Receiver Display Screen

While tuned to an XM channel, the SKYFi2 default display contains information about that channel and the SKYFi2 settings. See figure 2.

Your SKYFi2 display can be customized. See the Basic Operations section, beginning on page 8.

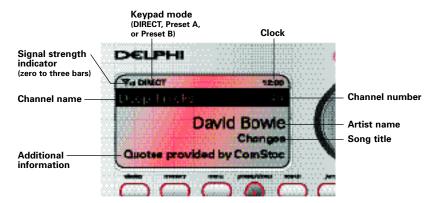


Figure 2. SKYFi2 Receiver display screen.

SKYFi2 Receiver

SKYFi2 Remote Control

Need Remote Control

Power button Powers on and off.

Channel button Previews channels; also selects various menu options.

LivePause button Pause or instant replay.

XM button Confirms selected channel or menu option.

Mute button Mutes the audio.

Preset/direct button Selects between direct channel entry or presets. +- buttons Immediately selects a different channel.

Number keys Selects a channel directly or selects presets.

Display button Changes information on display.

Memory button Saves and recalls song information such as artist and title.

Figure 3. SKYFi2 Remote Control.

Warning: When using this product it is always important to keep your eyes on the road and your hands on the wheel. Failure to do so could result in personal injury, death, and/or damage to your SKYFi2 Receiver and/or to your vehicle or other property.

Basic Operations

Turning SKYFi2 On and Off 1. To turn on: press

To turn off: press

2. To turn off: press

If SKYFi2 is installed in a vehicle, you may use the ignition key to power SKYFi2 on or off. This will not affect SKYFi2 in any way.

Selecting Channels

You may select channels by using the scroll wheel, by pushing one of the preset buttons, or by keying in the channel number. You can also use the equivalent buttons on the remote control.

Scroll Wheel

- 1. Turn the scroll wheel
- When you find your desired channel, press the "XM" button to select it.

You can also set up SKYFi2 so that you do not have to press the **"XM"** button to select a channel. See "Direct Tune" in "Advanced Features" (page 12).

Direct Entry

- Press the "preset/direct" button until the "Direct" icon appears in the display.
- Press the number keys corresponding to the channel number. For example, for channel 31, press "3" followed by "1."

Using Presets

 
There are 30 presets in all: each bank (A, B, and C) holds 10 presets. Press the **"preset/direct"** button to select the proper bank.

- To set a channel preset:
- 1. Tune to the desired channel.
- Press the "preset/direct" button until the proper "Preset" icon appears in the display.
- Press and hold the number key that corresponds to the preset you would like to set. SKYFi2 beeps when the channel is stored.


To select a stored preset:

- Press the "preset/direct" button until the proper "Preset" icon appears in the display.
- 2. Press one of the number keys. SKYFi2 will tune to that channel.

Changing the Display Press the "display" button to select any one of five screens.



Display Option 3

 


Display Option 1



Display Option 4



 Display Option 2



Display Option 5

Figure 3. SKYFi2 screen displays.

Memorizing Song Information SKYFi2 can remember the artist name and title of the song or programming you are currently listening to.

- Press and release the "memory" button to save the information of the current song or program. SKYFi2 can remember up to 20 songs, after which any new information that is saved will replace the oldest song in memory.
- To recall saved information, press and hold "memory" for 3 seconds. Turn the scroll wheel to see the entire list of songs.

Advanced Features

Listening to XM Over an FM Radio

SKYFi2 has a built-in wireless FM modulator that transmits the XM programming to any FM radio within the area. You can use the wireless FM modulator in a vehicle, in your home, in an office, or even on a boat using the appropriate kit.

- Make sure SKYFi2 is turned off. Unplug any accessory from SKYFi2's audio jack.
- 2. Turn on an FM radio and place it close to SKYFi2.

- Tune the FM radio to each of the following FM frequencies: 88.1, 88.3, 88.5, 88.7, 88.9, 106.7, 106.9, 107.1, 107.3, 107.5, 107.7, and 107.9.
- Note the frequency that has no FM station or the least amount of interference.
- 5. Turn on SKYFi2.
- 6. Press the "menu" button.
- Use the scroll wheel to select "FM Frequency." Press the "XM" button to confirm.
- 8. Use the scroll wheel to select the frequency noted in step 4. Press the **"XM"** button to confirm.
- 9. Press the **"menu"** button to return to normal operation.

 You should hear XM programming over your FM radio. If the sound is not clear or you hear interference or static, try another frequency.

Note: If you are traveling long distances, you may need to repeat this procedure periodically.

In the rare situation that you cannot find an acceptable open FM frequency, consult a professional audio installer. You may improve the audio quality by using the FM XM Direct Accessory, available separately

Adjusting the Screen Brightness and Contrast

- 1. Press the "menu" button.
- 2. Use the scroll wheel to select "Brightness" or "Contrast." Press the "XM" button.
- Use the scroll wheel to select the desired level. Press the "XM" button to confirm selection.
- 4. Press the **"menu"** button to return to normal operation.

Adjusting Audio Levels

The factory default setting should work well in most situations. However, if you hear distortion, you should decrease the audio level. If the XM audio is too soft compared to other sources such as CD, cassette, or other FM stations, you may want to increase the audio level.

- 1. Press the "menu" button.
- Use the scroll wheel to select "Cassette Audio Level" (or "FM Audio Level" when nothing is plugged into the audio jack. Press the "XM" button to confirm selection.
- Use the scroll wheel to select the desired level. Press the "XM" button to confirm selection.
- 4. Press the **"menu"** button to return to normal operation.

Note: This is not a volume control. Set the volume using the audio system connected to your SKYFi2.

Auto-On

Normally, SKYFi2 turns on whenever it receives power. If SKYFi2 is wired to a power source that is always on, you should disable the "Auto-On" option:

- 1. Press the "menu" button.
- Use the scroll wheel to select "Auto-On." Press the "XM" button to confirm selection.
- 3. Select "Off." Press the **"XM"** button to confirm selection.
- Press the "menu" button to return to normal operation. You must now use the button to turn SKYFi2 on or off.

Auto-Off and Sleep Timer

You can set SKYFi2 to automatically shut off between 15 minutes to three hours after being turned on. Use this feature if SKYFi2 continues to receive power even after you remove the ignition key; setting Auto-Off prevents SKYFi2 from draining the vehicle battery. You may also use Auto-Off as a "sleep" feature to turn SKYFi2 off automatically after a period of time.

To set Auto-Off:

- 1. Press the "menu" button.
- Use the scroll wheel to select "Auto-Off/Sleep Timer." Press the "XM" button to confirm selection.

- Use the scroll wheel to select the time period. Press the "XM" button to confirm selection.
- 4. Press the **"menu"** button to return to normal operation.

Aiming the Home Antenna To ensure best reception, aim the home antenna with the following method:

- 1. Press the "menu" button.
- Use the scroll wheel to select "Antenna Aiming." Press the "XM" button to confirm selection.

- 3. Slowly turn and tilt the antenna. The "Satellite" and "Terrestrial" signal bars will change. Find the position that gives the strongest signal strength on *either* "Satellite" or "Terrestrial."
- 4. Press the **"menu"** button to return to normal operation.

TuneSelect

You can program SKYFi2 to remember your favorite songs. When any of these songs are played on any channel, SKYFi2 alerts you with a beep and allows you to immediately switch to that channel.

- While the song is playing, press and hold the "XM" button for 2 seconds. SKYFi2 will beep and display "Song Selected" on its screen. SKYFi2 can remember up to 20 songs; when the list is full, any new entry will replace the oldest item in the list.
- When any song in the list plays on any channel, SKYFi2 beeps and displays "Song Found" and the name of the song on the screen.
- While the "Song Found" message is displayed, press the "XM" button to switch to the channel playing the song.

To delete a song from the list:

- 1. Press the "menu" button.
- Use the scroll wheel to choose "TuneSelect." Press the "XM" button to confirm selection.
- You may erase all songs in the list, erase individual songs, erase all songs by a particular artist, or erase all songs with a certain title. Use the scroll wheel and "XM" button to select the desired option and follow the instructions on the SKYFi2 display.
- 4. Press the **"menu"** button to return to normal operation.

Stock Ticker SKYFi2 can track up to 20 stocks or indices, displaying price and daily movement on the screen.*

To add a stock symbol:

- 1. Press the "menu" button.
- Use the scroll wheel to select "Stock Ticker." Press the "XM" button to confirm.
- 3. Select "Add Stocks."

- Use the scroll wheel to select each letter in the desired stock symbol. Press the "XM" button after each letter.
- Press the "XM" button to confirm and save the stock symbol in memory.
- 6. Press the **"menu"** button to return to normal operation.

To delete a stock symbol:

- 1. Press the "menu" button.
- Use the scroll wheel to select "Stock Ticker." Press the "XM" button to confirm.
- 3. Select "Erase Stocks."
- SKYFi2 gives you a choice of deleting individual or all symbols. Use the scroll wheel and "XM" button to make your choice.
- 5. Press the **"menu"** button to return to normal operation.

*You can track any stock and most indices listed on the NYSE, AMEX, or NASDAQ. Market information is delayed approximately 25 minutes. Stock data provided by ComStock, Inc.

Info Extras

XM may broadcast information such as sports scores or horoscopes. To view this information, press the **"menu"** button and select "Info Extras."



LivePause

SKYFi2 allows you to hear an instant replay of the current song or take a break (up to 30 minutes) without missing a beat.

To Rewind to the Beginning of a Song

- Press the
 button. SKYFi2
 rewinds to the beginning of the
 current song.
- Pressing the button again skips backwards to previous songs. SKYFi2 can hold about [XX] songs.
- 3. Pressing the 🔿 button skips forward in the song list.
- To resume normal playback, press and hold the
 button until SKYFi2 beeps and displays [WHAT?]

To Pause a Song

- 1. Press the **I** button. The word "Pause" appears in the display.
- 2. To resume playback, press the u button again.

To Replay Last 10 Seconds

- 1. Press the Ubutton.
- Press the button. SKYFi2 replays the last 10 seconds of the program.
- To resume normal playback, press the button.



Recall Last Channel Press the **"jump"** button to switch to the channel that was previously being listened to.

Direct Tune

Normally, you can use the scroll wheel to preview the artists and song titles on other channels. You must press the **"XM"** button to tune to another channel. To change this so that you do not have to press the **"XM"** button, change the "Direct Tune" option to "On."

- 1. Press the "menu" button.
- Use the scroll wheel to select "Direct Tune." Press the "XM" button to confirm.

- Use the scroll wheel to select "On." Press the "XM" button to confirm.
- 4. Press the "menu" button to exit.

Search [INFO TO COME]



Skipping Channels While Tuning

You can choose to skip over certain channels when using the scroll wheel.

- 1. Press the "menu" button.
- Use the scroll wheel to select "Channel Skip/Add." Press the "XM" button to confirm.
- SKYFi2 displays a list of channels. In front of each channel is a "+" (meaning the channel is not skipped) or a "-" (meaning the channel is skipped).
- To skip a channel, use the scroll wheel to highlight that channel. Press the **"XM"** button to change the "+" to a "-".

- To add a channel back, use the scroll wheel to highlight that channel. Press the "XM" button to change the "-" to a "+".
- 6. Press the "menu" button to exit.

Note: You can still tune to skipped channels by entering the channel number or by pressing a preset if that channel has already been stored. To completely block access to any channel, contact XM Listener Care.

Setting the Clock

- 1. Press the "menu" button.
- Use the scroll wheel to select "Set Clock." Press the "XM" button to confirm.
- You can use a 12-hour format, which displays the time with "AM" or "PM," or a 24-hour format, which displays the clock in military time. Use the scroll wheel and "XM" button to make your choice.
- Use the scroll wheel to change the hours to match your local time. Press the "XM" button to confirm. XM automatically sets the minutes.
- 5. Press the "menu" button to exit.

Restoring Factory Default

This feature lets you erase all data in the presets, TuneSelect, memory, Stock Ticker, and Sports Ticker and resets all other settings to the factoryoriginal configuration.

- 1. Press the "menu" button.
- Using the scroll wheel, select "Set Factory Defaults." Press the "XM" button to confirm.
- Select "Yes" to restore the factory default settings. Press the "XM" button to confirm. Otherwise, press the "menu" button to cancel and return to normal operation.

Reference

Care

Important:

- Use only a soft, dry cloth to clean the outside of your SKYFi2, any peripherals, and any accessories.
- Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.

- Do not allow liquids to spill on the unit.
- Do not use sprays near your SKYFi2.
- It is best to keep SKYFi2 out of direct sunlight or other sources of extreme heat.
- Avoid placing SKYFi2 in places where air cannot circulate around the unit.

Warning: Failing to follow these instructions could result in personal injury, death, and/or damage to your SKYFi2 Receiver and/or to your vehicle or other property.

Caution: Refrain from using food or drinks near your SKYFi2. Spilling food or drink on the unit could damage it. Improperly installing the antenna cable could cause leaks that can damage your SKYFi2 or your vehicle.

Accessories

There are various accessories available for your SKYFi2. Consult your local retailer or www.delphi.com for availability.

Vehicle Kit

Use the Vehicle Kit to install SKYFi2 in another vehicle. Includes an antenna, 12V power adaptor, cradle, and various mounts.

Home Kit

Allows you to use your SKYFi2 in a house or office. Includes a high-gain home antenna, an AC power adaptor, home stand, and audio cable.

Marine Kit

Allows you to use your SKYFi2 on a boat. Includes a splash-proof case, marine antenna, mount, and FM modulator.

Antenna Extension

Extends the antenna cable by 50 feet. Includes all necessary cables and connectors.

Delphi XM FM Direct Accessory

For geographic areas with many FM stations and few open FM channels, the Delphi XM FM Direct Accessory minimizes interference. A professional installer can advise you whether this adaptor is suitable for your vehicle.

Troubleshooting

SKYFi2 is designed and built to provide you with trouble-free performance without the need for servicing. If it does not appear to be functioning properly, follow these troubleshooting steps:

- 1. Attach all connections firmly and securely.
- 2. Make sure the cigarette lighter/auxiliary power socket is clean and free of corrosion.

 If you have installed SKYFi2 in a vehicle and it does not power on, check the 12V adaptor fuse by unscrewing the ribbed end of the adaptor. If required, replace with a 1-amp fuse only. If the 12V adaptor does not have a removable end-cap, it has an internal fuse that resets itself after it is left unpowered for a period of time.

If you see this on the display:	You should:
NO SIGNAL Cause: the XM signal is being blocked.	Move SKYFi2 and its antenna away from the obstructed area, e.g. an underground garage. Make sure the antenna is mounted outside the vehicle or near a south-facing window.
ANTENNA Cause: the XM antenna is not plugged into SKYFi2.	Make sure the antenna is correctly attached to SKYFi2 and that the cable is not damaged or kinked. Turn SKYFi2 off then on to reset this message.
OFF AIR Cause: the channel selected is not currently broadcasting.	Tune to another channel.

If this happens:	You should:
You do not receive all XM channels you have subscribed to.	Your SKYFi2 may not be activated. Contact XM (see page 4).
Audio sounds distorted.	Reduce audio output level (see page 13).
Audio is too soft.	Increase audio output level (see page 13).
You cannot tune to a channel.	Check that you have not chosen to skip that channel. (See page 18) If the problem persists, contact XM at 1.800.852.9696. Verify that you are authorized to receive that channel as part of your XM subscription and that you have not asked XM to block that channel.
No song title or artist name displayed.	Nothing is wrong with your SKYFi2. That information may be in the process of being updated. On some sports and news channels, there is no title or artist information.
Audio has static while listening through a vehicle's FM radio.	Change to another FM frequency (see page 12). If the problem persists and you are using the wireless FM modulator, change to a hard-wired FM modulator (see page 12, page 21).
Audio on XM instant traffic and weather channels sounds different from other XM channels.	Nothing is wrong with your SKYFi2. These channels use a different audio technology than the main XM channels.

Contacting Technical Support and Customer Service For additional information in solving problems with your SKYFi2, contact Delphi at 1.877.GO.DELPHI (1.877.463.3574).

- Customer Service: Monday—Friday, 8:00 a.m.—4:30 p.m. Eastern Time
- Technical Support: Monday—Friday, 8:00 a.m.—8:00 p.m. Eastern Time

Customer service and technical support are also available at www.delphi.com.

Technical Information

Dimensions

SKYFi2 Receiver: 4.65 in. W x 2.91 in. H x 1.26 in. D (118 mm x 74 mm x 32 mm) SKYFi2 Remote Control: 1.50 in. W x 4.33 in. H x .79 in. D (38 mm x 110 mm x 20 mm)

Weight

SKYFi2 Receiver: 6.70 oz. (190 g) *SKYFi2 Remote Control:* 1.52 oz. (43 g)

Inputs and Outputs (when connected to car cradle or home stand)

Antenna: 1 RF SMB connector Power: 6V, 600 mA maximum current, P13 connector, positive polarity O----O-Audio output: 3.5 mm diameter mini-stereo jack

Temperature Range

Operating: 28°F to 158°F (-2°C to 70°C) *Storage:* -40°F to 185°F (-40°C to 85°C)

XM Satellite Radio Accessory Products Limited Consumer Warranty

Delphi Product and Service Solutions ("Delphi") warrants all Portable XM Satellite Radio Accessory Products sold by Delphi ("Products") to be free of defects in material and workmanship, subject to the following conditions:

The duration of Delphi's warranty with respect to Delphi Portable XM Satellite Radio Accessory Products is limited to one (1) year from the date of sale to the original consumer purchaser.

No other express warranties are made with respect to any Product. All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited to the warranty period set forth above. This warranty is not transferable and applies only to the original consumer purchaser of the Product. Delphi will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty. Products may be repaired or replaced with new or with refurbished items. This limited warranty does not cover defects in appearance, cosmetic or decorative items, including any non-operative parts. Under no circumstances will Delphi be liable for any incidental or consequential damages under this warranty or any implied warranties. These remedies are the customer's exclusive remedies for breach of warranty. This limited warranty only extends to customers who purchase the Products in the United States.

Delphi will not be responsible for damage resulting from any (i) deviation from Delphi's operating instructions as printed in Delphi's catalog or on any packaging, labels, or other literature provided with a

Product, (ii) installation of a Product in a manner which is inconsistent with Delphi's written instructions, (iii) alteration or modification of a Product. (iv) misuse. (v) neglect, (vi) abuse, (vii) accident, (viii) normal wear and tear, (ix) commercial use, (x) improper storage, (xi) environmental conditions, including excessive temperature or humidity, (xii) service by anyone other than a Delphi authorized repair facility, (xiii) other improper application, installation or operation of the Product, or (xiv) defects or malfunctions of which Delphi is not advised within ten (10) days of the expiration of the limited warranty period.

How you (the Customer) can get service:

To obtain warranty service, you must return the defective Product with the original receipt to the original place of purchase. If further clarification or additional information is required from Delphi, you may call Delphi at: 1.877.GO DELPHI (1.877.463.3574). If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid and place of purchase. Customers who fail to provide such proof of purchase will be charged for the repair/replacement of any Product.

How state law relates to the warranty:

Some states do not allow limitations on how long implied warranties last, or the exclusion or the limitation of incidental or consequential damages. So the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state. NO PERSON IS AUTHORIZED BY DELPHI TO MODIFY OR ADD TO THIS LIMITED WARRANTY.

DELPHI

Delphi Corporation 1441 West Long Lake Road Troy, Michigan 48098-5090 U.S.A. Customer Service: [1] 877.GO DELPHI

www.delphi.com

© Printed on Recycled Paper ©2004 Delphi Corporation. All rights reserved. DPSS-04-E-xxx

The SKYFi2 name, XM name, and related logos are trademarks of XM Satellite Radio Inc.