

AGES 8+

NERF

CAMERA/MICROPHONE

ON/OFF BUTTON
• STrobe Light
• CHANNEL SELECTOR SWITCH

on reverse side of vehicle

CONTROLLER



TERRASCOUT™

 
2.4 GHz Input: 100-240V AC, 50-60Hz, 10W
Output: 1.5V 500 mA
Please read all instructions before operating this vehicle.

CAUTION:
Do not aim at eyes or face. TO AVOID INJURY:
Use only darts designed for this product.
Do not modify darts or dart blaster.

CAUTION:
Hair entanglement may result if child's hair
comes in contact with moving parts of toy.
Adult supervision is required.

TO CHARGE & INSTALL BATTERY IN VEHICLE

NOTE: Never charge the battery while it is installed in the vehicle.
1x 9.6v Rechargeable NiMH BATTERY INCLUDED

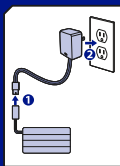

1. Plug one end of charger cord into battery, and plug other end into wall outlet.
 - LED status light will flash 4 times when battery is first connected to charger.
 - LED status light will glow steadily while battery is charging.
 - LED status light will flash when the battery is fully charged.
2. When battery is full recharged, unplug charger cord from battery and wall outlet.
3. Plug battery cord into vehicle.
4. Insert battery into vehicle.
5. Attach battery cover. Tighten screw with a Philips/cross head screwdriver.



 
- CAUTION:**
- Do not fully charge the battery pack before using.
 - If the battery pack is hot after use, let cool before recharging.
 - Do not recharge battery pack if signs of leakage or corrosion are visible.
 - Do not attempt to open or service the battery pack.
 - Do not dispose of battery pack in fire.

- CHARGING PRECAUTIONS:**
- Do not leave battery unattended while charging.
 - Charge the battery on a non-flammable surface, away from flammable items.
 - Unplug the battery once fully charged. Do not leave the battery connected to the charger for an extended period of time.
 - Disconnect AC wall charger from outlet while not in use.
 - Do not charge battery pack that shows signs of leakage or corrosion, or attempt to open the battery pack.
 - The power adaptor should be used with floor or wall receptacles only.

WARNING:
The charger that is supplied with this item (model #31C12000000) should be examined regularly for potentially hazardous conditions such as damage to the plug, enclosures, or cords. In the event of such conditions, the charger should not be used until the damage is properly repaired. Only use the charger that is supplied with this item.


IMPORTANT: VEHICLE RECHARGEABLE BATTERY INFORMATION
CAUTION:
Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 60 degrees C (140° F) or incinerate. Dispose of the whole product according to local recycling or waste regulations – never disposable. Do not use the item near a heat source such as a fire or heater.

TO INSTALL BATTERIES IN CONTROLLER

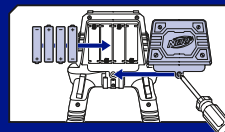


4x 1.5V AA
ALKALINE BATTERIES REQUIRED
NOT INCLUDED
Use a Philips/cross head screwdriver (not included).

 ASSEMBLY

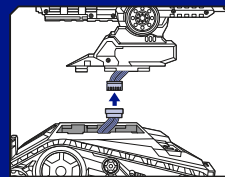

 Attach cord. Make sure cord is completely inside compartment.

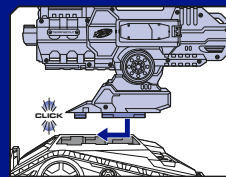

Lower blaster onto compartment opening, and slide forward to lock it in place.

IMPORTANT: BATTERY INFORMATION

- CAUTION:**
1. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 2. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
 3. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

ON/OFF • CHANNEL SELECTOR

Slide channel selector switches on vehicle and controller to same frequency.



Press ON/OFF button to switch on VEHICLE.

If VEHICLE doesn't receive a signal from controller, status light blinks for a short interval, and then vehicle switches off.

 
Status light glows steadily when it receives a signal.




Press ON/OFF button to switch on CONTROLLER.

When done playing, press buttons again to switch off VEHICLE and CONTROLLER.

LOAD




Load darts into clip.

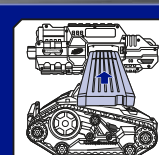 

Insert clip into blaster.

 RELOAD

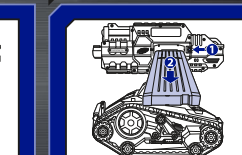

Press clip release and remove clip.

