



AGES 5+

CAUTION: ⚠️
Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

App image shown not final. Actual image may differ.

© 2017 Hasbro. Patented. U.S. Pat. No. 8,912,861. All Rights Reserved. TM & © Disney.

Product and colors may vary. Retain this information for future reference.

© Disney

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

This device is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Carrier frequency: 2.4 GHz

The present apparatus conforms to the Canadian Industry Canada ap- plicable aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

C3274 PNO0016541

Download on the **App Store**

GET IT ON **Google Play**

Bluetooth

App image shown not final. Actual image may differ.


Beauty And The Beast
Music by Alan Menken, Words by Howard Ashman
©1991 Wonderland Music Company, Inc. (BMI) / Walt Disney Music Company (ASCAP) Under License by Walt Disney Records. All Rights Reserved.

Something There
Music by Alan Menken, Words by Howard Ashman
©1991 Wonderland Music Company, Inc. (BMI) / Walt Disney Music Company (ASCAP) Under License by Walt Disney Records. All Rights Reserved.

Be Our Guest
Music by Alan Menken, Words by Howard Ashman
©1991 Wonderland Music Company, Inc. (BMI) / Walt Disney Music Company (ASCAP) Under License by Walt Disney Records. All Rights Reserved.

TROUBLESHOOTING

1. If your doll's not responding to the app:
 - a. Be sure that the doll is powered on. Replace batteries if there's no power.
 - b. Follow app instructions for connecting the doll to your device.
 - c. Make sure that the doll is within 10 feet of device and not connected to another device. If it is, disconnect by closing that device.
 - d. Allow the app to turn on Bluetooth® if prompted.
2. If your doll isn't responding properly, it may be time to change the batteries.

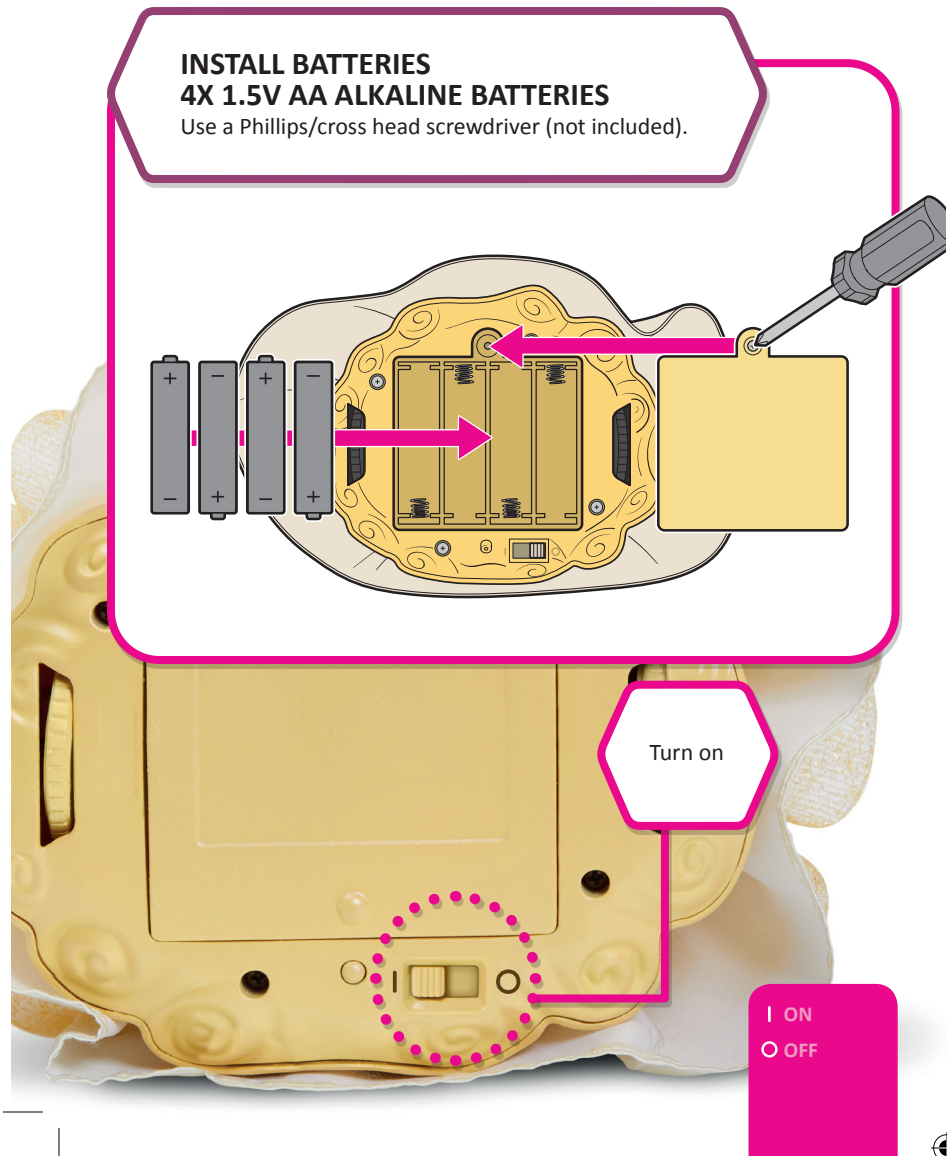

INSTALL BATTERIES
4X 1.5V AA ALKALINE BATTERIES
Use a Phillips/cross head screwdriver (not included).

Turn on

ON
OFF

IMPORTANT: BATTERY INFORMATION

CAUTION: ⚠️

1. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.




Press necklace to wake up Belle.
Necklace lights up when Belle is awake.



APP PLAY

BRING BELLE TO LIFE THROUGH CODING

1. Download the Dance Code Belle app.
2. Turn on Bluetooth® on your device.
3. Press doll's necklace to wake her up.
4. Follow prompts on screen to connect Belle doll and design your own dances.

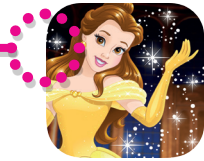

App image shown not final.
Actual image may differ.

MORE WAYS TO PLAY

Belle will guide you through more ways to play.

WATCH BELLE DANCE



Press necklace **once** and Belle will perform 1 of 10 dance routines to music.

10 DANCE LESSONS WITH BELLE



Double tap the necklace and follow Belle's instructions.

DANCE WITH BELLE

Gently move her arms forward or backward to control her motion.



Move Left



Move Right



Move Forward



Move Backward

PLAY TIPS

1. For optimum results, play on a smooth, flat, hard surface.
2. Be careful she doesn't fall off table edges.
3. Press and hold necklace for 3 seconds to put Belle in sleep mode.
4. Belle enters sleep mode after approximately 1 minute. Press necklace to wake up.
5. Be gentle with Belle. Don't lift or carry her by her arms.

