

32814

AGES 3+

Tonka
CHUCK & FRIENDS

27 MHz

FLIP THE BOUNCE BACK RACER™

x2 1.5VAA R6 size **BATTERIES REQUIRED NOT INCLUDED**
Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

x6 ALKALINE BATTERIES REQUIRED
1.5VAA or LR6 size NOT INCLUDED
Phillips/cross head screwdriver (not included) needed to insert batteries.

CAUTION:
Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

TO INSTALL BATTERIES IN WIRELESS CONTROLLER:
Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 2 x AA or R6 size batteries (not included). Alkaline batteries recommended. Replace cover and tighten screw.

TO INSTALL BATTERIES IN CAR:
Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 6 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace cover and tighten screw.

158 186 FILE: 28095HB_32814_TON_Flip_racer.ai
DATE: 20 Jan 2011_150H_P

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

PLAY:

FLIP THE BOUNCE BACK RACER truck is two trucks in one. You can flip him to become a race truck or a stunt truck! He also talks and makes sounds.

Press the power button on vehicle.
A light turns on to let you know that Flip is ready to play. If you stop playing for a few minutes, he will go into sleep mode and his light will turn off.

Just press the button to play again.
Use the controller to drive **FLIP THE BOUNCE BACK RACER** truck forward and backward. Try to make him go fast and flip him over!

How to race two FLIP THE BOUNCE BACK RACER trucks:
Each vehicle and controller has a channel switch that enables racing. Set one controller and one race truck to the 1 channel and the other pair to the 2 channel. Each vehicle sold separately.

TROUBLESHOOTING: If the toy doesn't respond, make sure the vehicle and controller are on the same channel. If the vehicle and controller are on the same channel and the vehicle still doesn't respond, replace the batteries.

FCC STATEMENT/RSS-310

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Category II radiocommunication device complies with Industry Canada Standard RSS-310. 27.145MHz:55.4dBuV/m measured at 3 m.
Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada. 27.145MHz:55.4dBuV/m mesuré à 3 m.

CE 0979

Hereby, Hasbro declares that this R/C car is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at WWW.address.com/doc.pdf /postal address.

NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

Hasbro Product and colors may vary.
© 2010 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
PN:7154900001

VISIT
CHUCKANDFRIENDS
.COM

Questions? Call: 1-800-327-8264

158 186 FILE: 28095HB_32814_TON_Flip_racer.ai
DATE: 20 Jan 2011_150H_P