

Tonka CHUCK & FRIENDS

AGES
3+

27 MHz


R/C SPINNIN' CHUCK™

REMOTE CONTROL:

 **x2** 1.5V AA
ALKALINE BATTERIES
REQUIRED NOT INCLUDED

VEHICLE:

 **x3** 1.5V AA
ALKALINE BATTERIES
REQUIRED NOT INCLUDED

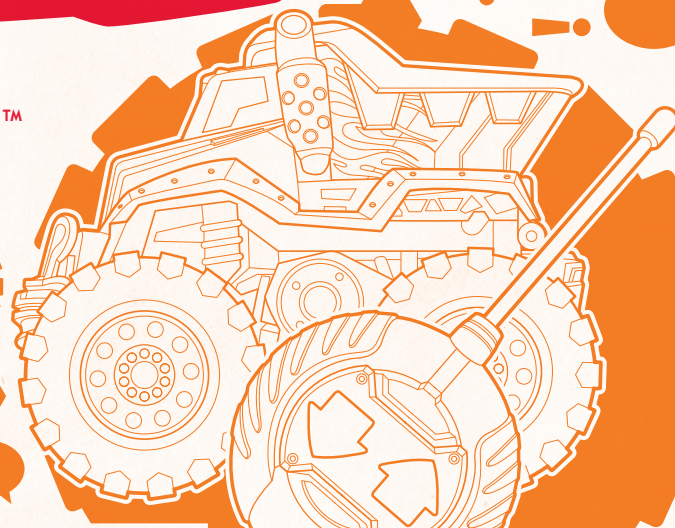


PLAYSKOOL

⚠ CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.


TO INSERT BATTERIES (VEHICLE):

Phillips/cross head screwdriver (not included) needed to insert batteries. Loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 3 x 1.5V AA alkaline batteries (not included) on top of fabric strap. Replace cover and tighten screw.

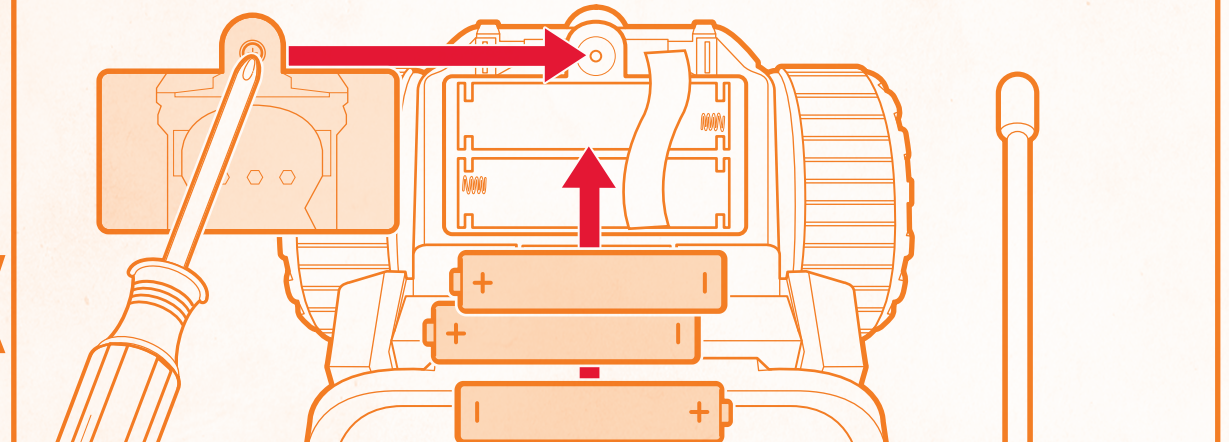

TO INSERT BATTERIES (REMOTE CONTROL):

Phillips/cross head screwdriver (not included) needed to insert batteries. Loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 2 x 1.5V AA alkaline batteries (not included). Replace cover and tighten screw.

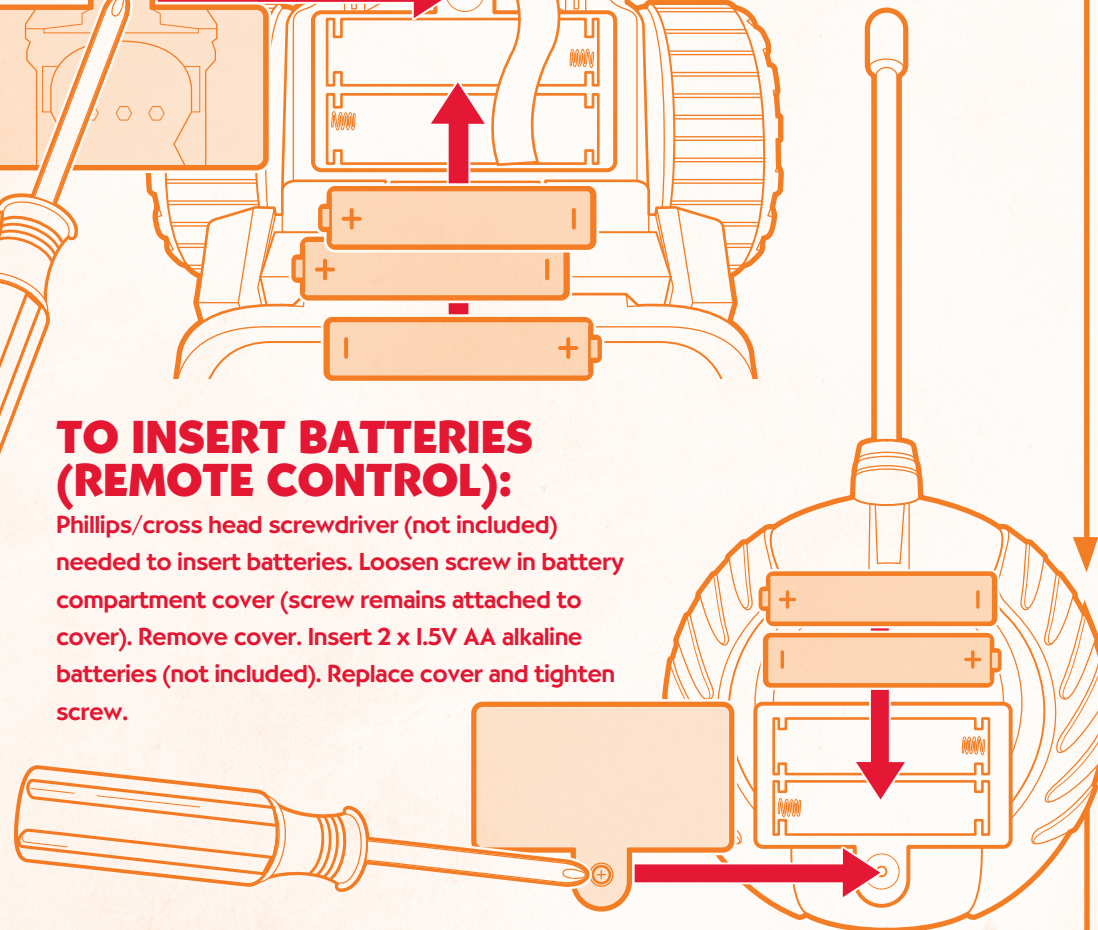

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE


- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

PLAY:

To conserve batteries, after 3 minutes of inactivity, truck will go into sleep mode. Reactivate by pressing dump bed all the way down.


Press down on truck bed to return him to low racing mode!

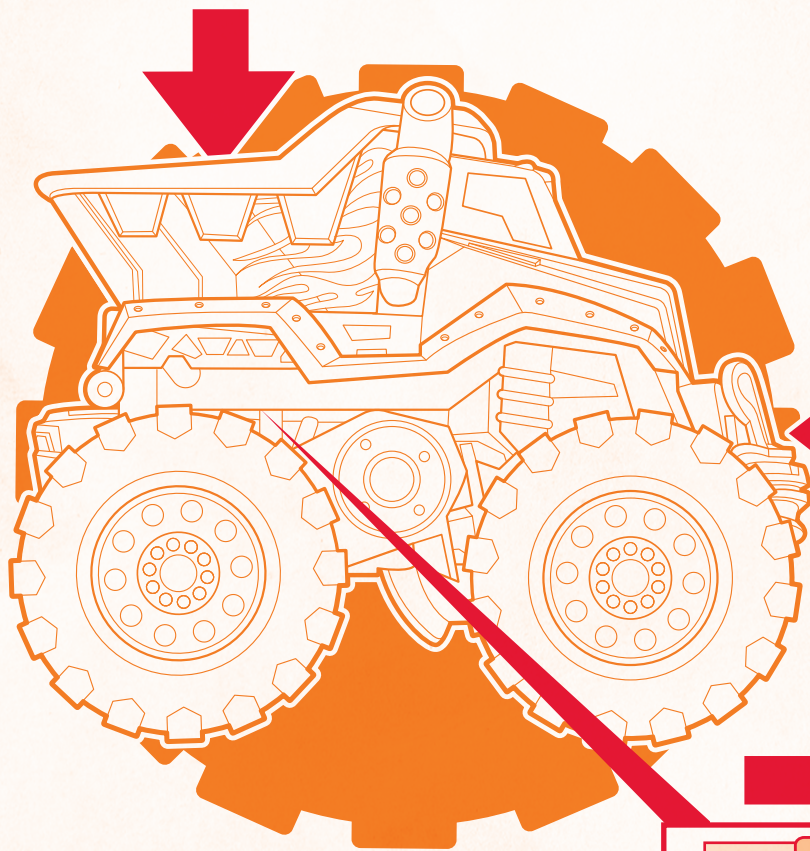

Press front bumper to convert CHUCK to monster-truck mode!

OFF  ON


NOTE: Works best on hard/smooth surfaces.

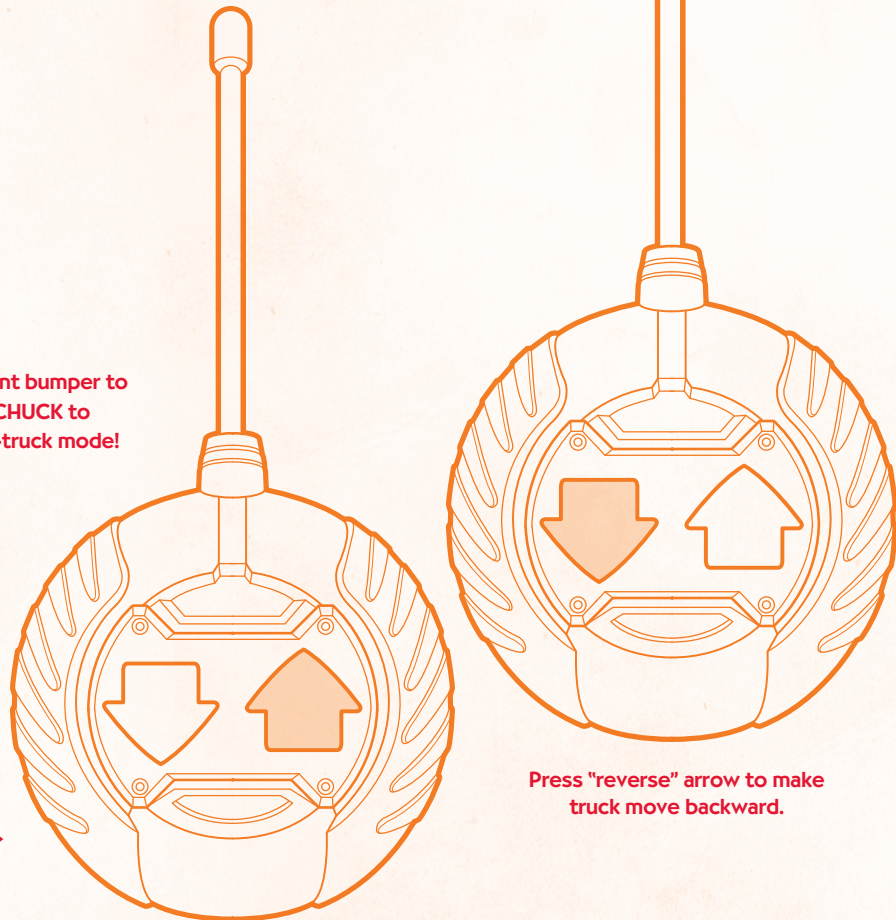

Press "forward" arrow to make truck move forward.


Press "reverse" arrow to make truck move backward.

1.

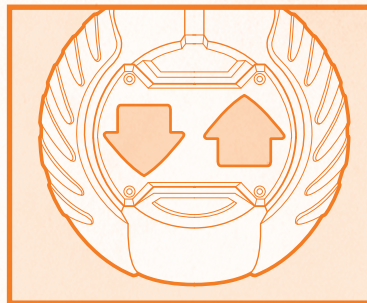


Drive in reverse and then quickly drive forward to make truck pop a wheelie!

2.

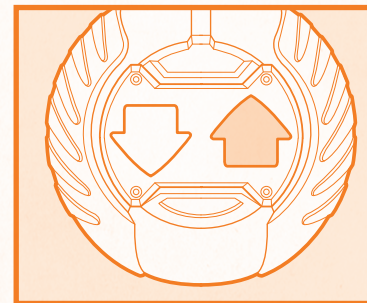

Hold down "forward" arrow to make truck spin. While truck is spinning, continue pressing "forward" arrow to keep it going around!

3.

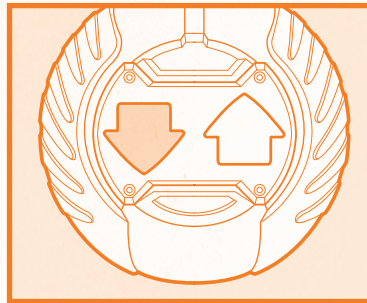

Press "reverse" arrow to make truck stop spinning and drop onto all four wheels.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



A2223
Product and colors may vary.
© 2012 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
PN: 7337180000

VISIT
CHUCKANDFRIENDS
.COM

Questions? Call: 1-800-327-8264