

**MAGNAVOX**

# **3-PIECE CD SHELF SYSTEM**

**OWNER'S MANUAL**

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

**MODEL: MM441**

## FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in mobile/ fixed (min 20cm) exposure condition without restriction.

# IMPORTANT SAFETY INSTRUCTION

 
	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>		



**DANGEROUS VOLTAGE:**  
The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:**  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**DANGER**  
Invisible and hazardous laser radiation when open and inter-lock failed or defeated. Avoid direct exposure to beam.

<b>WARNING:</b> TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.
--

**LASER SAFETY :** This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

**CAUTION :** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HERENIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

## INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IMPORTANT SAFETY INSTRUCTION

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1) **Read these instructions.**

All the safety and operating instructions should be read before the product is operated.

2) **Keep these instructions.**

The safety and operating instructions should be retained for future reference.

3) **Heed all warnings.**

All warnings on the product and in the operating instructions should be adhered to.

4) **Follow all instructions.**

All operating and use instructions should be followed.

5) **Do not use this apparatus near water.**

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) **Clean only with dry cloth.**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**

9) **Do not defeat the safety purpose of the polarized or grounding-type plug.**

A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**

11) **Only use attachments/accessories specified by the manufacturer.**

12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

An appliance and cart combination should be moved with care.

Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.



## IMPORTANT SAFETY INSTRUCTION

13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**

15) **Power source**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) **Power lines**

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) **Overloading**

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) **Object and liquid entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) **Outdoor antenna grounding**

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

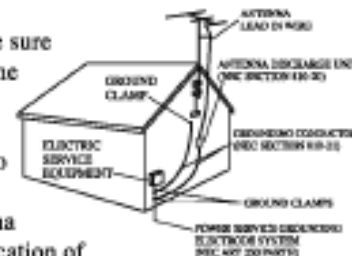

20) **Service**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## IMPORTANT SAFETY INSTRUCTION

### 21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

### 22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.

### 23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

### 24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore in the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance-this indicates a need for service.

### 25) Note to CATV system installer

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

**NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.**

## CARE AND MAINTENANCE

### Caring for Compact Discs

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the centre of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

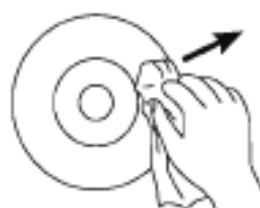

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact Discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.




### Cleaning the Unit

 - To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

## LOCATION OF CONTROLS:

### MAIN UNIT:


#### Front:

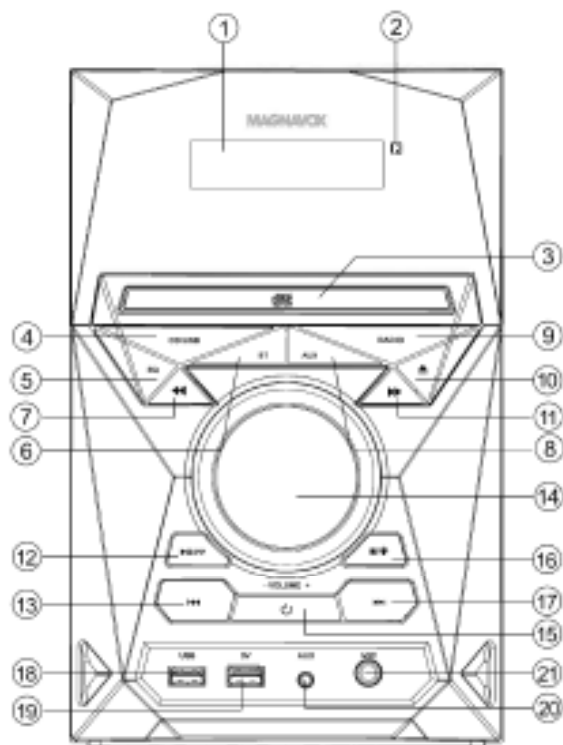

1. LED Display
2. Remote Receiver
3. Disc Tray
4. CD/USB Button
5. EQ (Equalizer) Button
6. BT (Bluetooth) Mode Button
7. ◀◀ (Fast rewind/Radio tuning down) Button
8. AUX (Aux/Line in) Button
9. Radio (FM) Button
10. ▲ (Disc Tray Open/Close) Button
11. ▶▶ (Fast forward/Radio tuning up) Button


12. ▶||/PP (Play-Pause/Radio Program Preset) Button
13. |◀◀ (Skip backward/Radio program down) Button
14. VOLUME Control Knob
15. ⏻ (Standby) Button
16. ■/☀ (Stop/Decorative Lights On-Off) Button
17. ▶▶| (Skip forward/Radio program up) Button
18. USB Port (For music playback only)
19. 5V (Output) Port (For recharging the external USB Device)
20. AUX (Aux/Line in) Jack
21. MIC (Microphone in) Jack

#### Rear:

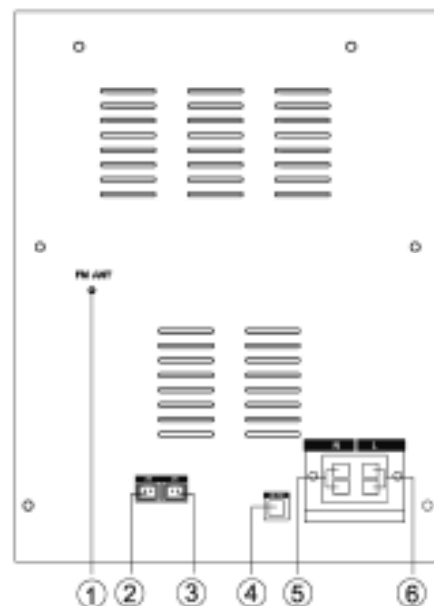 

1. FM ANT (Antenna)
2. LED (Right Decorative LED Lights) Connection Jack
3. LED (Left Decorative LED Lights) Connection Jack
4. DC 15V (In) Jack
5. Speaker Out R (right) Clips
6. Speaker Out L (left) Clips


## REMOTE CONTROL:

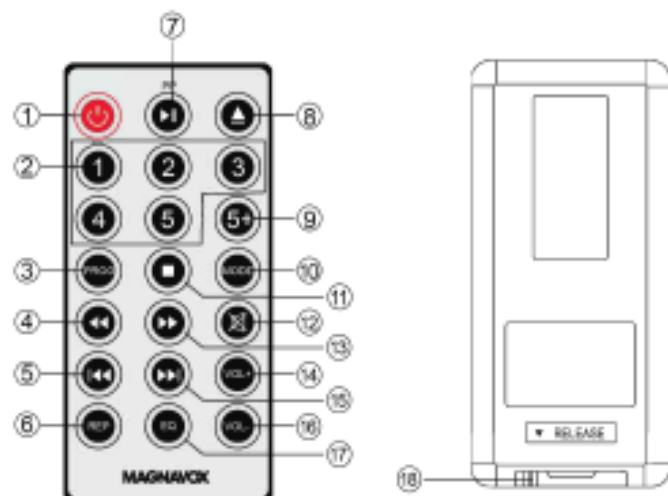 

1. (Standby) Button
2. Numeric Buttons
3. PROG (Program) Button
4. (Fast rewind/Radio tuning down) Button
5. (Skip backward/Radio program down) Button
6. REP (Repeat) Button
7. (Play-Pause/Radio Program Preset) Button
8. (Disc Tray Open/Close) Button
9. 5+ Button
10. MODE Button
11. (Stop) Button
12. (Mute) Button
13. (Fast forward/Radio tuning up) Button
14. VOL + (Volume Up) Button
15. (Skip forward/Radio program up) Button
16. VOL - (Volume Down) Button
17. EQ (Equalizer) Button
18. Button Cell Holder

## CONNECTION:

 Connect the LED/Speaker Connection Wires from Speaker Boxes to LED Jacks/Speaker Out Clips on the rear of unit as illustrated below:

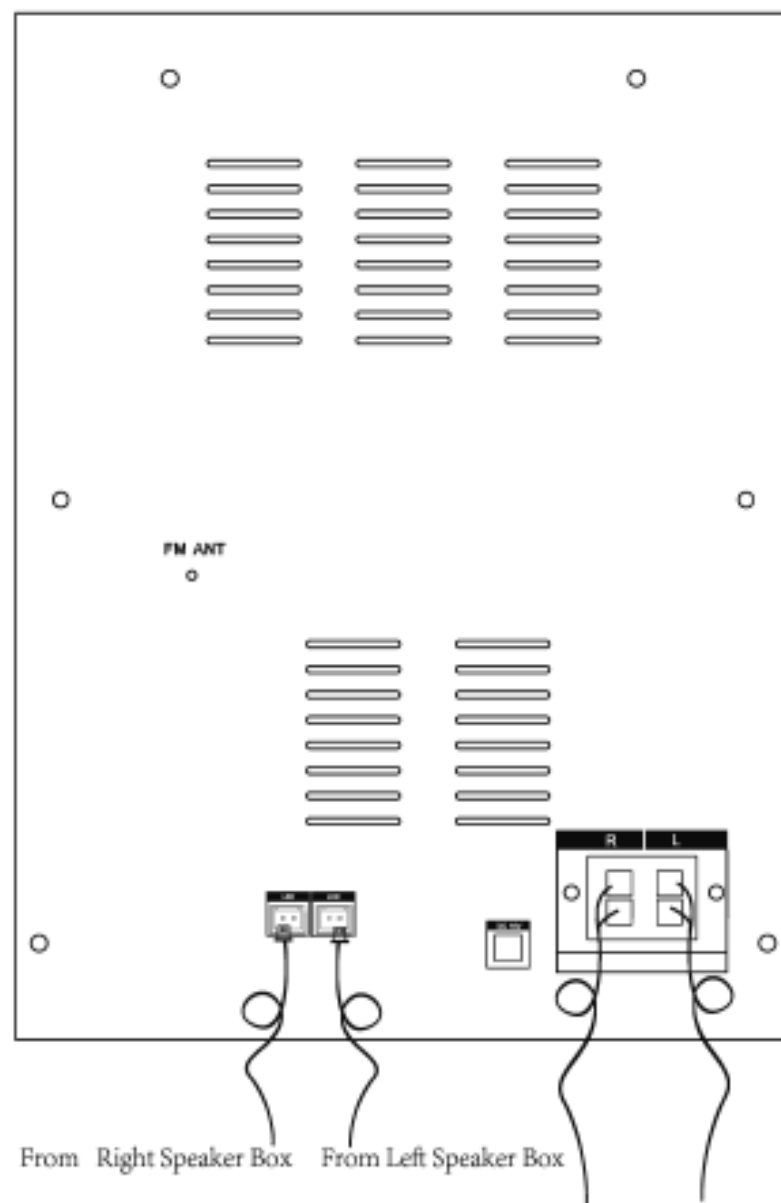

From Right Speaker Box

From Left Speaker Box

From Right Speaker Box


From Left Speaker Box



## POWER SOURCE:
 
### Main unit:

Connect the small plug from the supplied AC/DC Adaptor to the DC 15V (In) Jack on the rear of unit then plug the AC/DC Adaptor to a AC wall outlet having AC 100-240V~, 50/60Hz as illustrated below:

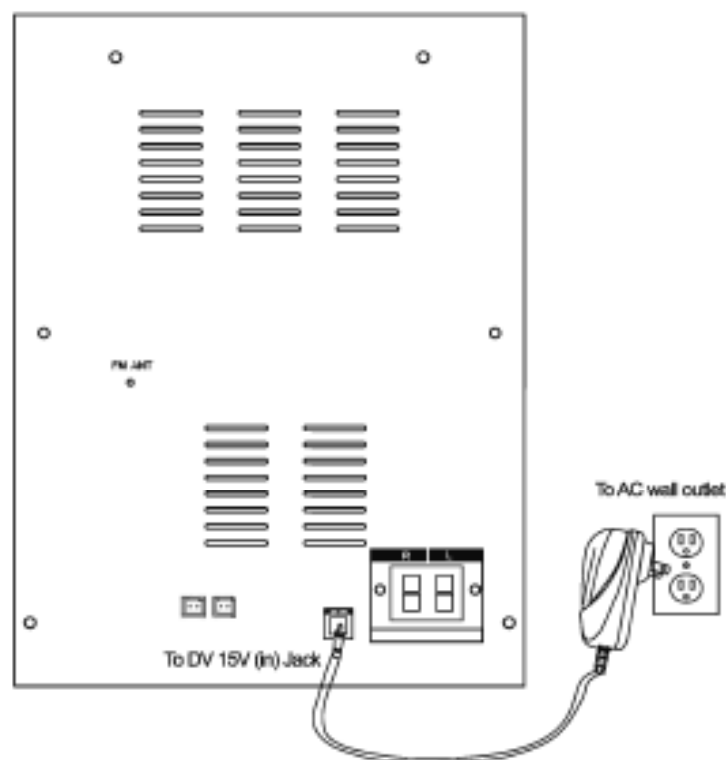

### NOTES:

- If you will not use the unit for an extended period of time, unplug the AC/DC Adaptor from wall outlet.
- The AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

 
### Remote Control:

- First time use:

Remove and discard the insulation film as illustrated below:




- Replacing the button cell when it is drained as follows:
  - Push and slide out the button cell as shown below.
  - Replace the button cell with new CR2025 button cell with the polarity markings on the rear of the Remote Control.
  - Close the button cell holder.

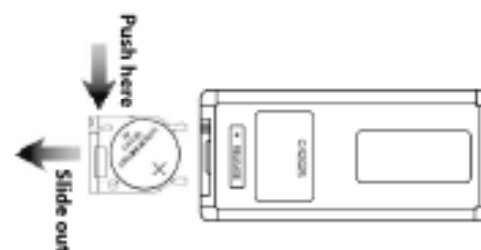

### Battery precautions:

Follow these Battery Precaution when using a battery in this device:

 
1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)

6. Do not dispose of battery in fire. Battery may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.
8.  This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## EFFECTIVE DISTANCE OF REMOTE CONTROL

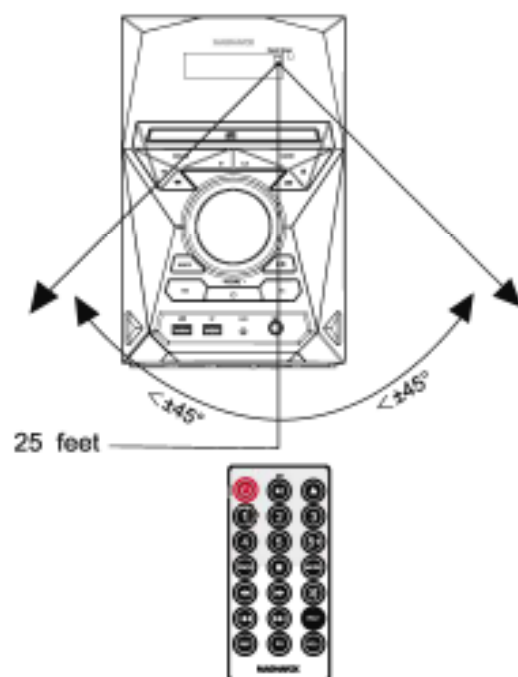

- When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong shines on the remote control of the unit, the remote operation may be unstable.

## OPERATION:


### GENERAL OPERATION:

1. Connect the Speaker Boxes to the unit as previously instructed.
2. Connect the unit to AC power as previously instructed.
3. Actual time will appear on the LED Display. To set or reset the time:
  - Press and hold the ►II/PP Button on the unit or Remote Control until the Hour digit blinks.
  - Press the I◀◀ or ▶▶I buttons on the unit or Remote Control repeatedly to set the hour. (Make sure "P" appears on the display if the time is PM. "A" appears on the display if the time is AM).
  - Press the ►II/PP Button on the unit or Remote Control again, the digit of Minute will blink.
  - Press the I◀◀ or ▶▶I buttons on the unit or Remote Control repeatedly to set the minute.
  - When finished, press the ►II/PP Button on the unit or Remote Control to save the settings and exit. Time will stop blinking.
4. Press the ⏻ (Standby) Button on the unit or Remote Control to power on the unit from standby mode.
5. Press the MODE Button on the Remote Control repeatedly to switch to desired playback mode (or press the CD/USB, BT, RADIO, AUX buttons on the unit to the desired playback mode directly). The correspondent indicator will appear (or illuminate) on the display with your selection (see list below):


Playback Mode:	Indicators:
CD	"Cd" will appear on the display
USB	"USB" will appear on display & the indicator "USB" will illuminate
AUX (Aux/Line in)	"AUX" will appear on the display
BT (Bluetooth)	"bt" will appear on the display
Radio FM Band	"rAd iD" will appear on the display a few seconds, then radio frequency "XXXX" or "XXXXX" will appear on the display



6. During playback:

- Turn the VOLUME Control Knob on the unit or press the VOL (Volume) +/- buttons on the Remote Control to adjust volume level as desired.
- Press the  (Mute) Button on the Remote Control to mute the sound, press again to turn the sound back on.
- Press the EQ (Equalizer) Button on the unit or Remote Control to activate and set the equalizer effect as desired (see list below):







Showing on display:	Equalizer effects:
OFF	Turn off the equalizer effect
ROCK	Rock
JAZZ	Jazz
POP	Pop
CLASS	Classic




7. When finished listening, press the  (Standby) Button on the unit or Remote Control to turn the unit to Standby Mode. Actual time will appear on the LED Display.

**NB: If you will not use the unit for an extended period of time, unplug the AC/DC Adaptor from AC wall outlet.**

**CD:**




**CD Playback:**

1. Power on the unit as previously instructed.
2. Press the CD/USB Button on the unit or the MODE Button on Remote Control repeatedly until  appear on the display.
3. Press the  (Disc Tray Open/Close) Button on the unit or Remote Control to open CD tray
4. Place a CD disc on the center of tray, with the printed side face up.
5. Press the  (Disc Tray Open/Close) Button on the unit or Remote Control to close it, play will automatically start after a few seconds.
6. During playback:
  - Press the /PP Button on the unit or Remote Control to pause, press again to resume normal playback.
  - Press the  or  buttons on the unit or Remote Control repeatedly to skip tracks.

- Press the  or  buttons on the Remote Control or the unit to fast searching the specific section then press the /PP Button to resume normal playback.







7. To stop, press the  (Stop) Button on the unit or Remote Control.

**Repeat Playback:**

1. During playback, press the REP Button on the Remote Control once. The indicator "  " will appear on the display. The current track will playback repeatedly.
2. During playback, press the REP Button twice. The indicator "  " will appear on display and start blinking. All the tracks on the current disc will be played back repeatedly.
3. To cancel the repeat function, press the REP Button repeatedly until the repeat indicator "  " disappears on the display.

**Programmed Playback:**

Up to 20 tracks can be programmed playback as follows:

1. In CD stop playing mode, press the PROG Button on the Remote Control. "P 01" will appear on the display. Indicator "PROG" will appear on the display and blink.
2. Select the first specific track to be programmed by pressing the  or  buttons on the unit or Remote Control repeatedly.
3. Press the PROG Button again to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks stored into the memory.
5. Press the /PP Button on the unit or Remote Control to start program playback.
6. To stop playback, press the  Button on the unit or Remote Control. Press the /PP Button to start program playback again.
7. To stop and cancel the program, press the  Button on the unit or Remote Control repeatedly until indicator "PROG" disappears on the display.

**BT:**

**BT (Bluetooth) pairing:**

First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Power on the unit as previously instructed.
2. Press the BT Button on the unit or MODE Button on the Remote Control repeatedly until indicator "bt" appears on the display and blinks to enter to BT mode.

- Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the indicator "bL" on the display will stop blinking.
- If pairing is complete you may now play music with your external BT Device.
- During playback:
  - Press the ►II/PP Button on the unit or Remote Control to pause, press again to resume normal playback.
  - Press the I◀◀ or ▶▶I buttons on the unit or Remote Control repeatedly to skip tracks.

#### Notes:

- When the external BT Device has searched the unit, our model number "MM441" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".

#### Normal operation after pairing:

- Power on the external BT Device and enter to BT playback mode.
- Power on the unit and enter to BT mode as previously instructed. Indicator "bt" will appear on the display and blink.
- Wait a few seconds until the unit is automatically paired to the external BT Device. The indicator "bL" on the display will stop blinking.
- After pairing is complete you may now play music with your external BT Device.

#### FM RADIO:

- Power on the unit as previously instructed.
- Press the RADIO Button on the unit or the MODE Button on the Remote Control repeatedly indicator "rRd ID" appear on the display to enter to Radio FM playback mode. Wait a few seconds, radio frequency "XXXX MHz" will appear on the display.
- To store the available FM stations into the unit (up to 30 stations) at first time use (or relocate the unit to a new location):
  - Press the ►II/PP Button on the unit or Remote Control. FM frequency on the display will start running.
  - Wait a few minutes, the unit will automatically store all the available FM stations into the memory then playback the first station.

- Press the I◀◀ or ▶▶I buttons on the unit or Remote Control repeatedly to select and play the stored FM station as desired.
- Or, press and hold the ◀◀ or ▶▶ buttons on the Remote Control or the unit until the FM radio frequency on the display start running to automatically search and play the next/previous available FM station.
- If reception is weak, press and release the ◀◀ or ▶▶ buttons on the Remote Control or the unit repeatedly to fine tune.

#### Antennas:

This unit has a FM wire antenna on the rear of unit, which provides adequate reception in most areas. If reception is weak, unwind and extended to its full length and/or reassemble the other direction/location to improve the reception.

#### AUX (AUX/LINE IN):

Listen from an external Audio Player such as a Cell phone, MP3 Player, Discman ...etc.

- Connect one end of the Audio Connection Cable (not included) to the AUX Out/Line Out/Phone Jack on the external Audio Player.
- Connect the other end of the cable to the AUX (Aux/Line In) Jack on the front of unit as illustrated below:



- Power on the unit as previously instructed.
- Press the AUX Button on the unit or MODE Button on the Remote Control repeatedly until "RUIH" appear on the display.
- Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)

### USB:

To play the music in external USB Device:

1. In standby mode, insert the USB Device into the USB Port on the front of unit as illustrated below:



2. Power on the unit as previously instructed.
3. Press the CD/USB Button on the unit twice or the Mode Button on the Remote Control repeatedly until "USB" appear on the display to enter to USB playback mode.
4. Wait a few seconds, the unit will automatically play the first track on the USB Device.  
**Note:** If no USB Device was inserted into the USB Port. A few seconds later, the unit will turn to CD playback mode automatically.
5. During playback:
  - Press the ▶/PP Button on the unit or Remote Control to pause, press again to resume normal playback.
  - Press the |◀◀ or ▶▶| buttons repeatedly to skip tracks.
  - Press the ◀◀ or ▶▶ Buttons to search the specific section then press the ▶/PP Button to resume normal playback.
  - Use the Numeric & 5+ buttons on the Remote Control to select and plays the desired tracks. For examples:
    - > To play the 4th track on the USB device, press the "4" Button, "0004" will appear on the display then the unit will start to play it.
    - > To play the 14th track on the USB device, press the "5+" + "5+" + "4" buttons, "0014" will appear on the display then the unit will start to play it.

### Notes:

- Up to 64 GB USB Device the unit supports to play.
- Before replacing USB Device, make sure the unit had been turned to standby mode.
- When inserting the USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the USB Device or the unit.
- You also need to download the desired music in MP3 format into the USB Device before insert into the unit.

### 5V PORT:

The unit has a built-in 5V 500mA Charger, to charge the external USB Device:

1. Connect the USB Plug from the external USB Device (not included) to the 5V Port on the front of unit.
2. Charging will automatically start.
3. When finished charging, disconnect the external USB Device from the USB Port.

### MICROPHONE:

To sing along with the music playing:

Connect the plug from Microphone (not included) to the MIC (in) Jack on the front of unit as illustrated below:



1. Power on the unit and play the music as usual.
2. Speak or sing into the microphone.

**Note:** If feedback noise (high audio frequency noise) is sounding from the speakers, turn the VOLUME Control Knob counterclockwise to reduce the sound level or keep the Microphone away from the speakers.

## TROUBLESHOOTING:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC/DC Adaptor had not connected	Connected the AC/DC Adaptor to the unit and AC power as page 10
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by turning the VOLUME Control Knob on the unit clockwise or press the VOL + Button on the Remote Control
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by turning the VOLUME Control Knob on the unit counterclockwise or press the VOL - Button on the Remote Control
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
BT not functioning	Unit not in BT mode	Press the MODE Button on the Remote Control repeatedly until indicator "bt" appear on the display and blink to enter to BT playback mode. Or press the BT Button on the unit to enter to BT

		playback mode directly.
	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as page 15-16
	The external BT device too far from the unit	Place the external BT device close to the unit
CD not play	Unit not in CD mode	Press the CD/USB Button on the unit or MODE Button on the Remote Control repeatedly until "Cd" appear on the display
	CD disc incorrect install	Place the CD disc on the center of tray with label side face up
	Disc is dirty or scratched	Try other discs
Radio not function	Unit not in radio mode	Press the RADIO Button on the unit or MODE Button on the Remote Control repeatedly until indicator "rAd" appear on the display
Radio reception not good	The direction or location no good for radio reception	Unwind and extended the FM wire antenna on the rear of unit to its full length and/or reassemble the other direction/location to improve the reception
USB Device not function	Unit is not in USB mode	Press the MODE Button on the Remote Control repeatedly until "USB"

	appear on the display to enter to USB playback mode. Or press the CD/USB Button on the unit twice to enter to USB playback mode directly
No audio files on the USB Device	Download the desired music in MP3 format into the USB Device before insert into the unit

### GENERAL SPECIFICATIONS:

Power Source:	DC $\equiv$ 15V, 2.4A, $\ominus$ $\oplus$
Audio Power:	15W per Channel (Total 30W, RMS)
Impedance of Speakers:	20W, 4 $\Omega$ per channel
FM Band Converge:	87.5 - 108MHz
BT Version:	5.0
BT Operation Distance:	Up to 32 Feet in opera area
Disc Compatible:	CD; CD-R; CD-RW
Output from 5V Port:	DC $\equiv$ 5V, 500mA Max .

### PACKAGE INCLUDES:

- 1 x User's Manual
- 1 x Remote Control (Uses 1 x CR2025 Button Cell, included)

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE**

### LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$18 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.  
1160 NW 163 Drive  
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig Electronics Inc. service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc., and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product  
email: [magnavox@craigelectronics.com](mailto:magnavox@craigelectronics.com)