




BLUETOOTH ALL-IN-ONE HI-FI MUSIC WITH PA

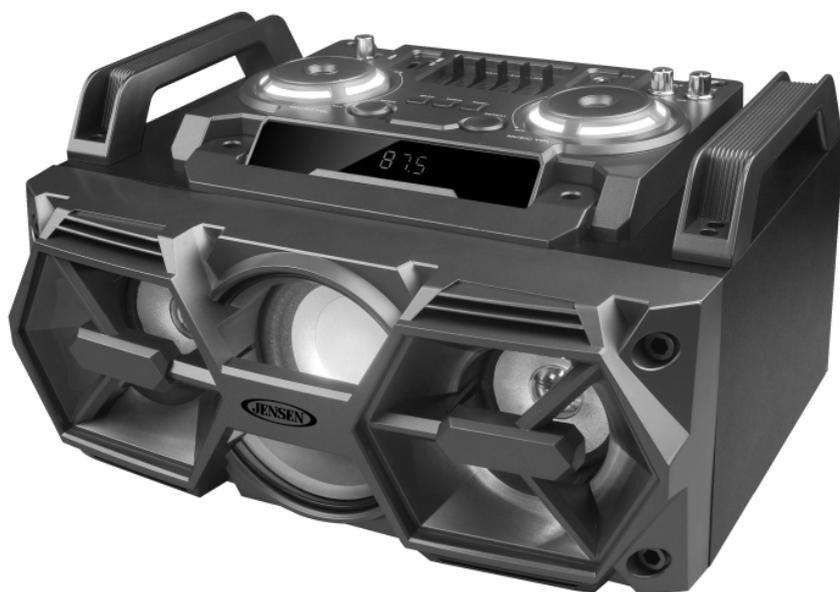

Model: SMPS-750

USER MANUAL

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. AC adaptor is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adaptor should be disconnected from the mains socket outlet completely.
10. Only use attachments / accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
16. Battery shall not be exposed to excessive heat such as sunshine, fire or the like
17. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
18. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
19. Caution marking and nameplate are located on the bottom of product.



IMPORTANT NOTE

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibration.
- Dusty, humid or moist places.
- Sources of electrical noise such as fluorescent lamps or motors.
- In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply, wait at least for 60 seconds before reconnect the AC power cord.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Protect Your Furniture

This product is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-750

Serial Number: _____


ACCESSORIES

- 1 x AC Adaptor
- 1 x User Manual
- 1 x Remote control


LOCATION OF CONTROLS

MAIN UNIT

Top View

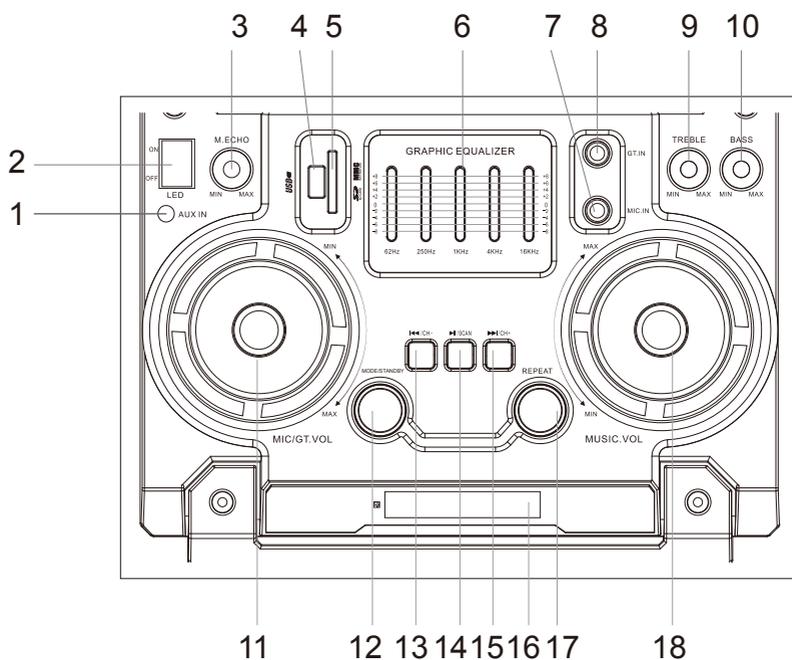


Back View

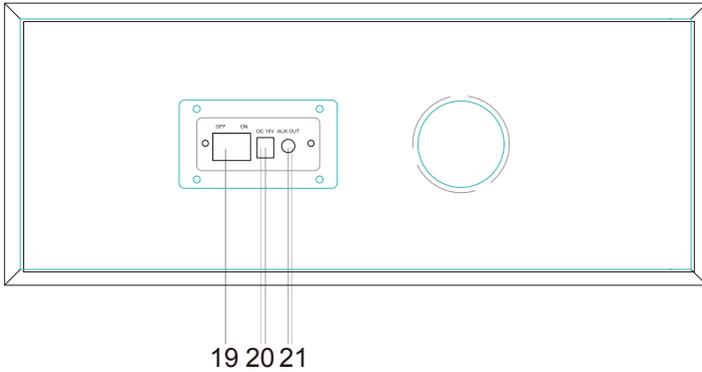

- 1.AUX input
- 2.LED Switch
- 3.To adjust ECHO performance
- 4.USB Port
- 5.SD/MMC card port
- 6.EQ adjustment table
- 7.MICROPHONE port
- 8.GUITAR port
- 9.To adjust TREBLE performance
- 10.To adjust BASS performance
- 11.Mic and Guitar VOLUME adjustment
12. Short press to change MODE.(USB/CARD/FM/AUX/BT Switch)Long press to enter standby mode
13. Short press for PREVIOUS function in USB/SD/BLUETOOTH mode;PREVIOUS (lower) station in FM mode; Long press for FM fine tune
14. Short press for PAUSE/PLAY in USB/SD/BLUETOOTH mode; Long press for AUTOMATIC station search in FM mode
15. Short press for NEXT function in USB/SD/Bluetooth mode NEXT (higher) station in FM mode;Long press for FM fine tune
- 16.LED display
17. Press once to REPEAT current music in USB/SD card Press twice to REPEAT ALL music
- 18.Master volume
19. Power switch
20. DC in
21. AUDIO output

Remote control

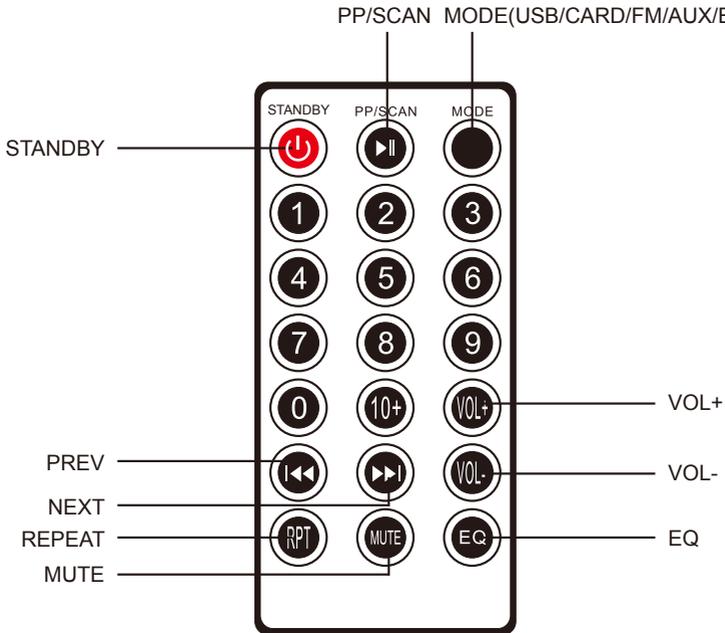

LED Display

BT = BLUETOOTH mode

LINE = AUX mode

SINGE= Single repeat

ALL= All repeat

6 preset EQ (by pressing Remote Control "EQ" key):

nOr = Normal

POP = POP

rOC = Rock

JAZ = Jazz

CLA = Classic

CUE = Cue

USB/SD CARD

Connect the USB flash stick or insert a SD card into the card slot. Use the mode button to change the mode to USB/CARD mode. When the correct mode has been selected, you can then use the backward, play/pause and forward controls on the unit to play music.

AUX In

Use the mode button to change the mode to AUX/LINE mode.

Connect your devices to the Aux socket on the Top panel by a 3.5MM aux in cable (not included). When the correct mode has been selected, you can use your devices to play music.

LINE OUT

Allow unit signal output to another device which have the Aux In Function. LINE OUT connector are on the rear panel.

FM RADIO

Use the mode button to change the mode to FM mode.(87.5-108Hz)

Hold the ►/II button,it will auto search though all FM radio stations and auto store the FM radio station in range.

The unit can store a maximum of 30 stations; the number stored will depend on the quantity available in range.

Short press the ◀◀ and ▶▶ buttons to change the stations which have been auto stored.

Long press the◀◀and▶▶buttons for FM fine tune.

BLUETOOTH

Use the mode button to change the mode to Bluetooth mode.

Access your devices Bluetooth settings and pair your device to the unit. The Bluetooth pair name is **"SMPS-750 "**

When the correct mode has been selected, you can then use the backward, /II (play/pause) and forward controls on the unit to play music.

MICROPHONE EFFECT

Use the MIC ECHO and MIC VOLUME controls on the unit to increase/decrease the mic volume and echo when using a wired microphone.

BASS AND TREBLE: Use the bass and treble controls on the unit to increase/decrease the bass and treble during music playing.

RESETTING THE SMPS-750

Power Cycle Reset

In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply. Wait at least for 60 seconds before reconnecting the AC power cord.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperature.
2. Do not tamper the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes, as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

Note: This unit is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

TROUBLESHOOTING GUIDE

Fault	Possible Cause	Solution
No sound	<ol style="list-style-type: none"> 1. No input sound source. 2. Volume is too low. 	<ol style="list-style-type: none"> 1. Use a better music signal. 2. Adjust volume.
Distortion of sound	<ol style="list-style-type: none"> 1. Volume too high. 2. Speaker may be damaged. 	<ol style="list-style-type: none"> 1. Turn down the volume. 2. If speaker is damaged, repair or replace it.
Karaoke does not work	<ol style="list-style-type: none"> 1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is too low. 	<ol style="list-style-type: none"> 1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Increase the microphone volume.
MP3 does not play	<ol style="list-style-type: none"> 1. The song format in the U disc is incorrect. 2. Improper operation has caused a process disorder. 3. U disc/SD card /MMC are disconnected. 	<ol style="list-style-type: none"> 1. Change song format into MP3 format. 2. Reboot the machine. 3. Insert U disc/SD/MMC properly.