



19

ACCESSORIES:

Standard Accessories:

1. HI-601VT unit
2. Decoder unit
3. Voice jack/PSII to mini-1394 Y cable
4. Mini-1394 to USB power cable
5. AC power adaptor with USB plug
6. Cigarette lighter adaptor with USB plug
7. 1600 mAh Li-on rechargeable battery
8. Carrying pouch
9. Mini CD
10. User manual



1



2



3



4



5



6



7



8



9

10






20

Optional Accessories:

1. Car control kits main unit
2. Car control cable sets
3. Micro-phone cable set
4. Vibration sensor cable set
5. HI-601VT to car kit cable
6. HI-403BTcube
7. Mini-1394 to PS/II (male) cable

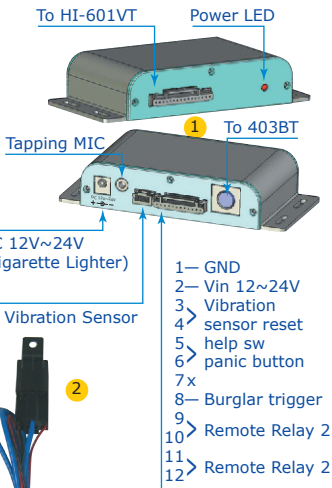



Operation Easy Manual

No pass code required mode

Press "5" to enter the emergency status

Press "8" to activate the bugging under none encryption mode saving mode activated)

Press " * " to stop sending voice message back and hear "du du" responding

Press " 0 0 0 0 " (per-setted) and

hear a long "du" verifying the pass code confirmed.

Change the pass code by pressing " 0 1234 1234 " (example)

pass code correct: a long "du" and pass code incorrect: du 4 times "du du du du"

Set the first set dial-back telephone number: " 1 0912 345678*"

Setup correct: a long "du" and incorrect: du 4 times "du du du du" (anti-thief alarm)

Set the second set dial-back telephone number: " 2 0912 345678* "

Setup correct: a long "du" and incorrect: du 4 times "du du du du" (anti-thief alarm)

Set the third set dial-back telephone number: " 3 0912 345678* "

Setup correct: a long "du" and incorrect: du 4 times "du du du du" (anti-thief alarm)

Remove first set dial-back telephone number: " 1 * "

Remove correct: a long "du" and incorrect: du 4 times "du du du du"

Remove second set dial-back telephone number: " 2 * "

Remove correct: a long "du" and incorrect: du 4 times "du du du du"

Remove third set dial-back telephone number: " 3 * "

Remove correct: a long "du" and incorrect: du 4 times "du du du du"

SOS dial-back: 4, 5, 6 three sets

Press " # " to stop sending voice message back and hear "du du" responding

Press " 0 0 0 0 " (per-setted) and hear a long " du" verifying the pass code confirmed.

Change the PIN code by pressing " 0 5678 5678 " (example)

PIN code correct: a long "du" and Cancel PIN code by pressing " 0 # " and a long "du" confirm it is correct

Press " 1 " for temporary disable tracking encryption mode under tracking encryption mode.



22

Send back data 50 times (around 3 minutes) when the set up correct.
Short message send back to the preset dial-back number by pressing
" 21 " " 22 " " 23 " Connection hanged up when set up correctly.

Press " 2# " to disable short message function
Press " 2* " to enable short message function (pre-setted)
Set up correct: a long "du" and incorrect: du 4 times "du du du du"

Press " 40 " to immediately cut off oil and electricity
Set up correct: a long "du" and incorrect: du 4 times "du du du du"

Press " 51 " to disable moving sensor function (pre-setted)
Press " 52 " to enable moving sensor function
Set up correct: a long "du" and incorrect: du 4 times "du du du du"
(Anti-thief mode can also works normally)

Press " 54 " to bugging without the pass code mode (pre-setted)
Press " 55 " to bugging with pass code required mode
Set up correct: a long "du" and incorrect: du 4 times " du du du du"

Press " 57 " to tracking with no encryption required (pre-setted)
Press " 58 " to tracking with encryption mode
(under encryption mode, the voice message is steady tune and unable to decode it)
Set up correct: a long "du" and incorrect: du 4 times "du du du du"

Press " 53 " for moving sensor trigger and instant dial back (pre-setted)
Press " 56 " for moving sensor trigger and delay dial back
Set up correct: a long "du" and incorrect: du 4 times "du du du du"

Press " 6* " for GPS location dial back on certain times
Connection hanged up when set up correctly.
Press " 6# " for GPS location speed mode than 20 km
Connection hanged up when set up correctly.