

User Manual

Tablet PC

Model: TB-071MC, 071MC

TOP EIGHT IND., (SHENZHEN) CO., LTD.

Made in china

Instruction

Please read the precautions and important tips in the instructions before use.

Table of contents

Specifications-----	3
1. Outlook Description-----	4
2. Power Button Usage-----	5
3. Getting Started-----	6
4. Homepage information columns-----	8
5. Applications-----	10
6. USB Connection-----	12
7. Battery Management-----	13

Specifications

- **Processor:** RK2926 Cortex A9 1.2GHZ (Max), 3D,400mil
- **Display:** 7" TFT LCD
- **Resolution:** 800×480
- **Touch Panel:** Capacitive Type
- **Internal RAM:** DDR3 512MB
- **Wireless:** 802.11b/g/n(HT20)
- **Operating System:** Android 4.1
- **Internal Memory:** 4GB Nand Flash
- **External Memory:** TF Card 1G~32G
- **Support Image format:** JPEG, BMP, GIF, PNG, TIFF
- **Support Audio format:** MP3, WMA, APE, FLAC, AAC, OGG, AC3, WAV
- **Support Video format:** MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, 3GP, VP8, RV, WMV, AVS, H.263, Flash player10.1
- **Battery:** DC 3.7V 1800mAh Embedded Lithium Battery
- **Power:** DC 5.0V/2A Adapter
- **Accessories:** Adapter, Instruction Manual

 
1. Outlook Description

Front view



①. Touch panel: 7" Capacitive touch screen: Clicking and dragging on the screen are available.

Top view

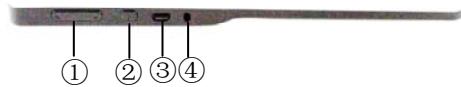


① Volume "+"/ Volume "-"
② Power button
③ Micro USB port
④ DC jack

Right view



- ① Earphone jack
- ② MIC

Back view

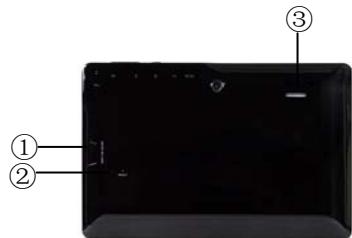

- ① Micro SD Card slot
- ② Reset
- ③ Speaker

2. Power Button Usage

Open

Press and hold the power button  about 2 seconds to open the screen

Shut down

Press and hold the power button , then the screen shows< Do you want to shut down>, tap<OK> to shut down.

“

Open the standby mode

In boot mode, you can tap the power button  on the top side of the tablet, the system will enter into the standby mode which can save power.

Close the standby mode

In the stand by mode, light tap of the power button on the top side to wake up the device, enter the normal state.

Force Off: If device does not respond, press and hold the power button for 8 seconds.

Note: If it is necessary, we don't suggest use **Force Off**. You should follow the steps to perform the shutdown.

Reset Button: Press the reset button to re-boot the device. Reset will erase all data on the device, please caution this feature. (**Note:** Current the reset function can not be restart, so after reset you need to press the power button to re-boot.)

3. Getting Started

Charge the device

Use this MID for the first time; charge your battery 4 hours to ensure that the battery is full of charged before use.

It is not recommended to use the device while charging.

- Apply the power adapter to charge for MID.
- Red battery indicate it's being charged. Please wait until it is fully charged and don't pull out the adapter while charging. When it is fully-charged, the indicate will turn to blue.

Lock and unlock the screen

Lock

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter Settings → Security → Lock Screen to switch.

Lock screen displays the following:




You can set up the sleep time in the system of <display>.

The system will sleep automatically and lock the screen to the standby mode if without any inactivity when reaches the preset of standby time.

Unlock



Moving and dragging this  to unlock the screen and enter the application interface.

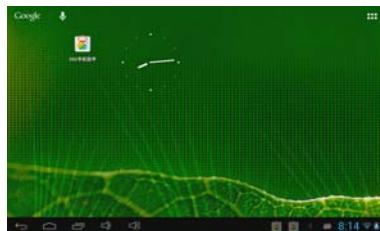

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  → Settings, → Wireless & networks.
2. Select Wi-Fi to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A  indicates secure networks that require login name/password to connect.


3. Tap the desired network to which you want to connect, → enter the Network Password if applicable, → tap Connect.
4. Tap  to return to the Desktop screen.



If your Wi-Fi network is set as hidden, it won't be found by the auto scan.

Tap Add Wi-Fi network and follow the prompts to add your network.

4. Homepage information columns

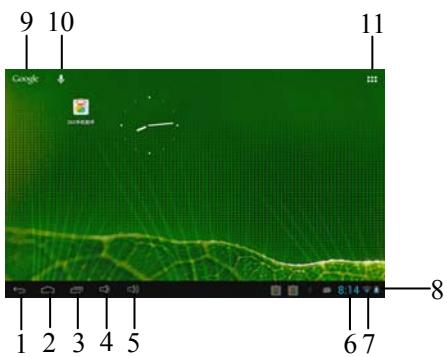

1. Back.
2. Home.
3. Recent Apps.
4. Decrease volume
5. Increase volume
6. Current time.
7. Wireless network
8. Battery Status.
9. Google search.
10. Voice search.

11. Tap to view the applications screen

- Tap on any application icon to launch it.
- Touch, hold and then slide icons to reposition them on the screen.
- Touch, hold and slide icons onto  to remove them from the Desktop screen.

5. Applications

	ApkInstaller	Get the apps from play store and install into MID and manage Apps.
	Browser	Access the Internet and “surf the web” whenever desired.
	Calculator	Do calculation.
	Calendar	Calendar.
	Clock	Use as alarm clock with scheduled alarms.
	Downloads	View downloads and the download progress.
	E-Book	Through the Google to view books and downloading books
	Email	Send/Receive email using your existing email addresses.
	Explorer	Viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	Gallery	Play, view, and manage video and photo files.
	Gmail	Send/Receive email using your existing Gmail account
	Google	Search engine
	Local	Trough the Google maps to Search the place

	Maps	finding the place, route and so on
	Movie Studio	Movie Studio
	Music	Play and manage audio files.
	Search	Perform the desire search
	Play Store	Provide applications, video and music for download
	Settings	Multiple settings for personalizing and enhancing your Device.
	Video	Play and manage video files.
	YouTube	Quick launch to YouTube.com videos.

To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen.

Touch, hold and then slide icons to reposition them on the screen.


Touch, hold and slide icons onto  to remove them from the Desktop screen.

6. USB Connection


Connecting to a computer

1. Connect the MID and computer by Micro USB cable, the reminder column will show the remind information.
2. Click the USB icon, pop up the status with reminder information Show as below picture:

(1). click the “USB Connected”, it will as below Picture,

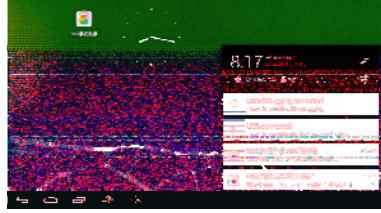

(2). In the pop-up picture, click “Turn on USB storage”; after the connection is successful, the robot icon will turn yellow. Show as below:

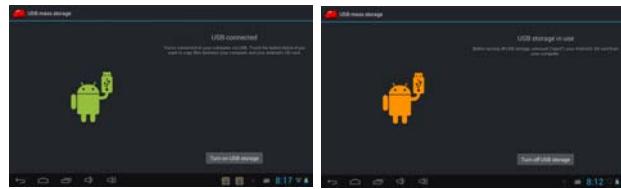

3. Copy files between your computer and your Android's SD card.

4. After copying finishes, click “Turn off USB storage” to uninstall, show as above picture:

When the device connected to the computer, please do not play files, in order to avoid adverse effects.

Connecting to a Keyboard, Mouse

Sometimes when you want to type for an extended period of time, you may want to connect a full-size keyboard to the MID.

Use the dedicated USB data cable to connect a keyboard to the MID.

You may also use this connection to add a mouse or storage device etc. to the MID.

7. Battery Management

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hours).

When fully charged, the battery icon displays as: 

A fully discharged battery takes approximately 4 hours to fully charge, but you can use the device while plugged in when desired.

Important Safety Precautions

Information provided in this manual may varies from model to model, so your model may not have some of the features described in this book. Pictures of features may also be different from actual one. This book reserves the right to change any information without any notice. For avoiding the accidents, please make sure to read this manual carefully before using.

Follow all precautions and instructions. Except as described in this manual, refer all servicing to qualified personnel. Do not use damaged power cords, accessories, or other peripherals. Do not use strong solvents such as thinners, benzene, or other chemicals on or near the surface.

- ◆ The machine adopts the Capacitive touch screen, you must press suitably when useing
- ◆ Do not put the device at the high-temperature, high- humidity or dusty place.
- ◆ Do not fall or crash the device, do not shock the TFT screen, it may damage the TFT screen.
- ◆ Adjust to suitable volume. If you feel tinnitus, please turn down or stop using.
- ◆ Please charge if you meet those situations as below:
 - A、 No power is displayed on the battery icon.
 - B、 The system turn off automatically, turn off soon after turning on again.
 - C、 The keys do not work.
 - D、“” is displayed on the right-down corner of the device.

【TIPS】: Other chargers are not available. If you want an original charger, please contact us.

- ◆ When the machine is charging, it will be a little hot (but not too hot), this is normal, and won't effect your using.
- ◆ Do not remove the connector while formatting, downloading and uploading. Otherwise it will make the device get error.
- ◆ Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.
- ◆ Do not use this device where electronics is forbidden, such as on the plane.
- ◆ Do not use this device while walking and driving, avoiding traffic accident.
- ◆ The Computer Virus today is more and more, once the computer is affected, the files and the firmware will be damaged. So please guard against the Virus carefully.
- ◆ Any problem occurred please contact with the distributor; don't dismount the machine by yourself. If any problem resulted of the users, the users should take upon all the problems.
- ◆ For those losses of removing memory caused by device damage, incorrect repair or some other reasons, our company will not take the responsibility. Please follow this manual to operate this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.