

 


Designed & Developed by
Namco Prize Europe
www.namco.co.uk

Exclusively supplied to Americas by
Namco America Inc.
www.namcoamerica.com

NAM-GEAR NetBook PC
NAM-BOOK ANDROID 4.1
prizesupport@namco.co.uk

Printed in China



User Manual

NAM-BOOK ANDROID 4.1

Table of contents

Specifications	2
Outlook Description	3
Power Button Usage	4
U-disk	4
Using Micro-SD Card	5
Keyboard	5
Touchpad	7
Getting Started	7
Charge the device	7
Turn the device on	7
Wi-Fi Network Setup	7
Desktop	8
Scree Lock	8
Applications	9
Battery Management	10
Important Safety Precautions	11
Caution	13

Specifications

- **Processor:** Via WM8850Cortex A9
- **Display:** 7" TFT-LCD
- **Resolution:** 800×480
- **Internal RAM:** DDR3 512MB
- **Operating System:** Android4.1
- **Wireless:** 802.11b/g
- **Internal Memory:** 4GBNand Flash
- **External Memory:** MMC/SD Card
- **Support Media format:** JPG,JPEG,BMP,PNG,MP2,MP3,MP4,WAV,
AAC,WMA,MPEG1/2/4,MJPE,H263,H264
- **Battery:** 3.7V 3000mAh Embedded Lithium Battery
- **Power:** DC 5V 2A Adapter
- **Accessories:** Adapter, Instruction Manual
- **Manufacturer:** TOP EIGHT IND.,(SHENZHEN)CO.,LTD.

The product shall only be connected to a USB interface of version USB 2.0.
when charging by power adapter, adapter shall be considered as safety approval adapter by CE,
output rating 5.0DC, 2.0A max.
Temperature: Max 55°C

Outlook Description

Front view




Right view:



Left view:



Top view:

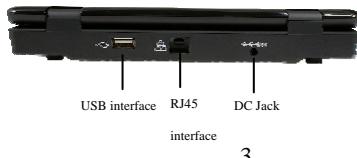

Power Button Usage

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap Power off → tap OK.

Restart: Press the power button and hold for 2 seconds → Tap Restart → tap OK.

Airplane mode: Press the power button and hold for 2 seconds → Tap Airplane mode.



Silent mode: Press the power button and hold for 2 seconds → Tap (sound is off)



Normal mode: Press the power button and hold for 2 seconds → Tap (sound is on)

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please careful with the function. (Note: After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.)

U-Disk**Insert U-Disk**

Insert your U-disk into the device. When ready for use, enter into the file browser, switch to the USB folder to view it.

Remove U-Disk


Close all applications or documents which have been opened on the U-disk. Tap

Settings → Storage → USB storage → Unmount this storage device. When it displayed Mount this device and then you can unplug the U-disk.

Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to

the U-disk.

Using Micro-SD Card

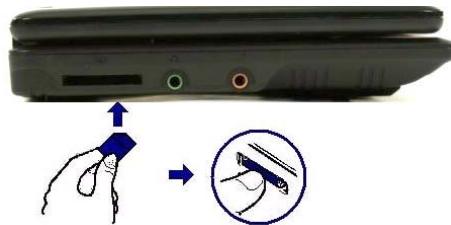

Insert your card into the microSD slot until it clicks into place. It's OK.

Remove microSD Card



Close all applications or documents which have been opened on the card. Tap  → Settings → Storage → SD card → Unmount this storage device. When it displayed Mount this device and then press the card lightly; it is partially ejected allowing you to pull the card out.

Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.


We recommend using major brands of memory cards to avoid incompatibility.

Keyboard

Wireless Book was used 80 keys of standard keyboard template.

There are some functions of key combination



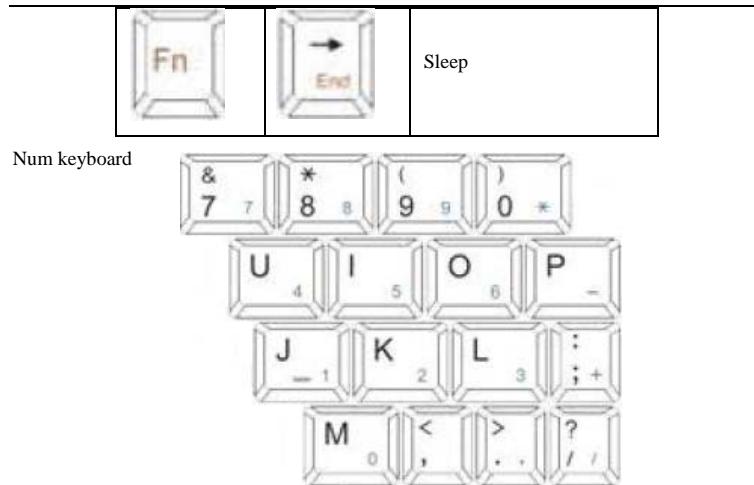

Users press  to change Num mode and then they can input the corresponding number by Num key. Press it again to get back normal mode.

Commonly used buttons:

Esc: Back

Enter: OK

Arrow keys: Corresponds to the direction of (up down left right)

F1: Browser

F3: My Music

F4: My Video

F5: My Photo

F6: Calculator

F7: Brightness

F8: Darkness

F9: My Recorder

- F10: File Browser
- F11 (Fn+F1): Calendar
- F12 (Fn+F2): Settings
- PrtSc SysRq: Print screen

Touchpad

Touchpad is a mouse device it can be used as a regular mouse. Touch pad buttons on both sides of the left and right mouse buttons and common features with the same.

Note:

Do not place heavy objects on the touchpad to avoid being scratched or deformed

Getting Started

Charge the device

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press and hold the power button 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

Tap  → Settings.

- Slide Wi-Fi switch to turn on.
The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure Wi-Fi networks that require input password to connect.
- Tap the desired network to which you want to connect → enter the Network Password if applicable → tap Connect.

- Tap  to return to the Desktop screen.
- If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network.

Desktop



1. Back.	2. Home.	3. Recent Apps.
4. Menu.	5. Current time.	6. Screen capture.
7. Volume.	8. Auto-rotate screen	9. Wireless network
10. Battery Status.	11. Google search.	12. Voice search.
13. Tap to view the applications screen		

- Tap on any application icon to launch it.
- Touch, hold and then slide icons to reposition them on the screen.
- Touch, hold and slide icons onto  to remove them from the Desktop screen.

Screen Lock

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter Settings → Security → Lock Screen to switch.

Lock screen displays the following:



Tap the unlock icon and drop it to the right and out of the circle to unlock.

Application

	Browser	Access internet.
	Calculator	Do calculation.
	Calendar	Calendar.
	Clock	It can display the time and set the alarm.
	Downloads	Downloading documents
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to

		backup files to your SD card.
	Flash player settings	Flash player settings.
	Google	Search engine
	My Music	Play and manage audio files.
	My Photo	View and manage photo files.
	My Video	Play and manage video files.
	News & Weather	Display the news and the weather through the Internet
	People	Quick and easy access to everyone you want to reach..
	screen Capture	Capture image of the screen.
	Settings	Multiple settings for personalizing and enhancing your Device.
	Voice Search	Voice Search

- To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen
- Touch, hold and then slide icons to reposition them on the screen.
- Touch, hold and slide icons onto  to remove them from the Desktop screen.

BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

You cannot charge the battery using the USB cable.

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

Important Safety Precautions

Information provided in this manual may varies from model to model, so your model may not have some of the features described in this book. Pictures of features may also be different from actual one. This book reserves the right to change any information without any notice. For avoiding the accidents, please make sure to read this manual carefully before using.

Follow all precautions and instructions. Except as described in this manual, refer all servicing to qualified personnel. Do not use damaged power cords, accessories, or other peripherals. Do not use strong solvents such as thinners, benzene, or other chemicals on or

near the surface.

- ◆ Do not put the device at the high-temperature, high- humidity or dusty place.
- ◆ Do not fall or crash the device, do not shock the TFT screen, it may damage the TFT screen.
- ◆ Adjust to suitable volume. If you feel tinnitus, please turn down or stop using.
- ◆ Please charge if you meet those situations as below:

- A、No power is displayed on the battery icon.
- B、The system turn off automatically, turn off soon after turning on again.
- C、The keys do not work.

D、 is displayed on the right-down corner of the device.

【TIPS】: Other chargers are not available. If you want an original charger, please contact us.

- ◆ When the machine is charging, it will be a little hot (but not too hot), this is normal, and won't effect your using.
- ◆ Do not remove the connector while formatting, downloading and uploading. Otherwise it will make the device get error.
- ◆ Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.
Do not polish it with alcohol, dilution, or benzene.
- ◆ Do not use this device where electronics is forbidden, such as on the plane.
- ◆ Do not use this device while walking and driving, avoiding traffic accident.
- ◆ USB is for transferring data only.
- ◆ The Computer Virus today is more and more, once the computer is affected, the files and the firmware will be damaged. So please guard against the Virus carefully.
- ◆ Any problem occurred please contact with the distributor; don't dismount the machine by yourself. If any problem resulted of the users, the users should take upon all the problems.
- ◆ For those losses of removing memory caused by device damage, incorrect repair or some other reasons, our company will not take the responsibility. Please follow this manual to operate this device.

Caution: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.