

EZ500

EZZE Mobile Tech., Inc.

November 2005

Contents

FOR YOUR SAFETY	2
UNPACKING.....	4
YOUR PHONE.....	5
GETTING STARTED	15
GENERAL FUNCTIONS	20
IN-CALL OPTIONS	27
USING PHONEBOOK.....	30
TEXT INPUT	33
MENU MAP.....	38
1. Phonebook	41
2. Messages.....	45
3. Call History	55
4. Settings.....	58
5. Multimedia	72
6. Fun	84
7. Tools	86
8. Services	93
9. File Manager	95
SIM AT SERVICE.....	99
SOLVING PROBLEMS.....	100
USING BATTERIES	102
SAFETY INFORMATION.....	104
GLOSSARY	108

For Your Safety

For your safety, please refer to the guideline prior to using the phone. Failure to comply with the guideline may cause malfunctions or hazardous to user.

Road Safety Comes First

Please be careful not to use the phone while driving. In case you need to use the phone, please pull over your vehicle first. In some countries, it is illegal to use a wireless phone while driving. Also, it is recommended to avoid using a mobile phone while refueling at a gas station

Switch off in Aircraft

Mobile phones may cause interference to the aircrafts. Please make sure the phone is switched off while in the airplanes.

Respect Special Regulations

Please follow special regulations in any areas where it is suggested. It is recommended to switch off your phone whenever it is illegal to use, or when it may cause interferences, such as hospitals.

Interference

All mobile phones may be subject to radio interference, which may affect the performance during calling and receiving.

Qualified Service

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

Use Properly

Use only in the normal position (hold to the ear). Avoid unnecessary contact with the antenna when

the phone is switched on.

Emergency Calls

When making an emergency calls, please ensure that the phone is switched on and is in service. Enter the emergency number (Official Emergency Number or another official emergency number) and press the [Send Key]. Inform your current location. Do not end the call until given permission to do so. You may end the call by pressing the [End Key].

Unpacking

Thank you for purchasing this product. Please check the product contents to see if you have all the available items as below. (*Images may vary from the actual product in your package.)



Handset



Battery




Manual




Ear/Microphone



**SD Card
(optional)**

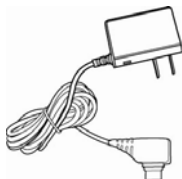




Traveler's Charger

 

**PC Sync Manager CD &
USB Data Cable**

Your Phone

Phone Layout

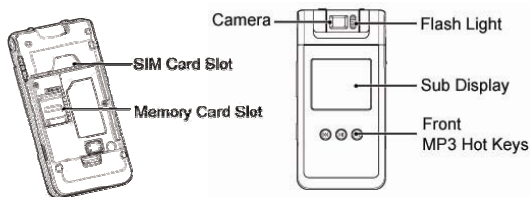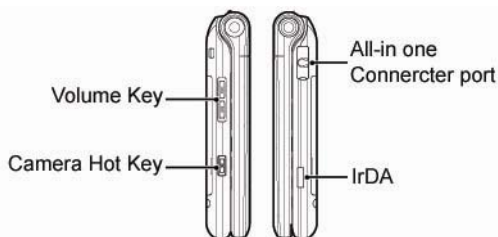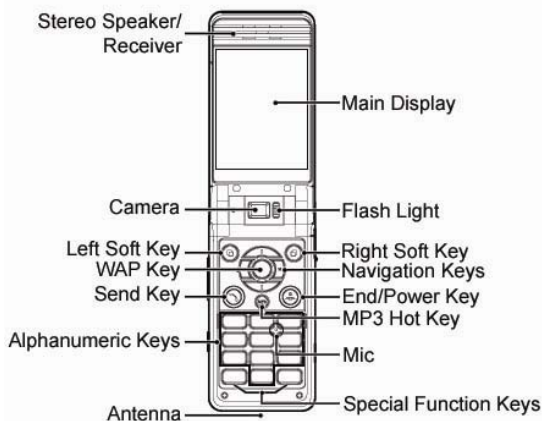

Key Definition



 
Soft Keys

Performs functions identified by left/right display prompt.

Right button: Cancels numbers & letters when you make a call or input letter for phonebook, message or WAP.

Speaker Phone (Optional)

Right button: Starts and stops the "Speaker Phone" mode during a voice call.



Navigation Keys

Scrolls through the menu options.

Moves the cursor up and down in the normal editing mode.

Moves the cursor to left and right in all editing mode.



Send Key

Dials or answers a call.

Recalls the last 10 numbers in the idle mode.



Power on/off Key & End Key

Ends a call.

Switches the phone on and off. (press this key and hold)

Cancels your input in the menu facility and returns to the idle mode.



Alphanumeric Keys

You may enter numbers, letters and special characters.

It changes camera settings in camera mode.



Special Function Keys

Enters Special Characters /
Performs Various Functions



Side Key(On the right side of your phone)

Adjusts the Keypad Tone volume in idle mode.

Flashes light on or off in idle mode by pressing and hold the key.

Adjusts the earpiece volume during a call by pressing briefly.

Starts “voice recording” during a call by pressing and hold the side key (up). Stops “voice recording” by pressing and holding down the side key.

Adjusts the Audio Player volume.

Moves through months in calendar mode.

Shortcuts



Left: Accesses to “Message”

Right: Accesses to “Calendar”

Up: Accesses to “Shortcuts”

Down: Accesses to “Tone Setup” from an idle mode

You may dedicate the left navigation key for favorite menu in ‘Dedicated key’ setting menu

(Menu > 4.Settings > 1.Phone Setup > Display Settings)



WAP Key

Accesses to WAP menu (press shortly), and launch WAP browser (press and hold).

Camera Shutter

In camera and video preview mode, works as a shutter.



MP3 Hot Key

Accesses to Audio Player in idle mode.



Front MP3 Hot Keys

Center:

- Press and hold the key to launch the Audio Player.
- Press shortly to play and pause the music. Press and hold to stop the player.

Left: go to the previous music.

Right: go to the next music.



Camera Hot Key (side)

When Folder is Closed:

Press and hold to start the camera preview mode.

When Folder is opened:

press shortly to start the camera preview mode.

In camera and video preview mode, works as a shutter.



To activate the "Keypad Lock" option, press this key and hold.













Switches Main LCD preview mode and Sub LCD preview mode.



















To activate the "Silent Mode" option, press this key and hold.

Flips the camera and video preview; use it when you swivel the camera.

Icons

Icon	Description
	Signal Strength: Shows the strength of the receiving signal. The greater the number of bars, the better the signal strength.
	Ciphering Indicator: Appears when the network supports ciphering function while in a call.
	GPRS: Shows the strength of the receiving GPRS signal. The greater the number of bars, the better the signal strength.
	GPRS Connect: Appears when you connect to GPRS.
	Roaming: Appears when the phone is roaming.
	L1, L2: Some SIM cards support two phone numbers and you can switch the number (line) with this feature. The phone will display this icon when you set a line.
	Missed Calls: Appears when there is missed call(s).
	New Message: Appears when a new incoming text message is arrived and unread.
	MMS Unread: Appears when a new MMS message is arrived and unread.
	MMS Busy: Appears when MMS is busy, such as receiving and sending a message.
	Broadcast Message: Appears when Broadcast Message receive mode is active..
	WAP Mail: Appears when WAP mail is arrived.


	Call Barring On: Appears when the call barring mode is active.
	Call Forward: Appears when the call forward mode is active.
	IrDA: Appears when the IrDA port is activated.
	Ring: Appears when the Ring mode is active.
	Vibrate and Ring: Appears when the Vibrate and Ring mode is active.
	Vibrate then Ring: Appears when the Vibrate then Ring mode is active.
	Vibrator On: Appears when the Vibration mode is active.
	Silent Mode: Appears when the silent mode (manner mode) is active.
	Alarm On: Appears when you set the alarm.
	Stopwatch: Appears when you set the stopwatch.
	Lock: Appears when you set the phone lock.
	Battery Strength: Shows the level of your battery. The more bars you see, the more power you have left.
	General: appears when you set the Sound & Light profile as General.
	Meeting: appears when you set the Sound & Light profile as Meeting.
	Outdoor: appears when you set the Sound & Light profile as Outdoor.
	Indoor: appears when you set the Sound & Light profile as Indoor.



Headset: appears when you set the Sound & Light profile as Headset.

Display Layout

The idle screen display includes three areas.

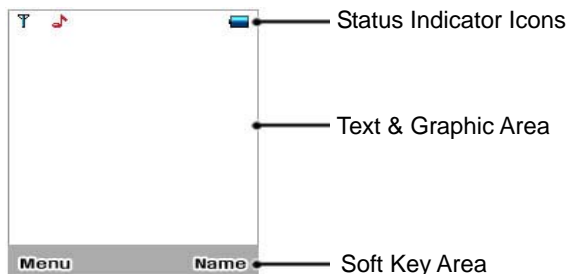

Menu Navigation

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize your phone. These functions are arranged in menus and sub-menus, accessible with the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Using Soft Keys

The roles of the **soft keys** vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

In an Idle screen, by pressing the left soft key (labeled as “Menu”), you can access to menus; by pressing the right soft key (labeled as “Name”), you can view the phonebook list.

Menu Navigation

■ **Up & down navigation key:** you may navigate menus up and down.

- **Left navigation key:** You may go to upper depth menu from the current depth.
- **Right navigation key:** You may go to sub depth menu from the current depth.
- **Left soft key:** accesses to the sub menu by selecting “Ok” or accesses to options.
- **Right soft key:** you may go back to the previous screen.

Backlight

The display is illuminated by a backlight. When you press any key, the backlight lights up. It dims by two levels of illumination, if no key is pressed within a given period, depending on the **LCD Backlight** option in the **Sound & Light** menu.(see 4.Settings/1.Phone Setup/1.Sound & Light)

To specify the length of time for which the backlight is active, set the **LCD Backlight** option.

Phone Features

H/W Features

Feature	Description
Dimension	44 x 90 x 17 mm
Main LCD	2.0" 262K TFT LCD (176 x 220)
Sub LCD	0.95" 65K CSTN LCD (96x64)
Camera	Swivel Type VGA CMOS
Flash Light	Yes
Speaker	2 in 1 Speaker
Vibrator	Built-in vibrator
Antenna	Internal
Phone Memory	505KB + 60MB
SIM	3V
IrDA	Yes
Data	USB Connection and PC Link Manager
microSD (T-Flash) Card (Optional)	※ Use only genuine microSD (T-Flash) cards approved & specified by the SD Card Association and SanDisk: http://www.sdcard.org


S/W Features

Feature	Description
RF	GSM900, DCS1800, PCS1900
GSM / GPRS	GSM Phase 2 & 2+ Class 8 GPRS
Message	MMS / EMS / SMS
WAP	WAP 2.0 (Obigo Browser)
Java	Java 2.0
DRM	DRM 1.0
Text Input	T9 Intelligent Text Input
Camera	VGA CMOS Camera
Video	Video Record & Play (MJpeg)
Wallpaper	Pictures and user definable JPG, GIF, BMP
Sound	MP3 Player MP3, MID, WAV, AMR, iMelody Sound Recorder (AMR, WAV)
Games	Fun Games
Phonebook	300 Entries of Phonebook
Tools	Calendar, To-Do, Alarm, World Clock, Calculator, Units Converter, Currency Converter, Health Tools, Stopwatch

Getting Started

Your First Call


Please refer to the following diagram that describes the main steps to make a first call.

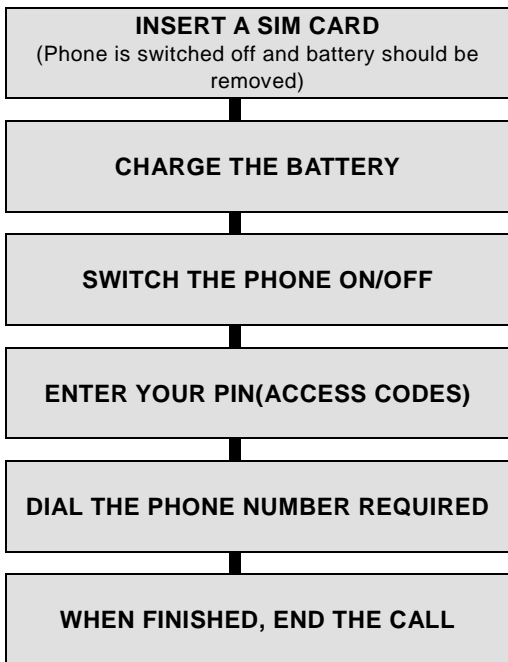

Installing the SIM card

When you subscribe to a cellular network, you will need a plug-in SIM card loaded with your subscription details (PIN, and optional services available).

1. If necessary, switch off the phone by holding down the End/Power key until the Power off message appears.
2. Remove the battery by following the steps below:
 - ① Pull up and hold the locking catch above the battery on the back of the phone.
 - ② Lift the battery, as shown below.

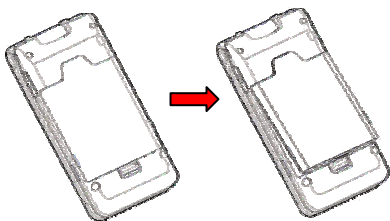

3. Put the SIM card into the phone. Ensure that the SIM card is inserted properly.

