 


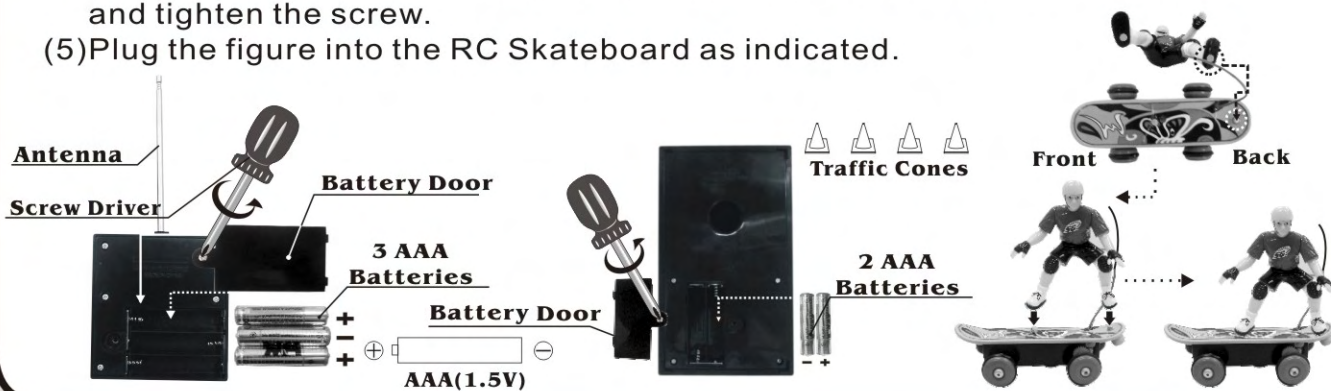

Instruction Manual


START UP

- (1) Open the color box and take out the RC Skateboard set.
- (2) Take out the RC Skateboard, figure, traffic cones, and ramp.
- (3) Unscrew and lift up the battery door of the transmitter and place 3PCS X AAA(1.5V) batteries into the battery compartment. Then relocate the batteries door and tighten the screw.
- (4) Open the battery door of the base charger and place 2PCS X AAA (1.5V) battery into the battery compartment. Then relocate the battery door and tighten the screw.
- (5) Plug the figure into the RC Skateboard as indicated.



Charging the RC Skateboard

- (1) Plug the RC Skateboard into the base charger as indicated.
- (2) Press the charging button and the indicating LED on base will light up while charging in progress.
- (3) Unplug the RC Skateboard when the indicating LED is OFF.

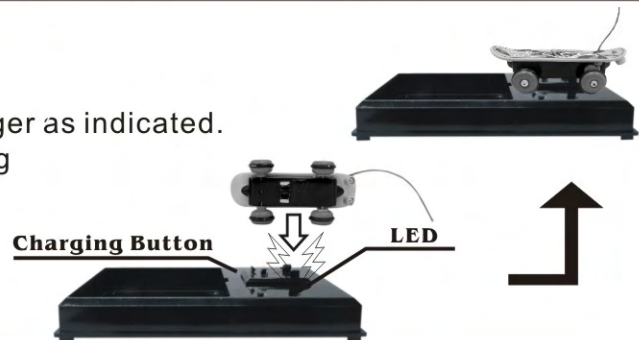

CAUTION:

- (1) Batteries should only be inserted or changed by adult.
- (2) Do not use rechargeable batteries.
- (3) Non-rechargeable batteries are not to be recharged.
- (4) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- (5) Never mix old batteries with new batteries (replace all batteries at the same time).
- (6) Be sure to insert batteries with the correct polarities.
- (7) Remove batteries from product before extended storage.
- (8) Always remove old or dead batteries from the product.
- (9) The supply terminals are not to be short-circuited.
- (10) Check that the contact surfaces are clean and bright before installing batteries.
- (11) Only batteries of the same or equivalent type as recommended are to be used.
- (12) Exhausted batteries should be disposed in special containers.





Instruction Manual

OPERATING THE RC SKATEBOARD

- (1) Fully extend the transmitter antenna.
- (2) Turn ON the transmitter by sliding the switch to "ON" position.
- (3) Hold the transmitter and point to the skateboard.
- (4)(a) Press the forward and reverse buttons to make the skateboard move forward and backward respectively.
- (b) Press forward together with left/right can make it turn left/right respectively.
- (c) Press back and forward button immediately to make the wheelie action. If skateboard is running in wheelie action, press left or right button to make wheelie spinning action.

Remarks: Interference may be happened accidentally when similar band RC Skateboard play at the same time.

Attention: (a) When operating the transmitter, please do not touch the antenna. Otherwise the remote control distance and speed of the skateboard will both be reduced.
(b) To preserve battery life, always turn OFF the transmitter after playing.

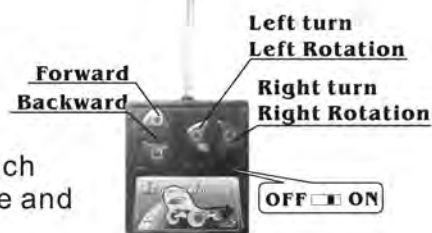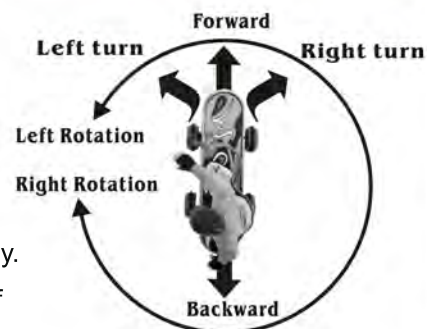

MAINTENANCE AND PERFORMANCE TIPS

- Playing time for RC Skateboard is approximately 3 minutes.
- Charging time is approximately 2 minutes.
- Alkaline batteries are preferable to use.

Note: (a) Battery life varies depending on usage.
(b) Do not play in places where environment temperature is less than 15°C or over 35°C. Otherwise, there may be a remote control problem.

CAUTION

- Packing has to be kept since it contains important information.
- Actual product may vary from images shown on package.

ATTENTION: To preserve battery life, always place the switch in "OFF" position once you have finished playing.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Remark: Antenna is permanently attached!



WARNING:

CHOKING HAZARD- Small parts.

Not for children under 3 years.

