 


R/C Submarine

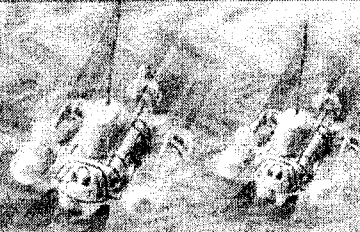

Instruction Manual

 
 


STARTUP

1. Open the color box and take out the Submarine and Set Transmitter.
2. Take out the RC Submarine from the clear blister.

HOW TO INSTALL THE BATTERIES:

1. Unscrew and lift up the battery door of the Transmitter and place 3PCS X AAA(1.5V) batteries into the battery compartment. Then relocate the battery door and tighten the screw. Ensure the polarities of the batteries are correct.
2. Unscrew and lift up the battery door of the the charging platform and place 2 PCS X AAA(1.5V) batteries into the battery compartment. Then relocate the battery door and tighten the screw. Ensure the polarities of the batteries are correct.

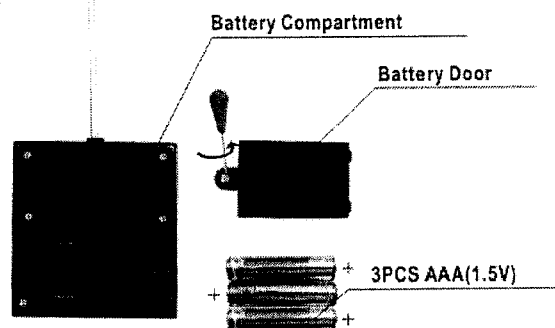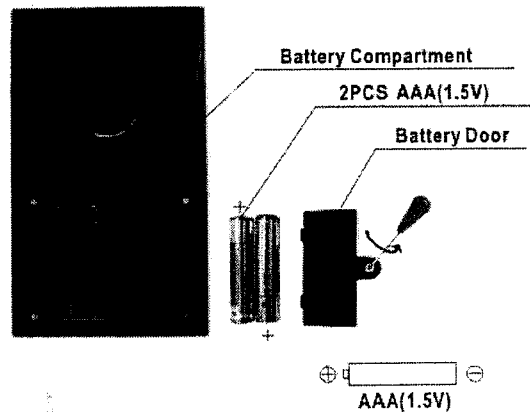


CHARGING THE RC SUBMARINE:

1. Plug out the rear body from the front body.
2. Place the submarine on top of the charging platform unit as shown in the picture.
3. Press the charging button on the platform, then the LED indicator will turn on.
4. After the LED is OFF, plug out the submarine, and plug the rear body into the front body.
It must be plugged tightly.

Remarks: A) If the power of the batteries is low, the LED light will become dim or will not come on at all.

B) If the submarine become slowly or the spotlight inside it become dimmer, please follow above charging procedures or if necessary replace batteries.

 Attention: When re-charging the Submarine after playing, make sure the submarine is dry.


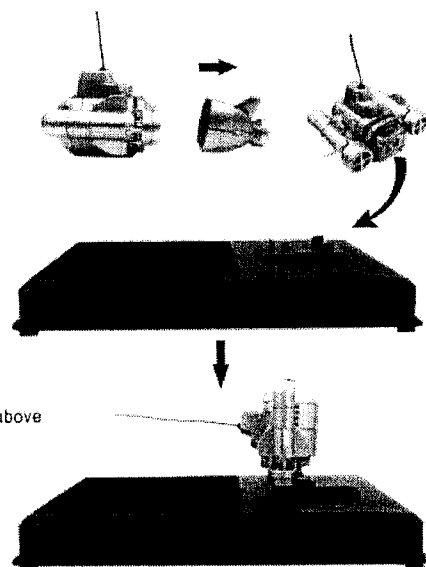


OPERATING THE RC SUBMARINE:

1. Screw/thread the antenna in the antenna hole located on top of the Transmitter.
2. Fully extend the Transmitter antenna.
3. Turn "ON" the Transmitter by pushing the switch to "ON" position.
4. Hold the Transmitter and point to the RC Submarine.
5. Press the forward and reverse buttons to make the submarine dive forward and backward respectively.
Press the left button and right button to make it turn left and right respectively.
6. Leave it idles can make it float up.
7. Rings can be put into / removed from the head of torpedo to adjust the balance as seen in icture.

Remarks: a) Transmitter and charging platform cannot be put under water as it is not waterproof.
b) Interference may be happened accidentally when similar bands RC Submarine play at the same time.
c) The Submarine is to be operated in water only when fully assembled.

  Attention: a) When operating the Transmitter, please do not touch the antenna. Otherwise, the remote control distance and the speed of the submarine will both be reduced.
b) To preserve battery life, always turn "OFF" the controller after playing.

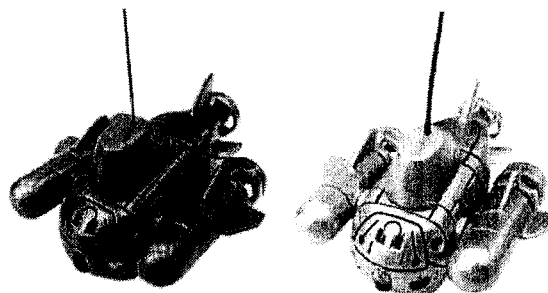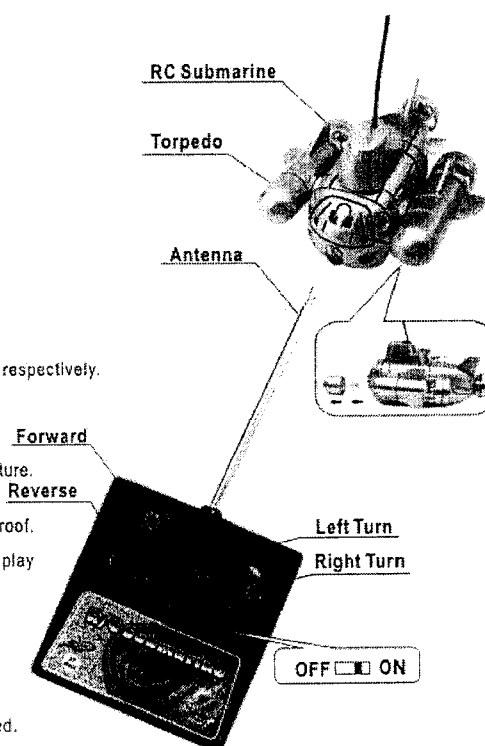

CAUTION:

1. Batteries should only be inserted or changed by adult.
2. Do not use rechargeable batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Never mix old batteries with new batteries (replace all batteries at the same time).
6. Be sure to insert batteries with the correct polarities.
7. Remove batteries from product before extended storage.
8. Always remove old or dead batteries from the product.
9. The supply terminals are not to be short-circuited.
10. Check that the contact surfaces are clean and bright before installing batteries.
11. Only batteries of the same or equivalent type as recommended are to be used.
12. Exhausted batteries should be disposed of in special containers.



MAINTENANCE AND PERFORMANCE TIPS:

- Playing time for RC Submarine approximately 4 minutes.
- Charging time is approximately 2 minutes.
- Note: Battery life varies depending on usage.
- Alkaline batteries are preferable to use.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. IF this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

ATTENTION:

To preserve battery life, always switch OFF the Transmitter after playing.

CAUTION:

- Packing has to be kept since it contains important information.
- Actual product may vary from images shown on package.



WARNING:

CHOKING HAZARD - Small parts.

Not for children under 3 years.



© 2003 SUPER GRAND ENTERPRISE LTD. ALL RIGHTS RESERVED

E-MAIL ADDRESS: info@supergrand.biz.com.hk

