

Battery Caution:


Extreme ATV Instruction Manual

- 1. Non-rechargrable batteries are not to be recharged.
- 2. Rechargeable batteries are to be removed from the toy before being charged.
- 3. Rechargeable batteries are only to be charged under adult supervision.
- 4. Different types of batteries or new and used batteries are not to be mixed.
- 5. Only batteries of the same or equivalent type as recommended are to be used.
- 6. Batteries are to be inserted with the correct polarity.
- 7. Remove batteries from the product before extended storage.
- 8. The supply terminals are not to be short-circuited.
- 9. Batteries must be replaced by an adult.
- 10. We recommend to use alkaline batteries in the product to obtain better performance.
- 11. There are many brands of batteries existing on the market, if you do not get a proper connection, remove and insert again or try with another brand.
- 12. Exhausted batteries should be removed from the toys and disposed in special container.
- 13. Check that the contact surfaces are clean and bright before installing batteries.

What 's included in ATV Series




(Content

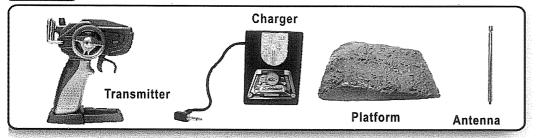


Transmitter Battery Installation



Antenna Assembly

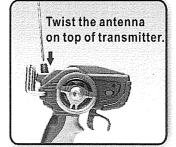


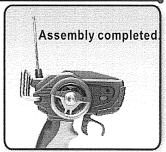


- 1. Make sure the transmitter's power switch is turned OFF when installing batteries.
- 2. Unscrew battery door of transmitter.
- 3. Install 1.5V(AA X 2) Alkaline batteries into the battery compartment; make sure the positive (+) and negative (-) poles are positioned correctly.
- 4. Replace the battery door and tighten the screw.

Charger Battery Installation

- 1. Unscrew the battery door on the bottom of charger.
- 2. Install 1.5V (AA X 4) Alkaline batteries in the battery compartment; make sure the positive (+) and negative(-) poles are positioned correctly.

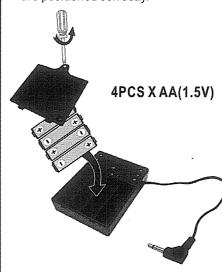

Transmitter Index

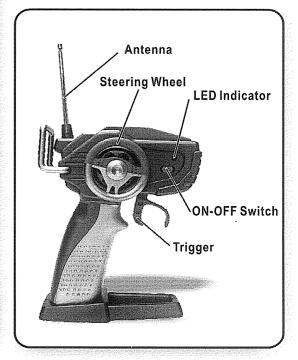

To Charge The Vehicle

- 1. Plug the Vehicle into charger via the charging cord as indicated.
- 2. Press the charging button and make sure the LED indicator Lights up red, indicating it is charging.



Note:

- 1. Charging time is approximately 3 minutes.
- 2. Playing time is approximately 3 minutes.
- 3. The charging progress of the other 5 items is the same to this one.

Remarks

For Swift Buggy and

Storm Buggy, need

to adjust Trigger and Steering Wheel at the

same time to make the

For the other items.

turning action.

you can operate

 
turning action.

Steering Wheel se

parately to make the


Operation

Red LED Indicator /ON-OFF Switch

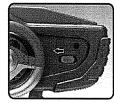


Turn the power switch of transmitter to ON position and operation indicator will light up.

 Steering Alignment Lever of swift / storm Buggy

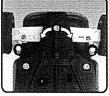

If you find the vehicle does not run in straight, you can adjust the steering alignment lever on the bottom of the vehicle.

 Trigger Switch

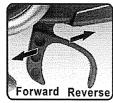


pull and push the trigger to operate the vehicle moving forward or reverse. vehicle 's direction

Turn Left / Turn Right / Steering Wheel



Turn the steering wheel to operate the when it goes.

 ON-OFF Switch

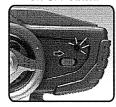

Note: Remove all the batteries from transmitter after playing.

Turn the power switch of transmitter to OFF position after operation.

Stunt Action for ATV Quad





Climb up the abstruction

Operation range is at least 5 meters. (Without interference)

- 1. Please extend the antenna of transmitter for better performance.
- 2. Please uncurl the antenna of vehicle for better performance.

 Avoid water damage to transmitter and vehicle. If they get wet, stop operating immediately and wait until they completely dry.

-Don't dispose batteries in fire that may cause explosion. If liquid leaking from the batteries stick to your skin or clothes, wash off immediately.

If liquid get into your eyes, wash your eves with distilled water and consult a physician immediately.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

- Packing has to be kept since it contains important information.
- Actual product may vary from images shown on package.





©2005 SUPER GRAND ENTERPRISE LTD. ALL RIGHTS RESERVED E-MAIL ADDRESS: info@sgetoys.com HOMEPAGE: http://www.super-gran.com



CHOKING HAZARD-Small parts.

Not for children under 3 years







Item NO. 04025 MADE IN CHINA