

micro RC ATV

Thank you for your purchasing the RadioShack Micro Rechargeable ATV, complete with its own driver. Easy to control, your RC ATV even performs cool stunts, like wheelies and tail spins. The RadioShack RC ATV is perfect for children, ages 6 and up.

installing batteries in your transmitter

 
Make sure your transmitter power switch is turned to **OFF** when installing batteries.

Install four AA Alkaline batteries (not included) in the battery compartment, matching the polarity symbols (+ and -) marked inside.

Note: Remove all the batteries from your transmitter after you finish playing.

Battery Notes:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries.
- Never mix alkaline batteries with other types of batteries.
- If you do not plan to use the vehicle for several days, remove all the batteries from the transmitter and the vehicle. Batteries can leak chemicals that can destroy electronic parts.
- Never leave dead or weak batteries in the vehicle or transmitter.
- When you disconnect the battery pack, do not pull the connector's wires. This might cause damage to the battery.

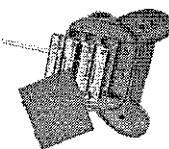

charging your vehicle

1. Plug your transmitter's charging cord into your vehicle.
2. Slide your transmitter's **Charge/OFF/PLAY** switch to **Charge** and make sure the LED indicator lights up red, indicating it is charging.
3. Unplug the vehicle when the LED turns off, indicating charging is complete.

 
Notes:

- Charging time is approximately 3 minutes.
- Playing time is approximately 4-5 minutes.
- Fully discharge your vehicle before recharging. Overcharging your vehicle's internal battery pack could lead to damage.
- If the charging LED does not light when charging your ATV, slide the switch to **OFF** and then back to **CHARGE** to activate the charging function.



what's included


micro RC ATV transmitter antenna user's guide
transmitter with attached charging cord

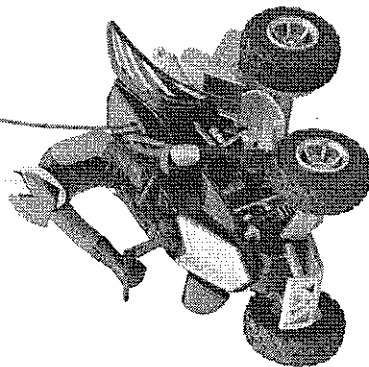

perform cool stunts

Rapidly press **▼** and **▲** on your transmitter to perform a wheelie action.

 
Rapidly press **◀** or **▶** while wheeling to perform a tail spinning action.

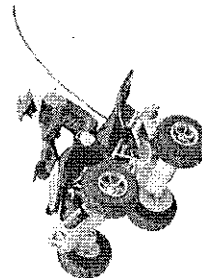

Note: Actual product may vary from the images found in this document.

playing with your vehicle

 1. Insert your transmitter's antenna into the top of your transmitter.
2. Fully extend the antenna.
3. Turn your transmitter on.
4. Use the controls on your transmitter to drive your vehicle.

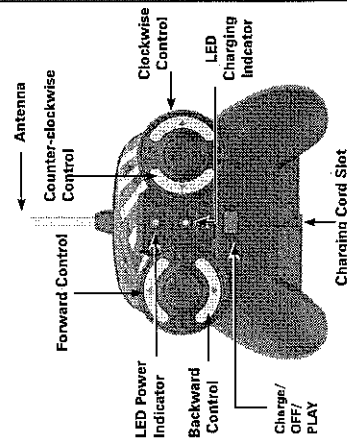

1. Press **▲** to go forward.
2. Press **▼** to go backward.
3. Press **◀** to turn counter clockwise.
4. Press **▶** to turn clockwise.
5. Press **▲** and then **▶** to drive forward and counter clockwise.
6. Press **▲** and then **▶** to drive forward clockwise.
7. Press **▼** and then **◀** to drive backward and counter clockwise.
8. Press **▼** and then **▶** to drive backward and clockwise.

care, service and repair

- Keep your vehicle dry. If it gets wet, wipe it dry immediately.
- Use and store your vehicle only in room temperature environments. Handle it carefully. Do not drop it.
- Keep your vehicle away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- If your vehicle is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with its internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.



The EPA certified RBC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or recycling bin. For more information on the RBC program, call 1-800-THE-SHACK (1-800-845-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.

the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your boat.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

safety, hints and tips

- If your vehicle motor runs, but does not respond to your transmitter, move closer and try again.
- If someone uses a CB nearby, it might interfere with the control of your vehicle. If this happens, move your vehicle away from the CB. You cannot operate your vehicle near devices with transmitters that use the same frequency [27 MHz or 49 MHz]. Check to see which frequency you have.
- If your vehicle continues to run slowly after you recharged it, check the wheels for lint, thread, hair and dust.
- If your vehicle gets caught under an object, immediately release the control levers on the transmitter and retrieve the vehicle.
- Operation range is around 3 meters (without interference).
- Extend the antenna of your transmitter for better performance.
- Uncurl the antenna of your vehicle for better performance.
- Do not operate your vehicle on thick carpet, sand, through puddles of water, or dusty areas that will damage your vehicle and electronic parts inside.
- Do not operate your vehicle with the same frequency of other player in same area that will cause frequency interference and result in vehicle out of control.

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations

300 RadioShack Circle, Fort Worth, TX 76102

04/04