

Xelfie™ Play

User Manual

Smartphone Multimedia Remocon Xelfie Play(XSC200)

 


made in KOREA
www.X-pointer.com

1. Product Configuration

Components	Qty.
Xelfie Play	1
Xelfie Play Clip	1
Battery (Button Cell CR2025)	1
Strap	1
User Manual	1

2. Designation of Part



No.	Designation
①	Status indicator LED
②	Joystick (Up, Down, Center, Left, Right)
③	Battery Cover

※ Caution : The components and functions of the product may vary without notification to upgrade the performance.

3. Compatible devices

Please check the compatible device list.

Check the below website, or
(www.choistec.com/en/xelfieplay/faq)
Scan the QR code
to check the compatible devices.



4. How to connect Xelfie Play

- Check OS of the smartphone to connect.
Xelfie Play is compatible with Android 4.4.2, 4.4.4 and ICS7, 8.
(Some Android phones may not be compatible depending on the manufactures. Make sure to check the compatible devices.)
- Select Bluetooth and set it "On" on configuration screen.
(Activate Bluetooth.)
- Select "Search" or "Search for devices" at the bottom of a smartphone.
- Press a joystick center of Xelfie Play, then the device goes to connection standby mode and status indicator LED blinks at a constant interval. (for 15 seconds)
- Searched Xelfie Play is displayed on the Bluetooth device lists.
(E.g., Xelfie 48, Xelfie 54, etc.: You may check your Xelfie Play by the two-digit number after the word, "Xelfie".)
- After selecting searched Xelfie Play, it will be automatically registered and connected. (In case of iPhone, "Bluetooth Pairing Request!" may be displayed on the screen. Then select "Pair".)
- If Xelfie is connected normally, the indicator LED will blink quickly and then it will be turned off.
- When Xelfie Play does not work even after connected, please refer to item 34 of the below website
<http://choistec.com/board/?code=faq>
※ Android smartphone may not work when it is connected with more than two Bluetooth devices. In this case, Xelfie Play will work normally if you connect Xelfie Play at the first after disconnecting connected multimedia Bluetooth devices with a smartphone.

▶ Xelfie Play indicator LED

Connection standby with a smartphone	The indicator LED blinks for every 0.5 second (about 15 seconds)	
When it is connected with a smartphone	The indicator LED blinks quickly and then it will be turned off right after connected.	
When the device works after connected with a smartphone	The indicator LED blinks during a joystick is pressed.	

※ LED doesn't work with a button : Battery problem or failure.
※ For more detail to use Xelfie Play, please check on the website (www.choistec.com/xelfieplay/faq), and For more detail about trouble shootings, please check on the website (<http://choistec.com/board/?code=faq>)

5. How to use Xelfie Play

Xelfie Play is only available under "connected" with a smartphone.

- When Xelfie Play is in sleep mode, make a long-press of a joystick center (After connected, the indicator LED blinks quickly and then it will be turned off.)
- For checking the connection between Xelfie Play and smartphone, check the status "Connected" on the Bluetooth device lists.

Xelfie Play is operated by a joystick.

- When it is used for a smartphone audio controller
Up : Volume up
Down : Volume down
Center : Play/Pause
Left : Play previous song
Right : Play next song
- When it is used for a smartphone camera shutter
Up : Volume up (Photo shoot)
Down : Volume down (Photo shoot)



※ Precautions(for some smartphones such as Samsung Galaxy S4, Note3, etc.)

If camera zoom function works when Xelfie Play joystick up/down is pressed, please use the device after changing the camera setting.



6. Way to release Xelfie Play and sleep mode function

Forced sleep mode : Make a long-press of a joystick center (2 seconds of longer), then Bluetooth connection is released and the device becomes sleep mode.

Automatic sleep mode : If the device is not used for more than 1hour under connected with a smartphone, Bluetooth connection will be released and the device will become sleep more.

7. How to change battery

One battery is provided in the basic product package. If the inserted battery is discharged completely, the product may not function well. Then replace the battery (if LED does not work).

- Prepare one battery (CR2025).
- Detach the battery cover of Xelfie Play.
- Remove the existing battery from the battery cover and replace with a new one.
- Put back the battery cover of Xelfie Play.
- It shows that the battery is normally replaced if the indicator LED blinks with a certain period (about 15 seconds) when you press the joystick center.
(The indicator LED may blink only few times because Xelfie Play which was connected once is automatically reconnected to a smartphone.)
- Check the battery insert status if the indicator LED does not blink with a certain period.

8. Caution

- Do not apply excessive pressure, use the product out of the purpose and arbitrarily modify the product.
- Take care for an infant and a child not to eat the product and keep the detached battery out of reach of children.
- Dispose of the replaced battery following the instruction.
- Do not make the water contact the water or wet.
- Follow the temperature of -10 ~ 50°C for the product storage and use.
- Take care not to lose your product.

9. Specification

Operating Range	Max20m (Open Field)	Battery	CR2025 (DC 3V)
RF Protocol	Bluetooth 4.0 LE	Current	Less than 10mA
Frequency Range	2,402~2,480MHz	Weight	4,25g(without battery)
Frequency Channel	40CH	Size	Ø30 x 1.1mm
RF Power	Max 4mW	Operation	Temp. -10~50°C Humi. 30~95%
Modulation	GFSK	Storage	Temp. -10~50°C Humi. 95% less

10. Certification

- Separately marked on the box

FCC ID : RVBXS200

Model name : XSC200

Chois Technology Co., Ltd.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions :

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

11. Customer Support

We will kindly help you in case you have problems or there is something to improve on the product or its use. Please refer to our contact information as below.

E-mail : inquiry@choistec.com
Homepage : www.X-pointer.com

12. Warranty

One year warranty.

If you have any problems, please contact store you bought.