

Wireless Key Finder


User Manual



Overview

This wireless key finder can help you find your belongings that frequently lost, like keys, remotes, purse, glasses, canes, umbrella etc. Just press the button on the transmitter, the beeping sound will lead you to your lost belongings.

Diagram

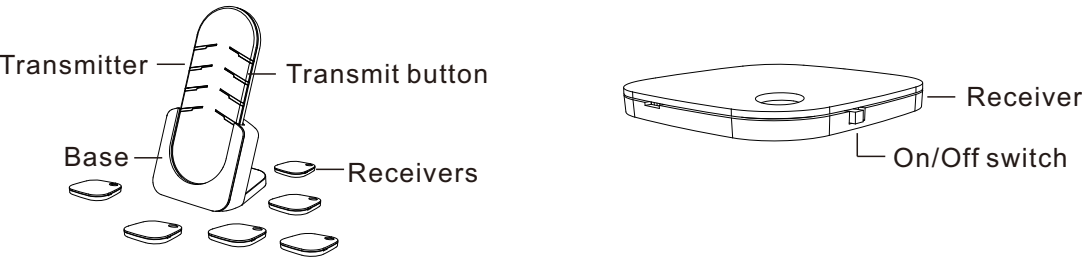

Main features

- Beautiful design and simple to you
- Transmitter with 4/5/6 buttons and each button can pair with multiple receivers
- Up to 80dB beeping sound and 30m wireless range
- Low consumption and long standby time

Transmitters and receivers pairing

1. Turn on receiver
2. Press any button on the transmitter


Note:

- (1) The receiver will keep beeping when you turn it on and stop until it is paired with the transmitter
- (2) Each button on the transmitter can be linked with multiple receivers.
- (3) Please pair the receivers and transmitter again after you turned the transmitter off and on.

How to use it?


1. Attach the receivers to your frequently lost items
2. Press any button on the transmitter, the corresponding receiver will beep if it is within the range of transmitter.
3. The receiver will start beeping once it received signal from transmitter, If no beep is heard, change another place where your lost items would be and press again

Battery installation/replacement

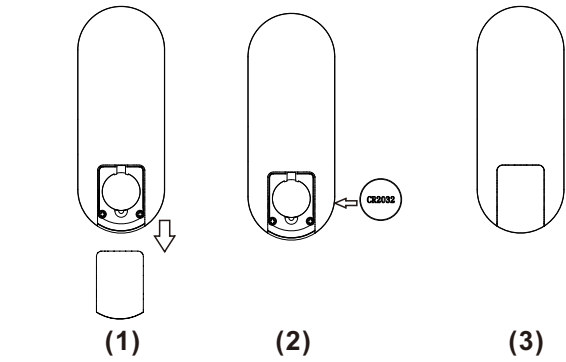

Transmitter: requires one CR2032 cell battery

1. Remove the battery door from the back of transmitter
2. Install the battery according to the (+) and (-) marks inside the battery compartment
3. Push the battery door back in place

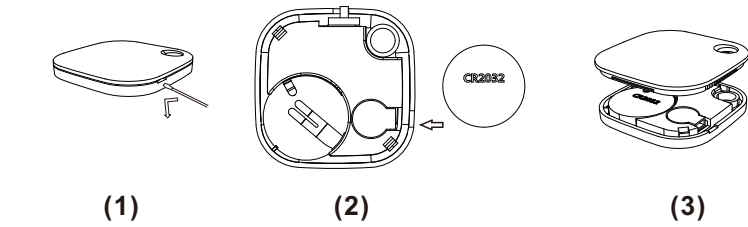

Receiver: requires one CR2032 cell battery

1. Insert a flat-bladed screwdriver into the slot on the receiver, carefully lever the cover and base apart.
2. Put the battery into the battery compartment, making sure the "+" side of the battery is facing upwards
3. Replace the cover back in place

Note: If the battery is low, the indicator on transmitter will become dimmer and receiver will beep lowly

Specifications

Dimension: (transmitter) 4.7(L)*1.8(W)*0.6(H) inch; (receiver) 1.5(d)*0.2(H) inch
Batteries: (transmitter): 1 x CR2032 (included); (receiver): 1 x CR2032 (included)
Sound: 80dB
Wireless range: 100ft (open space)
Wireless frequency: 433.92MHz
Standby time: (transmitter): 5 years; (receiver): 6 month

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.