



 
WIRELES EARPHONES (MODEL: 382) AND
CHARGING CASE (MODEL: 382C)

MASTER GUIDE


WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE


- Wireless Earphones (Model: 382) and Charging Case (Model: 382C)

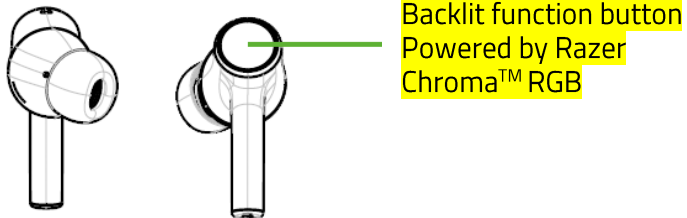


- Charging case

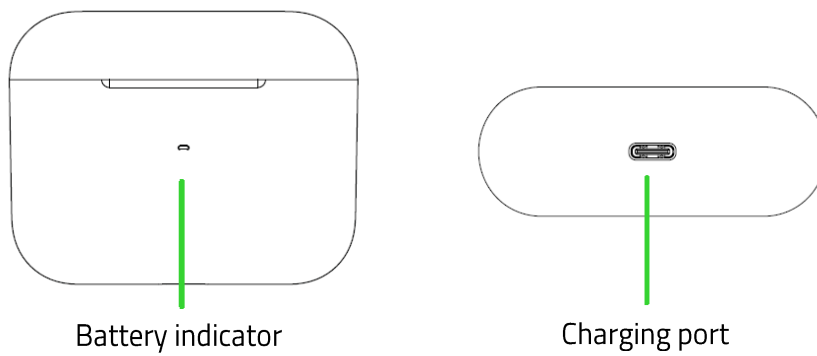 

- Charging cable

 

 - Additional silicone ear-tips in 3 sizes (S, M, L)

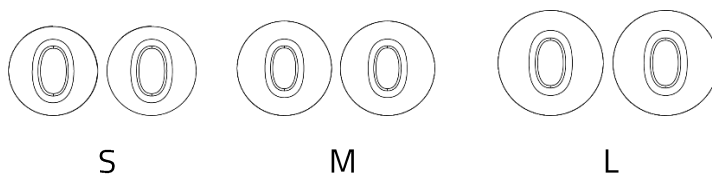


WHAT'S NEEDED

- Devices with Bluetooth audio capability
- Internet connection for app installation

LET'S GET YOU COVERED

 You've got a great device in your hands, complete with a 2-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

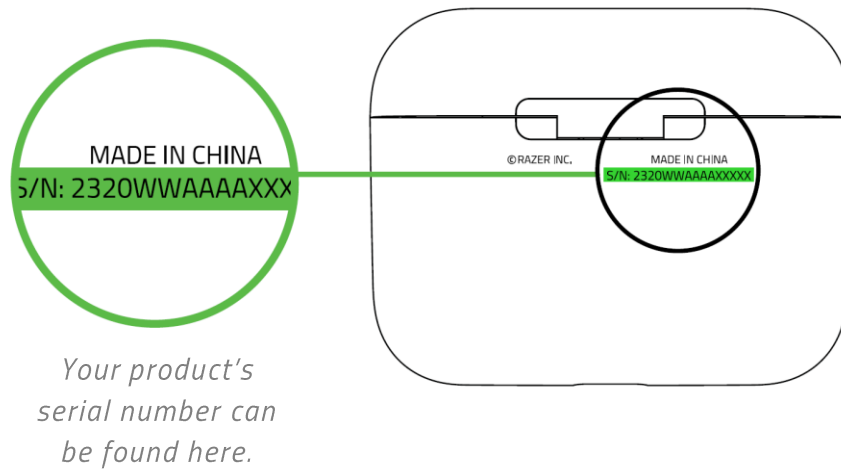


Got a question? Ask the Razer Support Team at support.razer.com

GETTING STARTED

 CHARGING YOUR WIRELESS EARPHONES AND CHARGING CASE

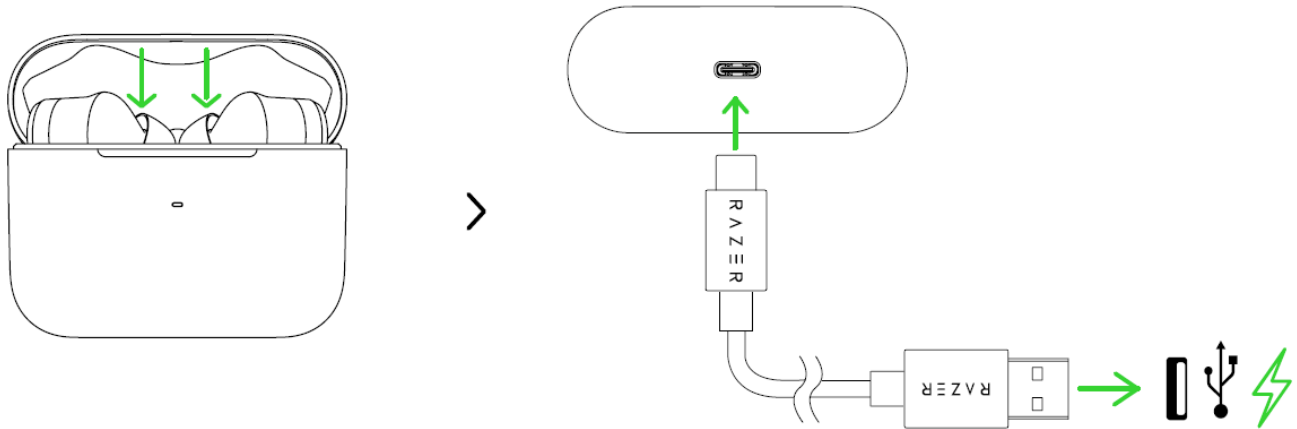

For first time use, connect the charging case to a USB port using the charging cable without removing the earbuds. For subsequent use, the charging case and the earbuds can be charged independently.






Wait until your Wireless Earphones and Charging Case is fully charged.

BATTERY INDICATOR FOR THE CHARGING CASE

When Plugged In

	Status
Static red 	Charging
Static green 	Fully charged


When Unplugged

	Status
Static green 	Battery full
Static orange 	Battery low
Blinking red 	Battery critical


PAIRING TO A MOBILE DEVICE

When trying to connect your Razer product, remember to keep it within 1 meter of your mobile device.

 
1. While inside the charging case, simply open the lid to enter pairing mode.

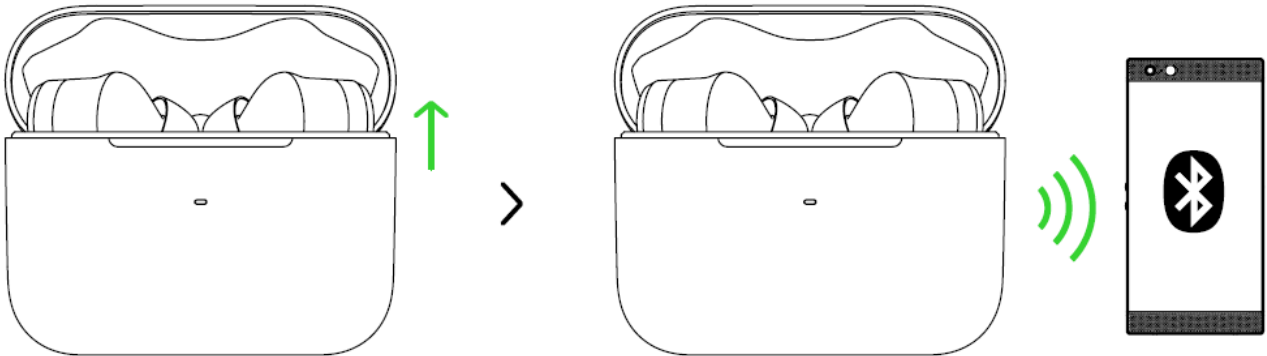

 2. Enable Bluetooth on your mobile device and select Wireless Earphones and Charging Case from the list of devices found.

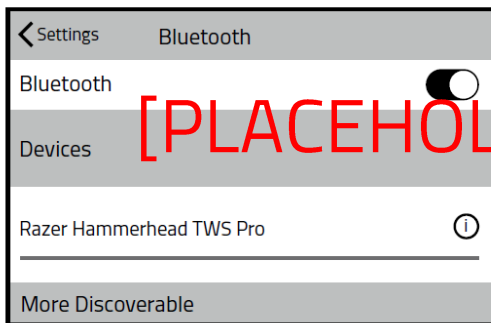

iOS

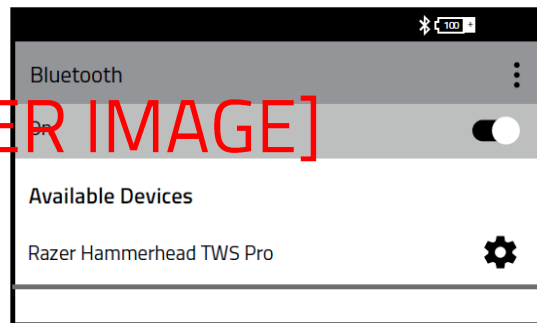 

Android

3. Wait for pairing to complete. You will hear an audio prompt when the earbuds have successfully paired and connected to your device.



If the earbuds fail to connect to your audio source, the earbuds will stay in search mode then power off after 3 minutes. If this happens, simply repeat the steps again to pair.

 


Once the earbuds have been paired, it will automatically try to connect to that paired mobile device every time the charging case's lid is opened, or the earbuds are powered on. Your earbuds can only connect to one mobile device at a time.

USING YOUR EARBUDS

GAMING MODE


While connected, triple tap then hold the last tap for at least 2 seconds on any earbud to activate gaming mode. Once enabled, your earbuds will function at a lower latency; giving you real-time audio feedback while gaming. Repeat the same gesture to disable gaming mode.

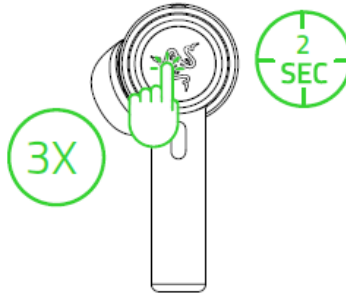

i For best performance, it is recommended to keep your earbuds within a very close distance of the audio source.

ACTIVE NOISE CANCELLATION (ANC) / QUICK ATTENTION MODE

 
Active Noise Cancellation helps eliminate background noise while Quick Attention Mode allows you to hear your surroundings without needing to remove the earbuds. While connected, tap and hold on any earbud for at least 2 seconds to activate ANC and repeat to activate Quick Attention Mode. Doing the same gesture for the third time will deactivate both functions.

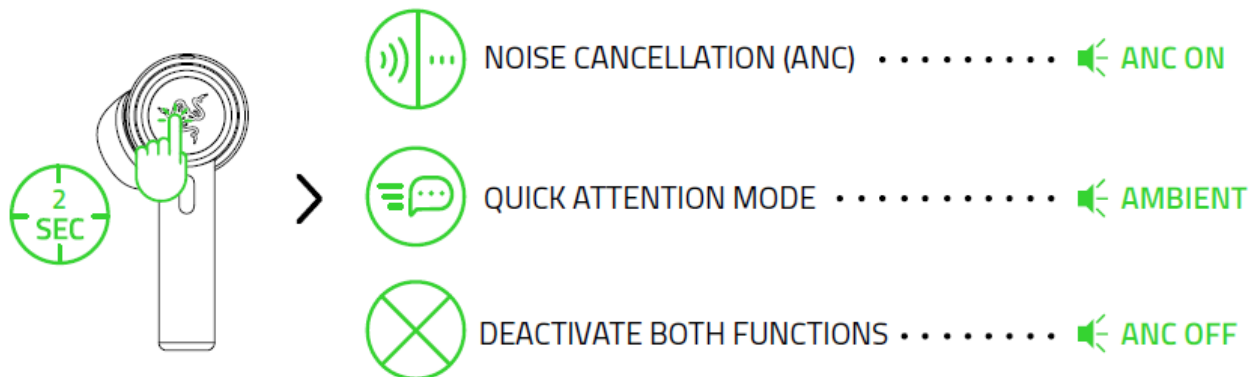

i An audio prompt will notify you when ANC and Quick Attention Mode have been enabled or disabled.

POWER ON/OFF

 
To power off the device, simply place the earbuds back inside the charging case and close the lid. Opening the lid if they are in the charging case will power them on.

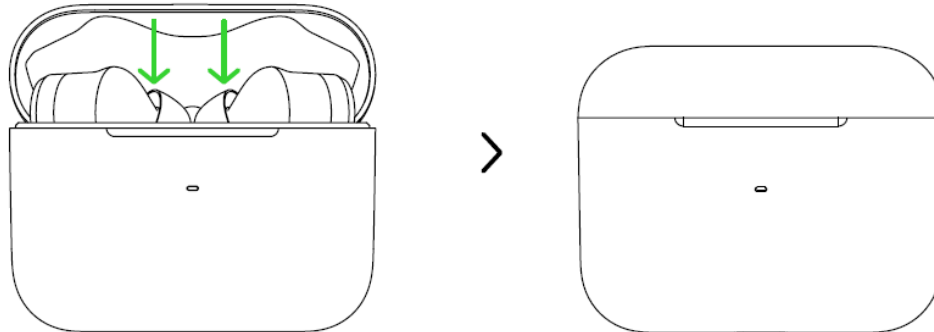

If the earbuds are left idle outside the charging case for a few minutes, you will hear an audio prompt and then the earbuds will power off.




 Tap and hold the function button on each earbud for at least 2 seconds to power them on again. You will hear an audio prompt from each earbud once they are powered on.

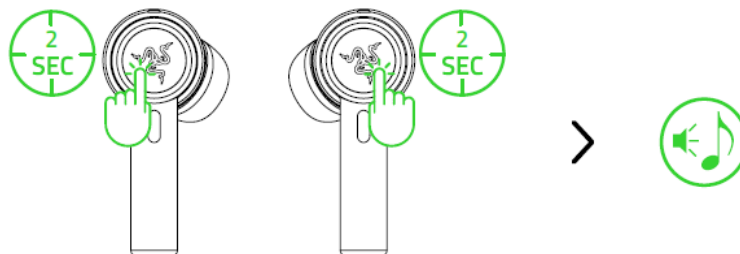


USING THE SILICON EAR-TIPS

 The silicon ear-tips offer increased comfort, sound isolation, and security. Various size options let you achieve a comfortable and secure fit that effectively reduces unwanted noise.

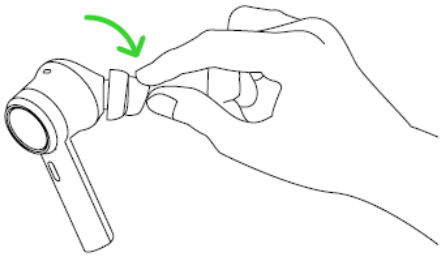

Removal

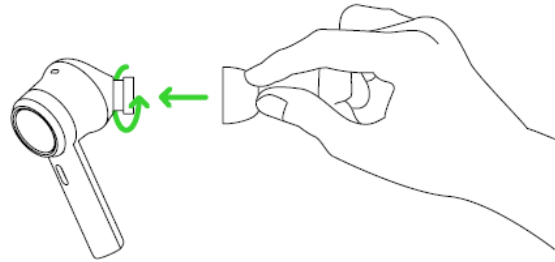 

Replacement

- i** *Due to the different ear canal sizes of individuals, it's recommended to interchange the ear-tips to a larger or smaller size to improve comfort and sound quality and achieve a proper seal.*

FUNCTION BUTTON QUICK REFERENCE

The following functions are only available when the earbuds are paired to a mobile device.

ACTION	EFFECT		AUDIO PROMPT
Tap	Answer call		Voice
	End call		Tone
	Play/pause media		None
Tap and hold for 2 seconds	Power on the corresponding earbud		Voice
	Reject incoming call		Voice
	Activate virtual assistant		Tone
Tap and hold for 4 seconds	Activate pairing mode for the corresponding earbud		Voice
Double tap	Accept incoming call or switch calls		None
	Skip to the next track when playing media		None
Double tap then hold the last tap for 2 seconds	On the left earbud	Decrease volume	None
	On the right earbud	Increase volume	
Triple tap	Return to the previous track when playing media		None
Triple tap then hold the last tap for 2 seconds	Enable/disable Gaming Mode		Voice
	While in pairing mode, clear paired devices		Voice


PERSONALIZE YOUR MOBILE EXPERIENCE

RAZER AUDIO APP

Making advanced customization just got a whole lot easier for your Wireless Earphones and Charging Case. With the Razer Audio App, you'll be able to customize its EQ settings and auto shutoff feature, update to the latest firmware, and much more — anytime, anywhere.

RAZER CHROMA RGB APP

 With 16.8 million colors and a suite of effects to choose from, use the Razer Chroma RGB app to bring out your style and stand out from the crowd with the ultimate wireless earbud flex.

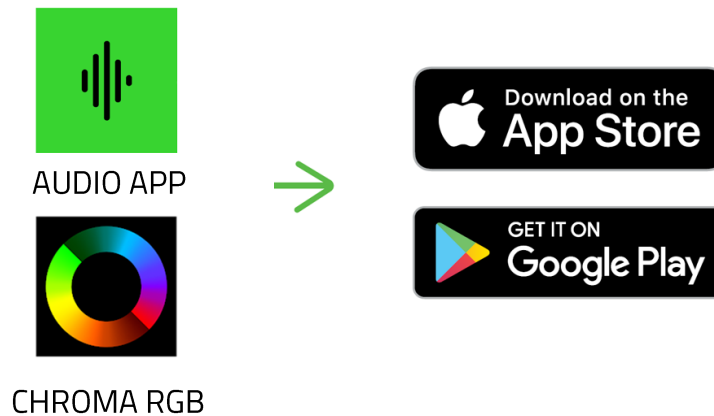

1. Download the mobile app on your mobile device.
2. Launch the app and follow the onscreen instructions.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Wireless Earphones and Charging Case, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activities that requires active awareness of your surroundings.

Listening to excessively loud volumes over extended periods of time can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

MAINTENANCE AND USE

The Wireless Earphones and Charging Case requires minimum maintenance to keep it in optimum condition. Once a month we recommend you clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.” are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

©2018 Google LLC All rights reserved. Android, Google, Google Logo, Google Play, and the Google Play logo are registered trademarks of Google LLC.

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Wireless Earphones and Charging Case (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.



STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

ENGLISH

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Razer (Europe) GmbH, declares that this Razer Hammerhead True Wireless Earbuds (Wireless earphones model: 382, Charging case model: 382C) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and 2015/863/EU.

Wireless earphone (Left):

Radio Frequency: Bluetooth
Operating Frequency: 2400-2483.5Mhz
Output power: <11dBm

Wireless earphone (Right):

Radio Frequency: Bluetooth
Operating Frequency: 2400-2483.5Mhz
Output power: <11dBm

BATTERY INFO

Risk of fire or explosion or defeat the safeguard of equipment if the battery is replaced by an incorrect type. Replace only with the same or equivalent type. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. High or low extreme temperatures or low air pressure at high altitude that the battery can be subjected to during use, storage or transportation. Leaving the battery in an extremely high temperature and/or low air pressure surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.



EU PRODUCT AND BATTERY DISPOSAL INFORMATION

BATTERY WARNING

The wireless earphones and charging case contains Li-ion rechargeable batteries. In general, the life expectancy of such batteries is dependent upon usage. If you suspect that the Li-ion rechargeable battery inside the wireless earphones and charging case may be drained (has a low charge), try charging it. Caution: Do not open, mutilate, or expose to conducting materials (metal), moisture, liquid, fire, or heat. Doing so may cause batteries to leak or explode, resulting in personal injury. Do not leave the rechargeable batteries discharged or unused for extended periods. Battery life varies with usage.



WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT INFORMATION

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



Product registration numbers:

FCC ID: RWO-382

IC ID: 8092D-382

FCC CAUTION STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by party responsible for compliance could void the user authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CANADA SAR

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 0mm between the radiator and your body.

Cet émetteur ne doit pas être Co-place ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 0mm entre le radiateur et votre corps.

NOTICE FOR CANADA

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 0mm between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet

équipement devrait être installé et actionné avec une distance minimum de 0mm entre le radiateur et votre corps.

CANADIAN CLASS B STATEMENT:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RADIATION EXPOSURE STATEMENT:

The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.