

DTD:26/6/2018

USER MANUAL FOR RZ04-0258

For

(Wireless Gaming Headset Model: RC30-025801 and USB WIRELESS DONGLE Model:RC30-025802)

PACKAGE CONTENTS / SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Wireless Gaming Headset (Model:RC30-025801)
- 2.4 Ghz USB WIRELESS DONGLE (Model:RC30-025802)
- 3.5mm audio cable with in-line controls
- Important Product Information Guide

SYSTEM REQUIREMENTS

- Systems or gaming consoles with a free USB port*
- Devices with 3.5mm audio + mic combined jack

**Setup and features may vary*

 
REGISTRATION / TECHNICAL SUPPORT

REGISTRATION

Register your product online at razer-id.razer.com/warranty to get real-time information on your product's warranty status.

If you haven't registered for a Razer ID yet, register now at razer-id.razer.com to get a wide range of Razer benefits.


Your product's serial number can be found underneath the leatherette cushion, as shown

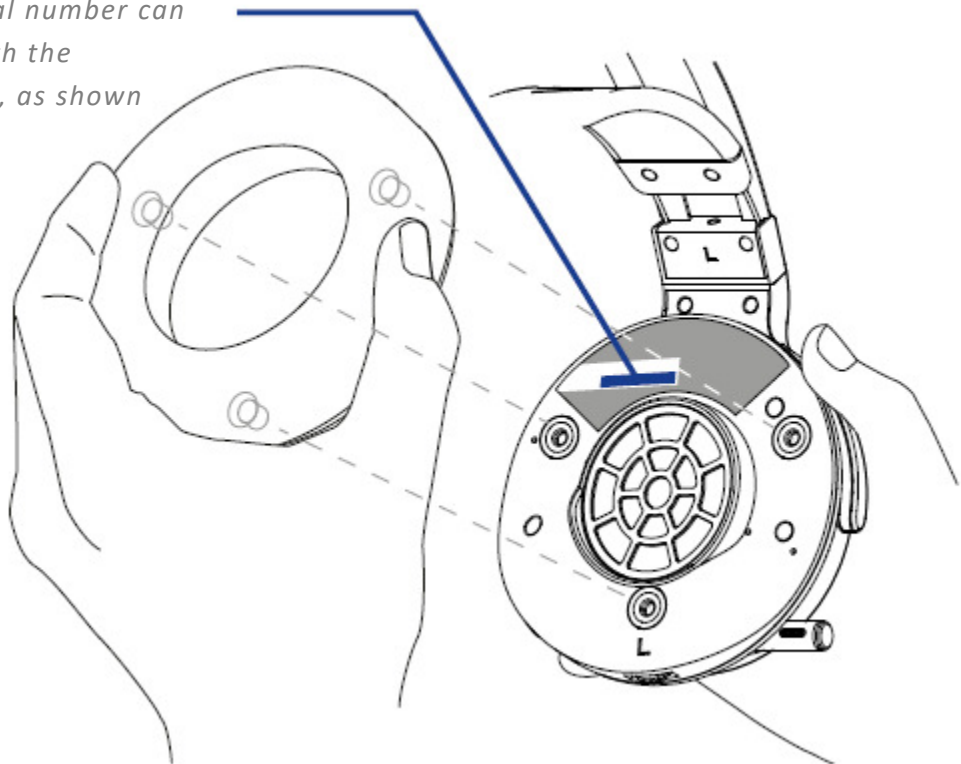

TECHNICAL SUPPORT


- 1 year limited manufacturer's warranty.
- Free online technical support at support.razer.com.

 DEVICE LAYOUT

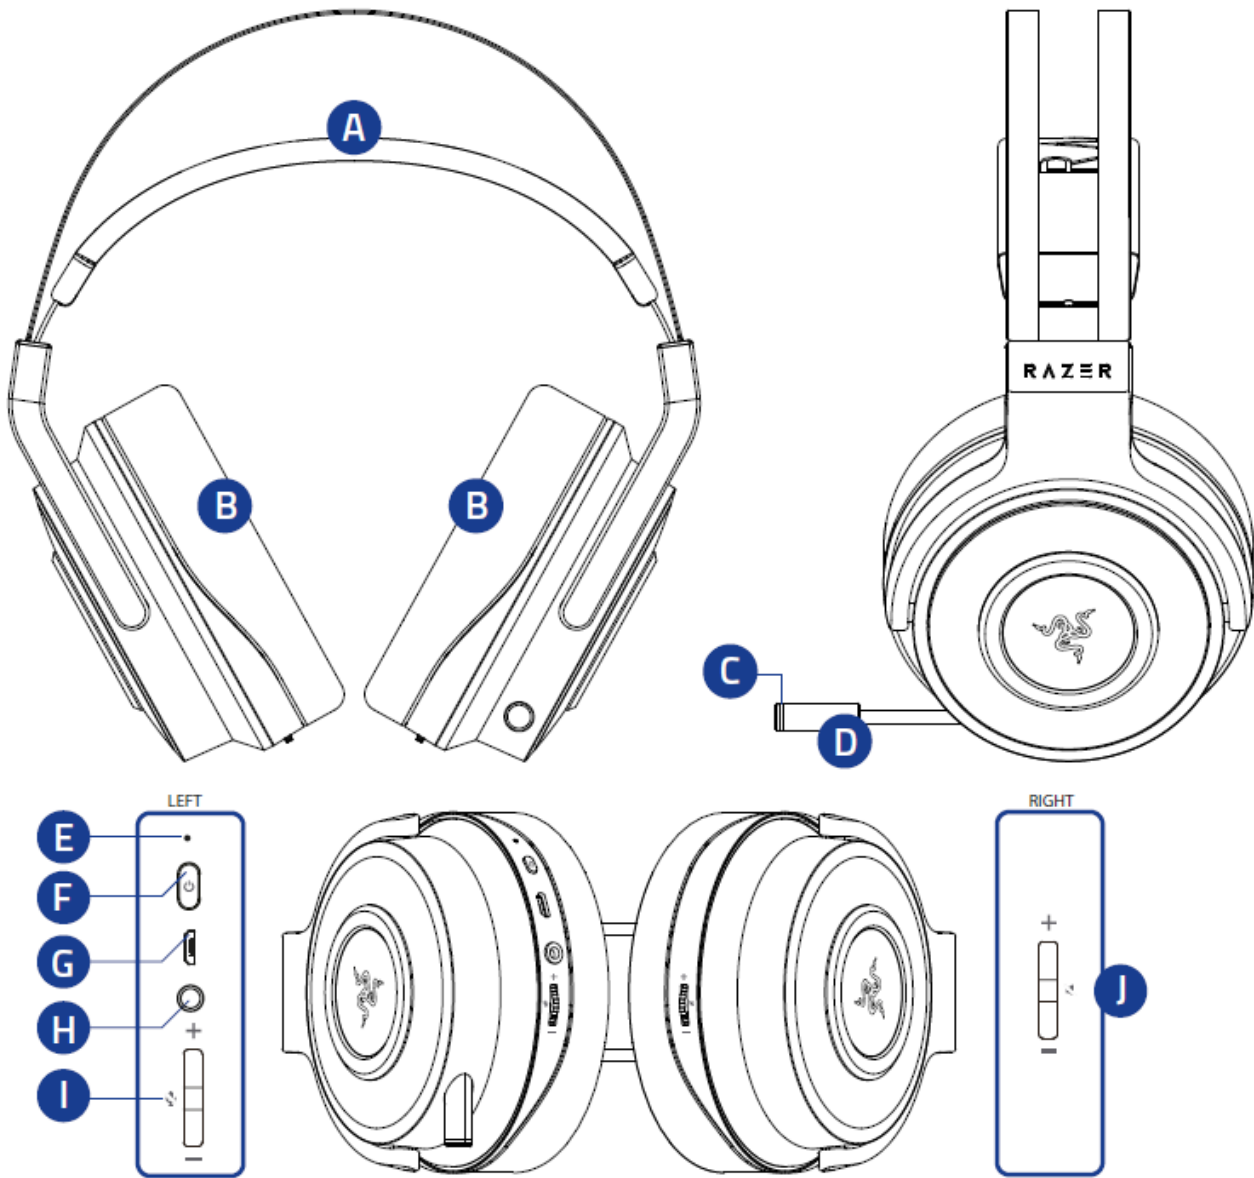

- A. Adjustable padded headband
- B. Circumaural, leatherette ear cushions
- C. Microphone LED
- D. Retractable microphone
- E. Headset LED indicator

 - F. Headset power button
- G. Micro-USB charging port
- H. 3.5mm audio jack
- I. Mic monitoring control
- J. Audio volume control

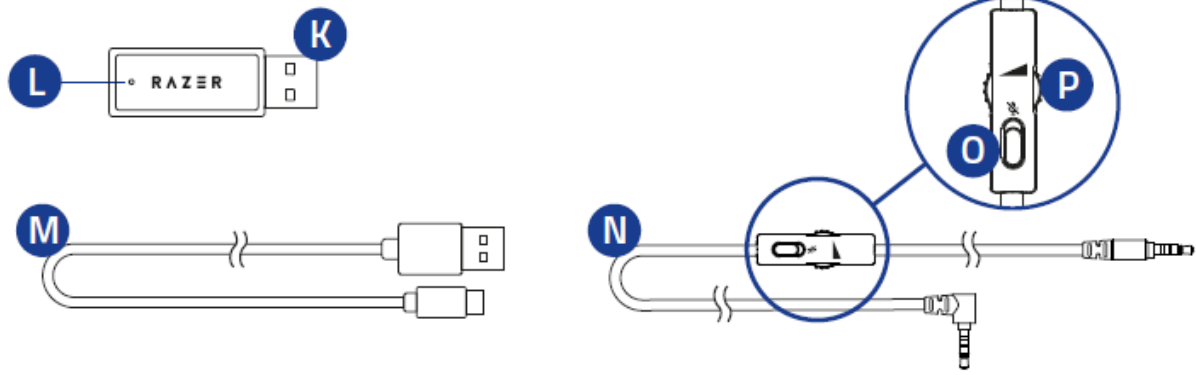


- K. 2.4 Ghz USB dongle
- L. USB dongle LED indicator
- M. Micro-USB to USB cable
- N. 3.5mm audio cable with in-line controls
- O. Microphone mute toggle
- P. Volume control wheel

SETTING UP YOUR RAZER THRESHER FOR PS4


WIRELESS CONNECTION

CONNECTING TO YOUR PS4

 1. Plug the USB dongle to your PS4.

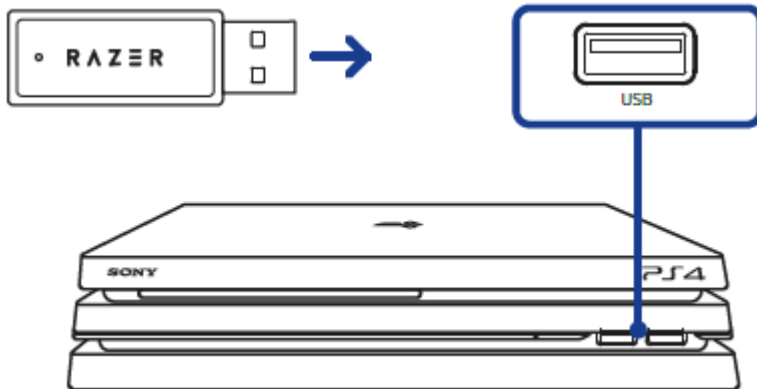


 2. Go to **Settings > Devices > Audio Devices**, and then select your **Razer Thresher For PS4** for the **Input Device** and **Output Device** options.

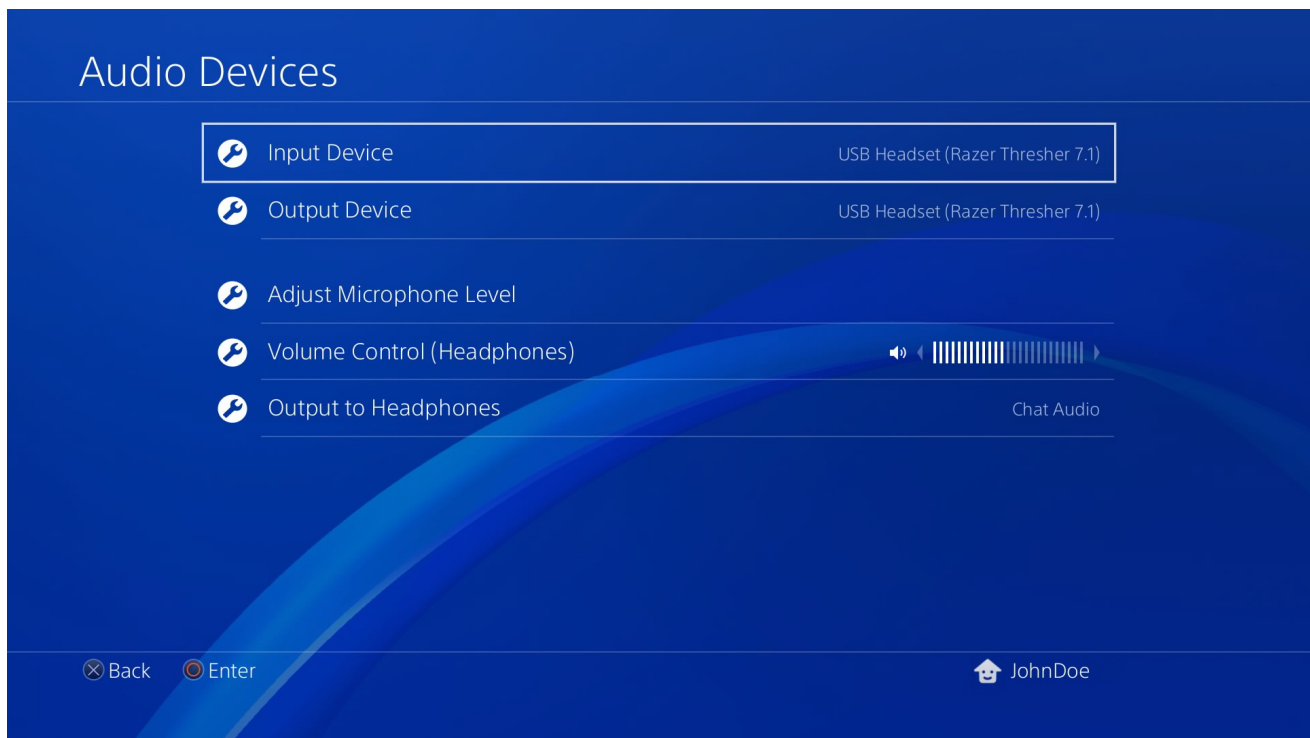


Note: It is recommended to set Volume Control and Adjust Microphone Level to maximum then use the headset controls to fine-tune the settings.

 3. On the **Output to Headphones**, select **All Audio**.

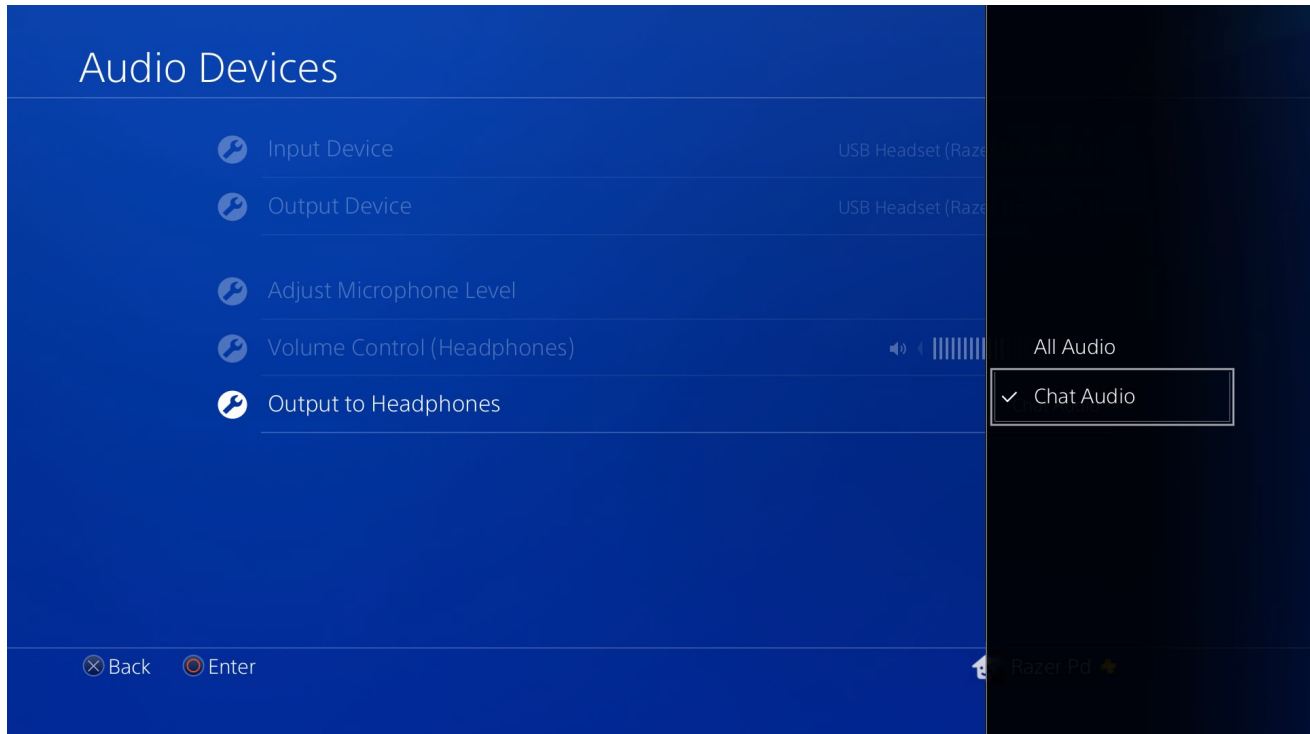


CONNECTING TO YOUR PC

 
1. Plug the USB dongle to your PC.

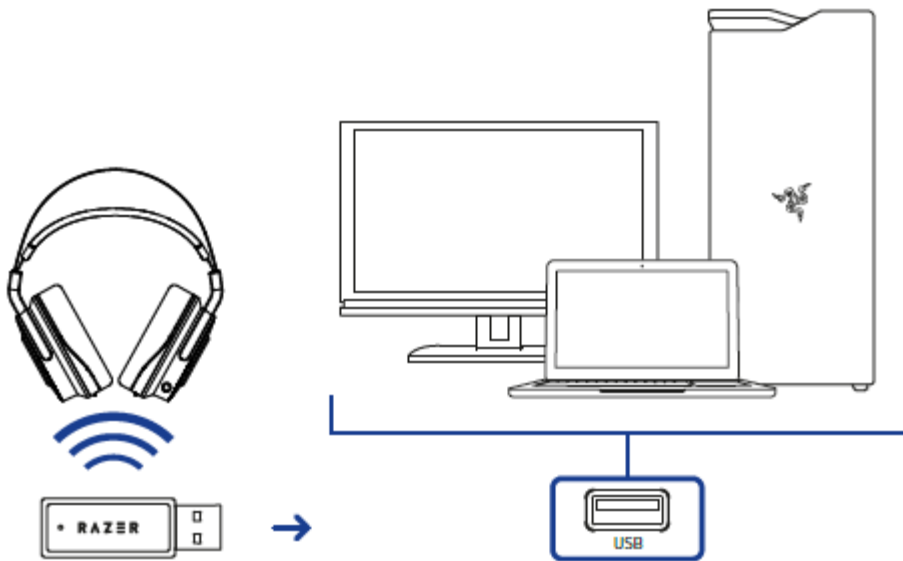

 
2. Right-click on the sound icon on the system tray, and then select **Playback devices**.

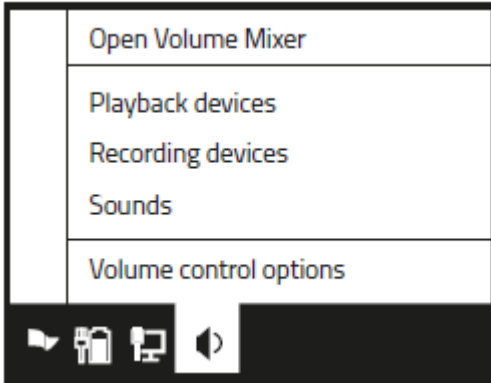

 3. In the Playback tab, select Razer Thresher For PS4 from the list, and then click the **Set Default** button.

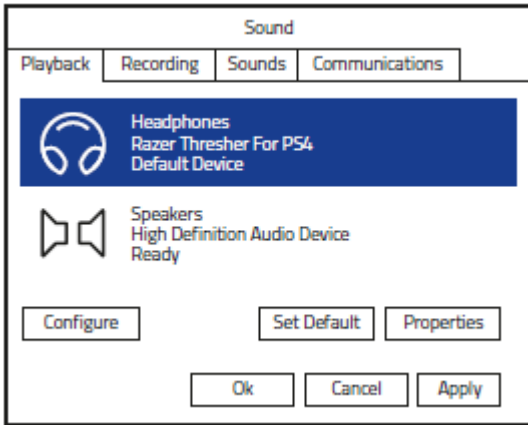


 4. In the Recording tab, select Razer Thresher for PS4™ from the list and click 'Set Default' button.

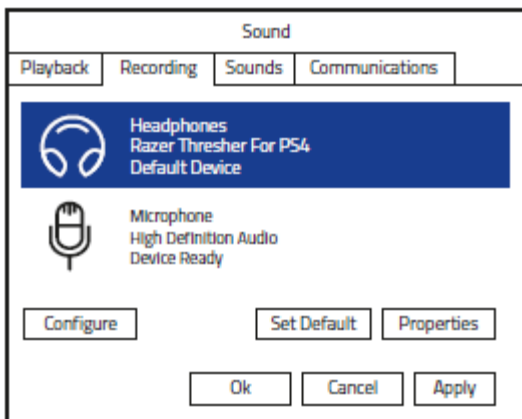


CONNECTING TO YOUR MAC

 
1. Plug the USB dongle to your Mac.

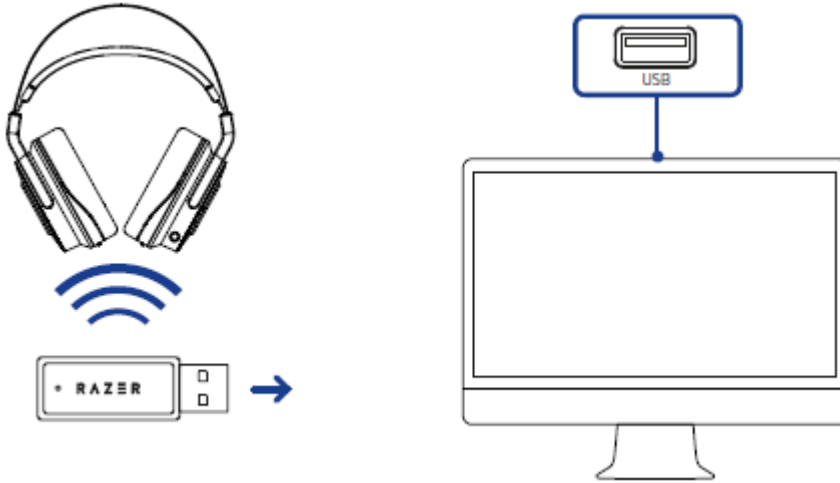

 2. Open your Sound settings from System Preferences > Sound.

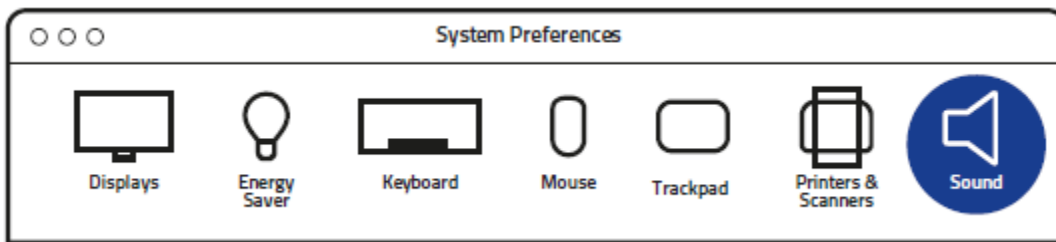


 3. In the Output tab, select Razer Thresher For PS4 from the list.



Name	Type
Headphones	Built-in Output
Line Out	Built-in Line Output
Razer Thresher For PS4	USB

 4. In the Input tab, select Razer Thresher For PS4 from the list.




Name	Type
External Microphone	Microphone port
Line In	Audio line-in port
Razer Thresher For PS4	USB

WIRED CONNECTION


CONNECTING TO YOUR PS4 CONTROLLER

 To connect your Razer Thresher For PS4, simply plug the 3.5mm audio cable from your headset to your PS4 controller's stereo headset jack.

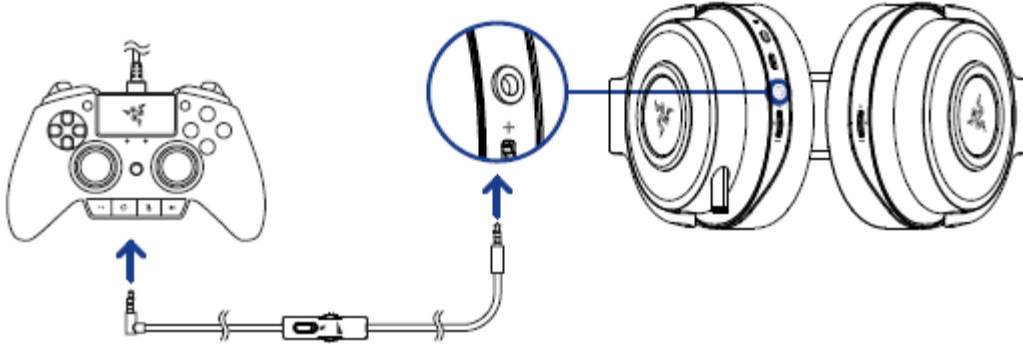

CONNECTING TO YOUR OTHER DEVICES

 
If your device does not have a USB port but instead have a 3.5mm audio + mic combined jack, simply plug the 3.5mm audio cable from your headset to your device's audio jack.

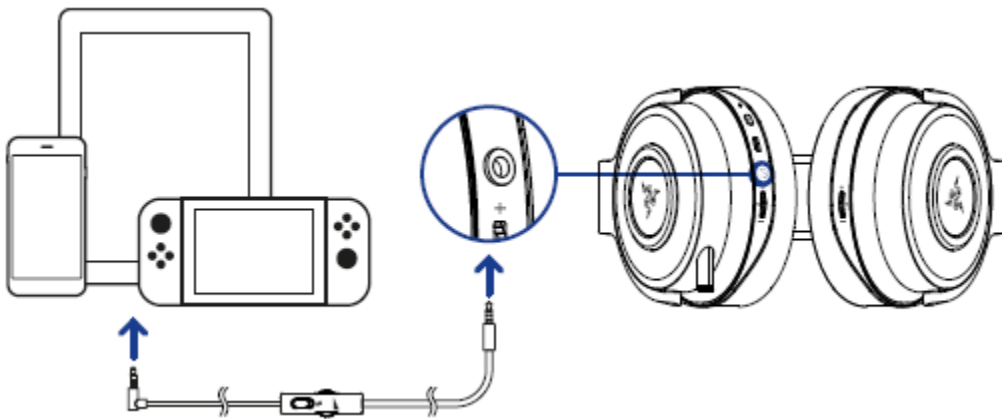

USING YOUR RAZER THRESHER FOR PS4

 CHARGING YOUR HEADSET



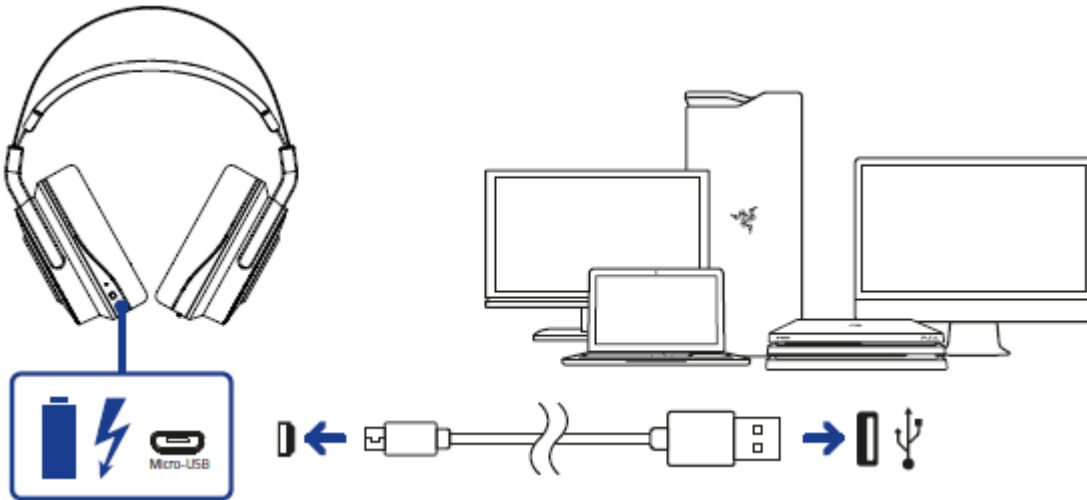










Plug your Razer Thresher For PS4 to a powered USB port using the Micro-USB to USB cable.



For best results, please fully charge the headset before using it for the first time. A depleted unit will fully charge in about **4 hours**.


UNDERSTANDING THE CHARGING NOTIFICATIONS

The LED indicator on the headset will send out notifications depending on its current charging status, as shown here:

	LED NOTIFICATION	SOUND NOTIFICATION	STATUS
	Blinking green 	None 	Charging 
	Static green 	None 	Charged 
	Static red 	Warning tone 	Battery Low 
	Blinking red 	Warning tone every 5 minutes 	Battery Critical 

POWER ON

 
Press and hold the headset power button until you hear the ON tone and the LED indicator is lit.

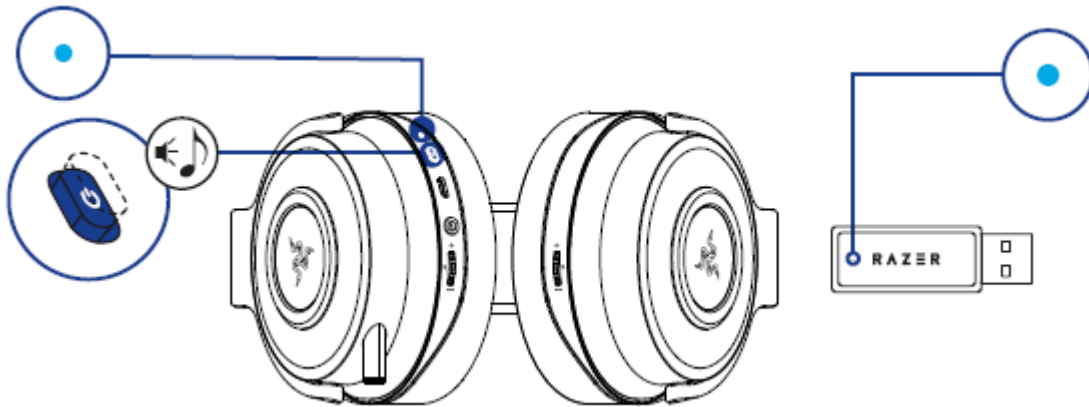

Note: Keep the devices within close proximity of each other for a faster and more stable connection.


POWER OFF

 Press and hold the headset power button until you hear the OFF tone and the LED indicator is turned off.

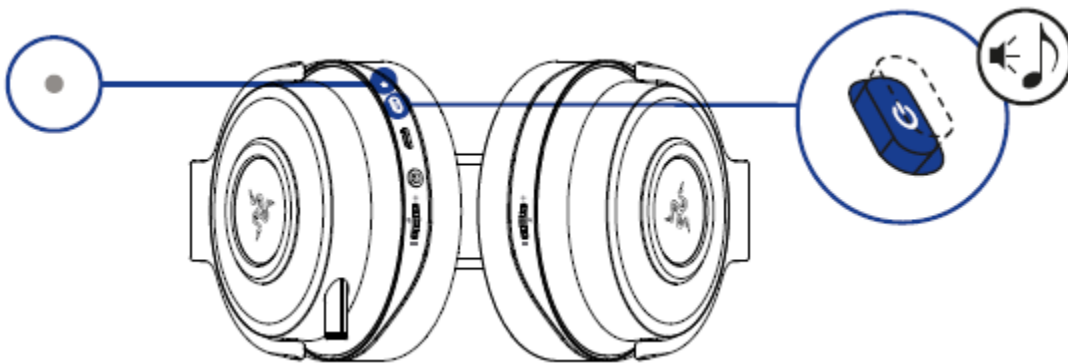

CONNECTING NOTIFICATIONS

 
The headset and the USB dongle will display notifications depending on its current status, as shown here:

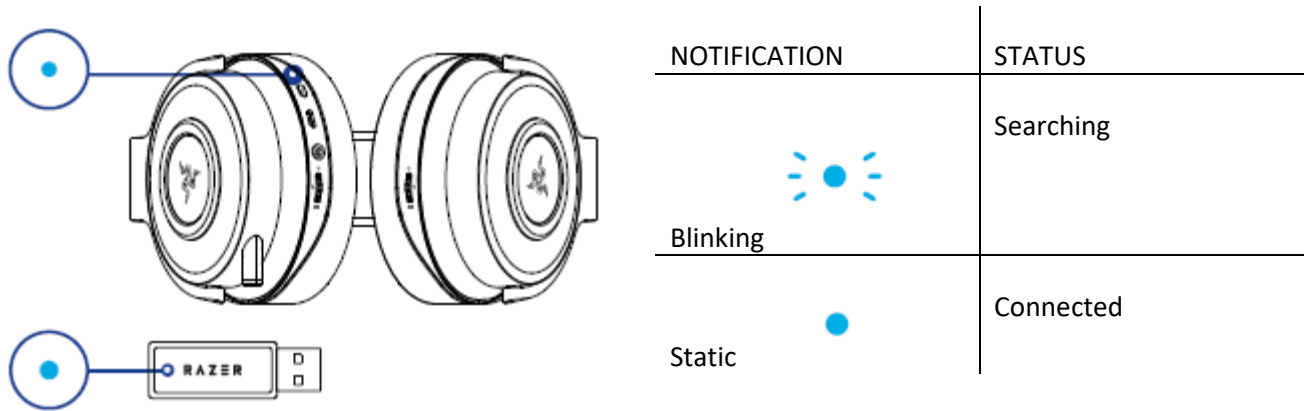


Note: If the headset is not connected, it will automatically power off after a few minutes.

USING THE AUDIO VOLUME CONTROL

 Rotate the audio volume control to increase or decrease the volume. You will hear a short beep when you reach the minimum or maximum volume.

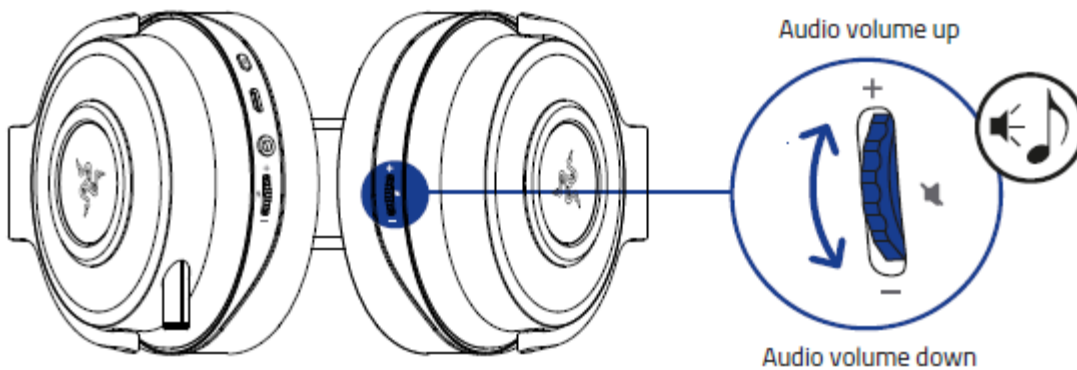


 Press the audio volume button to mute or unmute the in-game audio.

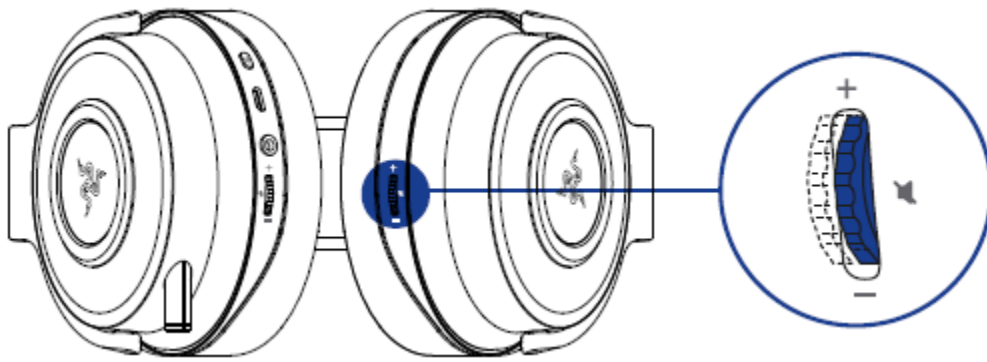


USING THE RETRACTABLE MICROPHONE

 Pull the tip of the microphone until it is fully extended.

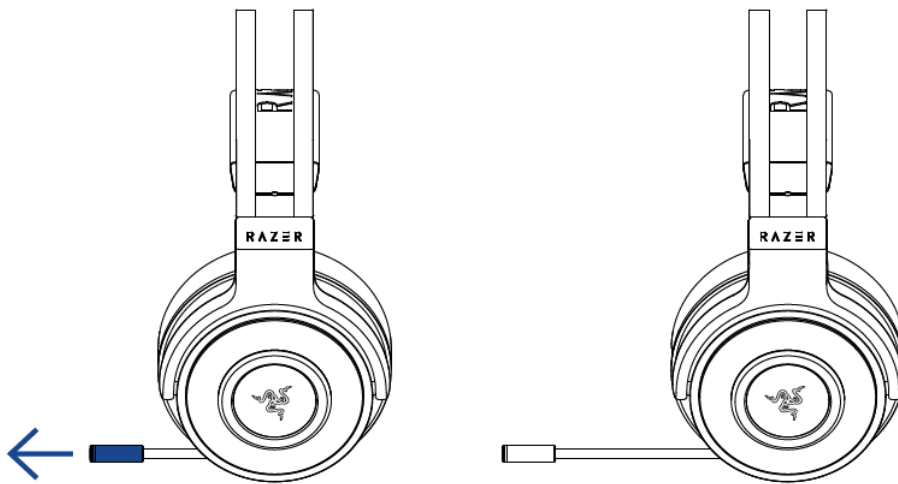


 Bend the microphone until it is in front of your mouth, then adjust the length as preferred.

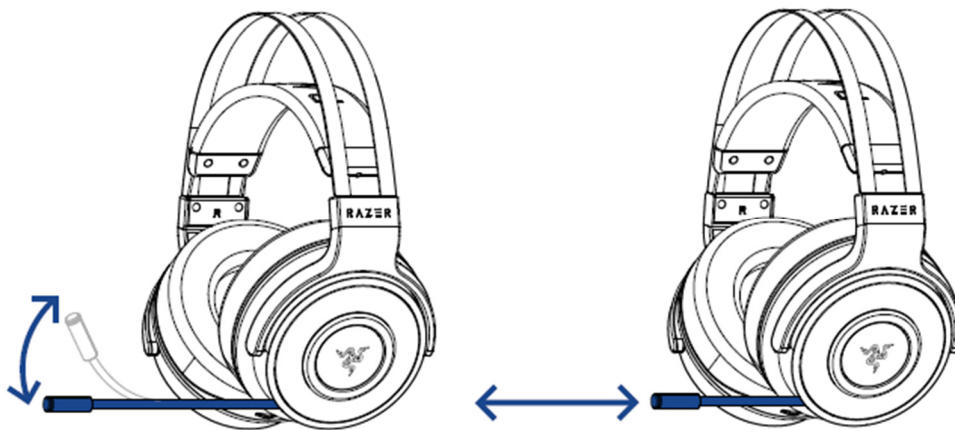


USING THE MIC MONITORING CONTROL

 Rotate the volume control to increase or decrease the mic monitoring volume. You will hear a short beep when you reach either the minimum or maximum volume.

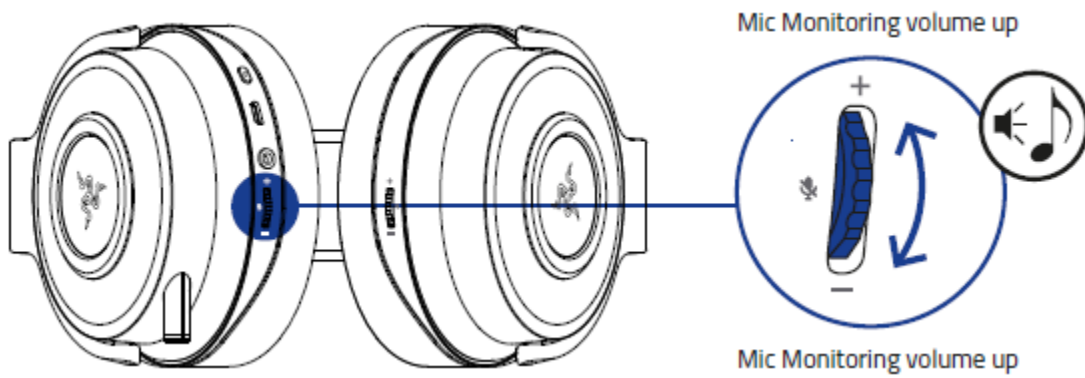


 Press the mic monitoring control to mute or unmute the microphone. The microphone LED will light up when muted.

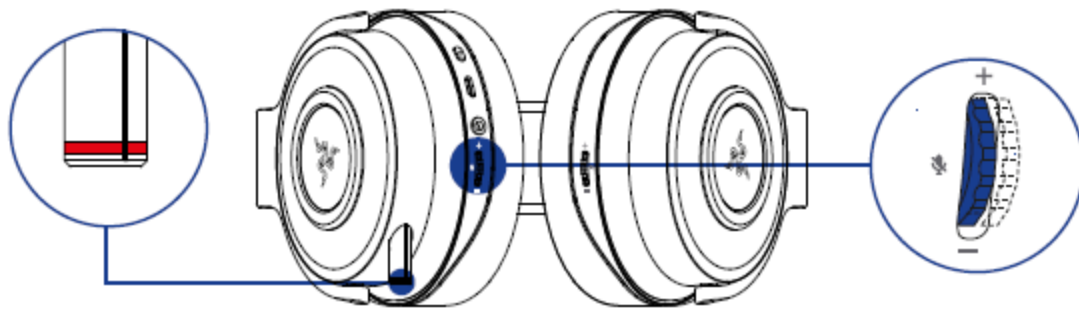

USING THE IN-LINE CONTROLS

 Rotate the volume control wheel to increase or decrease the volume.

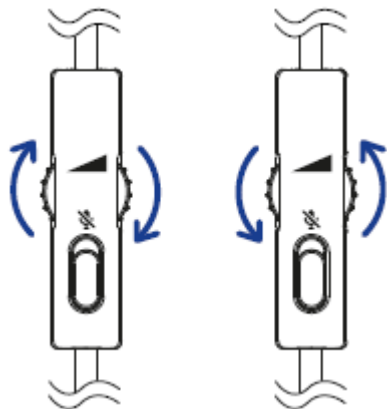

Increase

Decrease

Use the microphone mute toggle to enable or disable the microphone.



 
Mute



Unmute

EXTENDING YOUR HEADSET'S LIFESPAN

We recommend stretching the headset gently apart before placing them over your head to minimize headband stress. However, please avoid overstretching the headset beyond its technical limits.

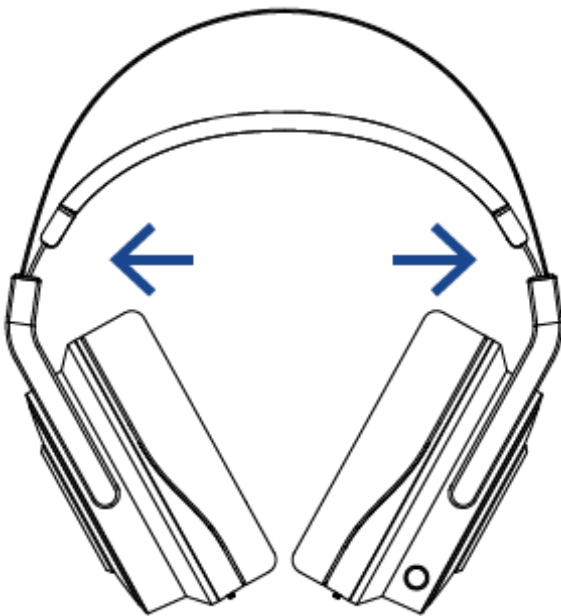

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Thresher For PS4, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activities that requires active awareness of your surroundings.

Listening to excessively loud volumes over extended periods of time can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.


MAINTENANCE AND USE

The Razer Thresher For PS4 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab with a bit of warm water to prevent dirt buildup. Do not use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2018 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.” are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

, "PlayStation", and "PS4" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved.

Windows is a trademark or a registered trademark of the Microsoft group of companies.

OS X, Mac and the Mac logo are trademarks or registered trademarks of Apple.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Thresher For PS4 (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit: [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

Razer Inc.
201 3rd Street, Suite 900
San Francisco, CA 94103, USA
support.razer.com/contact-us/

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.



STATEMENT OF
COMPLIANCE WITH EU DIRECTIVE ENGLISH

ENGLISH

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Razer (Europe) GmbH, declares that this Razer Thresher Ultimate For Xbox One (Wireless Gaming Headset (Model:RC30-025801) and USB WIRELESS DONGLE (Model:RC30-025802)) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Wireless Gaming Headset

Operating Frequency: 2403.35-2477.35Mhz

Max Output power: 5.91±2 dBm

USB WIRELESS DONGLE:

Operating Frequency: 2405.35-2477.35Mhz

Max Output power: 1.32±2dBm

SW version: V1.0

The full Declaration of Conformity can be requested via the following:

Company: Razer (Europe) GmbH

Address: Essener Bogen 23, 22419 Hamburg, Germany

E-mail: compliance@razer.com

Internet address: <https://www.razer.com>



WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT INFORMATION ENGLISH

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Razer Inc.
201 3rd Street, Suite 900
San Francisco, CA 94103, USA
support.razer.com/contact-us/