DATE: 28 JULY 2018

USER MANUAL FOR GAMING HEADSET

System model number RZ04-0268 Consist of Headset Model RC30-026801 and Wireless USB Transceiver RC30-0267

PACKAGE CONTENTS / SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Gaming headset (System model number RZ04-0268 Consist of Headset Model RC30-026801 and Wireless USB Transceiver RC30-0267)
- USB wireless transceiver
- Charging cable
- 3.5mm combo cable
- Important Product Information Guide

SYSTEM REQUIREMENTS

HARDWARE REQUIREMENTS

- Devices with a USB port
- Mobile devices with a 3.5mm combo port

RAZER SYNAPSE 3 REQUIREMENTS


- Windows[®] 7 64-bit (or higher)
- Internet connection
- 500 MB of free hard disk space

2. REGISTRATION / TECHNICAL SUPPORT

REGISTRATION

Register your product online at <u>razerid.razer.com/warranty</u> to get real-time information on your product's warranty status.

If you haven't registered for a Razer ID yet, register now at <u>razerid.razer.com</u> to get a wide range of Razer benefits.

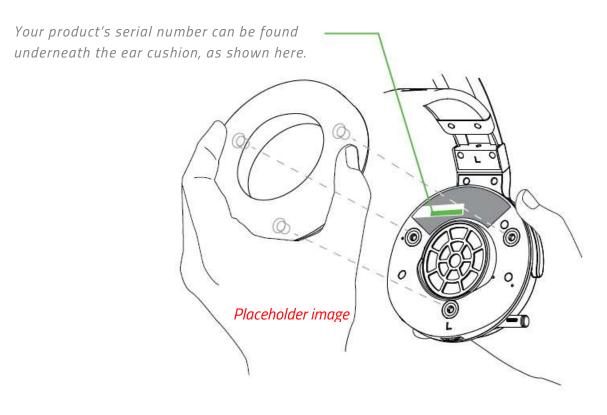

TECHNICAL SUPPORT

- 1 year limited manufacturer's warranty
- Free online technical support at <u>support.razer.com</u>

DEVICE LAYOUT




- **O.** Charging cable
 - P. 3.5mm combo cable

H. Status indicator

SETTING UP YOUR RAZER NARI

CHARGING YOUR HEADSET

Connect your Razer Nari to a powered USB port using the charging cable.

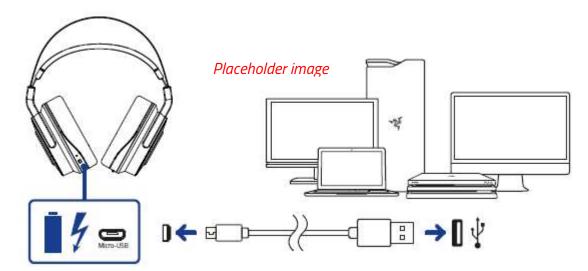


STATUS INDICATOR

For best results, please fully charge your headset before using it for the first time. A depleted unit will fully charge in about **4 hours**.

UNDERSTANDING THE CHARGING NOTIFICATIONS

Your Razer Nari will send out notifications depending on its current charging status, as shown here:

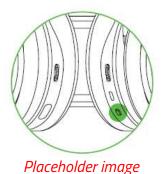

 Static red
 None
 Image: Marcing tone
 Charging/low battery

 Static blue
 None
 Image: Marcing tone
 Fully charged/full battery


 Blinking red
 Image: Marcing tone
 Image: Marcing tone
 Low battery

SOUND INDICATOR


DESCRIPTION

CONNECTING TO YOUR PC VIA USB PORT


1. Plug the USB wireless transceiver to your PC.

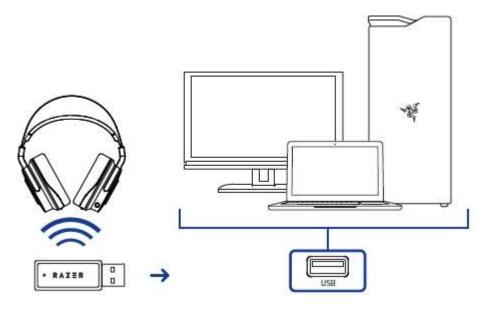


2. Right-click on the sound icon on the system tray, and then select **Sounds**.

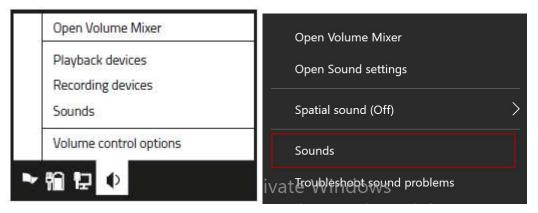


3. On the Playback tab, select **Razer Nari - Chat** from the list, and then set it as the **Default Communication Device**.

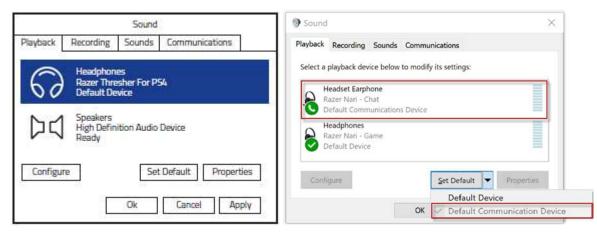

4. On the Playback tab, select **Razer Nari - Game** from the list, and then set it as the **Default Device**.

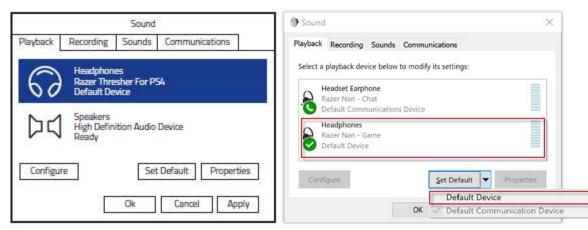


5. In the Recording tab, select **Razer Nari - Chat** from the list and click the '**Set Default**' button.

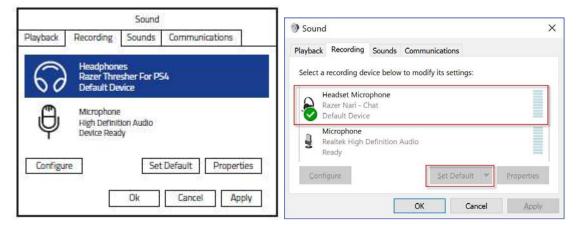


CONNECTING TO OTHER DEVICES VIA USB PORT

1. Push in the USB wireless transceiver until you hear a click then release your finger so that it ejects from your headset.

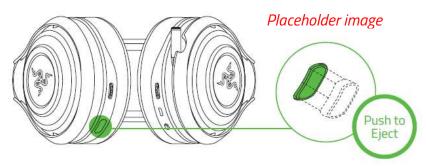


Note: To return the USB wireless transceiver, push it into the compartment until you hear a click.


2. Plug the USB wireless transceiver to your device and make sure your Razer Nari is the default input and output audio device.

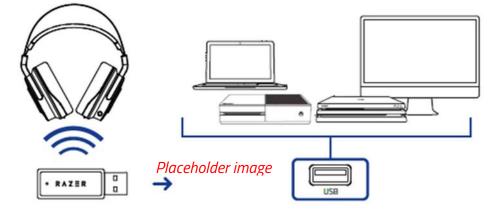

3. Power on your headset by holding the power button for at least 3 seconds or until you hear 2 short beeps.

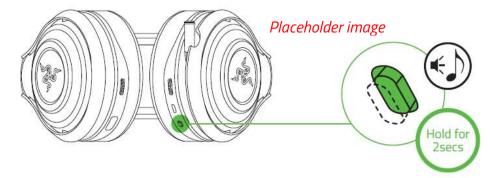


4. Wait until the status indicator is static blue.

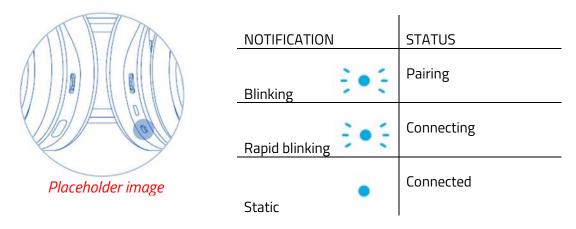

Note: Keep your headset within close proximity of the USB wireless transceiver for a faster and more stable connection. If your headset fails to connect, it will automatically power off after a few minutes.

CONNECTING TO DEVICES VIA 3.5MM COMBO PORT


If your device has a 3.5mm audio + mic combined jack, simply plug the 3.5mm audio cable from your headset to your device's audio jack.

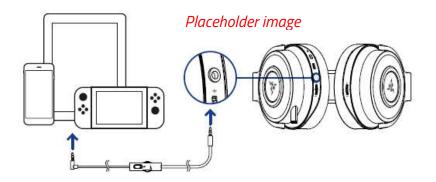

USING YOUR RAZER NARI


USING THE VOLUME CONTROL

Rotate the volume control to increase or decrease the volume.

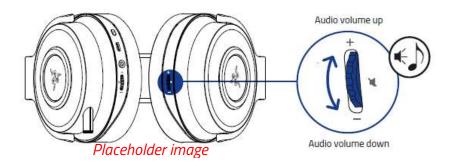


USING THE GAME/CHAT BALANCE

Rotate the game/chat balance to increase the in-game volume and decrease the voice chat volume or vice versa. By default, the notch on the wheel is set to the middle to indicate 50% chat and 50% game volume.

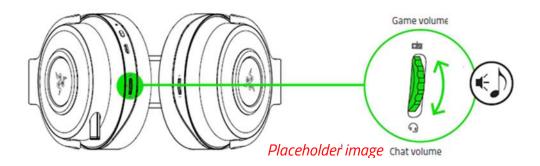


USING THE RETRACTABLE MIC


Pull the tip of the mic until it is fully extended.

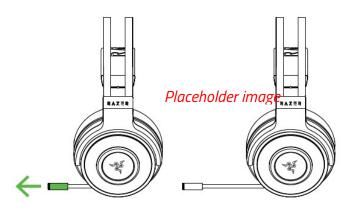

Bend the mic until it is parallel to your mouth, then adjust the length as preferred. Make sure the mic diaphragm is in front and the air vent is facing away from your mouth.

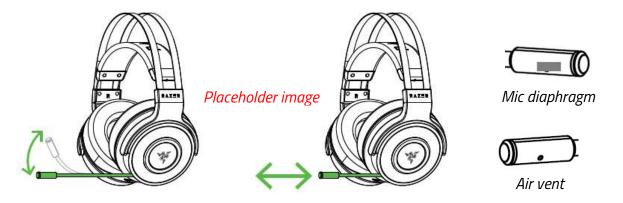


Press the mic mute button to mute or unmute the mic. The mic mute indicator will light up when muted.

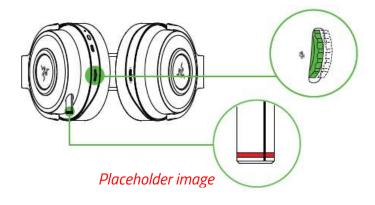


EXTENDING YOUR HEADSET'S LIFESPAN

We recommend stretching the headset gently apart before placing them over your head to minimize headband stress. However, please avoid overstretching the headset beyond its technical limits.

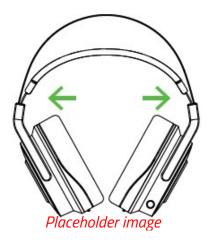

INSTALLING RAZER SYNAPSE 3 FOR YOUR RAZER NARI

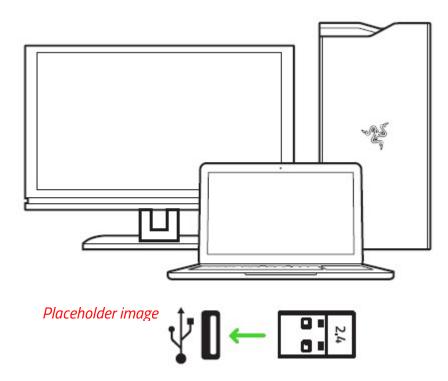

Step 1: Make sure your Razer device is connected to the USB port of your computer.

Step 2: Install Razer Synapse 3 when prompted* or download the installer from <u>razer.com/synapse</u>.

Step 3: Create your Razer ID or log in using an existing account.

*Applicable for Windows 8 or later.

CONFIGURING YOUR RAZER NARI VIA RAZER SYNAPSE 3

Unleash the full potential of your Razer Nari by enabling this feature from Razer Synapse 3:

[Insert THX SA icon here] THX Spatial Audio - 360° positional audio for a natural and lifelike experience.

LIGHTING EFFECTS

The Lighting tab enables you to customize the look of your Razer device by allowing you to choose from various lighting effects or fully customizing your own. These lighting effects can also be synchronized with other Powered by Razer Chroma devices that support the selected effect.

	Name	Description	How to set up
\bigcirc	Breathing	The lighting fades in and out of the selected color(s)	Select up to 2 colors or randomize
\bigcirc	Spectrum cycling	The LEDs will cycle between 16.8 million colors indefinitely	No further customization required
\bigcirc	Static	The LEDs will remain lit in the selected color	Select a color

Please refer to the Online Master Guide at <u>support.razer.com</u> for in-depth instructions on how to configure and use your Razer Nari.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Nari, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to <u>support.razer.com</u> for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activity that requires active awareness of your surroundings.

Listening to excessively loud volume over an extended period of time can damage your hearing. Furthermore, legislation of certain countries permits only a maximum sound level of 86dB for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

MAINTENANCE AND USE

The Razer Nari requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2018 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers." By Gamers.", and "Powered by Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Nari (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit: <u>razer.com/warranty</u>.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi,

même si le brouillage est susceptible d'en compromettre le fonctionnement.