



 
RAZER WIRELESS KEYBOARD
MODEL: RZ03-0411

IMPORTANT PRODUCT INFORMATION GUIDE

11-NOV-2021

WHAT'S INSIDE


- Razer RZ03-0411

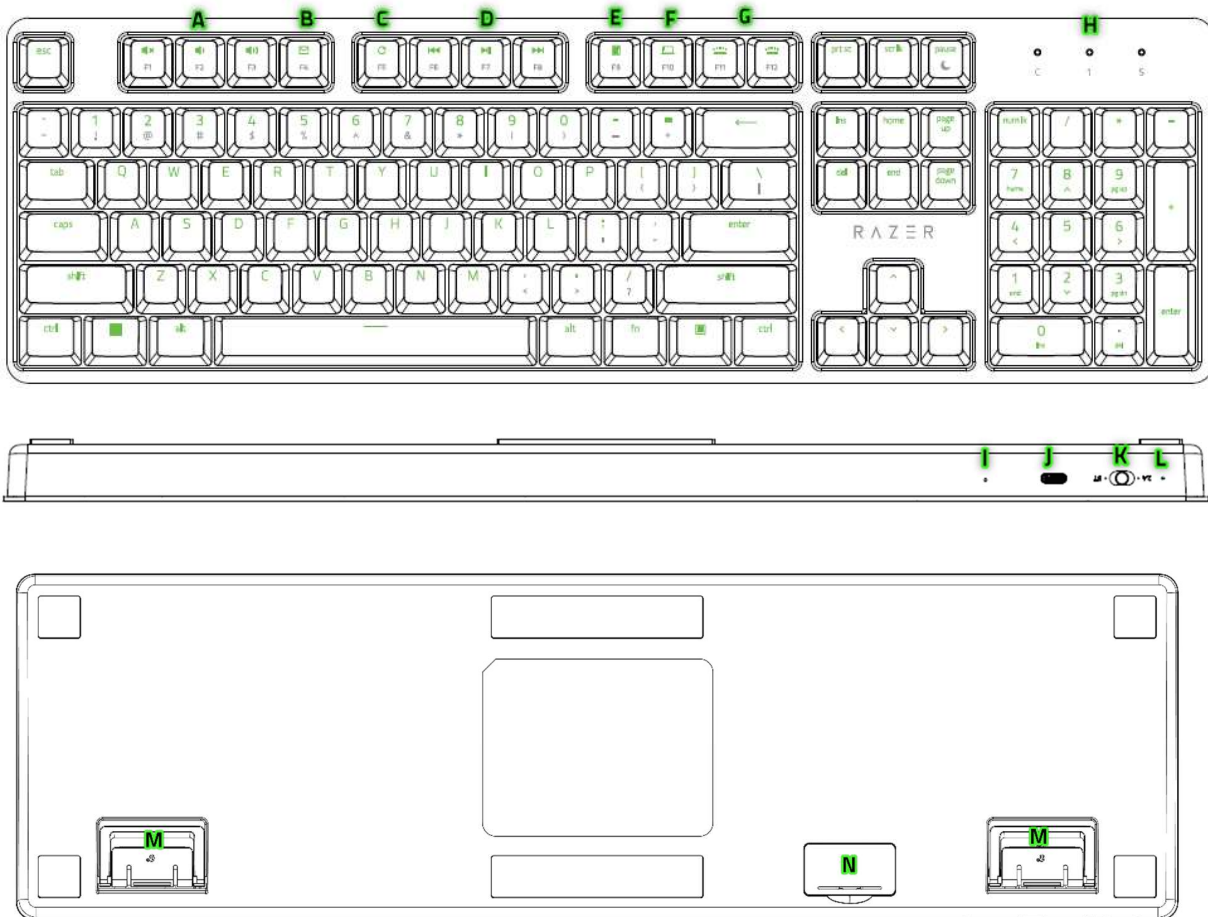


- A.** Volume control keys
- B.** Mail key
- C.** Refresh key
- D.** Media keys
- E.** Calculator key
- F.** My Computer key
- G.** Backlight control keys
- H.** LED indicators*
- I.** Reset button
- J.** Type C port
- K.** Mode switch
 - 2.4Ghz
 - Off (wired)
 - Bluetooth
- L.** Power indicator
- M.** Magnetic dongle compartment
- N.** Kickstand

**Limited functionality on selected devices.*

 - Razer™ HyperSpeed Multi-Device Dongle



- Type C to Type A cable

 

- Important Product Information Guide

WHAT'S NEEDED

PRODUCT REQUIREMENTS

 
- PC with a free USB port or Bluetooth 5.0 connectivity

RAZER SYNAPSE 3 REQUIREMENTS

- Windows® 10 64-bit (or higher)
- Internet connection for software installation

LET'S GET YOU COVERED


You've got a great device in your hands, complete with a 2-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

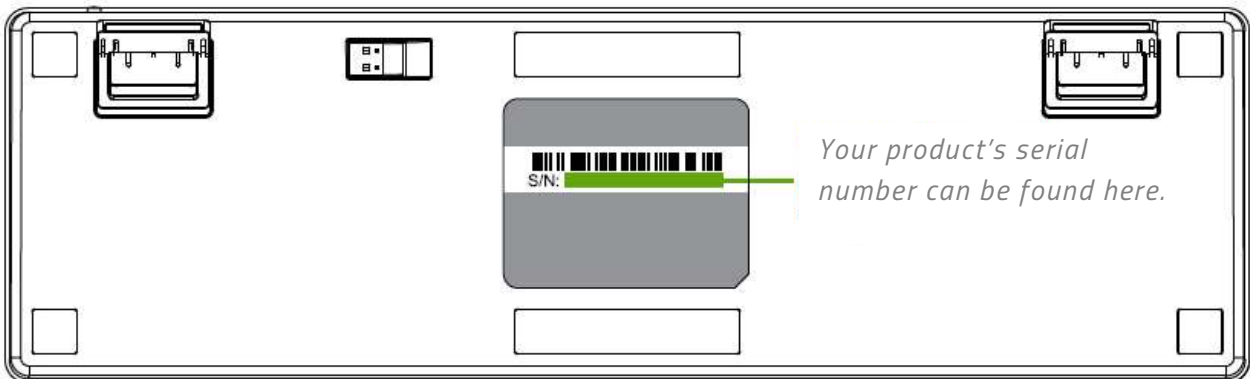

Got a question? Ask the Razer Support Team at support.razer.com

SETTING UP YOUR RAZER RZ03-0411

 1. Connect your keyboard to a powered USB port using the Type C to Type A cable to charge your keyboard. The power indicator will turn solid green when the keyboard is fully charged.

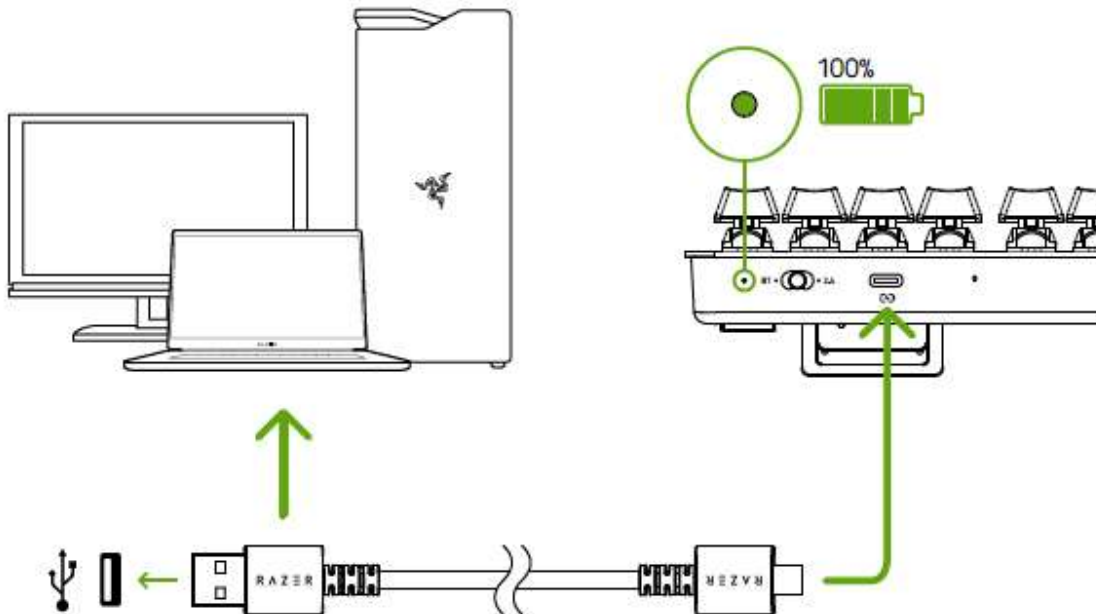

- i** For best results, fully charge your keyboard before using it for the first time. It takes approximately 2 hours to fully charge your keyboard. You may continue using the keyboard while plugged in.

When your keyboard is not charging, the power indicator will only briefly display its battery status.


Mode	Charged	Low	Critical*
2.4 / BT	●	●	☀
OFF		○	

*Critical status indicates that the keyboard's battery is less than 3%. This lighting sequence will repeat until the battery is drained or the keyboard is being charged.


2. Set the mode switch to your preferred mode.

2.4 GHz mode

 1. Set the mode switch to 2.4.

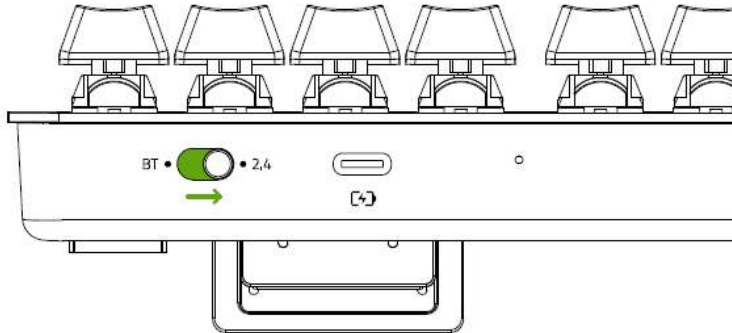


 2. Detach the Razer™ HyperSpeed Multi-Device Dongle from the magnetic dongle compartment and connect it to your computer.

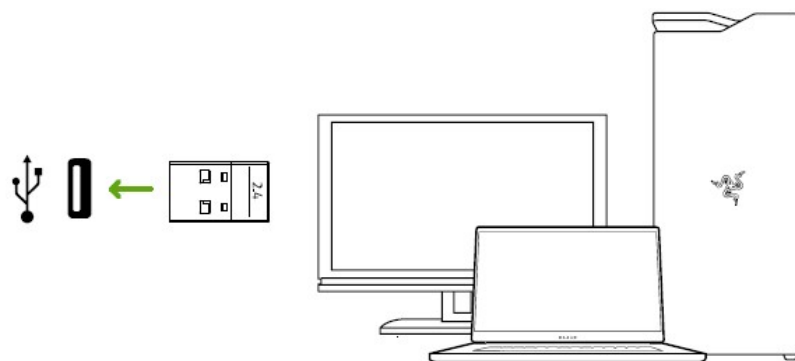




BT mode

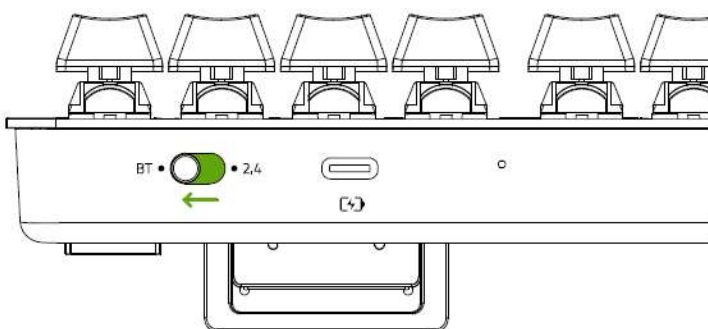 
1. Set the mode switch to BT.



- Up to 3 Bluetooth devices can be paired and registered to your keyboard (one for each profile). To activate the pairing mode of your preferred profile, press and hold its corresponding shortcut for 5 seconds. The LED indicators will then display which Profile has been activated.

Shortcut	Profile	Status
fn + 1	Profile 1	
fn + 2	Profile 2	
fn + 3	Profile 3	

 
- Enable Bluetooth on your device and select Razer RZ03-0411 from the list of devices found. The device will pair with your keyboard and the connection will be registered on the active profile.

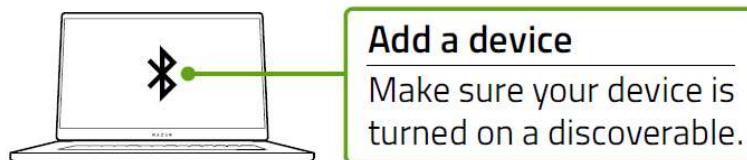


- i** Pressing the fn key will display which profile is active on the LED indicators. Moreover, when pairing new devices with your keyboard, it is recommended that you register the new device on a different profile so you may still use the other profiles to reconnect with previous devices. [Learn more about Bluetooth profiles](#)

WIRED MODE

  1. Set the mode switch to OFF.

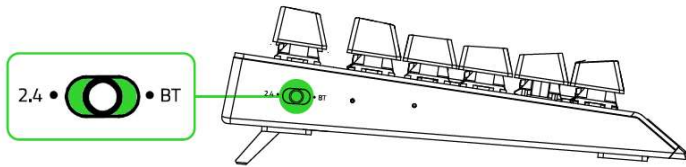

 


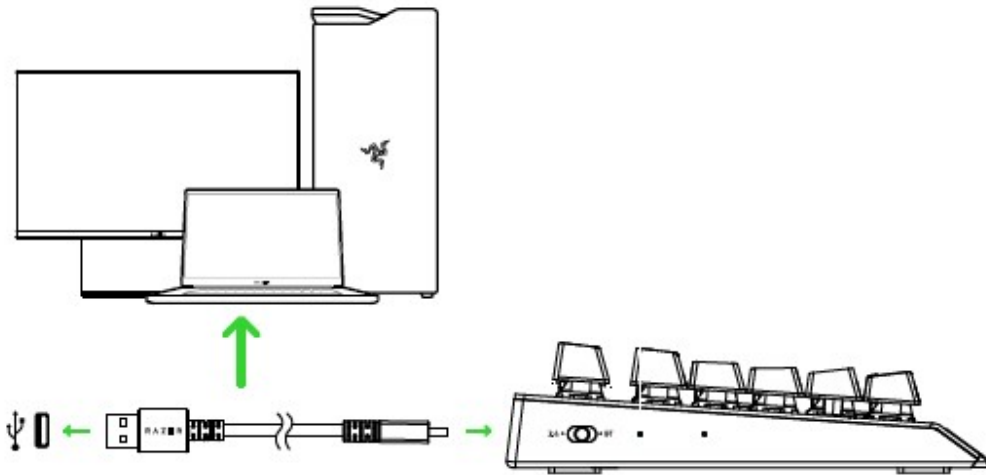


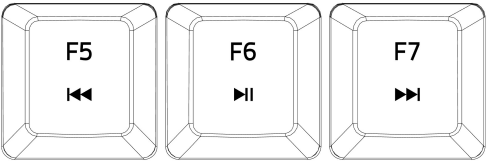 





2. Connect your Razer device to the USB port of your computer.

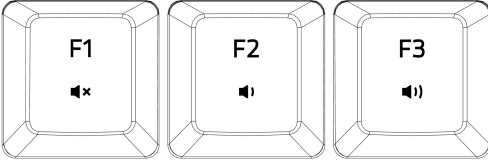


i Install Razer Synapse 3 when prompted or download the installer from razer.com/synapse.


USING YOUR RAZER RZ03-0411

No need to press and hold the Function (FN) key, now all media keys are at the forefront of your keyboard.

Primary keys	Description
 The image shows three keyboard keys: F1 with a mute icon (speaker with an X), F2 with a volume decrease icon (speaker with a slash), and F3 with a volume increase icon (speaker with sound waves).	The Audio Volume Control keys allow you to mute (), decrease () and increase () the audio output.
 The image shows a single keyboard key, F4, with a green mail icon above the text 'F4'.	Pressing the Mail key will open your default mail app.
 The image shows a single keyboard key, F5, with a green circular refresh icon above the text 'F5'.	Pressing the Refresh key allows you to refresh the active window, app, or browser.
 The image shows three keyboard keys: F5 with a play/pause icon, F6 with a skip backward icon, and F7 with a skip forward icon.	The Media keys allow you to play/pause () a track or skip tracks backward () and forward ().
 The image shows a single keyboard key, F9, with a green calculator icon above the text 'F9'.	Pressing the Calculator key will open the Windows calculator app.
 The image shows a single keyboard key, F10, with a green My Computer icon above the text 'F10'.	Pressing the My Computer key will open the system window on your desktop.

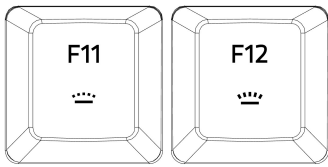 

 The Backlight Control keys allow you to decrease (⌵) or increase (⌶) the brightness of your keyboard's LEDs.

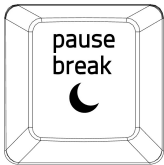

The Sleep key allows you to suspend all operating system activities. This function allows you to save electricity while the computer is idle.

UNDERSTANDING BLUETOOTH PROFILES

Switching between profiles

To switch between any of the Bluetooth profiles available on your keyboard, simply press the corresponding shortcut of the profile your device is registered to.

Activating a profile pairing mode

Press and hold the corresponding shortcut of the profile that you want to activate. The status of the corresponding profile will start blinking to show that the profile is now in pairing mode.

Displaying the active profile

The LED indicators will display which profile is currently active while the fn key is pressed.

USING THE RESET BUTTON

If your keyboard freezes or suddenly stops responding, simply press the Reset button on the keyboard using a paper clip or any similar object to restart your device.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer RZ03-0411, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

BATTERY INFO

Risk of fire or explosion or defeat the safeguard of equipment if the battery is replaced by an incorrect type. Replace only with the same or equivalent type. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. High or low extreme temperatures or low air pressure at high altitude that the battery can be subjected to during use, storage or transportation. Leaving the battery in an extremely high temperature and/or low air pressure surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer RZ03-0411.

1. Position your keyboard and monitor directly in front of you with your mouse next to it. Place your elbows next to your side, not too far away and your keyboard within easy reach.
2. Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow height.
3. Keep your feet well supported, posture straight and your shoulders relaxed.

4. While typing, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods.
6. Use a wrist rest to support your wrist while using your keyboard.
7. Customize the keys on your keyboard to suit your style of work to minimize repetitive or awkward motions while typing.
8. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck, and legs.

If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

MAINTENANCE AND USE

The Razer RZ03-0411 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer, detach the wrist rest, and gently clean each component using a soft cloth or cotton swab to prevent dirt buildup.

REGULATORY & COMPLIANCE INFORMATION

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on razer.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC RADIATION EXPOSURE STATEMENT

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and

it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the nocolocation statement.

NOTICE FOR CANADA

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CANADIAN CLASS B STATEMENT: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

CANADA STATEMENT

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

 
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CANADA SAR

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 0mm between the radiator and your body. Cet émetteur ne doit pas être Co-place ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 0mm entre le radiateur et votre corps.



**STATEMENT OF
COMPLIANCE WITH
EU DIRECTIVE**

ENGLISH

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby,

Razer (Europe) GmbH, declares that this Razer Pro Type Ultra Mechanical keyboard (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU & 2015/863/EU.

FRENCH

DÉCLARATION DE CONFORMITÉ AVEC LES
DIRECTIVES DE L'UNION EUROPÉENNE

Par la présente Razer (Europe) GmbH déclare que l'appareil Razer Pro Type Ultra est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/30/EU & 2015/863/EU

DEUTSCH

EG-KONFORMITÄTSERKLÄRUNG

Hiermit erklärt Razer (Europe) GmbH, dass sich dieser/diese/dieses Razer Pro Type Ultra (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 2014/30/EU & 2015/863/EU befindet.

ESPAÑOL

DECLARACIÓN DE CONFORMIDAD CON LA DIRECTIVA DE LA UE

Por medio de la presente Razer (Europe) GmbH declara que el Razer Pro Type Ultra (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/30/EU & 2015/863/EU

ITALIANO

DICHIARAZIONE DI CONFORMITA' CON LE DIRETTIVE EU

Con la presente Razer (Europe) GmbH dichiara che questo Razer Pro Type Ultra (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/30/EU & 2015/863/EU

PORTUGUÊS

DIRETTIVA DA UE COM DECLARAÇÃO DE CONFORMIDADE.

Razer (Europe) GmbH declara que este Razer Pro Type Ultra (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) está conforme com os requisitos essenciais e outras disposições da Directiva 2014/30/EU & 2015/863/EU

DANSK

ERKLÆRING OM OVERENSSTEMMELSE MED EU-DIREKTIV

Undertegnede Razer (Europe) GmbH erklærer herved, at følgende udstyr Razer Pro Type Ultra (Mechanical Keyboard: RZ03-0411 & USB Dongle: DGRFG7) overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/30/EU & 2015/863/EU

Ελληνικά

ΤΗΝ ΠΑΡΟΥΣΑ Razer (Europe) GmbH ΔΗΛΩΝΕΙ ΟΤΙ Razer Pro Type Ultra (Mechanical Keyboard: RZ03-

0411 & USB Dongle: DGRFG7) ΣΥΜΜΟΡΦΩΝΕΤΑΙ
ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ
ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ
2014/30/EU & 2015/863/EU

POLSKI

OŚWIADCZENIE O ZGODNOŚCI Z DYREKTYWĄ UE
Niniejszym Razer (Europe) GmbH oświadcza,
ze Razer Pro Type Ultra (Mechanical Keyboard:
RZ03-0411 & USB Dongle: DGRFG7) jest zgodny
z zasadniczymi wymogami oraz pozostałymi
stosownymi postanowieniami Dyrektywy 2014/30/
EU & 2015/863/EU

Mechanical Keyboard:

Frequency Band: 2400- 2480Mhz
RF Output power: ≤8.5dBm (e.i.r.p)
Type of modulation: GFSK

USB Dongle:

Frequency Band: 2400- 2480Mhz
RF Output power: ≤7.5dBm (e.i.r.p)
Type of modulation: GFSK

The full Declaration of Conformity can be
requested via the following :

Company: Razer (Europe) GmbH
Address: Essener Bogen 23, 22419 Hamburg,
Germany
E-mail: compliance@razer.com
Internet address: razer.com

The full text of the EU declaration of conformity

is available at the following internet address:

<https://www.razer.com>

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Razer Chroma" are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. Actual product may differ from pictures. All other trademarks are the property of their respective owners. Warranty not valid outside of product's intended region.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer RZ03-0411 (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.