

Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT



Figure 12
Battery of the EUT



Figure 13
Battery of the EUT



Figure 14
Label of the Battery



Figure 15
Components Side of the PCB

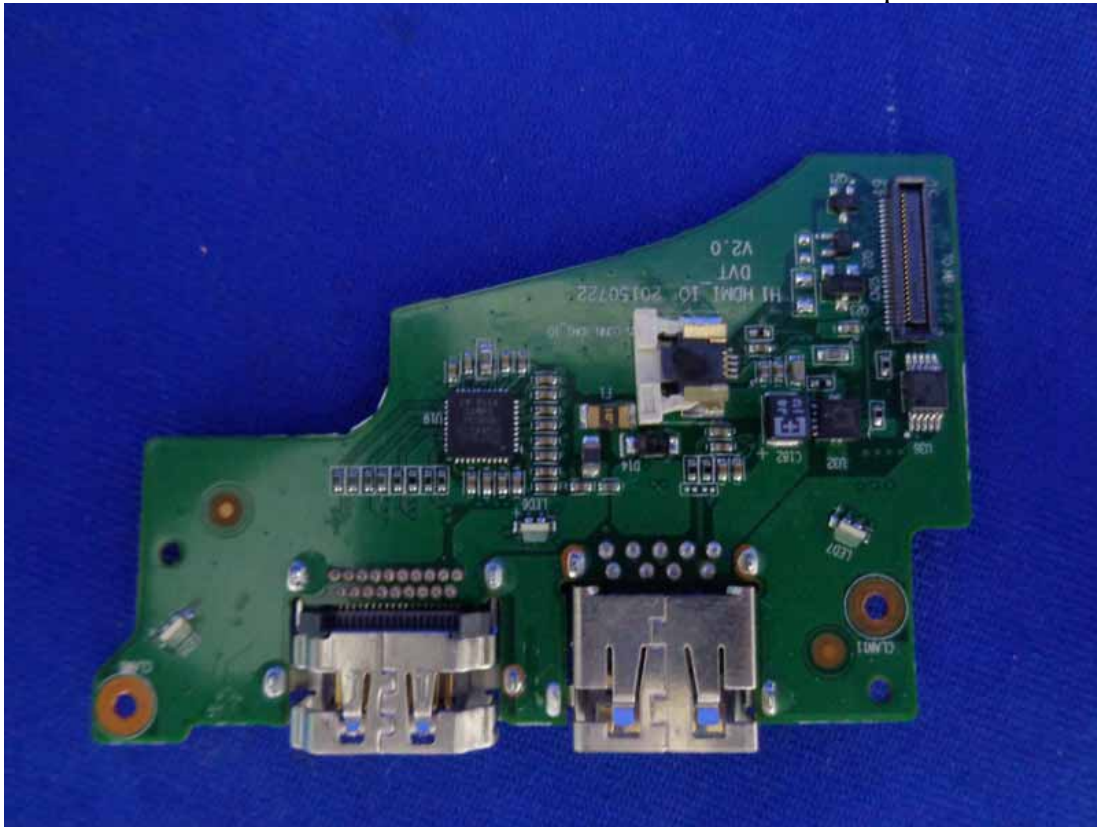


Figure 16
Components Side of the PCB

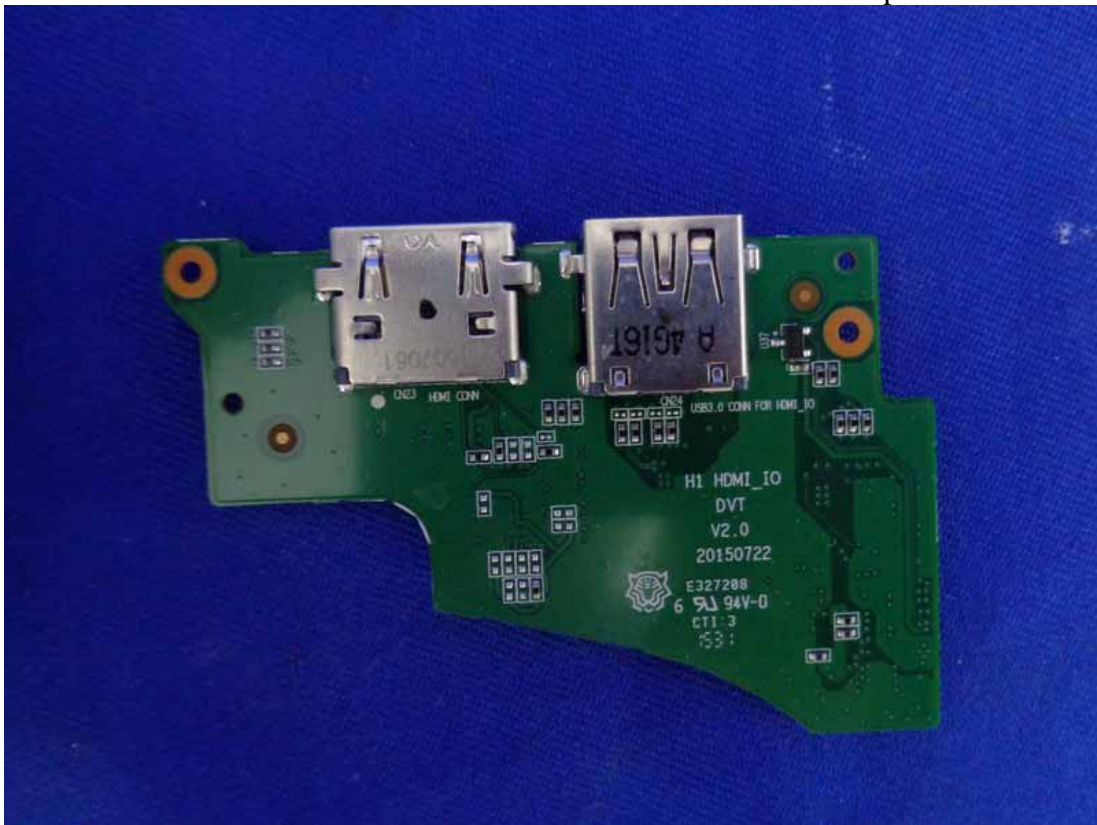


Figure 17
Components Side of the PCB



Figure 18
Components Side of the PCB

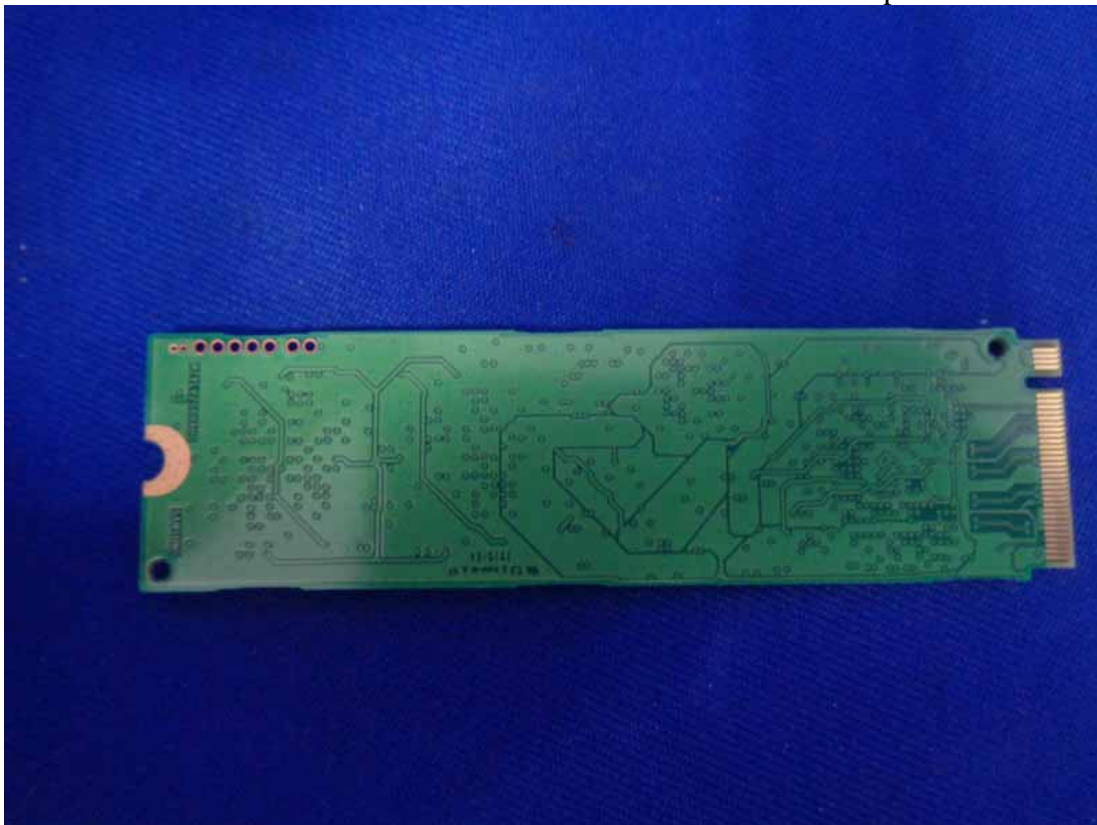


Figure 19
Components Side of the PCB



Figure 20
Components Side of the PCB



Figure 21
Components Side of the PCB

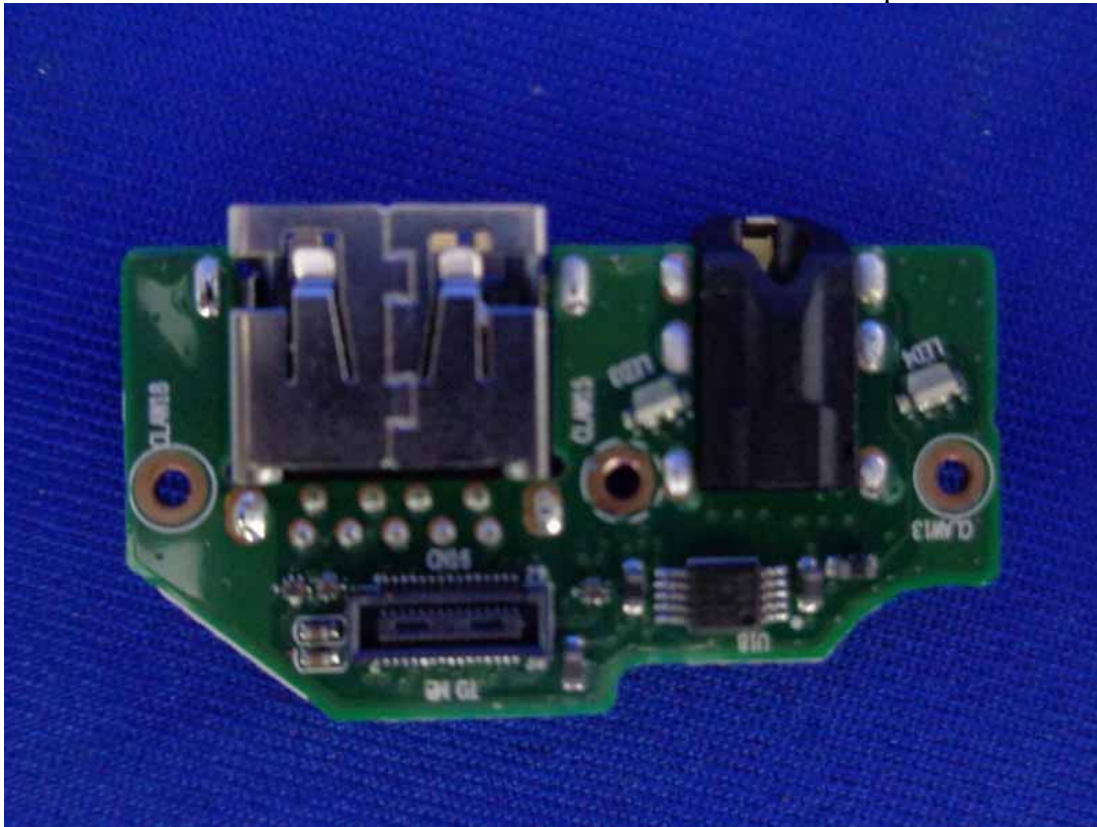


Figure 22
Components Side of the PCB

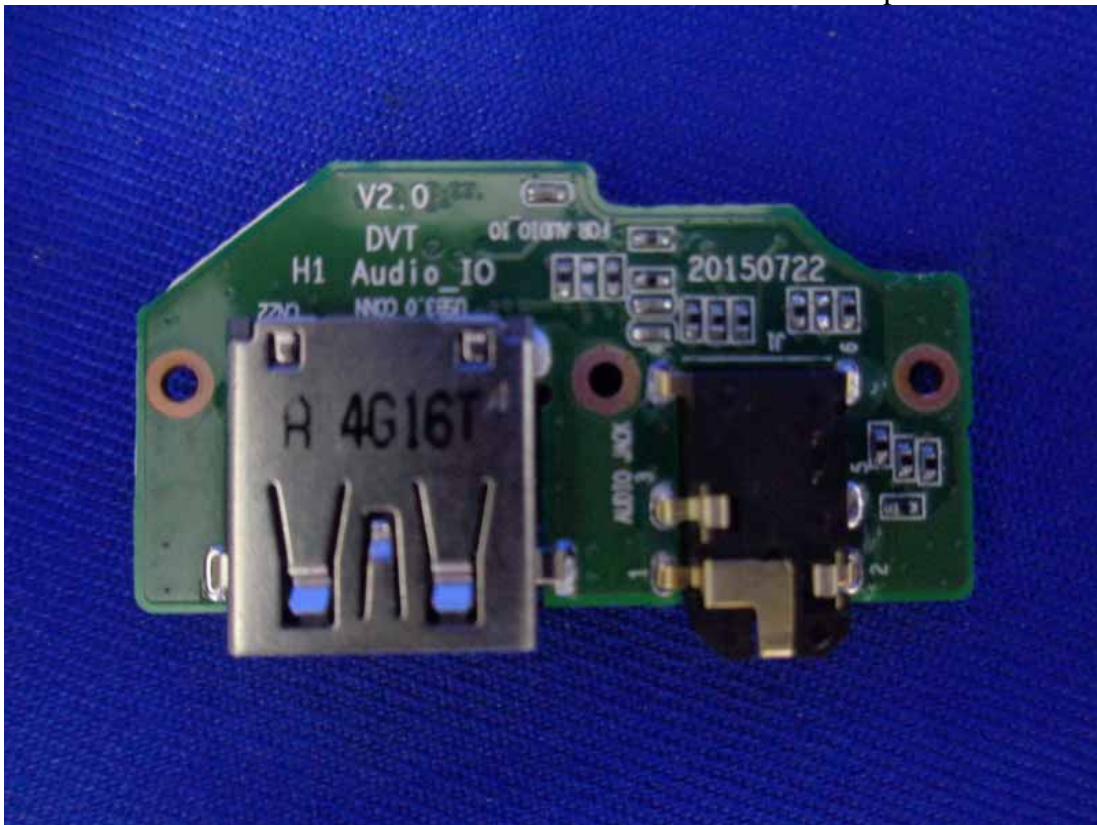


Figure 23
RF Module



Figure 24
RF Module



Figure 25
RF Module

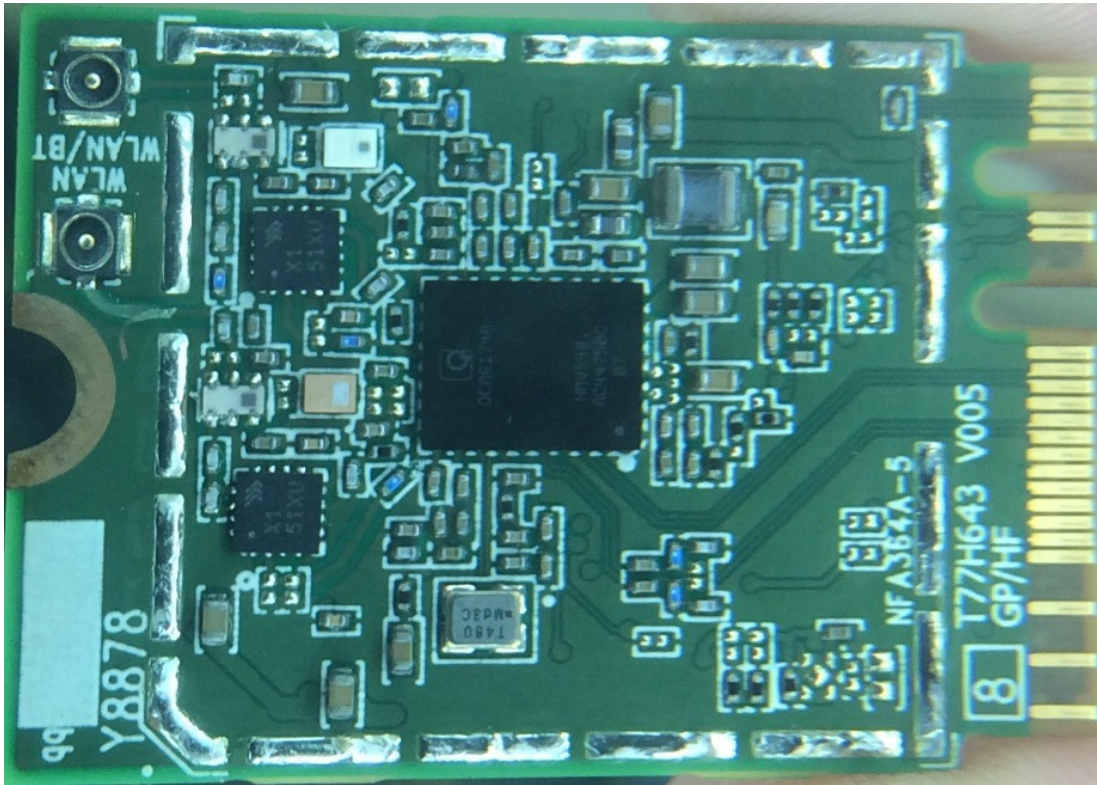


Figure 26
Power Adapter



Figure 27
Power Adapter



Figure 28
Power Adapter

