

Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT

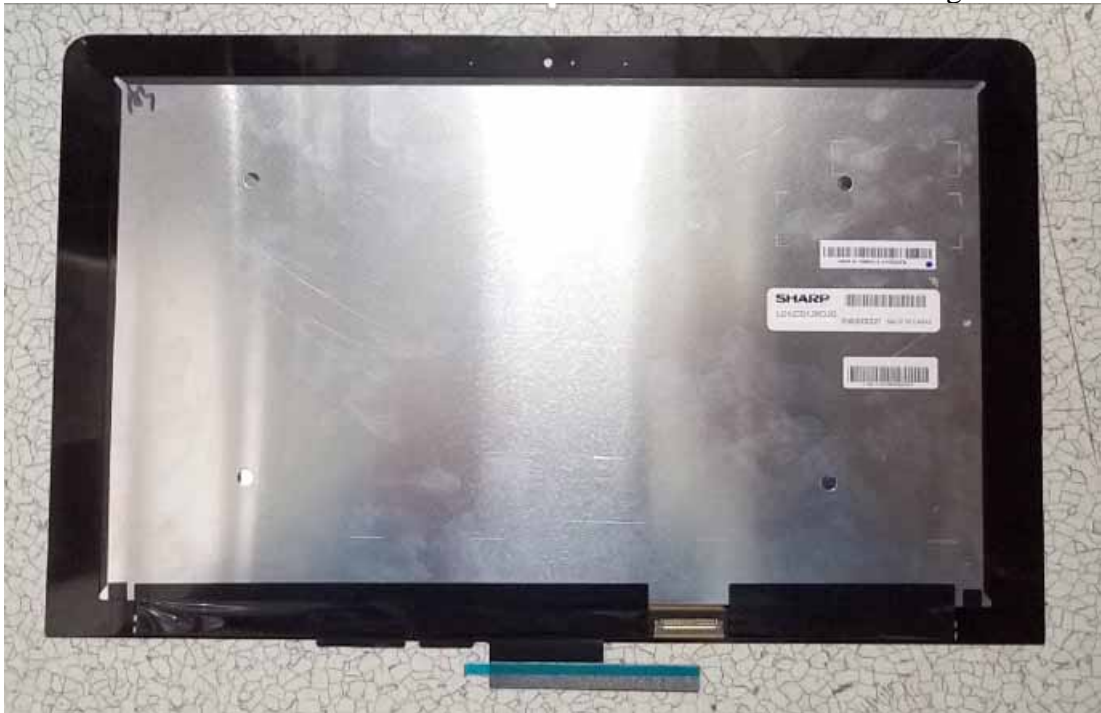


Figure 11
Inside Configuration of the EUT



Figure 12
Inside Configuration of the EUT

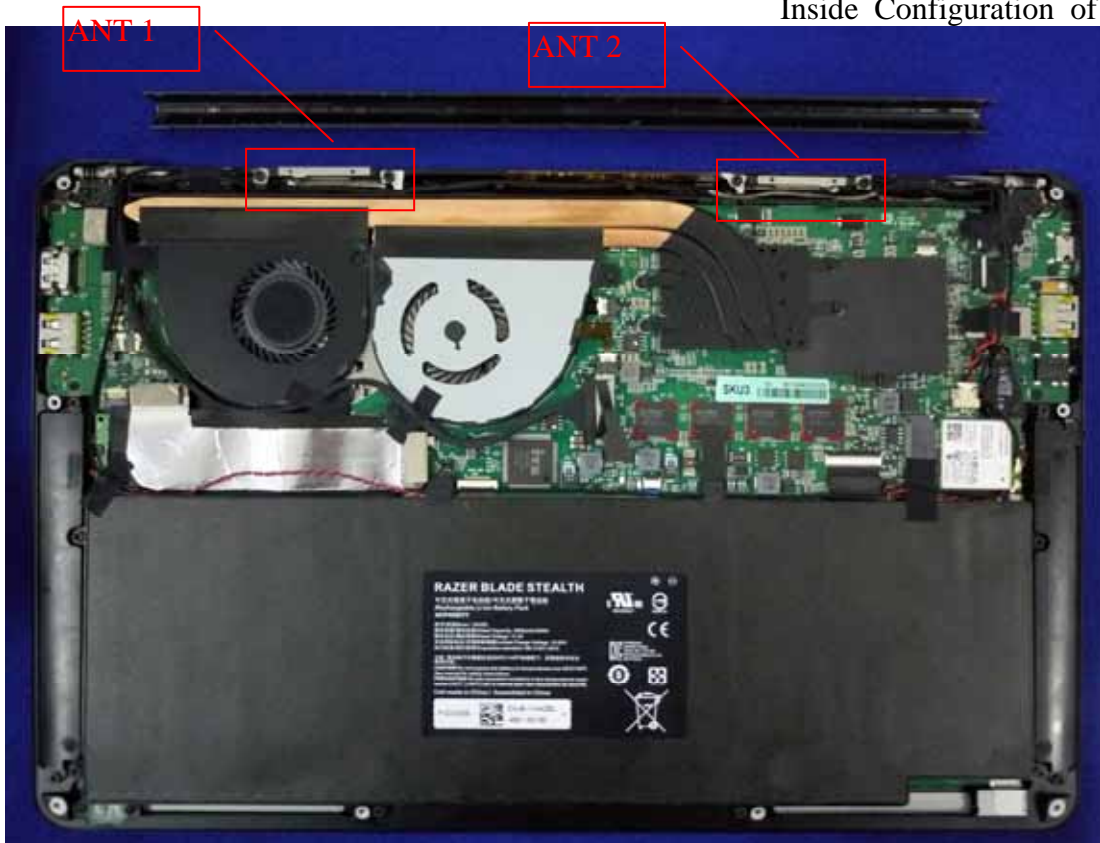


Figure 13
Inside Configuration of the EUT



Figure 14
Inside Configuration of the EUT



Figure 15
Inside Configuration of the EUT



Figure 16
Battery of the EUT



Figure 17
Battery of the EUT



Figure 18
Label of the Battery



Figure 19
Components Side of the PCB



Figure 20
Components Side of the PCB

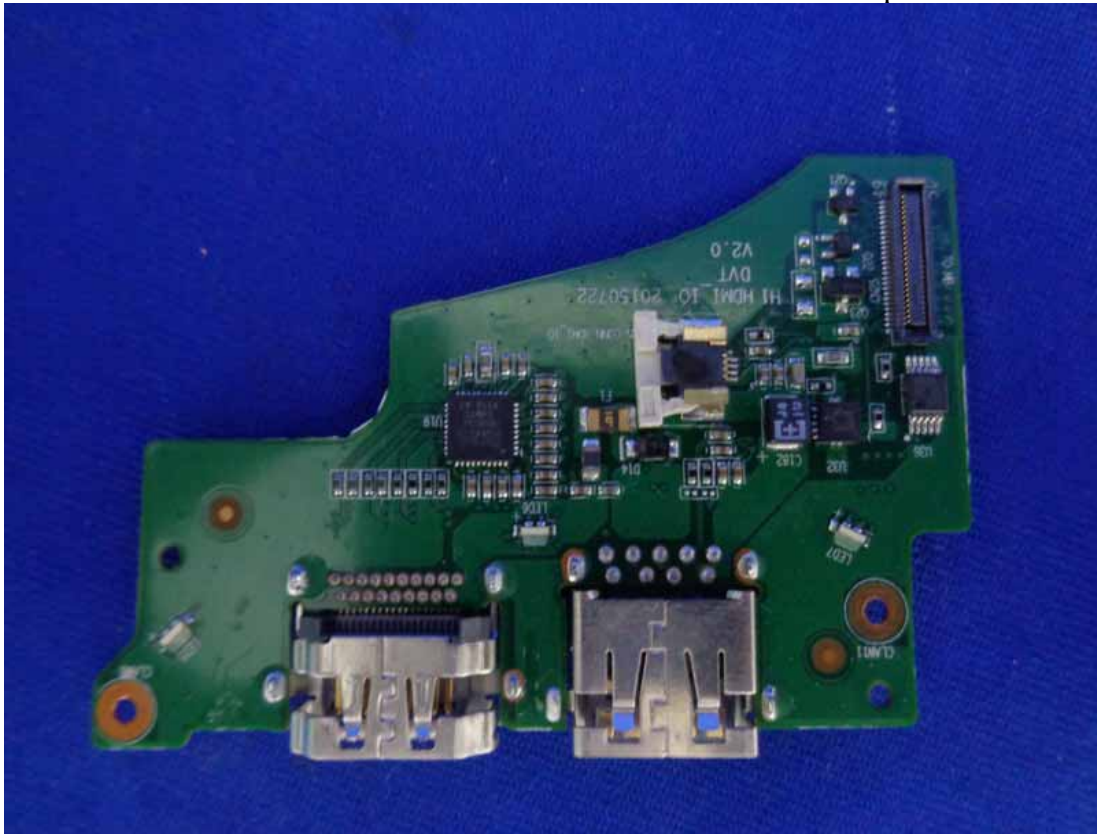


Figure 21
Components Side of the SSD



Figure 22
Components Side of the SSD

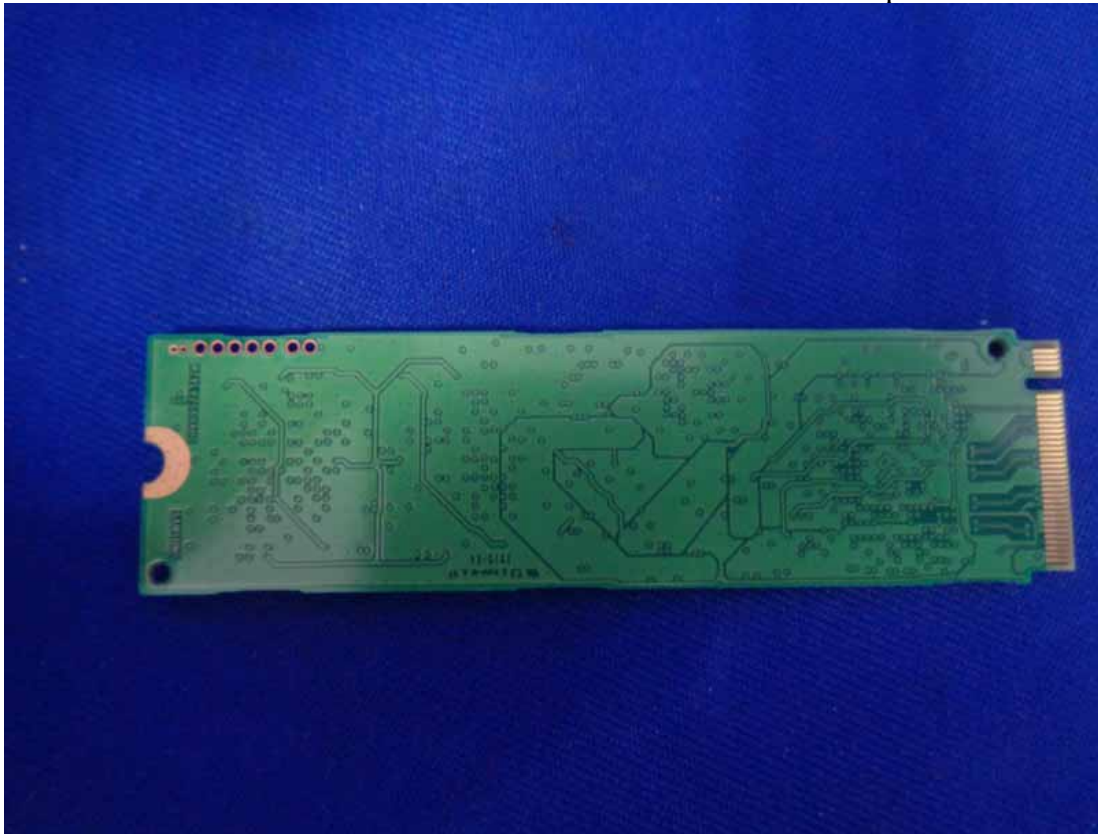


Figure 23
Components Side of the PCB



Figure 24
Components Side of the PCB



Figure 25
Components Side of the PCB

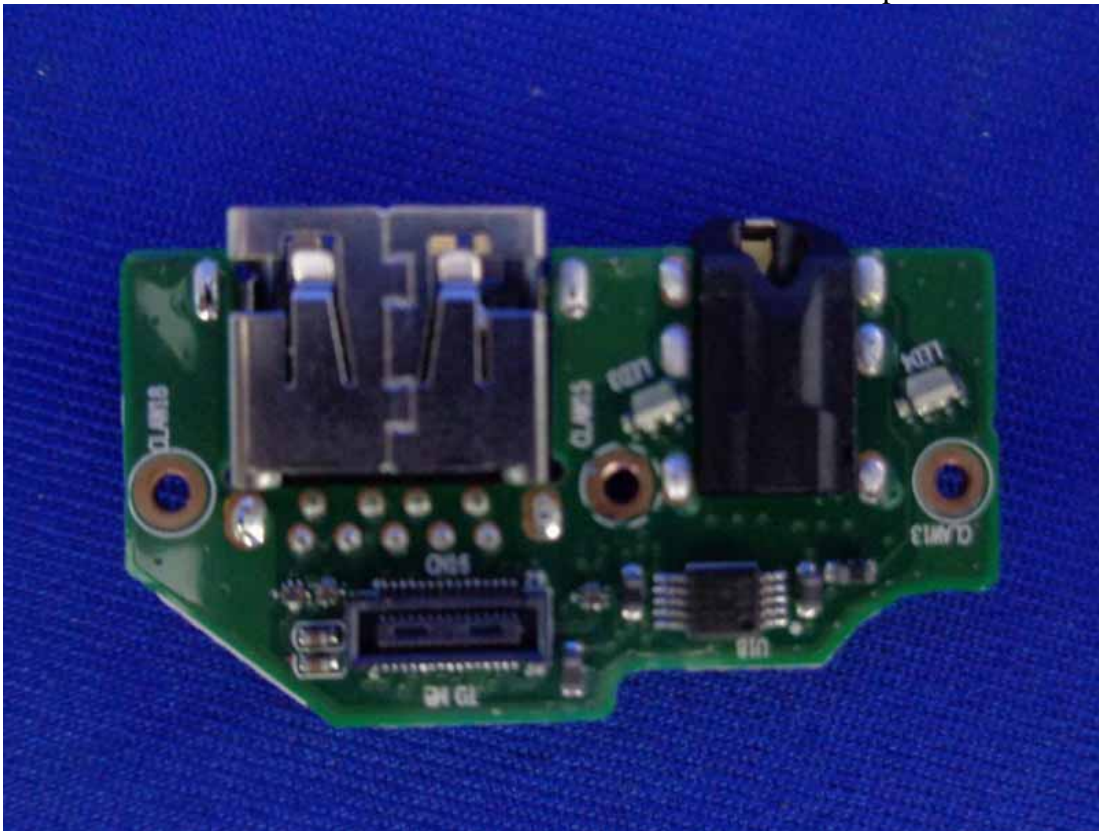


Figure 26
Components Side of the PCB

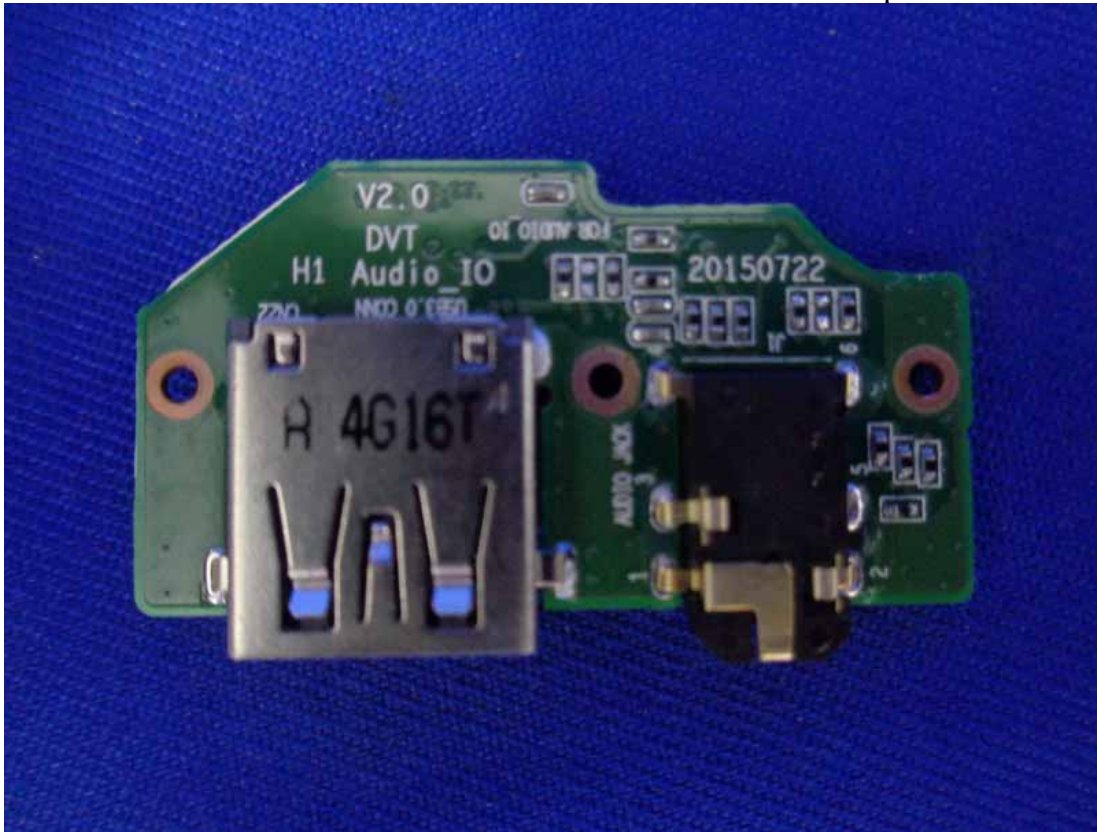


Figure 27
RF Module



Figure 28
RF Module

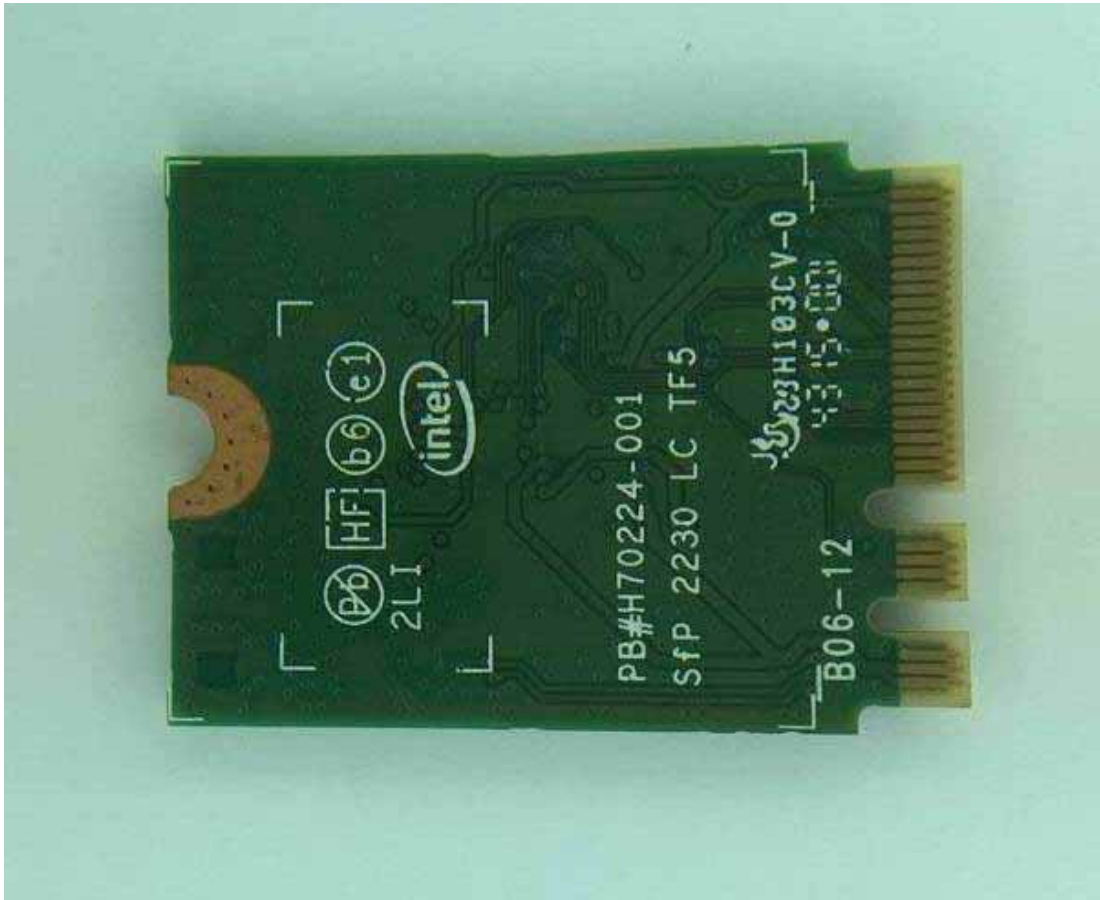


Figure 29
Power Adapter#1



Figure 30
Power Adapter#1



Figure 31
Power Adapter#1



Figure 32
Power Adapter#2



Figure 33
Power Adapter#2



Figure 34
Power Adapter#2

