

Figure 7
General Appearance of the EUT

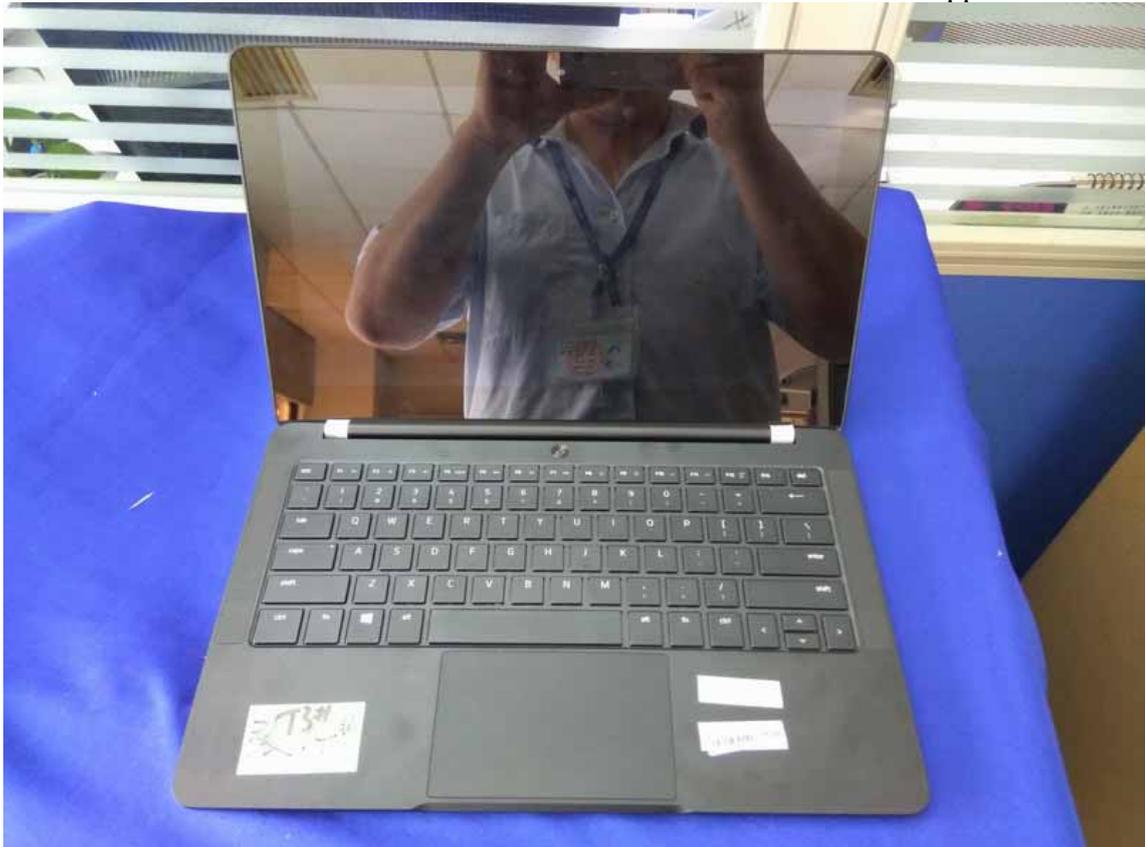


Figure 8
Inside Configuration of the EUT



Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT



Figure 11
Battery



Figure 12
Battery



Figure 13
Label of the Battery



Figure 14
Inside Configuration of the EUT

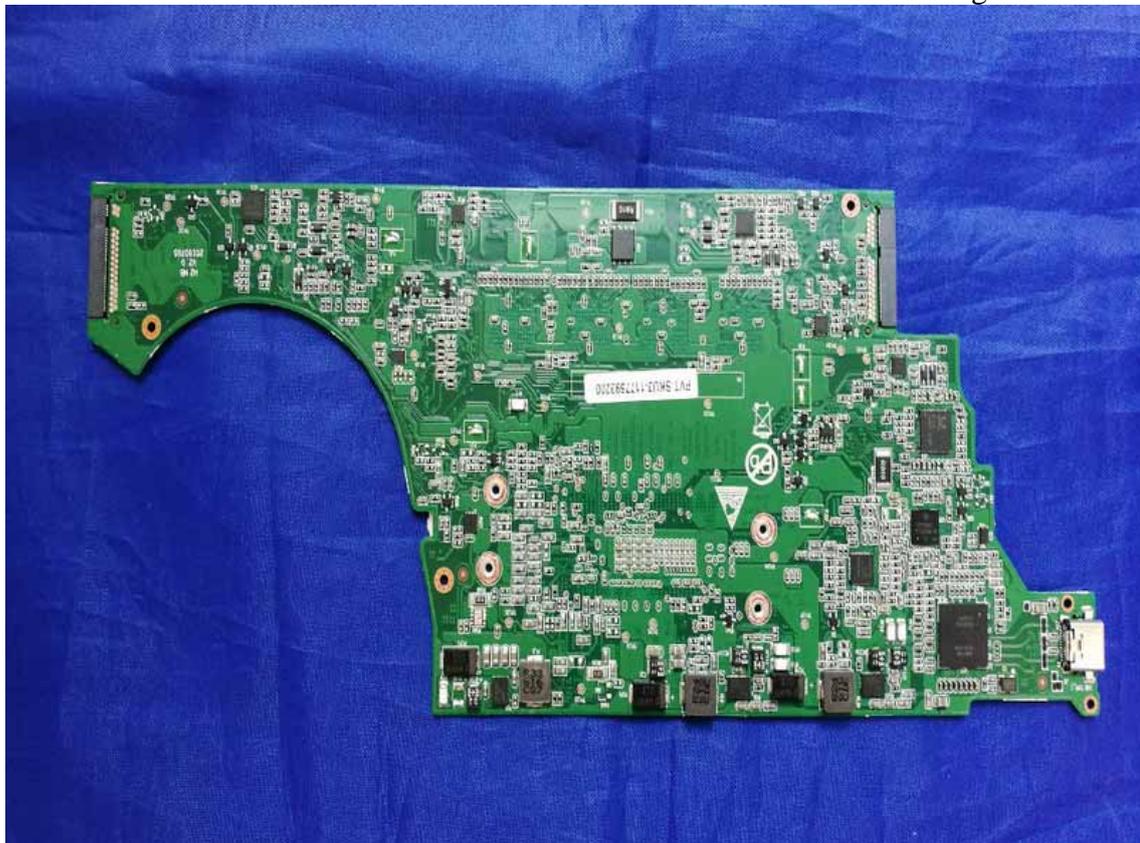


Figure 15
Inside Configuration of the EUT

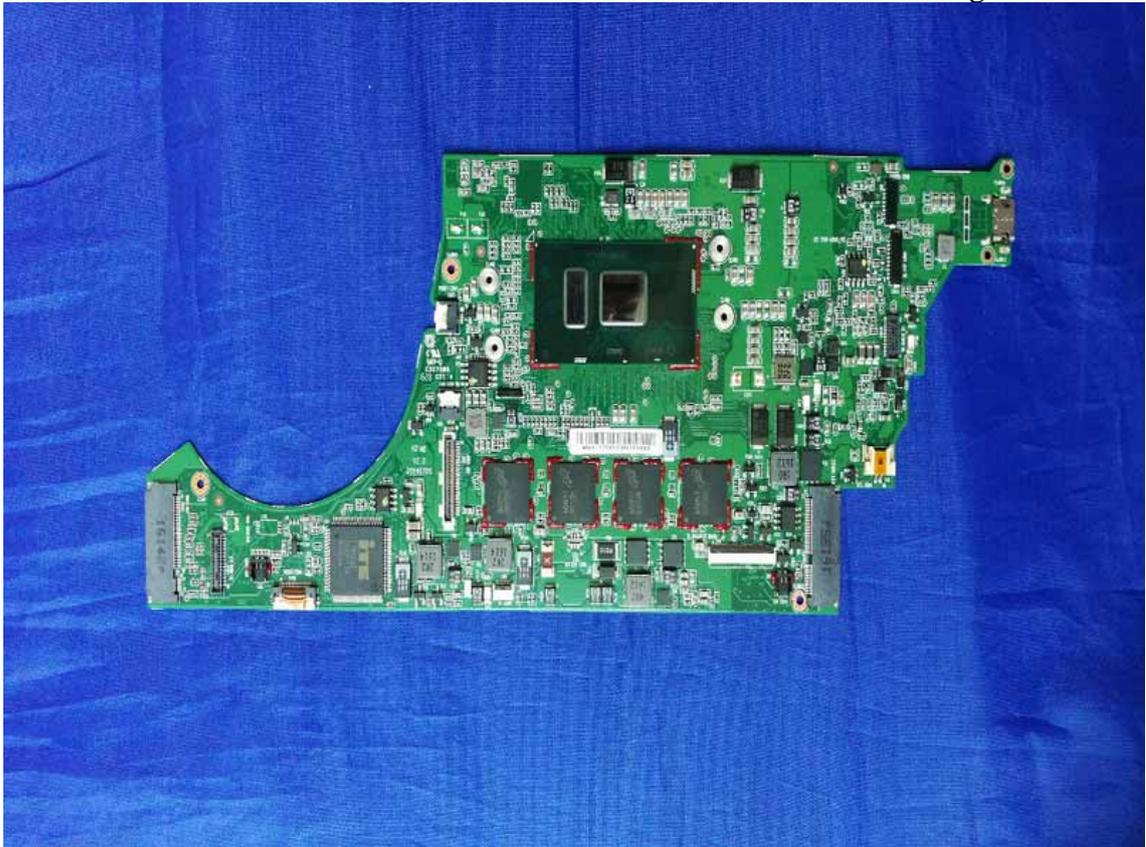


Figure 16
Inside Configuration of the EUT

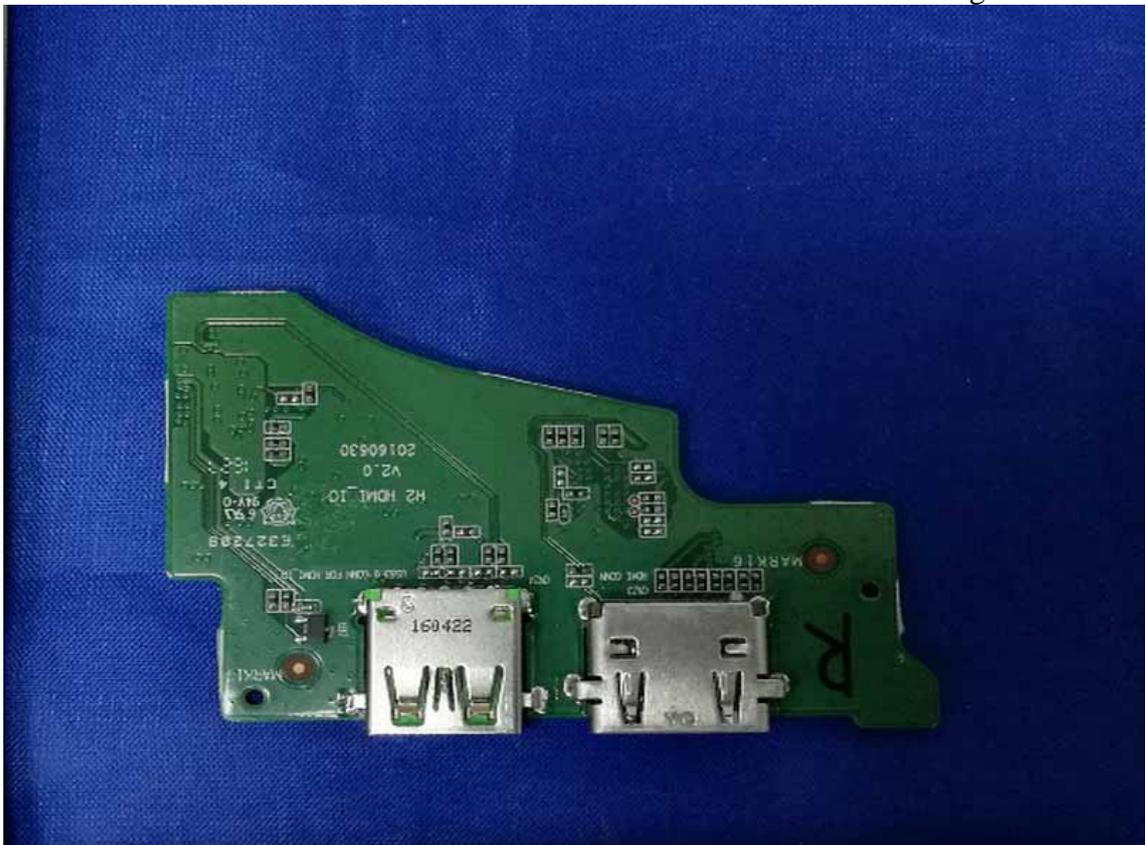


Figure 17
Inside Configuration of the EUT



Figure 18
Inside Configuration of the EUT

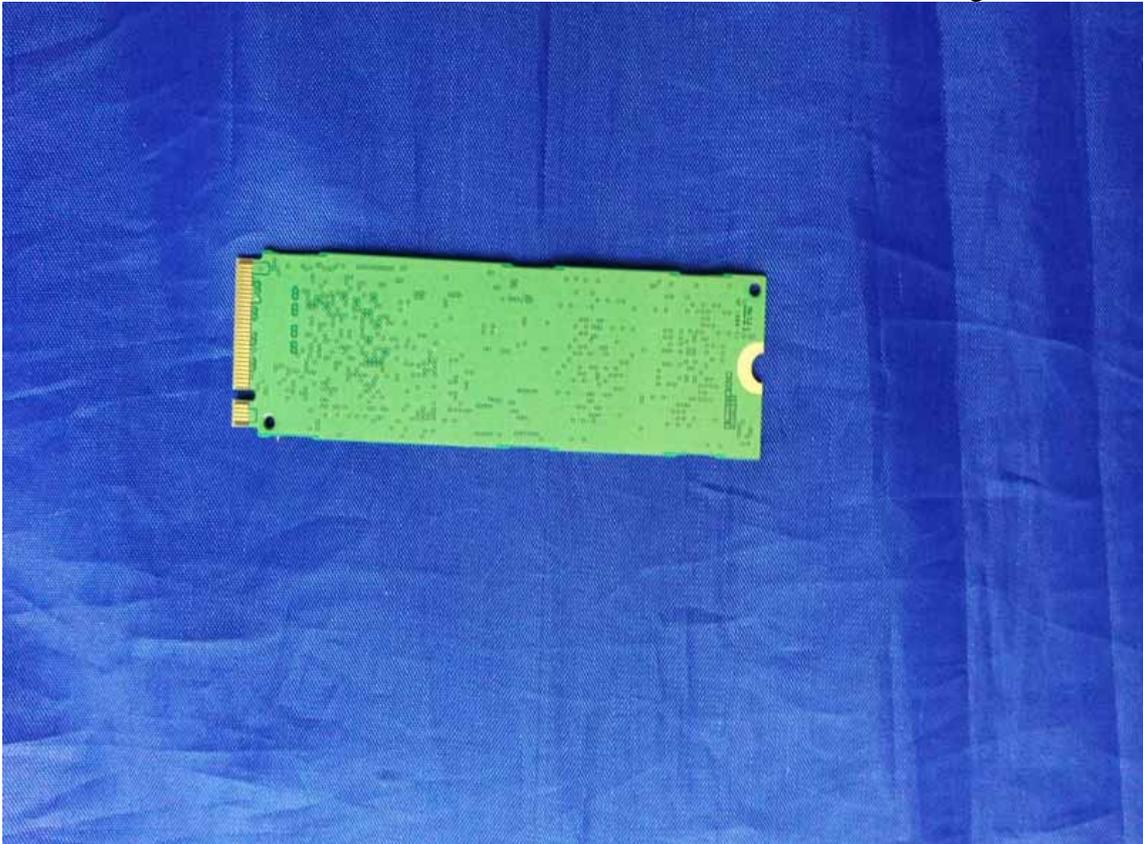


Figure 19
Inside Configuration of the EUT



Figure 20
Inside Configuration of the EUT

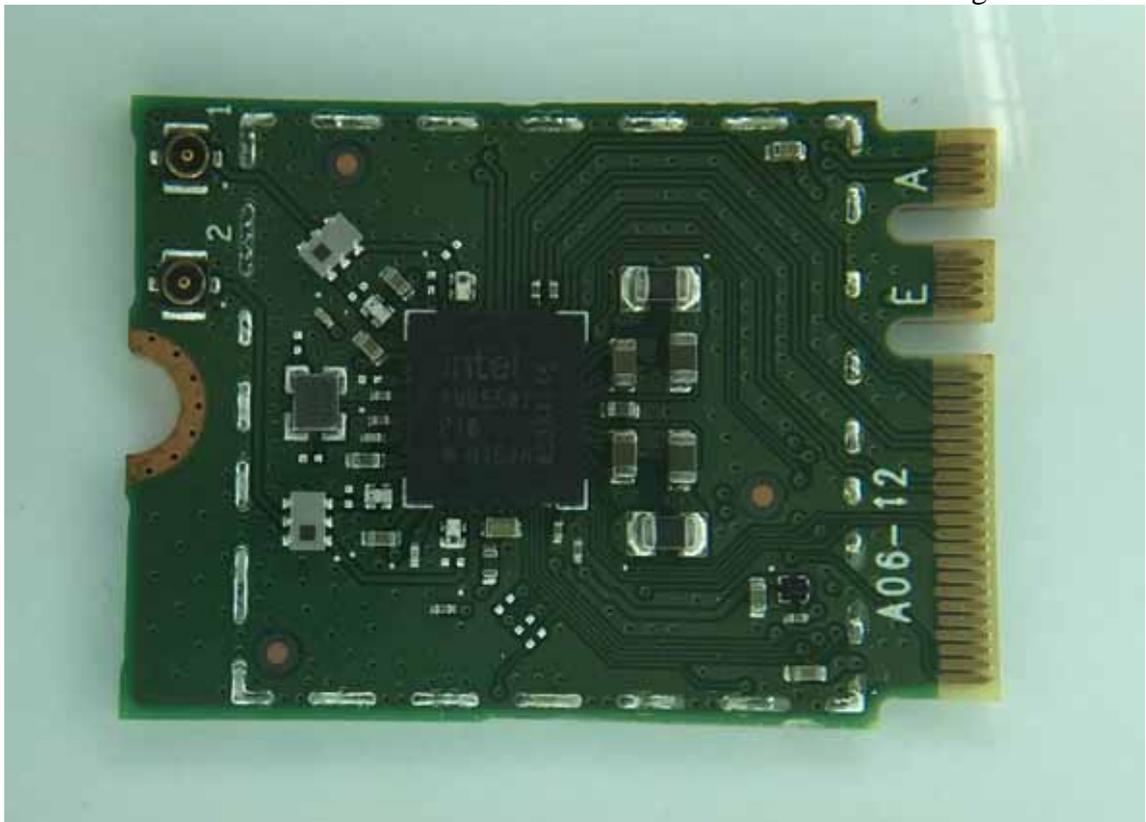


Figure 21
Inside Configuration of the EUT

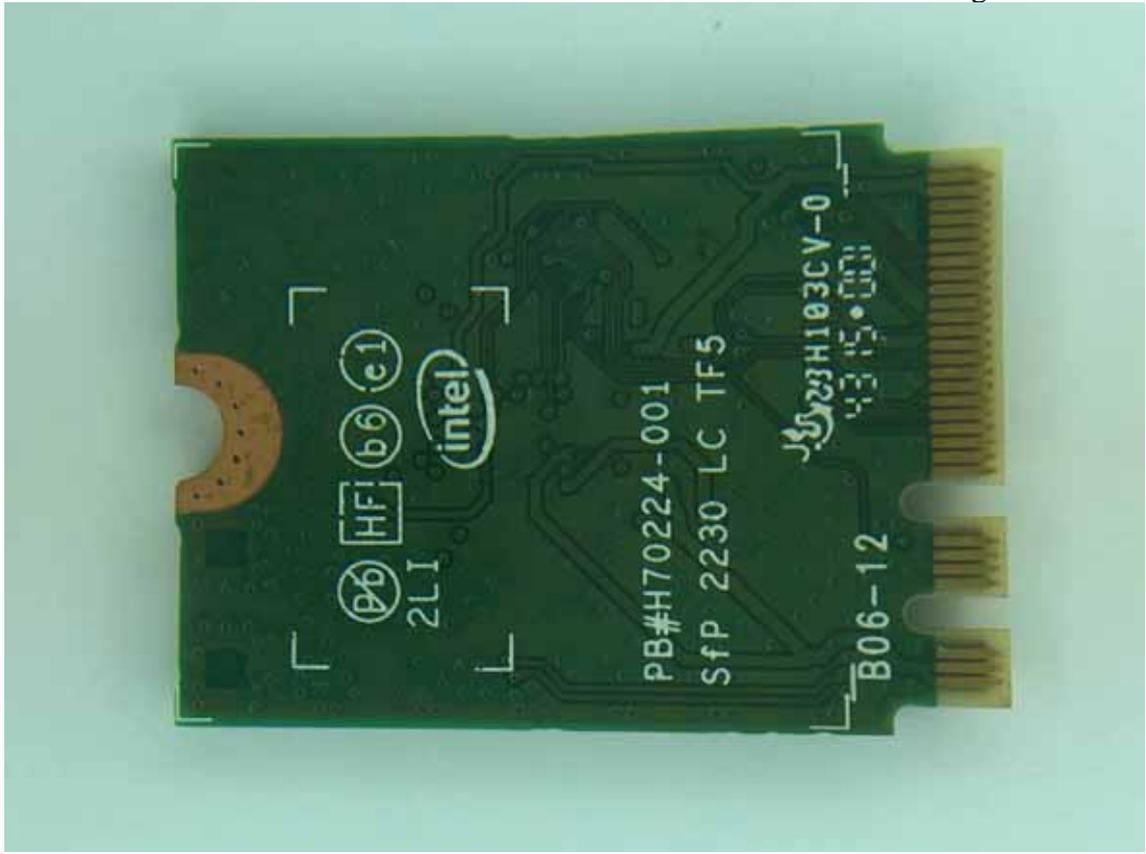


Figure 22
Power Adapter



Figure 23
Power Adapter

