

**USER MANUAL**  
**MODEL: RZ09-02886,RZ09-0288**

 
---

## PACKAGE CONTENTS

- Razer Blade
- Power adapter + regional power cord
- Micro-fiber cleaning cloth
- Important Product Information Guide

---

## DEVICE LAYOUT

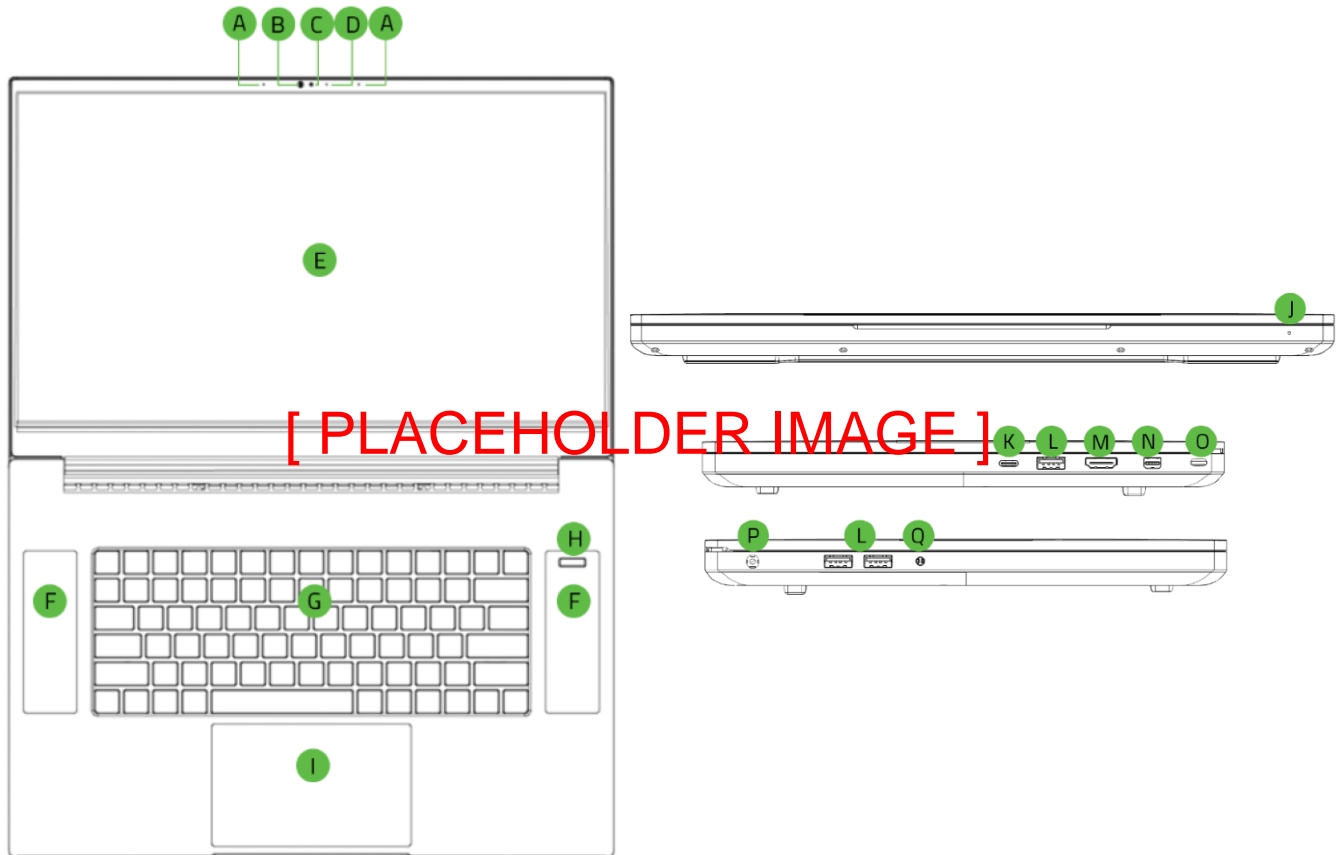


- A. Array microphone
- B. Infrared sensor
- C. Built-in webcam
- D. Webcam indicator light
- E. 15.6" Display
- F. Stereo speakers
- G. Backlit keyboard
- H. Power button
- I. Precision glass touchpad
- J. Front LED power indicator
- K. Thunderbolt™ 3 port (USB-C™)
- L. USB 3.1 ports
- M. HDMI 2.0 port
- N. Mini DisplayPort™ 1.4
- O. Kensington lock
- P. Power port
- Q. 3.5 mm combo port

---


## SETTING UP YOUR RAZER BLADE

 CONNECT THE POWER ADAPTER AS FOLLOWS:

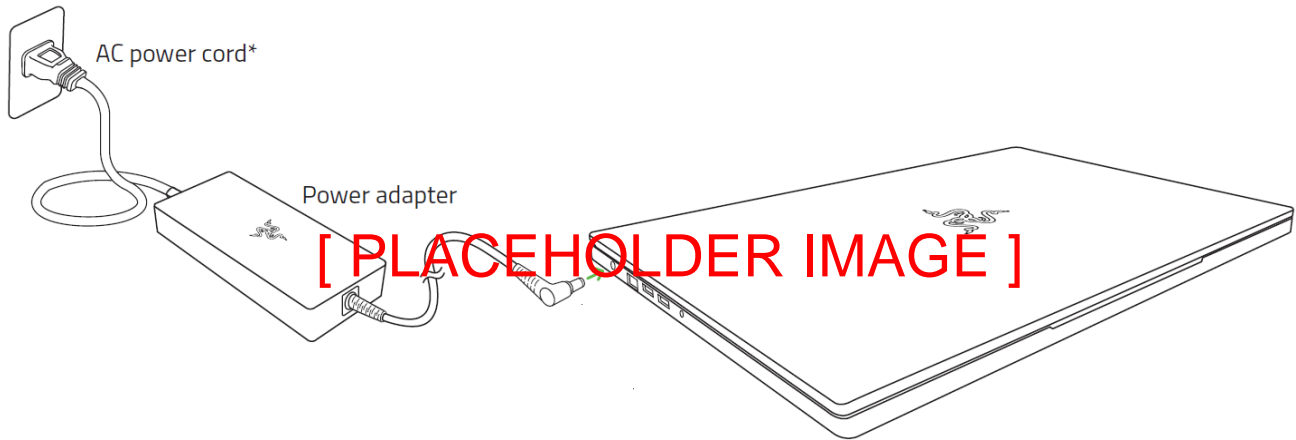

Make sure that the AC plug is properly inserted into the power outlet and the power adapter. Insert the power adapter's connector into the Razer Blade's power port. Press the power button to turn on your Razer Blade.

 \*Use the appropriate power cord for your region.

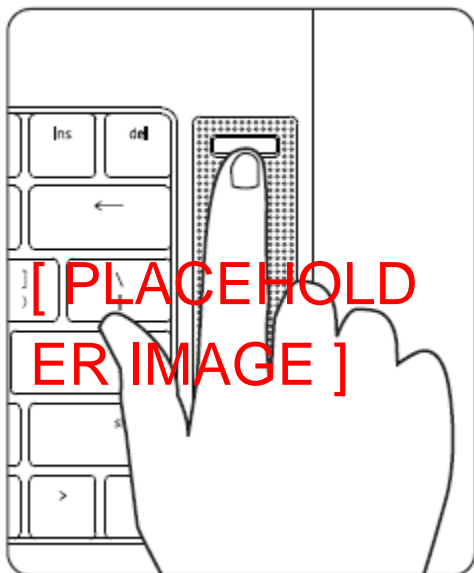


For first time use, please fully charge your Razer Blade or connect it to a power outlet before turning it on. It takes at least 2 hours to fully charge the Razer Blade.


## CONNECTING TO THE INTERNET

 *Disclaimer: The screens shown are subject to change based on the current version of your Operating System.*


1. Click the wireless network icon (📶) to bring up the Wireless network list. The system will automatically search for wireless networks in range.

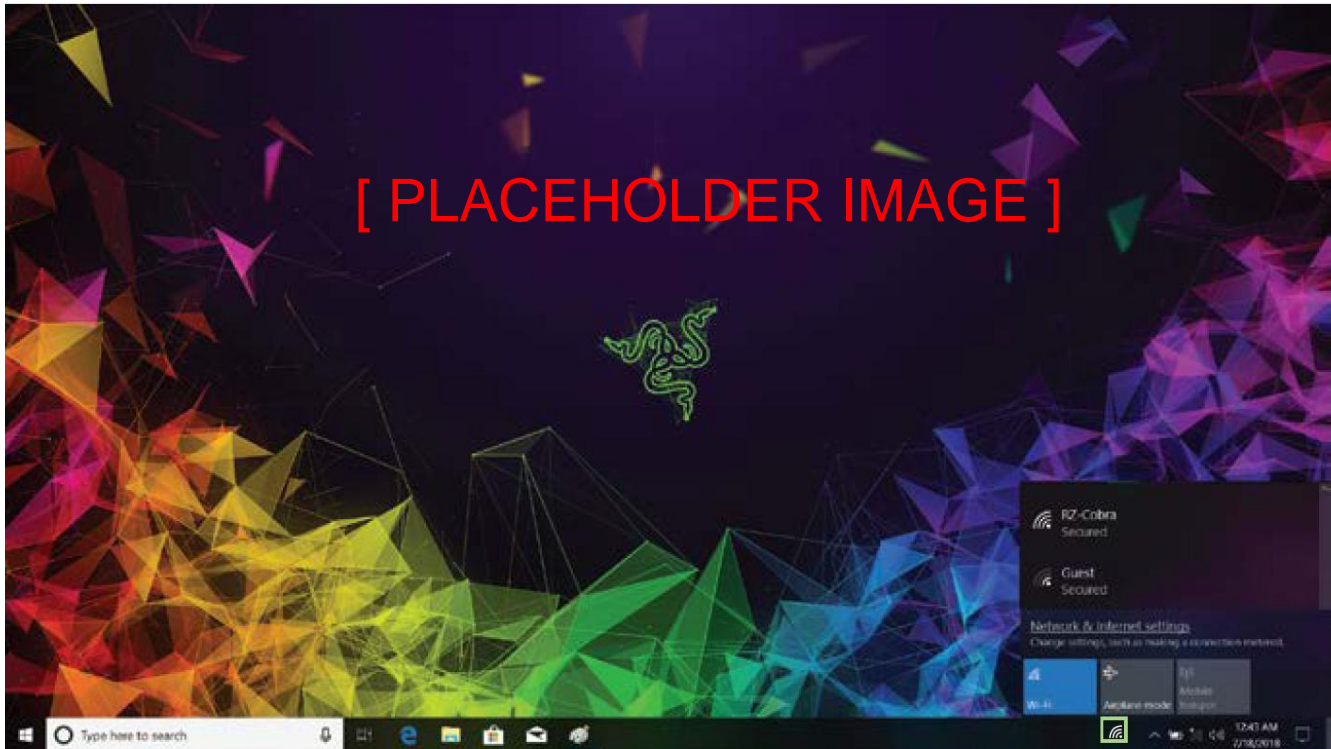

 2. Click the network you wish to connect to and click **Connect**.

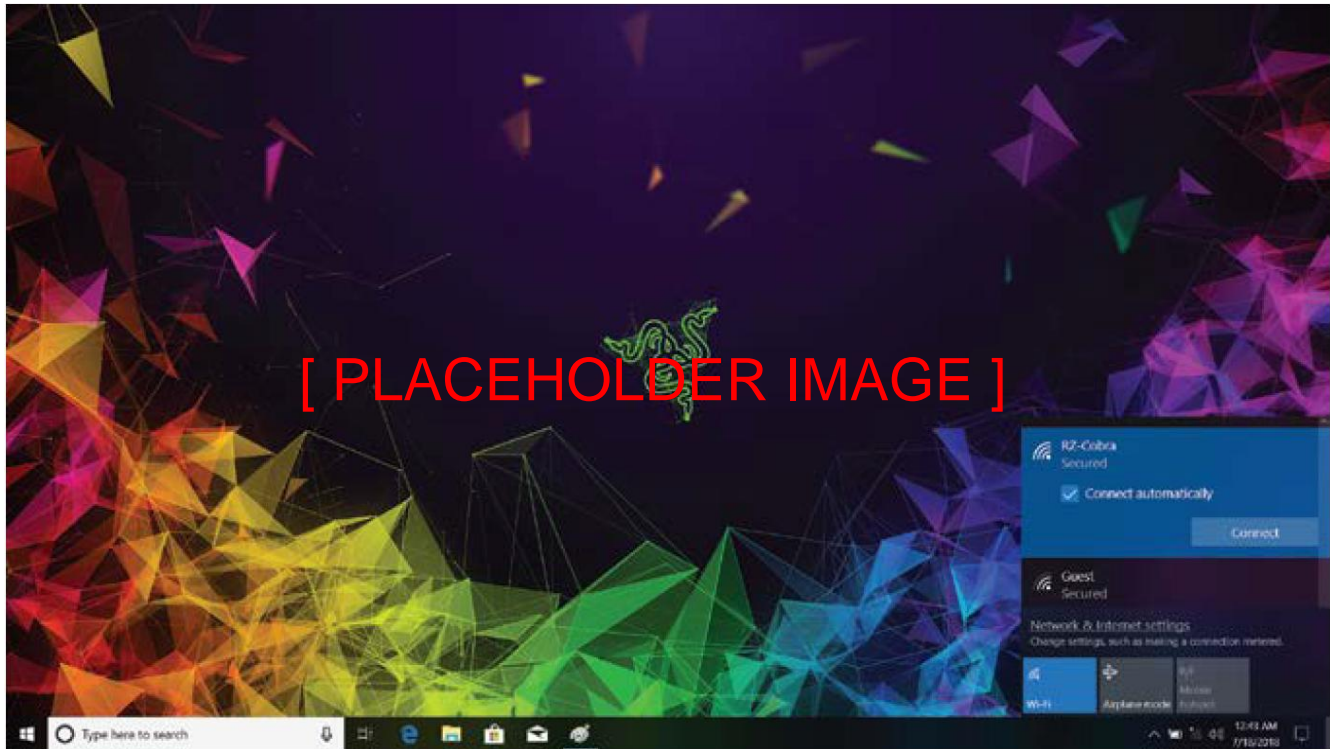

 
3. Enter the network password (if any) and select whether to enable network sharing. Click **Next**.

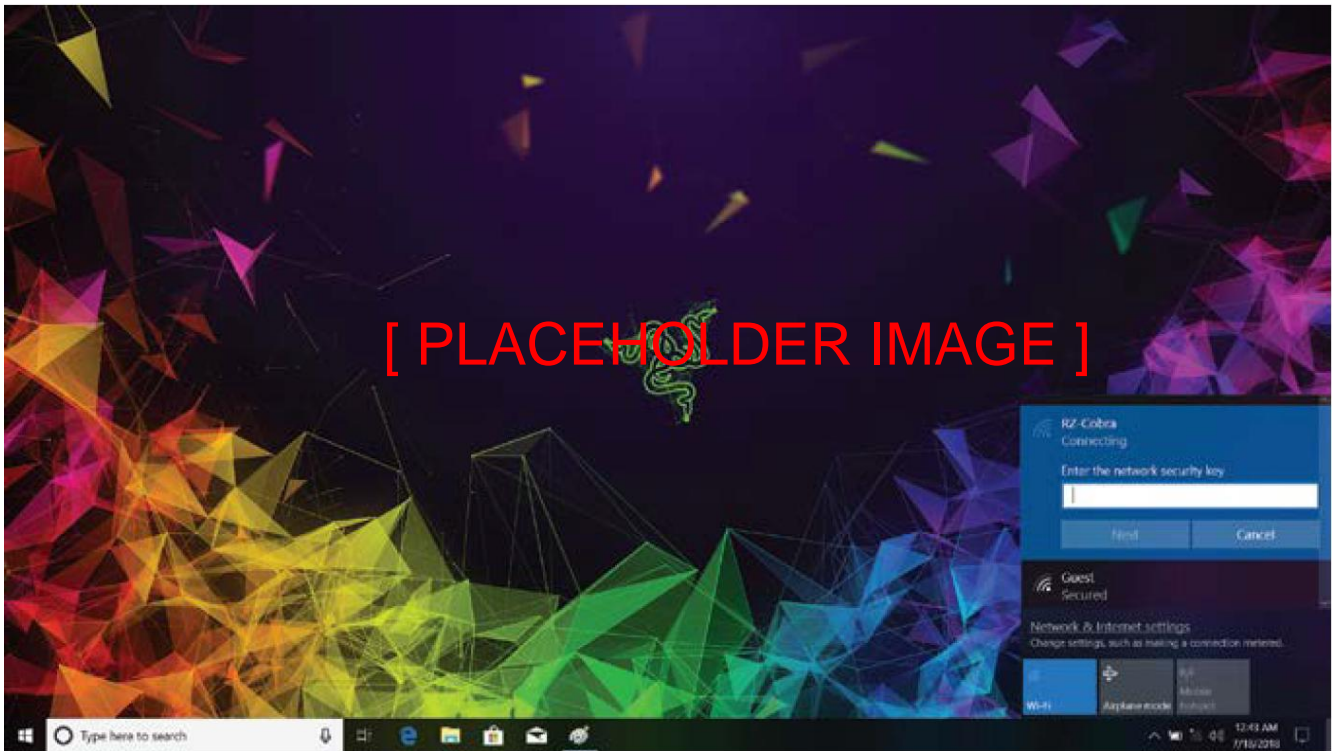

4. Once you are connected to the wireless network, click anywhere outside the window to return to the desktop.

## RAZER SYNAPSE 3 ACCOUNT CREATION & INSTALLATION

 Razer Synapse 3 allows your Razer Blade and other supported Razer peripherals to download drivers and firmware updates. Razer Synapse 3 also enables your custom settings to be stored on cloud servers so that they can be accessed anytime, anywhere.

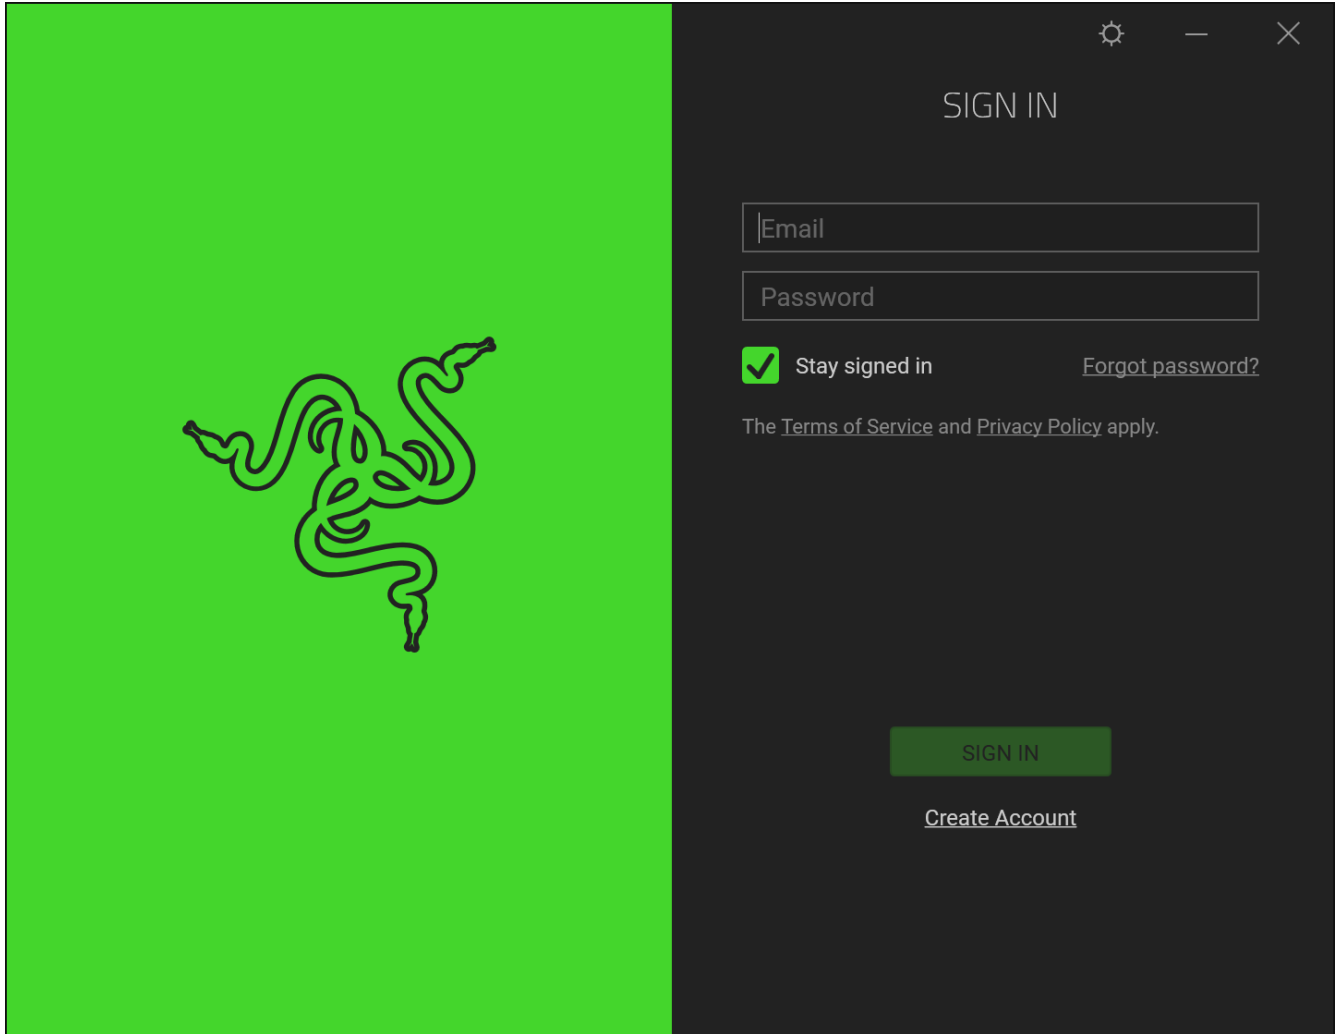


1. Razer Synapse 3 will start automatically once you enter Windows 10.
2. Register for a Razer Synapse 3 account and confirm your new account.
3. Open Razer Synapse 3 and login to your account.
4. Wait until Razer Synapse 3 automatically downloads and installs the necessary drivers.



## USING YOUR RAZER BLADE
 
### STATUS INDICATOR

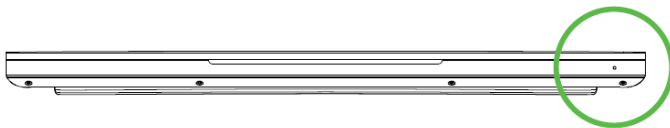







	Sleep	On	Low battery (10% left)	Low battery (3% left)
Front LED indicator				

### KEYBOARD FEATURES



Pressing the “fn” key in combination with the function keys will activate their secondary functions.






Function keys	Secondary function description
  	The audio volume controls allow you to mute (  ), decrease (  ) and increase (  ) the audio output.
	Toggles the monitor output.
  	The media keys allow you to play/pause (  ) the current track, return to the previous track (  ) or skip to the next track (  ).




	<p>The screen brightness keys allow you to decrease (  ) or increase (  ) the brightness of the Razer Blade's screen.</p>
	<p>The LED control keys allow you to decrease (  ) or increase (  ) the brightness of your keyboard's LEDs.</p>

## CONFIGURING YOUR RAZER BLADE

*Note: The features listed here require you to log in to Razer Synapse. These features are also subject to change based on the current software version and your Operating System.*

The Lighting Tab on Razer Synapse 3 gives you the flexibility to customize your Razer Blade through different quick effects or you can create your own using the Chroma Studio. If you have other supported Razer Chroma-enabled devices, you can synchronize their lighting effects with your Razer Blade.

	Name	Description	How to set up
	Breathing	The keyboard fades in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Fire	The keyboard lights up in warm colors to mimic the motion of flames	No further customization required
	Reactive	The LEDs will light up when a key is pressed. The light will fade off after a specified period of time	Select a color and a duration
	Ripple	On key press, light will ripple away from the pressed key	Select a color
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required

	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The LEDs will remain lit in the selected color	Select a color
	Wave	The lighting will scroll in the direction selected	Select either left-to-right or right-to-left wave direction

---

## REGISTRATION / TECHNICAL SUPPORT

 
### REGISTRATION

Register your product online at [razerid.razer.com/warranty](https://razerid.razer.com/warranty) using your Razer ID to get real-time information on your product's warranty status.

If you haven't registered for a Razer ID yet, register now at [razerid.razer.com](https://razerid.razer.com) to get a wide range of Razer benefits.

Serial No.: BY19WWAAAAXXXX

*Your product's serial number can be found here.*

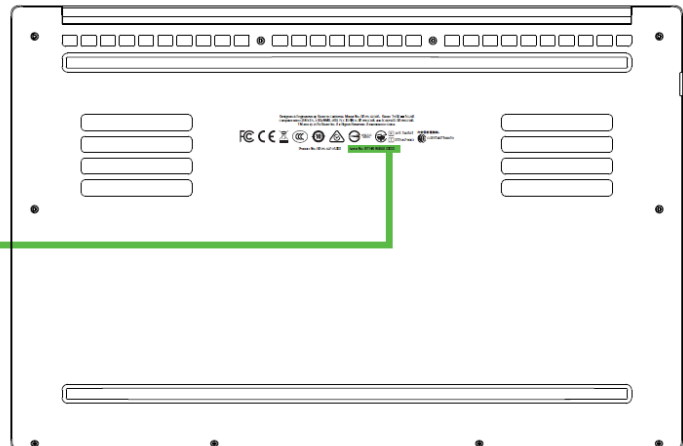

## TECHNICAL SUPPORT

- 1 year limited manufacturer's warranty\*.
- 1 year limited battery warranty.
- Access to manual and free online technical support at [support.razer.com](https://support.razer.com)

*\*Warranty may vary by region and is subject to applicable local law.*

Please refer to the Online Master Guide at [support.razer.com](https://support.razer.com) for in-depth instructions on how to configure and use your Razer Blade.

---

## SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Blade, we suggest that you adopt the following guidelines:

1. Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for assistance.
2. Do not take apart the device (doing so may void your warranty) and do not attempt to operate it under abnormal current loads.
3. Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

### COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with

physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Blade.

1. Position your laptop directly in front of you. If you have an external mouse, position it next to the laptop. Place your elbows next to your side, not too far away and your mouse within easy reach.
2. Adjust the height of your chair and table so that the laptop is at or below elbow height.
3. Keep your feet well supported, posture straight and your shoulders relaxed.
4. During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods. When using an external mouse, use a wrist rest to support your wrist while gaming.
6. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.
7. If you should experience any physical discomfort while using your laptop, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

## BATTERY WARNING

The Razer Blade contains an internal, lithium-ion rechargeable battery. In general, the life expectancy of such battery is dependent upon usage. If you suspect that the lithium-ion rechargeable battery inside the Razer Blade may be drained (has a low charge), try charging it. If the battery does not recharge after several attempts, it may be non-operational.

Do not open, mutilate, or expose to conducting materials (metal), moisture, liquid, fire, or heat. Doing so may cause the battery to leak or explode, resulting in personal injury. Do not use or charge the battery if leaking, discolored, or deformed. Do not leave the rechargeable battery discharged or unused for extended periods. When not using your Razer Blade battery for more than 30 days, be sure to store the battery in a fully charged state. Do not tamper with the battery. Dispose of the used battery according to local regulations.

---

## LEGALESE

### COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2019 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Powered by Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories.

Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation in the U.S. and/or other countries.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Blade (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

### LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

## GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

## FCC DECLARATION OF CONFORMANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on [razer.com](https://www.razer.com).

## FCC CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.