

Q91

FCC ID:RWVQ91

Gigo
1A



Manual de usuario

The phone will give you unprecedented and pleasantly surprised experience: The phone supports dual-GSM card and dual-SIM standby functions.

1. Getting to know your phone
2. 1.2 Installing SIM card and battery
- 1.3 Installing Storage card
- 1.4 Battery charging
- 1.5 Power on/ off
- 1.5.1 Power on
- 1.6.2 Power off

2. Using Call Function
- 2.1 Making a call
- 2.1.1 Directly call on Home Screen
- (1) On the Home Screen, input the area code and phone number.
- (2) Briefly press [Call Key 1] to call from SIM 1 , and briefly press [Call Key 2] to call from SIM 2.
- 2.1.2 Make an international call
- (1) Enter the country code (To enter " + " , just press [* Key] twice).
- (2) Enter the area code (Usually exclude the first "0") and the phone number.
- (3) Briefly press [Call Key 1] to call from SIM 1 , and briefly press [Call Key 2] to call from SIM2.
- 2.1.3 Call from Contacts
- (1) Enter the contacts to select the desired information.
- (2) Briefly press [Call Key 1] to call from SIM 1, and press [Call Key 2] to call from SIM2.
- 2.1.4 Redial from call history
- ❖ Enter the main menu and select [Call logs],

then select your desired number.

❖ On the Home Screen, press **【 Call Key 1/2 】** to check the call history, and selected the desired dialed number.

Briefly press **【 Call Key 1 】** to call from SIM1, and press **【 Call Key 2 】** will call from SIM2.

2.1.5 Dial an extension number

(1) Enter the switchboard number.

(2) On the Dialing screen, select **<Option>** → **Insert** → **Pause p** >, then enter the extension number.

(3) Press briefly **【 Call Key 1 】** to call from SIM1, and press **【 Call Key 2 】** for SIM2. The extension number will be transmitted in few seconds after getting through the switchboard.

2.1.6 Make an emergency call

(1) Enter the emergency phone number.

(2) Press briefly **【 Call Key 1 】** to call from SIM 1, and press **【 Call Key 2 】** to call from SIM 2.

2.2 Answering or rejecting a call

2.2.1 Answer a call

When there is an incoming call, you can press **【 Call Key 】** or **【 Left Soft Key 】** to answer.

2.2.2 Answer the second call

If the call waiting function has been activated, when there is new coming call while you' re already on the phone, then you can:

❖ Press **【 Call Key 】** to answer the second call and the current call will be put on hold.

❖ Press **【 End Key 】** to reject the second call and to keep the current call.

2.2.3 Reject a call

When there is an incoming call, you can press **【 End Key 】** to reject it.

2.3 Call options While on the phone, select

<Menu > and you can have the following options:

- ❖ Turn on handfree: Select to turn on or turn off the speaker function. Press [Right Soft Key] during a call will turn on the speaker either.
- ❖ Switch: Select [Switch] to hold on the current call, and this function needs network support.
- ❖ Contacts: Select to view your Contacts List.
- ❖ Messages: Enter the Messages screen.
- ❖ Call logs: Enter the Call logs.
- ❖ On: Record the conversation. Select [Menu→Off] to stop recording and the recorded file will be stored via [Multimedia→Recorder→Option→Record file list] automatically.

2.4 Adjusting call volume

During a call, you can press [Navigation Key] to adjust the earphone volume.

2.5 Ending a call

Press [End Key] to end the call.

3. Call History

3.1. Enter the main menu, and then select [Call logs] to enter the call list.

3.2. On the Home Screen, press [Call Key] to view call list.

3.1 Dialed calls

Display recent call records. Choose any call record, and select <Option> to access the following operations:

For dial function, you may also select [Settings→Dual-SIM→Main SIM settings→Call], and base on your needs to choose SIM1, SIM2 or Prompt to select.

3.2 Received calls

Display recent calls received. Similar operations, you may refer to “Dialed Calls” .

3.3 Missed calls

Display recent calls unpicked up. For more operations, please refer to “Dialed Calls” .

3.4 Rejected calls

Display the phone numbers set as rejected calls.

3.5 Delete all

Delete all the call entries.

3.6 Call timers

Select the desired SIM Card, and then you can view all relevant information about the SIM Card.

3.7 Call costs (need the network support)

3.8 GPRS counter

You can view the detail about GPRS flowrate.

4. User profiles

With this function, you can set different user profiles to adapt different environments. There are five preset profiles available; each one has its own default value, which you can set according to your need.

4.1 Standard

For the settings, please refer to” General” .

4.3 High ring and vibrate

For the settings, please refer to” General” .

4.4 Low ring

For the settings, please refer to” General” .

4.5 Silent

For the settings, please refer to” General” .

5. Contacts

5.1 View a contact

Enter the contacts, the phone is defaulted to show contact list with all entries. Press [Left Key/Right Key] to switch between different groups.

5.2 Smart search

Enter the main menu, and select [Contacts] to view the contacts list.

You can search the desired contact by pressing the corresponding keys (The phone supports fuzzy search).

5.3 Adding a new contact

On the Contacts list, select <Option→New> to create a new contact.

- ❖ Phone: You can input the contact name, mobile number, home number, etc. You can also set special image and ring for the contact entry

- ❖ SIM1: The input record will be saved to SIM1, with each name one phone number.

- ❖ SIM2: The input record will be saved to SIM2, with each name one phone number

6. Message

6.1 Write message

You must obtain the corresponding service center number from the network operator before using this function. The memory capacity differs due to different types of SIM Card.

6.1.1 New SMS

The phone supports multiple SMS editing. On the Home Screen, press [Left Soft Key] and select [Message→Write message→New SMS] to edit a new SMS directly.

6.1.2 New MMS

MMS is a multimedia message, supporting pictures in GIF, JPEG, WBMP, and BMP format. On the Home Screen, press [Left Soft Key] and select [Message→Write message→New MMS] to create a new MMS.

6.2 Inbox

Store all received SMS and MMS.

6.3 Outbox

Store all SMS and MMS failed to be sent.

6.4 Drafts

Save edited SMS and MMS havn' t sent.

6.5 Sentbox

Store all the SMS and MMS successfully sent out.

If you want the sent messages be saved automatically, please select

[Messages→Option], then select [SMS settings→Save sent messages→Save].

6.6 Message setting

On the Home Screen, press [Left Soft Key] to enter the main menu, then select [Message→Option] to enter the message setting menu.

6.6.1 Templates

While editing messages, you can directly cite the preset common phrases. Select <Edit> to set the common phrases by yourselves (Maximum: 5 pieces).

6.6.2 Voice mail server

This function works like an answering machine, which can transfer a missed call to your personal voice mail, allowing the caller to leave a voice message and notify you by an SMS. Voice Mail is a part of the bundled software provided by network operator, therefore, you need to register to active this function, and manually set the phone. Please contact with your network operator for more details.

7. Internet The network service allows you to access the Internet via wireless communication, from which you can gain rich information & resources, and E-commerce from the Internet. On the Home screen, press [Left Soft Key] and select [Internet].

7.1 Input URL

Enter the wanted website, and click <Confirm> to

connect it.

7.2 Homepage

By selecting this option, your mobile phone will directly visit the preset or defaulted homepage. While browsing the website, press [Left Soft Key] to switch between address bar, websites and tool bar.

7.3 Bookmark

Bookmarks are defaulted as blank, and you are able to edit it as you want. Save the common visited website into the Favorites, and marked by simple names. Select one saved name, then the corresponding web will be connected. Please refer to below setting:

❖ Add bookmark: Enter the new bookmark address and name, then select <OK> to save it.

7.4 History

Record the websites you visited before.

7.5 Offline

After saving a website as snapshot, you can browse the website while offline.

7.6 WAP settings

7.6.1 Browser settings

❖ Clear cache: In order to avoid congestion and improve the web browsing speedn, please clear the cache regularly.

❖ SIM1 network account: Set the SIM1 network port.

❖ SIM2 network account: Set the SIM2 network port.

❖ Download image: After enabling this function, the image will only be displayed after being downloaded.

❖ Play background sound: After enabling this function, you can play background music.

❖ Accept push: If enabling this function, you can receive Push messages. When receiving push message, an icon  will appear on the Home Screen, and you can view the Wap push message sent by system via this menu.

7.6.2 Network account

You can select the desired network account: China Mobile GPRS, China Mobile MMS or China Unicom WAP, and you can add the desired account by yourself as well.

On the Network count screen, select <Option> to process following operations:

- ❖ New connection
- ❖ Security: Set whether to enable the security function.
- ❖ User name: Edit the network user name.
- ❖ Password: Set the connect password.
- ❖ APN: Set the network access port name.
- ❖ Gateway IP address: Set the network IP address.
- ❖ Gateway port: Set the network port.
- ❖ Rename: Edit the network account name.
- ❖ Set as homepage: Set the homepage website address.
- ❖ Advanced settings: Set the DNS address and network type.
- ❖ Add from list: You can add many defaulted network accounts.
- ❖ Search: Search for the network configuration registered in the nearby areas, which can be directly used after being searched.
- ❖ Delete: Delete the selected network account.
- ❖ Edit: Edit the selected network account.

7.6.3 Preferred storage

You can choose the place where to save the

pictures, music or video files from the Internet.

7.6.4 GPRS setting

You can select to always open GPRS or open it when required.

7.6.5 Restore default

Reset the WAP settings back to the factory set.

8. Multimedia

8.1 Camera

Enter the main menu, and select [Camera] to enter the camera preview screen.

8.1.1 Capture a photo

On the Capture Preview screen, press 【OK Key】 to take a photo.

8.2 Video recorder

Enter the main menu, and select [Video recorder] to enter the video preview screen, and press 【OK Key】 to start recording the video.

8.3 Audio player

The phone can play music saved in the phone or storage card and the download ring, and also supports MP3 background playing.

8.4 Mobile TV

You can search TV channels to watch analog TV.

8.5 Image browser

The function provides a prompt access to view the photos and pictures.

8.6 Recorder

On Home Screen, press 【Left Soft Key】 to enter the main menu, select [Multimedia→Recorder], and choose <Option→Start recording> to start recording. Select <Pause> to have the recording pause for a while, select <Stop> to cease recording. After ceasing the recording, the recorded file will be automatically save in the

folder [Audio], press **【 Up/Down Key 】** to select  or select <Option→Record file list> to check.

8.7 FM radio

On standby mode, plug the earphone, press **【 Left Soft Key 】** to enter the Main menu, then select [FM radio].

FM radio has a telescopic antenna. You can listen to the radio without headset.

8.8 File manager

This menu allows you to manage files stored in the USB disk or storage card.

9.Tool

9.1 Alarm On the Home Screen, press **【 Left Soft Key 】** to enter the main menu, and select [Tools→Alarm], then you can set the alarm name, time, ring and mode.

There are three alarms available, which can be activated simultaneously. Every alarm has three prompt modes, [Once], [Every] or [Weekly].

9.2 Calendar

On the Home Screen, press **【 Left Soft Key 】** to enter the main menu, and select [Tools→Calendar] to enter the Calendar screen.

9.3 Calculator

Directly input numbers, press **【 Navigation Key 】** to select your desired operation symbols (+, -, /, X). Press **【 OK Key 】** to get the answer. Press **【 Right Soft Key 】** to clear last digit entered, while holding on the key to clear all digits.

9.4 Bluetooth

[Open BT]: Choose to activate the BT

[BT visibility]: BT visibility set

[Paired] : Search and paired BT devices

[My BT name]: Local BT name

[BT file storage]: Storage location

[Help] : Help Documentation

9.5 E–Book reader

You can view file in TXT format by Ebook and copy the TXT file to the [Ebook] folder in the memory card from your PC .

On the Home Screen, press [Left Soft Key] to enter the main menu and select [Tools→E–Book reader] to enter the Ebook screen you read last time. Select <Back> to enter the Ebook list and reselect the desired file to read.

10.Settings

10.1 Dual–SIM

❖ Set dual SIM call divert

You can set the two SIM cards to forward the calls to each other. Before using this function, please select [Settings→Dual–SIM→Dual SIM settings]

❖ Standby mode: You can select the standby mode for SIM card, either to have one SIM card standby, or to have both SIM cards standby simultaneously.

❖ Main SIM settings: There are several types as per below:

❖ Communication: For functions like call, SMS, MMS, and Internet, you may choose SIM card type to be used according to your need, and you may also choose to have prompt choice while using some certain functions.

❖ Speed dial: If enabling this function, you can speed dial the phone number via the preset SIM card.

❖ Reply by original SIM: You can activate the function to reply from current SIM card for phonecall, SMS, MMS and Network service.

10.2 Call setup

10.2.1 Network selection

❖ Auto select: The phone can automatically search and register available networks.

❖ Manual select: Enable this function, the

phone will search for the network, and list all searched networks, then you need to choose the one needed to register.

10.2.2 Call divert Based the set diverting conditions, incoming calls will be forwarded into voice mail or other numbers.

10.2.3 Call barring

This function helps you to restrict the incoming and outgoing calls.

10.2.4 Call waiting (Need network support)

- ❖ **Activate:** If you set the function on, the network will alert you that there is an incoming call. You can keep current call and answer another one.

- ❖ **Off:** Cancel call waiting function, then the new incoming calls won't be answered while you're on the phone already.

- ❖ **Query status:** Select it to view current status of this function.

10.2.5 Hide ID (Need network support)

- ❖ **Hide ID:** While calling, the recipient won't see your phone number.

- ❖ **Display own ID:** While calling, your phone number will be visible for the recipient.

- ❖ **Display ID by network:** While calling, whether your phone number will be visible or not for the receiver depends on the network presetting.

10.2.6 Select line

You can choose line 1 or line 2 as you need.

10.2.7 Flight mode

- ❖ **Activate:** Activate flight mode, then all network service won't be available.

- ❖ **Select when power on:** You can select whether to activate flight mode when power on.

10.2.8 Others

❖ IP shortcut key

After activating this function, selecting <Option→ IP Call>, then preset IP number will be automatically added before the number you want to dial and call via it.

❖ 50 secs warning

If you activate the function, an elapsed time reminder will be heard at the 50th second of every minute during your call, so that you may end the call timely to save the phone fare.

❖ Connect prompt

The phone will vibrate to prompt you when the recipient answers your phone.

❖ Answer /Reject mode

❖ Reply SMS after reject: You can select whether to reply an SMS after rejecting a call.

❖ Any-key answer: You can answer calls by pressing any key(except [Left Soft Key] and [End Key]).

❖ Auto redial

If you set this function on, the phone will redial the number after an unsuccessful call,

10.3 Phone setup

10.3.1 Time and date

❖ Set time: Directly input the time or press [Up /Down Key] to set it.

❖ Set date: Directly input the date or press [Up /Down Key] to set it..

❖ Time format: Set the time format as [12 hours] or [24 hours].

❖ Date display type: Set the date format as [Year-mon-day], [Mon-day-year] or [Date-mon-year].

10.3.2 Select language

Two languages are available, [English] and

[Simplified Chinese].

10.3.3 Auto power on/off

You can set the phone to switch on/off at a scheduled time. For the setting method, please refer to “Alarm” .

10.3.4 Motion Sensor Switch

The function allows you to activate the screen auto-rotating function for idle wallpaper, audio player. The function is defaulted as “Deactivated” .

10.3.5 Shortcut settings

❖ While the Home Screen is smart style, you can change the shortcuts on Home Screen via this.

❖ While the Home Screen is common style, you can change the responsible shortcuts for 【 Navigation Key 】 under standby mode.

10.3.6

PIN code is the personal identification number for SIM card. If never be modified, the initial password set by network operator should be 1234 or 0000. If activated the power-on PIN code, then you have to input the PIN password each time you switch the phone on. You can modify the PIN code to prevent your SIM card being used by others.

10.3.7

Reset all parameter values into default status. Please enter the privacy preserving password (Initial password is 1234) to resume factory setting.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 0.559W/Kg, next to the head is 0.580W/Kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

