

SMT 5700WOC User Manual

Innovation makes your dreams come true

Welcome to the user guide for the SMT 5700WOC mobile phone. We are paving the way for modern technology.



With a whole suite of productivity and entertainment programs, the SMT 5700WOC provides a fresh and exciting level of enjoyment. Connect to the Internet with Internet Explorer, synchronize your phone and PC with ActiveSync, or listen to your favorite music through Windows Media. Wherever you go, whatever you do, keep the SMT 5700WOC close and never skip a beat.

Special features

- Internet Explorer (page 82)
- Built-in ActiveSync to synchronize with PC (page 51)
- Windows Media Player (page 71)
- Supports Outlook E-mail (page 33)
- Amusing games (page 59)
- Supports MicroSD card (page 11)
- Supports Voice Notes (page 96)
- Calendar (page 42)
- Supports video (page 93)
- Supports Internet sharing (page 98)
- Supports Speed Dial (page 103)
- Supports MMS (page 29)
- Supports TeleNav (page 81)
- Supports MobTV (page 87)
- Supports Documents To Go (page 61)

Declaration

Congratulations on the purchase of your new Windows Mobile™ Smartphone!

COPYRIGHT INFORMATION

©2007 AT&T Knowledge Ventures. All rights reserved. AT&T, AT&T logo, Cingular and Cingular logos are trademarks of AT&T Knowledge Ventures and/or AT&T affiliated companies. Some features may require monthly access and/or per use charges. This phone is sold for use on AT&T's wireless systems. It may not be compatible with other wireless systems. Battery life, talk and standby times are approximate and depend on network configuration, signal strength, features selected, and customer usage patterns.

Microsoft, Outlook, Excel, Windows Mobile and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by AT&T Wireless is under license. The GSM lettermark is a trademark of the GSM Association.

©2007 UTStarcom Incorporated, All Rights

Reserved. Appearance of phone may vary. Screen images simulated. Phone made in China with Chinese and foreign components. All other items imported. See each item for country of origin.

WARNING: This product contains small parts. Keep your mobile phone and any small parts out of small children's reach. To take advantage of all the benefits and service features, you may need to purchase additional hardware or software, pay monthly access and/or per use charges. This device contains a Lithium Ion Battery. Dispose of batteries according to local regulations, (e.g. recycling). Do not dispose of as household waste.

Please Read Before Proceeding.

THIS DEVICE IS NOT CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE DEVICE IS CHARGING.

WHEN INSERTING YOUR SIM CARD, MAKE SURE THE DEVICE IS POWERED OFF, AND THAT THE SIM CARD SNAPS INTO THE

SOCKET SECURELY.

YOUR WARRANTY IS INVALIDATED IF
YOU OPEN OR TAMPER WITH THE
DEVICE'S OUTER CASING.

RELATIVE INSTRUCTION

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your phone.

Some functions referred to in this guide also need the support of a network operator or service provider. If you are unable to confirm whether you will be able to use certain functions or services with this phone, please consult your network operator or service provider.

The phone may include some commodities, technology or software that is controlled by export law, Chinese regulations and regulations governed by other countries or areas.

In order to ensure your safety, please read the "Safety Notice" and "Safety Precaution".

Typographic conventions used in this user guide include:

◇: Shows function key;

“”: Shows important information on the phone interface;

[]: Shows the phone menus.

Content

Safety notice	IX
1. Getting to know your phone	1
What's in the box	1
Your phone	2
Front view of your phone	2
Side view of your phone	2
Rear view of your phone	3
The Home Screen	3
Status Icon	5
Program	6
2. Getting Started	9
Installing SIM card and battery	9
Installing MicroSD card	11
Battery charging	12
To charge the SMT 5700WOC using the travel	
charger:	12
Battery power display	13
Power on/ off	13
Using the Quick List	14
To access the Quick List	15
Using shortcut keys	15
Using Function keys	17
3. Call Functions	18
Making a call	18
To make a call from the Home Screen	18
To make a call from contacts	18
Creating a speed dial for a contact	19
Making a call from Call History	19
To make a call from text messages	20
Receiving a call	21
Answering or ignoring an incoming call	21

Ending a call	21	Scrolling to enter menu function	27
In-call options.....	21	Entering a menu by using shortcuts.....	27
Making two calls simultaneously (this must be supported by the network)	22	6.Messaging	28
Switching between two calls (this must be supported by the network).22		Messages	28
Making a conference call (this must be supported by the network)	22	Editing an MMS.....	29
Additional dialing information	23	Configuring MMS settings	30
Making an emergency call.....	23	Editing a Text Message.....	32
Making an international call.....	23	Outlook E-mail.....	33
Dialing a voice mail.....	23	Editing an e-mail.....	33
Call functions	24	Setting Up your E-mail	35
4.Input Modes	25	Setting Up E-mail on Your Device with Xpress Mail	35
Switching input modes.....	25	Sending and receive personal E-mail	38
Character input mode	25	New account.....	39
Numeric input mode.....	26	Folders	40
5.Menu Use.....	27	Deleted items.....	40
Entering menu	27	Drafts.....	40
		Inbox	40

Outbox	40	49
Sent items.....	40	Copying SIM card contacts to phone.....	49
Options	40	Copying phone contacts to SIM card.....	49
7.Calendar	42	Deleting a contact.....	50
Viewing calendar.....	42		
New appointment.....	43		
Calendar settings	43		
8.Contacts	44		
Viewing a contact.....	44		
Editing a contact.....	45		
New contacts	46		
New SIM contacts.....	47		
Speed dials	47		
Setting method	47		
Finding a contact.....	48		
Beaming a contact.....	48		
Transferring methods.....	48		
Copying contacts between SIM card and the phone			
9.ActiveSync	51		
Setting up.....	51		
To manually start and stop synchronization	52		
To change which information is synchronized	52		
Synchronizing with exchange server.....	53		
To synchronize directly with Exchange Server	53		
Stopping synchronization.....	54		
Synchronization information.....	55		
Synchronizing inbox	55		
Synchronizing schedule	55		
Synchronizing through Bluetooth.....	56		
Installing software in the phone.....	56		
Solving ActiveSync Connection Problems.....	56		
ActiveSync error information	58		

10.Games	59	Folder operation	67
11.IM	60	14.MEdia Net.....	68
Instant Messaging	60	MEdia net home	69
Setting up	60	Shop application.....	69
Sign In.....	60	Shop games.....	69
Add a contact	60	Shop graphics	70
12.Documents To Go.....	61	Shop multimedia	70
PDF to go	61	Shop tones	70
Sheet to go.....	62		
Slideshow to go.....	63		
Word to go.....	64		
Zip to go	66		
13.My Stuff.....	67		
Folder use	67	16.AT&T Music.....	71
My pictures	67	Transfering Music	71
My sounds.....	67	Windows Media.....	72
My videos	67	About the controls.....	73
UAContents	67	About the screens and menus.....	74
		Playback screen menu.....	74
		Now playing screen menu.....	75
		Library screen menu	76
		Player setting.....	77

Shop music.....	78	The storage location of photos and videos	90
Music ID.....	79	18.Call History	91
XM Radio Mobile	79	Call list	91
The Buzz	79	Options in call list	91
Community.....	79	Saving a contact.....	91
Music apps	80		
17.Entertainment	81		
Get TeleNav.....	81	19.Organizer.....	93
Internet Explorer	82	Calculator	93
Activating Internet Explorer.....	82	Clear	93
The menu when Internet Explorer is off line.....	84	Download agent.....	94
The menu when Internet Explorer is on line	85	Task manager.....	94
Options.....	86	Task.....	95
MobiTV	87	The synchronization task on PC	95
Pictures & Videos.....	87	Creating a task on the phone.....	96
Pictures.....	87	Voice notes	96
The functions in picture list	88	Recording voice notes.....	97
The functions during browsing.....	89	Playing	97
		20.Tools.....	98
		Internet sharing.....	98

Activating Internet sharing	98	Networks	107
Deactivating Internet sharing.....	100	Service dialing.....	107
Java.....	100	TTY mode	107
SIM manager.....	101	Sounds	107
SIM memory	103	To specify the sound for an event	107
Speed dial.....	103	To copy a sound to your phone	108
Creating a speed dial number for a contact	103	Profiles.....	108
Creating a speed dial number for a menu.....	103	Display.....	109
Using speed dial.....	103	Clock & alarm	109
21.Settings.....	105	Date and time	109
Phone	105	Alarm.....	110
Call barring	105	Connections.....	110
Call forwarding.....	105	Wireless manager.....	110
Call options	106	Beam	112
Call waiting.....	106	Bluetooth.....	112
Caller ID	106	Searching Bluetooth devices.....	113
Channels.....	106	Bluetooth partnerships	114
Fixed dialing	106	Bluetooth stereo headset	114

Sending files by using Bluetooth.....	115	System information.....	121
Receiving files by using Bluetooth.....	116	About.....	121
Multiple network connection setting.....	116	Error reporting	121
Advance	116	22. Phone Maintenance	122
More.....	117	23. Troubleshooting	124
Security	117	The phone can't be switched on.....	124
Device lock	118	The phone is switched off automatically	124
Enable SIM PIN.....	118	PIN/ PUK code lock.....	125
Change PIN2.....	118	Bad call quality.....	125
Certificates	118	Can't answer a call	126
Remove programs	119	Can't make a call.....	126
Power management	119	The call volume is too low	127
Accessibility	120	The person you are calling cannot hear your voice	127
Regional settings.....	120	The incoming call doesn't ring	127
Owner information.....	121	The battery can't be charged	128
More	121	Can't display network	129
Phone information	121	The phone does not recognize the storage card ...	129
Backlight level	121		

Browser can't connect to Internet normally	130
Lack of space.....	130
24.Safety Precaution.....	131
Usage environment	131
Medical devices.....	131
Pacemaker	131
Hearing aids	132
Emergency calls	132
Making an emergency call.....	132
Password access	133
PIN code	133
PIN2 code	133
PUK code	133
PUK2 code.....	134
Note about charging the battery	134
Battery information and care	135
Note about using spare parts	136
Other safety information.....	136

Safety notice

Before using the phone, please read and follow the rules below carefully. For the detailed information, please refer to the “Safety precaution” section on page 131.

 If you dial or answer a call while driving, please use the hands-free device (e.g. earphone, vehicle hands-free system, phone hands-free system) or use your phone after parking the vehicle.

 The phone may interfere with the communication network of aeroplanes, so please make sure your phone is switched off during the flight.

 All phones can be subject to interference, which could affect its performance.

 Please switch off your phone where you see signs forbidding phone use. Such signs can be found in medical centres or establishments containing medical equipment.

 In order to ensure high performance and to avoid damage the phone, please use the

original accessories and battery. Avoid using products which are not compatible.

 To avoid the risk of any explosion, please switch off the phone at petrol stations and places which are near fuel, chemical solvent or other dangerous substances.

 Please switch off your phone in areas where there could be a risk of explosion and in areas where you are asked to switch off bidirectional radios. Pay attention and adhere to any rules and regulations concerning mobile phone use.

 Please neither burn the phone battery nor use it as ordinary rubbish, as this could endanger life and damage to the environment. Please obey the environmental policy of the local government and dispose of and recycle them in time.

 If you need to connect your phone to other devices, please read the user guide carefully to ensure the procedure is carried out safely.

 Keep small parts (e.g. SIM card) out of the reach of children to prevent batteries from being swallowed or causing other dangers.



Please back up the important information of phone and be sure to have a second copy in case data is lost from your phone.



Make sure the phone is switched on and has service coverage before inputting the emergency number. Press the call key for your position to be located. Please don't end call unless told to do so.

Cautions:

Any unapproved changes or modifications by the party responsible for compliance might infringe the user's authority to operate this mobile phone.

This mobile phone may generate radio frequency energy, which, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this mobile phone does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of measures listed below to clear the interference:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Attention: *1. Please send used li-ion batteries to appropriate disposal locations or return them to our company. Do not dispose of the batteries in the dustbin.*

2. For body worn operation this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines

Statement: *This device complies with Part 15 of the FCC Rules. Operation is*

X

*subject to the following two conditions:
(1) this device may not cause harmful
interference, and (2) this device must
accept any interference received,
including interference that may cause
undesired operation.*

*Changes or modifications not expressly
approved by the party responsible for
compliance could void the user's
authority to operate the equipment.*

XT

1. Getting to know your phone

■ What's in the box

This package should include all items:



AT&T SMT 5700WOC
CD



Getting Started



Battery



Audio Adapter



Data Cable



Travel Charger


If any are missing or different, immediately

Getting to know your phone

contact the retailer where you purchased the device.

Your phone

Front view of your phone

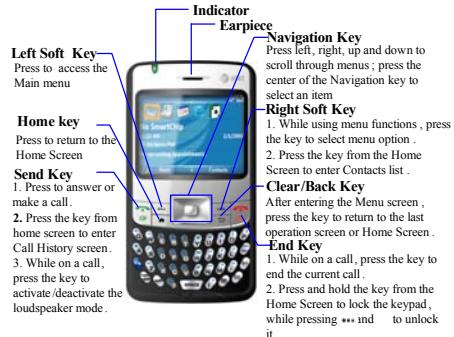

Power Key
Press and hold to turn the device on/off. Press to access the Quick List.

Thumbwheel Dial
During a call, press to adjust volume.

Back Key

Press to enter the Menu screen, or to return to the previous screen or Home Screen

Picture Key
1. Press the key from Home Screen to come into my picture folder.

Music Key
Press the key from Home Screen to enter the AT & T music screen.

USB/ Charge/Audio Interface
USB Port for Charging and Audio support.

Side view of your phone

Rear view of your phone



Caution:
For additional information about using shortcut key operations for the above functions, see "Using Shortcut Keys" on page 15.

directly by selecting its icon and pressing .

- ❖ To access the Home Screen from anywhere, press .
- ❖ To access the Home Screen display setting, including the background, select [Start→More→Settings→Display→Home Screen].

The Home Screen consists of the following five areas.



■ The Home Screen

The Home Screen displays important information, such as upcoming appointments, status indicators, the current time, date and profile, and icons for frequently used programs. You can open a program

Area	Function
Status Bar	Indicates your phone's current status, such as the battery and

Getting to know your phone

	signal strength. For more details about status icons, please see the next page.		enter the corresponding function.
Shortcut Bar	Shows the shortcut menus of several recently-used options. You can press the Navigation Key  left or right to select your desired shortcut menu and press the center of the Navigation Key  to activate this function.	Start Menu	Press the Left Soft Key  to open the start menu and switch to a program
Information Display Area	Displays information including the network service provider, current time and date, and recent appointments. Xpress Mail allows you to access data while on the go via your smart phone. Press the Navigation Key  up or down to select your desired option then press the center of the Navigation Key  to	Function Key Bar	Press the Right Soft Key  to open [Contacts]

■ Status Icon

Icon	Function description
	Signal Strength: Represents the current network signal.
	You are out of a service area
	Battery Status: Represents the level of your battery.
	Low Battery : Displays when there is little battery power
	Phone is charging
	Switch off phone function: The phone functions are turned off if needed but you can still use the other functions: such as, Calendar, Games, Windows Media
	Alarm Clock: Appears when the alarm clock is activated.
	No SIM card inserted
	Appears during a call.
	Speakerphone on
	Microphone muted
	Ringer off: Appears when the profile is set as [Headset]. For more details, please see "Profiles" on page 108.
	Vibrate call alert: Appears when the profile mode is set as [Conference].
	Call holding
	Call forwarding
	Missed call icon appears in [Call History] menu

Getting to know your phone

	Outgoing call
	Incoming call
	Missed call icon appears on the Home Screen.
	New e-mail or text message
	New voice message
	EDGE available
	EDGE connected
	Data call in progress
	Bluetooth

Program

The following table lists the icons for programs already installed on the SMT 5700WOC.

Icon	Name	Introduction
	Messaging	Lets you send and receive SMS, MMS and E-mail.
	Calendar	Keeps track of your appointments and creates meeting requests.
	Contacts	Keeps track of contacts information
	ActiveSync	Synchronizes information between your phone and the PC
	Games	Lets you play two

Getting to know your phone

		games: Bubble Breaker and Solitaire.			Media Net.
	IM	Provides synchronization to AT&T wireless e-mail, calendar, contacts and more		AT&T Mall	Lets you enjoy multi-functional and convenient AT&T services.
	Documents To Go	Lets you view, edit and create Microsoft® Word, Excel and PowerPoint® files, view Adobe® PDF files as well as unzip files.		AT&T Music	Plays video and audio files stored on the phone or network and access other music related services.
	My Stuff	Lets you organize and manage files on your phone or a storage card.		Entertainment	Provides on-screen and voice-guided driving directions, Internet access, lets you watch your favorite channels, and you can browse pictures and videos.
	MEdiaNet	Launches the browser to access AT&T		Call History	Keeps track of all phone calls made,

Getting to know your phone

		received and missed.
	Organizer	Keeps track of tasks, allows you to make short voice recordings and accesses Calculator, Task Manager and other programs.
	Tools	Provides access to services including [Internet Sharing] , [Java] , [SIM Manager] and [Speed Dial] .
	Settings	Personalizes your phone to suit the way you use it.

2. Getting Started

Before using the phone, please insert a SIM card supplied by a network service provider. The SIM card (Subscriber Identification Module) includes phone number and detailed information of service items, and can be used to store phone number and user information.



Caution:

SIM card and its contacts can be easily damaged by scratching or bending, so be very careful when inserting or removing the card. Please follow the instructions of SIM card user guide provided by the manufacturer and keep SIM card out of the reach of children

- (2) As shown in the following diagram, slide the battery cover in the direction of the bottom of the phone and then remove it and battery.




- (3) Slide the SIM card into the SIM card slot. Press the card downwards while inserting and make sure the card is facing the correct way, as shown in the following image (with the contact point facing down).



Installing SIM card and battery

- (1) Press and hold the Power Key for several seconds to switch off the phone.


Getting Started

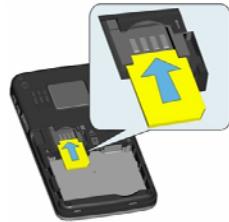

(4) Make sure the battery contacts are facing into the phone, and then push the other side of the battery gently until it fixes itself in the battery slot.



(5) Make sure the battery has been installed correctly, and then slide the battery cover in the direction of the top of the phone until it is covered, as shown below:

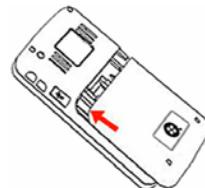

 **Warning:**


Don't insert or remove the SIM card when the phone is switched on or getting charged, or this may damage the SIM card.

Installing MicroSD card

A MicroSD card is a removable storage card that can be used to increase phone memory.

When successfully installed, the MicroSD card sits on top of the SIM card.

When installing the card, make sure the side with the golden contacts is facing down and insert the narrower end of card. Then push the card gently until it is fixed in the battery slot. See the following images for additional information.

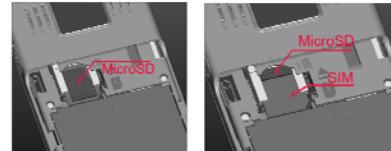

Getting Started

To remove the MicroSD card, gently push it toward the phone, and the card will automatically eject from the card slot.



Caution:

Don't forcefully remove the MicroSD card from the card slot.



Warning:


During the process of reading and writing to the MicroSD card, do not remove or insert the card. UT Starcom will take no responsibility for the following situations including, but not limited to, lost data or damage to the card damage.

To charge the SMT 5700WOC using the travel charger:

- (1) Install the battery in the phone.
- (2) Insert the lead of the travel charger to USB slot of phone carefully, and connect the charger to a standard wall outlet.
- (3) To view charging process and status, select[Start→More→Settings→More...→Power Management]
- (4) While the phone is switched off, the battery bar will scroll and you can view charging process.

Battery charging

SMT 5700WOC is powered by a rechargeable Li-ion battery. When you purchase your phone, you also receive a travel charger and a seat-charger.

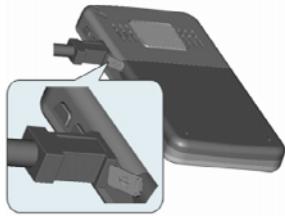

(5) When charging is complete, disconnect the charger and standard power socket first, and then disconnect the phone and charger.



Caution:

1. If the battery is empty, the battery icon will appear after charging for two to three minutes. Generally, the charging time is 2-5 hours depending on the status of the phone (whether switched on, making a call etc.)
2. For optimal battery performance, charge and discharge the new battery two or three times. The first several times you charge the battery, charge it

for at least 10 hours. You should immediately recharge the phone when it turns off due to no battery power.

3. Please use the approved battery and charger designated for this product, otherwise it may cause explosion. Try to avoid using USB cable to charge.

Battery power display

If the battery is low, the empty battery icon  will flash.

If the battery is too low, the phone will switch off automatically. If this occurs, you may lose any data that has not been stored.

Power on/ off

- ❖ Press and hold the Power Key  to switch the phone on/off. If no SIM card is inserted when powered on, the phone will show the icon as .
- ❖ If the PIN code is activated, your phone will be

Getting Started

connected to a GSM network upon entering the correct PIN code.

- ❖ If you enter the wrong PIN code three times in succession, you will need a PUK code in order to unlock your phone. If you input wrong PIN code ten times in succession, SIM card will be locked forever. Generally PUK code is supplied with SIM card. If you lose your PUK code or PUK code isn't supplied with SIM card, please contact your network operator.



Caution:

The phone is equipped with an antenna. When power is on, please do not touch antenna as this may affect call quality and require phone to consume more power




Warning:

Don't switch the phone on in areas where wireless phone use is prohibited or where it may cause interference or danger. Make sure that your

phone's "Alarm and clock" function is not activated.

Using the Quick List

The Quick List offers convenient access to a list of functions, such as locking your phone or keypad and choosing a different profile. For more information about profiles, please see "Profiles" on page 108.

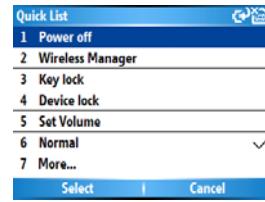

To access the Quick List

- (1) Briefly press the Power Key  (press and quickly release).
- (2) Scroll through the list and select the desired item by pressing the Left Soft key  ***** <Select>**, pressing  or pressing the related numeric key on the keypad.
- (3) To exit the Quick List at any time, press the Right Soft key  ***** <Cancel>**.

Using shortcut keys

Pressing some keys directly from the Home Screen provide direct access to common phone functions. The following table lists the operations and functions of some common shortcut keys

		call while putting the first call on hold.
		2. Switch between two calls answered at the same time
	Press briefly	3. While answering or dialing calls, activates call holding function. 4. While on a call, press and hold to activate the speaker phone.

Key	Operation	Function
	Press briefly	During a call: 1. Answer the second

Getting Started

	Press and hold	While editing, quickly deletes characters (letters, numbers, symbols& space).		Press briefly	Return to the last operation screen or the Home Screen.
	Press and hold	Switch the phone on/off at any time		Press briefly	Messaging Key: Press to access the messaging application.
	Press briefly	Enter the Quick List		Press briefly	While editing, press the key to switch between input modes.
	Press briefly	Press from Home Screen to access AT&T Music Screen.		Press and hold	Caps Shift Key: Press this key and a letter key at the same time to type a single uppercase letter.
	Press briefly	My pictureKey: Press to launch my picture folder.		Press briefly	Symbol Key: Press to access Symbol Menu
				Press and hold	Calendar Key: Press to access the calendar

		application
--	--	-------------

■ Using Function keys

The following keys when pressed at the same time will take you to the associated entry.



Notice:

These functions are only available from the Home/Idle Screen.

Do	To
+	Takes you to MEdia Net
+	Takes you to Entertainment
+	Turn Bluetooth on/off
+	Takes you to AT&T Mall
+	Takes you to AT&T Music

3. Call Functions

■ Making a call

With your phone, you can make calls from the Home Screen, the Phone screen, from Contacts, Speed Dial, Call History, or SIM Contacts (contacts stored on your SIM card).

To make a call from the Home Screen

- (1) From the Home Screen, access the Phone Screen by pressing the SEND Key  or by pressing the numeric keys on the keypad.
- (2) After entering the phone number, press the SEND Key .



Notice:

When you press a numeric key on the keypad, a list of names and numbers appears as the phone automatically searches Contacts, Call History,

Speed Dial and your SIM card to find a matching name or number. For example, when you press a number such as  (including the number "1" and the letter "E"), the names that begin with E will be displayed as well as phone numbers that begin with 1. The next number you press continues to narrow the search. When you see the name of the person you want to dial, select it and press the SEND Key .

To make a call from contacts

- (1) Press the Right Soft Key  or select [Start→Contacts] from the Home Screen to enter the Contacts screen

Do one of the following:

- ❖ Select the desired contact, and press the SEND Key .
- ❖ Select the desired contact in the contact list, and

press the center of the Navigation Key  twice (once to view the contact details, and once to dial the associated number).

Creating a speed dial for a contact

Creating a speed dial number for contacts stored in the phone allows you to dial a contact's number by simply pressing and holding down the corresponding numeric key. The phone will automatically dial the number. If you set a number with two digits, input the first digit, then press and hold down the second number. For example, if you set 12 as a speed dial number, you could input the first digit "1" before holding down the second digit "2."

Setting methods

- (1) To create a speed dial, select a contact from [Contacts], and then press the center of the Navigation Key  to view its detail. If there is more than one number, select the desired number for the speed dial.

- (2) Select [Menu→Add to Speed Dial], and select the speed dial number in [Keypad assignment]. Press the Left Soft Key  <Done>.

Caution:

While selecting the corresponding numeric key of speed dial in [Keypad assignment], the number key   and  will be saved by system and can't be modified.

Making a call from Call History

- ❖ Press the SEND key  from the Home Screen to enter the Call History screen and select your desired number to dial.
- ❖ Select [Start→More→Call History] from the Home Screen to select the desired call entry to dial.
- ❖ Select the contact then press the center of the

Call Functions

Navigation Key  twice (once to view the contact details, and once to dial the associated number). Or press the SEND key .

To customize calls by using the menu

By pressing the Right Soft Key  [Menu] from the Call History screen, you can access the following options:

- ❖ **Find contact:** Finds the selected name or number in [Contacts].
- ❖ **Send text message:** Sends a text message to the selected name or number.
- ❖ **E-mail:** Sends an e-mail to the selected name or number.
- ❖ **View timers:** Displays the duration of the selected call.
- ❖ **Delete:** Removes the selected call or number from [Call History].
- ❖ **Delete list:** Removes all the calls and numbers

from [Call History].

❖ **Save to contacts:** Saves the selected name or number in [Contacts].

❖ **Filter:** Categorizes the call or number into various call types.

 **Caution:**

You can also save a number in [Contacts] by pressing the Left Soft Key  <Save> on the Call History screen.

To make a call from text messages

Select the desired number from a text message then press the SEND key  to dial. The system asks you confirm whether the number is correct or not. After confirming, press the Left Soft Key  or the SEND key  to dial the number.

■ Receiving a call

When you receive a phone call, you have the option to answer it or ignore it.

Answering or ignoring an incoming call

- ❖ To answer the call, you can press the SEND key  or the Left Soft Key ***** <Answer>**.
- ❖ To ignore the call, you can press the END Key  or the Right Soft Key ***** <Ignore>**.
- ❖ To set your phone to Auto Answer-in, from Standby Mode with the headset inserted into your phone, select [Start→More→Settings→Profiles→Headset]. Select [Edit] to set the time for [Auto answer-in].

 **Caution:**

If you select [Start → More →Settings →Phone→Call Options] and activate [Any key

Answer] option, then you can press any key to answer phone except the Power Key , the Home Key , the Clear/Back Key , the Back Key , the Music Key  or the My picture Key .

Ending a call

Press the END Key  to end a call.

■ In-call options

Your phone provides various options for managing multiple calls at the same time. You are notified when you have another incoming call, and you have the choice of ignoring or accepting the call. If you are already on a call and accept the new call, you can select to switch between the two callers, or set up a conference call between all three parties.

Call Functions



Making two calls simultaneously (this must be supported by the network)

While on a call, you can place the current call on hold and dial another phone number at the same time. To place a call on hold, press [Menu → Hold].

Switching between two calls (this must be supported by the network).

- (1) While on a call with A, you receive a call from B. You can set the current call on Hold and accept another call simultaneously.

- (2) Select [Menu→Swap] to switch between the two calls. The side that is on hold cannot hear the other conversation.

When you end one call, the other call is activated automatically.

Making a conference call (this must be supported by the network)

The SMT 5700WOC phone enables the user to make a conference call with up to five callers.

- (1) Either put a call on hold and dial a second number, or answer a second incoming call during a call. To place a call on hold, press [Menu → Hold]. Click [Menu → Conference].

 **Caution:**

1. *If the conference connection is successful, the word "Conference" appears at the top of the screen.*
2. *To add more people to your conference call,*

select [Menu→Hold], enter the phone number, then select [Resume] to return to the call.

(2) To end the conference call, press the END Key  and select the desired number to disconnect.

Additional dialing information

Making an emergency call

Enter the appropriate emergency numbers for your location (such as 911) then press the SEND key .

 **Caution:**

Additional emergency numbers may be included in your SIM card. Contact your service provider for details.

Making an international call

(1) Press and hold  on the phone keypad until the “+” sign appears. The “+” replaces the 00 in the international prefix of the country that you are calling.

(2) Enter the full phone number then press the SEND key . The full phone number includes country code, area code (without the leading zero, if any) and phone number.

Dialing a voice mail

Voice Mail is a system dependent feature. To activate Voice Mail from the Home Screen, press and hold . The system will automatically dial your voice mailbox. Contact your service provider for your voice mail access phone number

 **Notice:**

To set your voice mail number, select

/Start→More→Settings→Phone→Call Options then enter “Call Options.” Your voice mail number appears in the “Voice mail number” box.

 **Caution:**
Call waiting, call holding, and conference call are system dependent features. Contact your service provider for additional information.

Call functions

During a call, press the Right Soft Key *** <Menu> to access the following operations:

- ❖ **Hold:** Select to place the caller you are talking to on hold. Select [Unhold] to remove the call from Hold.
- ❖ **Mute:** Select to turn off the microphone so that you can hear the caller but the caller cannot hear you. Select [Unmute] to switch on the microphone again.

❖ **Speakerphone on:** Select to turn on the speakerphone.

❖ **Conference:** Select to make a conference call. For more details, see “Making a conference call” on page 22.

❖ **Turn hands-free on:** Select to activate hands-free function, so you can talk hands-free.

❖ **Contacts:** Select to view your Contacts List.

❖ **Save to contacts:** Select to save the current contact to your Contacts List. If the contact is already saved to your phone, “View Contact” appears.

❖ **View calendar:** Select to view your Calendar.

❖ **Call history:** Select to view your Call History list.

 **Caution:**
This is a system dependent feature. Contact your service provider for additional information.

4. Input Modes

The SMT 5700WOC supports input modes that feature a strong, intelligent word-building capacity. It includes the following input mode options:

- ❖ **Fn** : Press the corresponding key to enter your desired number or symbol labeled on the upper side of the key.
- ❖ **Fn**: Press the corresponding keys to enter your desired numbers or symbols labeled on the upper side of the keys.
- ❖ **abc**: Press the corresponding keys to enter your desired English letters labeled on the lower side of the keys.

■ Switching input modes

To switch between input modes while editing,

repeatedly press . The input mode Icons will appear in the upper right corner of the screen.

■ Character input mode

Character input mode means **[abc]** input mode.

- (1) Switch to **[abc]** mode, and you can enter letters by pressing the key labeled with the required letter.
- (2) In any input mode, press  to enter Capitalization status. This allows you press the corresponding key to enter its capital letter. To exit Capitalization, press  again.
- (3) Press and hold  and press the key labeled with the required letter, so you can enter the corresponding capital letter. (Once in capitalization status, you can enter its small letter).

Numeric input mode

Switch to **[Fn]** input mode by pressing  twice then press the keys labelled with your required numbers or symbols.

5. Menu Use

The SMT 5700WOC mobile phone provides you with a wide variety of functions. These functions are arranged in the form of menus and you can look at, use or set each menu as required.

■ Entering menu

Scrolling to enter menu function

- (1) Press the Left Soft Key  from the Home Screen to enter the main menu. Press the Navigation Key  up, down, right or left to move to your desired menu, and then press the center of the Navigation Key  to access this menu. Select <More> to view the next menus.
- (2) If there are sub-menus, press the Navigation Key  up or down to select the desired one then press the center of the Navigation Key  to enter it.

Entering a menu by using shortcuts

From the Home Screen, press the Navigation Key  left or right to select from the most recently accessed shortcut icons, then press the center of the Navigation Key  to enter the corresponding menu directly.

6. Messaging

With this function, you can create, edit, send and receive SMS, MMS and Outlook E-mails.

To enter the Messaging screen from the Home Screen, press [Start→ Messaging].


■ Messages

The messaging service is a network service which is used to send SMS/MMS between mobile phone users. (Or send to an e-mail address if this is supported by the network). Whether this menu can operate normally depends on your SIM card and the services supplied by the network provider, so please check before using this service.

First, confirm the service center number has been set before using the phone for the first time. To set the number from the Home Screen, select [Start→More→Settings→ Phone→Call Options→Text messages service center]. You can also consult your network service provider about

your local SMS service number.

To enter the Messaging screen from the Home Screen, select [Start→Messaging]. All the received SMS/MMS will display on the screen and you can access the following options:

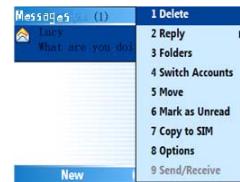

Option	Function	
Delete	Delete the selected SMS/MMS.	SIM the SIM card.
Reply	Reply, reply all and forward the selected SMS/MMS.	Options Access additional settings for all received SMS/MMS. For more details, please refer to "Options" on page 40.
Folders	Switch to other folders (including [Drafts], [Outbox], [Inbox], [Sent Items] and [Deleted Items])	Send/Receive Send and receive e-mails.
Switch Accounts	Return to the Messaging screen	
Move	Move the message to other folders	
Mark as Unread	Mark the selected SMS/MMS as an unread message.	
Copy to Inbox	Copy the selected SMS/MMS to [Inbox] of your phone.	
Copy to	Copy the selected SMS/MMS to	

Editing an MMS

To enter the New MMS screen, select [New→Multimedia Message] from the Messages screen or select [Menu→Reply via MMS] while viewing an MMS to enter the New MMS screen. The steps to edit a new MMS are as follows:

- (1) **To:** To enter a recipient's number directly in the editing box, press the center of the Navigation Key , or press the Right Soft

Messaging

Key *** <Menu> and select [Recipients→Add] to select your desired contact from Contacts. The phone also supports the “Group message” function. If you have selected “Send an MMS” and addressed it to a group, then you can send the MMS to multiple-recipients.

- (2) **Subject:** Enter a subject for your message.
- (3) **Insert picture/video:** Press the center of the Navigation Key  and select your desired picture or video files to insert.
- (4) **Insert text:** Press the center of the Navigation Key  to enter the Edit text screen.
- (5) **Insert audio:** Press the center of the Navigation Key  and select the desired audio file(s) to insert.

After you edit the message, you can select [Menu→Preview Message] to preview the message, then select the Left Soft Key *** <Send> to send it. While editing, you can also access other

options such as [Insert Media], [Slides], [Template] by pressing the Right soft Key *** <Menu>. To exit the current MMS, select [Cancel Message].

 **Notice:**

To send a copy of this message to others, you can access [CC] and [BCC] by selecting [Menu→Options→Send Options]. In these fields, enter the recipient's phone number or e-mail address or select [Menu → Recipients→ Add] to add from [Contacts].

Configuring MMS settings

When you send an MMS message, an SMS notification message will first be sent to the recipient, while your MMS message will be temporarily stored on an MMS server of your wireless service provider. Similarly, when others send you an MMS message, the MMS message will be stored on the MMS server, waiting for you to

retrieve it. Hence, your phone must be configured with the location of the MMS server for you to be able to send and receive MMS messages on your phone.

When you purchase your phone, it is already preset with your wireless service provider's MMS server settings. If you accidentally lose the preset settings or if you change to another wireless service provider, follow the steps below to configure MMS settings.

- (1) On the MMS main screen, select [**Menu** → **Options** → **MMS Configuration**] to open the Preferences screen.
- (2) Select or clear the provided check boxes according to your needs. You can select to keep track of your MMS messages, retrieve messages immediately, accept or reject messages and request a delivery or read receipt. You can also specify a resolution for images you send and message delivery attempts.

- (3) On the Preferences screen, select [**Menu** → **MMSC Settings** → **Edit**] to access Multimedia Messaging Service Center (MMSC) settings.
- (4) Check if your phone is preset with MMS server settings.

If there are no preset settings, select [**Menu** → **New**] on the MMSC Settings screen and enter the following information, which you can get from your wireless service provider:

- ❖ **Name:** A descriptive name, such as your wireless service provider name.
- ❖ **MMSC URL:** URL address of the MMS server.
- ❖ **WAP gateway:** Location of the MMS server, which is usually in the form of an IP address.
- ❖ **Port:** HTTP port number used for connecting to the MMS server and for file transfer.
- ❖ **Connect Via.** Select [**The Internet**] from the list.

Messaging

❖ **Max. Sending Size:** Select the maximum MMS message size allowed by your wireless service provider.

(5) Press the Left Soft Key ***** <Done>**.

The MMS server settings will then be added as an entry on the MMS Configuration screen.

Editing a Text Message

Select **[New→Text Message]** from the Messages screen or select **[Menu→Reply]** while viewing an SMS to enter the New SMS screen. The steps to edit a new SMS are as follows:

(1) **To:** You can directly enter the recipient's number in the editing box, press the center of the Navigation Key  , or select **[Menu→Add Recipient]** to select your desired contact in Contacts List. The phone also supports the "Group message" function. If you have selected "Send an SMS" and addressed it to a group, then you can send the message to multiple-recipients.

(2) After inputting the recipient, press the Navigation Key  down to move the cursor to the editing box, then you can edit an SMS. During editing, select **[Menu→My Text]** to insert commonly used phrases in the message, or you can select **[Menu→ Cancel Message]** to cancel the current SMS.

(3) After editing a message, select **[Menu→Message Options]** to enter the Message options screen. Then press the center of the Navigation Key  to select **[Request message delivery notification]**, A "✓" symbol will appear, and you will receive a message delivery notification from your network when the message has been successfully sent. Or, the Left Soft Key ***** <Send>** to send the SMS directly to the recipient.

As a default, successfully sent SMS/MMS messages will be stored in the **[Sent Item]** folder. For more details, please refer to "Folders" on page 40.

Outlook E-mail

The SMT 5700WOC can receive and send e-mail and can be synchronized with Outlook E-mails on your PC. However, this function needs to be supported by the network, so you must set network and account information before using it. (The phone has been set to the default network, and you don't need to set it). For more details, please refer to "Options" on page 40.

To enter the Outlook E-mail screen from the Home Screen, select [Start→ Messaging→Outlook E-mail].

On the Outlook E-mail screen, press the Left Soft Key *** <New> to create a new e-mail. Press the Right Soft Key *** <Menu> and you'll have access to the following options. For more detail, please refer to "Messages" on page 28.



The [Download Message] option, shown in the above figure, can only be used in Outlook E-mail and MMS. Because the phone only receives the e-mail and MMS headlines, you should download the whole mail and MMS to view the entire message.

Editing an e-mail

Press the Left Soft Key *** <New> directly from the Outlook E-mail screen or select [Menu→Reply] while viewing an e-mail to enter the Outlook E-mail screen. The steps to edit a new e-mail are as follows:

Messaging

To: You can enter an e-mail address directly in the editing box, press the center of the Navigation Key , or select [Menu→Add Recipient] to select your desired contact in Contacts List. The phone also supports the “Group message” function.”

- (1) If you have selected “Send an e-mail” and addressed it to a group, then you can send the e-mail to multiple-recipients.



- (2) **Subject:** Input the subject of the E-mail.
- (3) After entering the recipient and subject, press the Navigation Key  down to move the cursor to the editing box, then you can

input the text of the E-mail. Select [Menu→My Text] to insert commonly used phrases in the e-mail (or you can select [Menu→Insert] to insert pictures, voice notes or files), or you can select [Menu→Cancel Message] to cancel the current e-mail.

As a default, the successfully sent e-mails will be stored in the [Sent Items] folder. For more details, refer to “Folders” on page 40.

■ Setting Up your E-mail

Setting Up E-mail on Your Device with Xpress Mail

Xpress Mail will work with the majority of email services. MSN and AOL Email. Users please visit <http://www.att.com/xpressmail> for the latest on support and alternate setup instructions for MSN and AOL email.


- (1) Highlight “Get Xpress Mail” on the Home Screen and press the center of the Navigation Key .



- (2) Highlight “Install Now”, and then press the center of the Navigation Key .
- (3) Click “Download Now” on the download page. (Download time will vary depending on your service area).



- (4) Press the Left Soft Key *** to select “Yes” to continue the download.

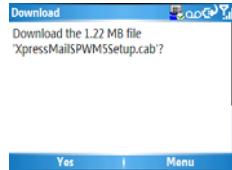

Messaging


(5) Press the Right Soft Key *** to select <OK> and accept the license agreement.




(6) Enter your 10 digit mobile (cell) number (numbers only) and press the Right Soft Key *** to select <Next>.




(7) Select "Portal or ISP" and press the RIGHT SOFT key *** to select <Next>.

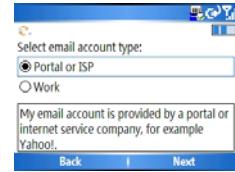

(8) Highlight your provider and press the Right Soft Key *** to select <Next>. (If your provider is not listed tap "More" to view an additional list of personal email providers.)

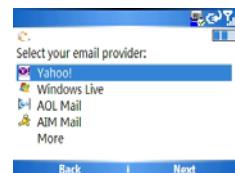

(9) Enter your User Name and Password and press the Right Soft Key *** to select <Next>.

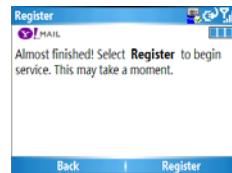

Caution:
To enter a symbol, such as @, press the Function Key **FN** then the corresponding character key.

(10) Press the Right Soft Key *** to select <Register> and wait for the registration process to complete.

(11) After successfully registering, your device will automatically display the XM Settings section. Press the Right Soft Key *** to select <Inbox> to go to your personal email.



Messaging

Caution:

Some personal email services require a premium subscription to access email from a mobile devices. If you complete this setup process and your email does not start arriving on your device, check with your email provider to validate eligibility.

After successfully registering, you will be taken to your Xpress Mail Settings where you can define your preferences. After finishing with your preferences click on the right soft key with your ISP provider name on it to go to your Inbox.

Sending and receive personal E-mail

(1) On the Home screen select [Start→Messaging], and select [Yahoo] (or your personal email provider).



(2) Select <Menu> and select <Receive> to synchronize your email.

(3) Select <New> to compose a new email.





(4) When you are finished composing your message, select <Send>.


■ New account

To enter the E-mail setup screen from the Home Screen, select [Start→Messaging→New Account], and press  to enter the E-mail setup screen.

Select [New Account] to set up an e-mail account to send and receive emails. The phone supports POP3/ IMAP. The detailed steps are displayed in the following figures:

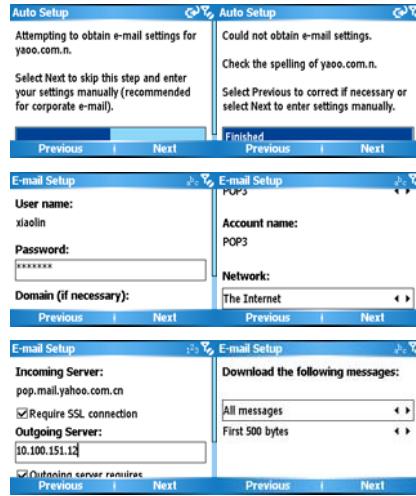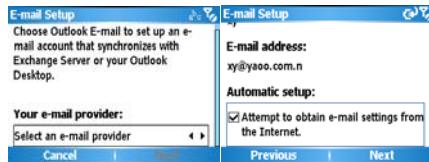

Messaging

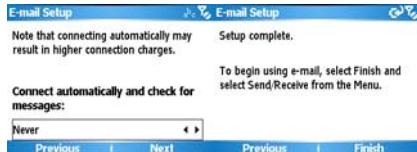

Folders

Select [Menu→ **Folders**] from the SMS/MMS or Outlook E-mail screen and you can enter the following folders:

Deleted items

Stores the files deleted from the other folders. If you delete the file from [**Deleted Items**], the message is permanently deleted.

Drafts

Stores messages that will be sent later.

Inbox

Stores received message.

Outbox

Stores messages that are sent unsuccessfully.

Sent items

Stores messages which have been sent successfully.

Caution:

*To ensure there is enough memory in the phone, delete the old messages in [**Sent Items**]. As the remaining memory decreases, you can play a received MMS, but you can't send, save or download the MMS.*

Options

You can set the parameters of [**Messaging**] with this function.

After entering the SMS/MMS or Outlook E-mail screen, select [Menu→Options] to access:



❖ **New account:** For more details, please refer to “New account” on page 36.

- ❖ **Display:** Select to check “**Show date and time in the message list**” and to determine how to sort messages.
- ❖ **Sending:** Select to check “**Include a copy of the original message when replying to an e-mail**” and “**Save copies of sent items**.”
- ❖ **Signature:** Select to create and set a signature to insert into a message.
- ❖ **Account setting:** Select to set SMS service and MMS in account setting.


7. Calendar

Use Calendar to schedule appointments, including meetings and other events. Your appointments for the day can be displayed on the Home Screen. If you use Outlook on your PC, you can synchronize appointments between your phone and PC. You can also set Calendar to remind you of appointments with a sound or flashing light, for example.

To access the calendar screen from the Home Screen, select [Start→ Calendar] or press the Calendar Key .

Viewing calendar

You can view your schedule in three different views: Month, Week and Agenda. Repeatedly press the Left Soft Key *** to switch among them. The following screen appears:

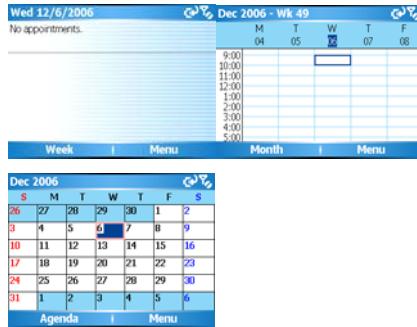


After entering the above three screens, you can press the Right Soft Key *** <Menu> to access the following options.




■ Calendar settings

Select [Menu→ Options] from the calendar screen to access the following settings:

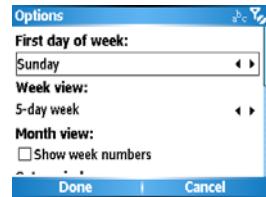

■ New appointment

Select [Menu→New Appointment] from the calendar screen to create a new appointment, and enter information about the appointment.

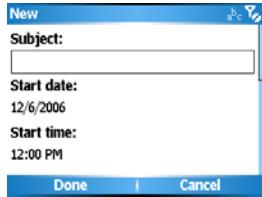

8. Contacts

With this function, you can view and keep track of Contacts information.

To enter Contacts from the Home Screen, press the Right Soft Key *** <Contacts>, or select [Start→Contacts].

All contacts are saved in SIM card or the phone.

❖ **SIM card contacts:** Each entry includes a name and a phone number. The memory and the content of the SIM card differ according to the SIM card type.

❖ **Phone contacts:** You can not only store the contact name, many different types of phone number, e-mail address, family address etc, but also can store a great deal of the contact's personal information, such as birthday and anniversary.



Caution:

Contacts stored on your SIM card can also be stored on the phone. Contacts stored on the phone will be kept in the original phone. To move them to another phone you will need to copy them to the SIM card.

Viewing a contact

On the Home Screen, select [Start→Contacts], or press the Right Soft Key *** <Contacts>. All contacts stored in the phone and SIM card will be listed on the screen, as shown on the next page:



- ❖ In the Contacts List, all the contacts are arranged in alphabetical order. Contacts stored in the phone usually appear before the contacts stored on the SIM card.
- ❖ In the Contacts List, the contact will display its default phone number type. For example, if the default phone number is a work number, “w” appears after the contact; if the default phone number is a home number, “h” appears after the contact name; a mobile phone number will display “m” after the contact. SIM card contacts only display the SIM card sign.
- ❖ Press the Navigation Key up or down to select your desired contact, then press the

center of the Navigation Key to view its detail (e.g.: contacts in the phone), shown in the figure below:



Press the Navigation Key up or down to select the desired phone number, then press the Left Soft Key *** <Call> to make a call. Press the Right Soft Key *** <Menu> to access options including [Edit], [Save to SIM] and others.

Editing a contact

To modify the information for a contact, select the desired contact then press [Menu→Edit].

Contacts

■ New contacts

- (1) Select [Start→Contacts→New] from the Home Screen to create a new contact (To input "+" before entering country code, press )
- (2) After you finish entering the new contact information, press the Left Soft Key ***** <Done>** to save it.



❖ Some international calls require a pause in the dialing sequence in order for the call to process successfully.

➤ To insert a pause in a dialing sequence, position the cursor on the phone number where you want to insert a pause and select [Menu→Insert Pause]. The letter "p" will appear in the number to indicate where the pause will occur in the dialling sequence.

➤ If you need to insert a longer pause, position the cursor on the phone number where you want to insert a longer pause and click [Menu→Insert Wait]. The letter "w" will appear in the number to indicate where the longer pause will occur in the dialing sequence.

❖ Select [Menu→ Cancel] to stop editing and return to the Contacts List screen.

 **Caution:**

You can add a new contact while on a call, receiving SMS or e-mail

New SIM contacts

To add a new SIM contact from the Contacts List, select [Menu→New SIM Contact], as displayed below.



 **Caution:**

The SIM card contact only includes the contact name and a phone number that depends on the SIM card type and function. For more details, please consult your network service provider.

Speed dials

You can create speed dial numbers for the frequently-called contacts stored on your phone. Once stored in speed dial, you can call the number by just pressing one or two keys.

Setting method

- (1) To create a speed dial, select the contact then press the center of the Navigation Key  to view the contact details. Select the phone number you want to save to speed dial.
- (2) Select [Menu→ Add to Speed Dial], then enter the appropriate details in the Name, Value and Keypad assignment fields. When finished, press the Left Soft Key *** <Done> to save.

 **Caution:**

1. Only contacts stored on the phone can be used to create speed dial entries.

Contacts

2. The speed dial location settings are from 2-99. The “0” and “1” locations are preset numbers on the phone.

Finding a contact

To find a contact in the Contacts List:

- ❖ Press the Navigation Key  up or down to search for your desired contact.
- ❖ Begin entering a name or phone number of the contact until the contact is displayed. When you press a key, such as , you will find names that begin with D, and the phone numbers that start with 4. The next key you press continues to narrow the search. For example, to find “David”, you would press , , , , and then .

 **Caution:**

While pressing the numeric keys to find a contact, the system can only find the contact with the same phone number that you input.

Beaming a contact

You can send a contact on the phone to another phone through the Bluetooth function.

 **Caution:**


You can only beam contacts saved on the phone, not SIM card contacts.

Transferring methods

- (1) In Contacts List, select a contact stored in the phone and select [Menu→ Send Contact], as shown on the following page:



as a new contact or to add to an existing contact. See details in the following figure:

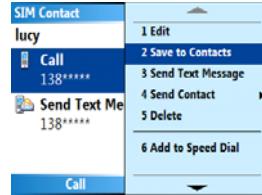

Copying phone contacts to SIM card

- (1) For the contacts with more than one phone number, please select your desired phone number first.
- (2) Select [Menu→Save to SIM], after checking the contact's name and number, press the Left Soft Key <Done> to save.

(2) Press the Left Soft Key *** [Beam], and the phone will search for Bluetooth-enable devices automatically.

■ Copying contacts between SIM card and the phone

You can copy contacts between SIM card and the phone.

Copying SIM card contacts to phone

After entering the SIM contact screen, select [Menu→Save to Contacts]. Select either to save it

Contacts



■ Deleting a contact

To delete a contact in Contacts List or after entering Contacts screen, highlight the contact you want to delete, press the Right Soft Key ***** <Delete a Contact>**, then press the Left Soft Key ***** <Yes>**. See the image below for additional information:



9. ActiveSync

ActiveSync synchronizes information on your phone with information on your PC. ActiveSync can also synchronize over a wireless network with Exchange Server if your company or service provider is running Exchange Server with Exchange ActiveSync.

To access ActiveSync from the Home Screen, select **[Start→ActiveSync]**.

Specifically, you can use ActiveSync to:

- ❖ Synchronize information such as Outlook E-mail, contacts, calendar or tasks information on your phone with your PC, as well as music and video files.
- ❖ Synchronize Outlook E-mail, contacts, calendar appointments and tasks on your phone directly with Exchange Server so that you can stay up to date even when your PC is turned off.

➤ Copy files between your phone and your PC. Without synchronizing.

➤ Select which types of information are synchronized and specify how much information is synchronized. For example, you can choose how many weeks of past calendar appointments to synchronize.

■ Setting up

To install and set up ActiveSync on the computer:

- (1) Install ActiveSync on your PC, as described on the Window Mobile™ Getting Started Disc. After Setup completes, the synchronization setup wizard starts automatically when you connect your phone to the PC.
- (2) Follow the instructions on the screen to complete the wizard, in the sync setup wizard, do one or both of the following:
 - ❖ Create a synchronization relationship between

your PC and the phone

- ❖ Configure the Exchange Server connection to synchronize directly with Exchange server. You need to specify the Exchange Server address, user name, password, and domain name.(Get this information from your administrator)

- (3) Choose the information types to synchronize.

When you finish the wizard, ActiveSync automatically synchronizes your phone. Once synchronization completes, you can disconnect your phone from your PC.

To manually start and stop synchronization

- (1) Connect your phone.

- ❖ To synchronize local information on the PC, such as Outlook information or media files, connect your phone to the PC using Bluetooth or a cable.

- ❖ If you are synchronizing directly with Exchange Server, you can use the connection to the PC to access the network, or you can synchronize over

a cellular without connecting to the PC.

- (2) In ActiveSync, select [**Sync**]
- (3) To end synchronization before it completes, select [**Stop**].

ActiveSync synchronizes a limited amount of information by default to save memory on your phone. You can change the amount of information that is synchronized by performing the following steps:

To change which information is synchronized

- (1) Select [**Start**→**ActiveSync**] from the Home Screen.

- (2) Select [**Menu**→**Options**]

- (3) Do one of the following:

- ❖ Select the check box for the items you want to synchronize by pressing the center of the Navigation Key . If you can not select a check box, you might have to clear the check box for the same information type elsewhere in the list

- ❖ Clear the check box for any items you want to exclude.
- ❖ To customize synchronization of a computer, select the computer name and then select [**Menu→Settings**].
- ❖ To customize synchronization of particular information, select the information type and select [**Settings**].
- ❖ To stop synchronization with one computer completely, select a computer name and select [**Menu→Delete**].

 **Caution:**

Outlook E-mail can be synchronized with only one computer.

Synchronizing with exchange server

To set up your phone to synchronize directly with exchange server, you will need to get the server name and the server domain name from your

service provider or system administrator; you must also know your exchange user name and password.

 **Caution:**

Before changing synchronization settings on the phone, disconnect it from your PC.

To synchronize directly with Exchange Server

- (1) On the Home Screen, select [**Start→ActiveSync → Menu →Configure Server**]. If you have not yet set up synchronization with Exchange Server, this will say [**Add Server Source**].
- (2) On the Edit Server Settings screen, enter the name of the server running Exchange Server in the [**Server address**] box and select <Next>.
- (3) On the User Information screen, enter your user name, password and domain name.

- (4) If you want the phone to save your password so that you will not need to enter it again when connecting, select the **[Save password]** check box. Then, select <Next>.
- (5) On the Options screen, select the check boxes of the types of information that you want to synchronize with Exchange Server.
- (6) To customize synchronization of a particular type of information, select the type of information then select **[Menu → Settings]**.
- (7) To change the rules for resolving synchronization conflicts, select **[Menu → Advanced]** on the Options screen.
- (8) Select <Finish>.



Caution:

You can also use the Sync Setup Wizard to set up the phone to synchronize remotely with Exchange Server. This wizard is started when you connect your phone to your PC after installing ActiveSync on the PC.

Stopping synchronization

- (1) Disconnect the device from your phone.
- (2) As shown on the next page, select “**Mobile device**” in the “**Files**” menu.
- (3) Select the device that you want to stop synchronization.
- (4) Select “**Delete mobile device**” in “**Files**” menu.



- (2) Your phone has a sync relationship with a PC. In case an e-mail in the phone or the PC is deleted, the same e-mail in the PC or the phone will be deleted while synchronizing next time.
- (3) While synchronizing mails in the other folders of Outlook besides Inbox, you need to select the corresponding folders in the phone.



Caution:

SMS and MMS can't be synchronized.

Synchronizing schedule

- (1) You can synchronize the Schedule stored on your phone with that of Outlook or Mobile Information Server 2002 and the other advanced versions stored on the PC.
- (2) As a default, only the schedule for the past two weeks and all future schedules can be synchronized.

Synchronizing through Bluetooth

With Bluetooth function, you can connect your phone with other mobile devices or PCs and synchronize between them.

Installing software in the phone

To install software on the phone through your PC by using ActiveSync:

- (1) Create connection between your phone and PC through ActiveSync.
- (2) Operate the installation files on PC.
- (3) Select the installation position in the phone and begin to install.

Solving ActiveSync Connection Problems

If you use a USB data cable to connect your device to a PC, and ActiveSync can't recognize the device or the program stops responding, you can solve the problems by referring to the following information.

Carry out the following steps one by one until you

have solved the problem. For more detailed information (including the detailed instructions about the common PC firewall program), visit the troubleshooting section of the Windows Mobile web page.

- ❖ Check the devices according to the system information, and solve all connection problems.
- ❖ Make sure both the device and the PC have an activated USB connection.

- (1) In [File] menu of ActiveSync on PC, click [**Connection setting**] and then click [**Allow USB connection**].
- (2) In ActiveSync on the device, click [**ActiveSync**] to enter the ActiveSync screen, and then click [**Menu→Connections→ Synchronize all PCs using this connection**].

- ❖ Disconnect the device and re-connect it.
- ❖ Disconnect the device, then restart and reconnect the device.

- ❖ Disconnect the device, then restart the PC and re-connect the device.
- ❖ Do the following:
 - (1) Disconnect the device.
 - (2) Open the following PC firewall ports for all programs:
 - 990: Open entry TCP port
 - 999: Open entry TCP port
 - 5678: Open entry TCP port
 - 5679: Open exit UDP port
 - 5721: Open entry TCP port
 - 26675: Open entry TCP port
 - (3) Reconnect the device.
- ❖ Do the following:
 - (1) Disconnect the device.
 - (2) Delete ActiveSync by using “**Add/Delete program**”.
 - (3) Install ActiveSync.
 - (4) Reconnect the device.
- ❖ Do the following:
 - (1) Disconnect the device.
 - (2) Select [Control panel→Network Connection] on PC.

 **Caution:**

If [Control panel] sets as sort view, please click [Network and Internet connection] and then click [Network connection].

- (3) Select local connections established by ActiveSync with right key, and then click “**Property**”. It will display “**Devices based on Windows Mobile**” in “**Use during connection**” box.
- (4) Select all menus in “**The connection uses the following items**”.
- (5) Reconnect the device.
❖ Please make sure DHCP client server is operating on PC. As for the details about how to activate or stop Windows services and view its status, please refer to “Windows help and support center”.

ActiveSync error information

If synchronization is unsuccessful through ActiveSync, error information will appear on the phone screen.

When the error information appears, click the “**Prompt**” button on the PC and ActiveSync will display additional error information.

Some errors may influence ActiveSync operation. If you suspect there may be something wrong with ActiveSync you can select manual synchronization. After finishing manual synchronization, Auto Sync will reset. For more details, please refer to “**Synchronizing information**” in the ActiveSync introduction of PC.

10. Games

To access Games from the Home Screen, select
[Start→More→Games].

11. IM

Instant Messaging

If you subscribe to an instant messaging (IM) service such as AOL, MSN, or Yahoo!, you can take the convenience and fun of IM on the go with your mobile phone.

Setting up

- (1) From the Home Screen, press [**Start→IM & Email**].
- (2) Highlight “IM” and press the center of the Navigation Key .
- (3) Follow the easy steps to download and install the application on your device.
- (4) After installation is complete, go back to the IM&Email Folder, and click on “IM” to launch the application.

Sign In

- (1) After setting up the IM application, press [**Start→IM & Email**].
- (2) Highlight “IM” and press the center of the Navigation Key .
- (3) Select the desired service and press the center of the Navigation Key .
- (4) Enter your user name and password and select “Sign In”.

Add a contact

- (1) From the IM main screen, select [**Menu**].
- (2) Select “Add Contact”.
- (3) Type in the ID of the contact you would like to add and then select [**Add**].

12. Documents To Go

Documents To Go is the first and only mobile office editor for Windows Mobile 5.0 Smartphone edition on the market today. Now you can view, edit and create Microsoft® Word, Excel and PowerPoint® files, view Adobe® PDF files as well as unzip files on your smartphone no matter where your personal or professional life takes you.

To access Documents To Go from the Home Screen, select [Start→More→Documents To Go].

PDF to go

[PDF to go] option allows you to View Adobe PDF files on your smartphone.

Selecting [PDF To Go] from the Documents screen, press the Left Soft Key *** <Zoom> to select your zoom mode. Nine zoom levels including [Fit To Screen] and [Fit To Width] are provided for you. Press the Right Soft Key *** <Menu> to access the following options

❖ **File:** Select [File] to access the following options:

➢ **Open:** Select and open a PDF file in [My Stuff].

➢ **Save copy:** Save the current PDF file.

➢ **Send:** Select to send the current PDF file via Messages or Outlook E-mail.

❖ **View:** View the selected PDF file and attachments, such as faxes sent as PDF attachments. You can select the desired view mode between [Page Layout] and [Word Wrap].

❖ **Go:** Go to your desired page.

❖ **Preference:** View the six default file types of [Documents To Go]: [Word], [Excel], [PowerPoint],[PDF],[Text] and [Zip]

❖ **About PDF To Go:** View the properties of [PDF To Go], such as version, registration number, etc.

❖ **Check for updates:** Connects to the Dataviz

Documents To Go

web page and update the latest PDF To Go software version.

❖ **Register:** Connect to the Dataviz web page and register the user information.

❖ **Exit:** Exit the PDF to Go screen.

Sheet to go

[Sheet To Go] option allows you to view, edit or create Excel files on your smartphone.

Whether it's a sales forecast or a price list, you can now insert functions, update data and recalculate values instantly and your entire Excel spreadsheet's original formatting such as macros and charts will be maintained when making edits on your device.

Select [Sheet To Go] from the Documents screen and press the Right Soft Key *** <Menu> to access the following options:

❖ **File:** Select [File] to access the following options.

➢ **New:** Create a new Excel file.

➢ **Open:** Select and open an Excel file in [My Stuff].

➢ **Save:** Save the current Excel file.

➢ **Save as:** Set the name, location and format for the Excel file to be saved.

➢ **Send:** Select to send the current Excel file via Messages or Outlook E-mail.

❖ **Edit:** While editing an Excel file, you can access [Undo], [Redo], [Cut], [Copy], [Paste], and [Clear].

❖ **Delete:** Delete the selected sheet, row or column.

❖ **Selection mode:** Press the center of the Navigation Key  to activate or deactivate [Selection Mode] and set the edited region.

❖ **Zoom:** Zoom out of or zoom in the current Excel file. The three zoom levels are: [150%], [100%] and [50%].

Documents To Go

- ❖ **View:** View the current Excel file, such as **[Cell Contents]**, **[Comment]**, **[Freeze Panes]** or **[Chart in Sheet]**.
- ❖ **Insert:** Insert new rows, columns, sheet, chart or your desired function.
- ❖ **Format:** Set number formatting and cell formatting, select a region to sort, rename and protect the current sheet.
- ❖ **Row:** Adjusts row height and select to hide or unhide the selected row.
- ❖ **Column:** Adjusts column width and select to hide or unhide the selected column.
- ❖ **Go:** Move to your desired sheet, cell, the first cell or the next cell.
- ❖ **Preference:** View the six default file types of **[Documents To Go]**: **[Word]**, **[Excel]**, **[PowerPoint]**,**[PDF]**,**[Text]** and **[Zip]**
- ❖ **About sheet to go:** View the properties of **[Sheet To Go]**, such as version, registration number etc.
- ❖ **Check for updates:** Connects to the Dataviz web page and updates the latest Sheet To Go software version.
- ❖ **Register:** Connect to the Dataviz web page and register the user information.
- ❖ **Exit:** Exit the Sheet to go screen.

Slideshow to go

[Slideshow To Go] option allows you to view, edit or create PowerPoint presentations on your smartphone.

Select **[Slideshow To Go]** from the Documents screen, press the Left Soft Key ***** <Slide View>** to select your view mode (Online, Notes and Slides) or select the Right Soft Key ***** <Menu>** to access the following options:

- ❖ **File:** Select **[File]** to access the following options: **[New]**, **[Open]**, **[Save]**, **[Save as]** and **[Send]**. For more details, please refer to **[Sheet To Go]**.
- ❖ **Edit:** While editing a slide, you can access

- ❖ **[Undo], [Redo], [Cut], [Copy], [Paste], [Find], [Find Next]**, or select to delete the current slide.
- ❖ **Selection mode:** Press the center of the Navigation Key  to activate or deactivate **[Select Mode]** and set the edited region.
- ❖ **Zoom:** Zoom out of or zoom in the current PowerPoint file. Eight zoom levels are available: **[200%]** **[150%]**, **[125%]**, **[100%]** and others.
- ❖ **Insert:** Select to insert a new slide, duplicate the current slide or a new bullet item.
- ❖ **Format:** Select to increase or decrease indent.
- ❖ **Go to slide:** Select and move to the slide which you want to go.
- ❖ **Slide sorter:** Select and adjust your desired slide, or press the Right Soft Key ***** <Menu>** to move up or move down the selected slide.
- ❖ **Preference:** View the six default file types of **[Documents To Go]**: **[Word]**, **[Excel]**, **[PowerPoint]**, **[PDF]**, **[Text]** and **[Zip]**
- ❖ **About slideshow to go:** View the properties of **[Slide To Go]**, such as version, registration number etc.
- ❖ **Check for updates:** Connects to the Dataviz web page and updates the latest Slideshow To Go software version.
- ❖ **Register:** Connect to the Dataviz web page and register the user information.
- ❖ **Exit:** Exit the Slideshow To Go screen.

Word to go

[Word To Go] option allows you to view, edit or create Word files on your smartphone.

Select **[Word To Go]** from the Documents screen and press the Left Soft Key ***** <Page Scroll>** to select page scroll or line scroll mode to make navigating documents easier. Press the Right Soft Key ***** <Menu>** to access the following options:

- ❖ **File:** Select **[File]** to access the following options: **[New]**, **[Open]**, **[Save]**, **[Save as]** and **[Send]**.

Documents To Go

For more details, please refer to [Sheet To Go].

- ❖ **Edit:** While editing a document, you can access [Undo], [Redo], [Cut], [Copy], [Paste], [Select All], [Find and Replace] and [Find Next].
- ❖ **Selection mode:** Press the center of the Navigation Key  to activate or deactivate [Select Mode] and set the edited region.
- ❖ **Zoom:** Zoom out of or zoom in the current Word file: Three zoom levels are available: [150%], [100%] and [50%].
- ❖ **View:** View the current Word information, such as [Comments], [Footnotes], [Endnotes], [Split Window] [Word Count], and others.
- ❖ **Insert:** Select to add a page break, hyperlink or bookmark in the current Word file.
- ❖ **Format:** Set the format for the current Word file, such as font, paragraph, bullets and numbering and bookmark, or select to increase or decrease indent
- ❖ **Table:** Insert a table in the current Word file and edit the table, including [Insert Rows Above], [Insert Rows Below], [Delete Table], and others.
- ❖ **Go:** Select and move to the beginning, the end of the current Word file, or your desired bookmark
- ❖ **Preference:** View the six default file types of [Documents To Go] and they are: [Word], [Excel], [PowerPoint],[PDF],[Text] and [Zip]
- ❖ **About Word to Go:** View the properties of [Word To Go], such as version, registration number, etc.
- ❖ **Check for updates:** Connects to the Dataviz web page and updates the latest Word To Go software version.
- ❖ **Register:** Connect to the Dataviz web page and register the user information.
- ❖ **Exit:** Exit the Word To Go screen.

Zip to go

[Zip To Go] option allows you to decompress zip archives on your smartphone, so you can open attachments on your smartphone even if they've been compressed

Select [Zip To Go] from the Documents screen then press the Right Soft Key *** <Menu> to access the following options:

- ❖ **Open archive:** Select and extract a single file in [My Stuff].
- ❖ **Extract all:** Extract all zip files on your phone.
- ❖ **Extract and open:** Extract a zip file and then open it.
- ❖ **Preference:** View the six default file types of [Documents To Go] and they are: [Word], [Excel], [PowerPoint], [PDF], [Text] and [Zip]
- ❖ **About zip to go:** View the properties of [Zip To Go], such as version, registration number, etc.

❖ **Check for updates:** Connects to the Dataviz web page and updates the latest Zip To Go software version.

❖ **Register:** Connect to the Dataviz web page and register the user information.

❖ **Exit:** Exit the Zip To Go screen.

13. My Stuff

The My Stuff menu allows you to access images, videos, music and sound files that are stored in the phone or the storage card. However, you can not modify or delete the folders.

From the Home Screen, select [**Start→My Stuff**].

■ Folder use

My pictures

Stores pictures taken using the [**My pictureKey**] function of the phone.

My sounds

Stores the default audio files of the phone.

My videos

Stores video files.

UA Contents

This is an MMS mail box used to store MMS files.

■ Folder operation

For the files in this folder, press the Right Soft Key *** <Menu> to access the following file operations: view the files with icon or list; sort them by name or date, send them with MMS; use them for wireless data exchange and edit the files (such as copy, paste, rename, etc.) See the following image for more details.



14. Media Net

M**E**dia™ Net gives you access to all the cool things you can do with your wireless phone—email, Web sites, games, and more. It is wireless Internet access for your wireless device.

To access M**E**dia Net, select [**Start**→**More**→**M**edia Net] from the Home Screen.

To personalize your M**E**dia Net homepage, press the Right Soft Key ***** <Menu>**. From there, you can add, move, or delete categories and links.

This function is system dependant. Contact your service provider for additional details. The menus and settings are similar to those of “Internet Explorer”; please refer to “Internet Explorer” on page 82.

15. AT&T Mall

To enter AT&T Mall from the Home Screen, select [Start→More→AT&T Mall].



This menu is a system dependent feature where you can access multiple functional and convenient AT&T brand services. For more details, please consult with your network service provider.

■ MEdia net home

Select [MEdia Net Home] from AT&T mall screen and enter the Home Screen of MEdia net.

■ Shop application

Selecting [Shop Application] from the AT&T mall screen launches the browser to a landing page where the user can purchase and download java applications.

As a default, pressing Shop Applications automatically launches to <http://appslink.cingular.com/>

■ Shop games

Selecting [Start→AT&T Mall→Shop Games] launches the browser to a game storefront/landing page where the user can purchase and download games.

As a default, pressing Shop Games automatically launches to <http://downloads.cingular.com>.

Shop graphics

Selecting [Start→AT&T Mall→Shop Graphics] launches the browser to a graphics storefront/landing page where the user can purchase and download graphics.

As a default, pressing Shop Graphics automatically launches to <http://grphdownloads.cingular.com>

Shop tones

Selecting [Start→ AT&T Mall→Shop Tones] automatically launches the browser to a tone storefront/landing page where the user can purchase and download ringtones.

As a default, pressing Shop Tones automatically launches to <http://rtdownloads.cingular.com>.

Shop multimedia

Selecting [Start→ AT&T Mall→Shop Multimedia] launches the browser to a multimedia storefront/landing page where the user can purchase and download multimedia files.

As a default, pressing Shop Multimedia automatically launches to <http://mmsstore.cingular.com>.

16. AT&T Music

With this function, you can listen and learn about artists on the move and share artist and song info with friends wherever you are. Music contents can be accessed via various filter elements (artist, album, genre, etc) and you can access to the player and various player controls. In addition, you can visit music storefronts to purchase and download your favorite music and get other music related services (e.g. Music ID, karaoke, etc).

To enter the AT&T Music screen from the Home Screen, select [Start→More→AT&T Music] or

press the Music Key  or press and hold  and  at the same time.



Transferring Music

To transfer music to your SMT 5700WOC, you will need the following:

- ❖ Windows Media Player® loaded onto your PC. You can download this at: <http://www.microsoft.com/mediaplayer>.
- ❖ Music on your PC in one of the formats: MP3, WMA, AAC.
- ❖ Microsoft® ActiveSync® software loaded onto your PC.
- ❖ This is included in your CD that came with your phone.

You are now ready to start transferring music to your device:

- (1) Open Windows Media Player® on your PC.
- (2) Connect the phone to your PC using the USB cable included in the box. Microsoft® ActiveSync® is needed for the PC to recognize your SMT 5700WOC but Windows Media Player® is the software you use to actually download songs to your device.
- (3) In Windows Media Player®, click Media Library.
- (4) In the pane on the left, expand the All Music category by clicking the plus sign next to it, and highlight the music you want to copy to your phone.
- (5) Right-click the music that you want to copy, point to Add to playlist, and then click Sync List. (If the Sync List is displayed, you can also drag and drop files to the list.) The songs are added to the Sync List in the pane on the right.

- (6) At the bottom of the Sync List, click Start Sync.

 **Caution:**

You can transfer music to your device using digital music stores as long as Microsoft® ActiveSync® is installed. Tunes is not supported. The number of files you can store depends on the size and format options of the memory card. A microSD™ memory card is preferable to copy songs to your phone.

Windows Media

You can use built-in Windows Media Player to play digital audio and video files that are stored on your phone or MicroSD card.

The player can play audio files with the following formats: MP3, MID, WAV and WMA.

The player can also play video files in ASF and

WMV formats.

To enter Windows Media from the Home Screen, select [Start→More→AT&T Music→Windows Media].

The Library screen defaults as Windows Media screen; you can select the files that you want to play from different types of files.

On Library screen, press the Back/Clear Key  to enter playback screen, the details are in the figure on the next page:



On the Windows media screen, press the Left Soft Key  <Now Playing> to select your desired

file in playback list, and then press the center of the Navigation Key  to play the file.

About the controls

By default, these hardware buttons are assigned to Windows Media.

Buttons	Allows you to
Press the Navigation Key  left	Skip to the beginning of the currently playing file Quickly press the key twice to skip to the previous file Hold the key, it will rewind a file
Press the Navigation Key  right	Skip to the beginning of the next file. Press and hold to fast-forward a file.
Press the center of the	Play or pause

Navigation Key	
Press the Navigation Key  up or down	Increase or decrease the volume
	Switch to silent mode

About the screens and menus

Windows Media Player has three primary screens:

- ❖ **Playback screen:** The default screen that displays the playback controls (such as Play, Pause, Next, Previous and Volume) and the video window. You can change the appearance of this screen by choosing a different skin.
- ❖ **Now Playing screen:** The screen that displays the Now Playing playlist. This special playlist

indicates the current file being played and files that are queued up to play next.

❖ **Library screen:** The screen that lets you quickly find your audio files, video files and playlists. It contains categories such as [My Music], [My Videos], [My TV] and [My Playlists].

At the bottom of each screen is a Menu. The commands on this menu vary, depending upon which screen you are viewing.

Playback screen menu

After entering playback screen, press the Right Soft Key   to access the following operation:

Options	Allows you to
Library	Display the Library screen so you can select a file to play
Play/Pause	Start or pause playback
Stop	Stop playback
Shuffle/ Repeat	Play the items in the Now Playing play list in random order or repeatedly.
Full screen	Play video file or network video media files with full screen (this function isn't available for audio files).
Options	Adjust various Windows Media Player options. Refer to "Player Setting" on page 77 for more details.
Properties	Display detailed information

	about the currently playing file.
About	Display information about Windows Media Player, such as the version number.

Now playing screen menu

Enter playback screen and press the Left Soft Key *** <**Now Playing**> to open the Now Playing. The current playback list will appear on the screen. Press the Right Soft Key *** <**Menu**> to access the following operation.

Options	Allows you to
Library	Display the Library screen so you can select a file to play
Move up	Move the selected item up in the play list order
Move	Move the selected item down in

down	the play list order
Remove from play list	Remove the selected item from the play list but the file is still stored in Library.
Shuffle/ Repeat	Play the items in the Now Playing play list in a random order or repeatedly.
Save play list	Save the current files in play list
Clear Now playing	Remove all items from the Now Playing play list.
Error Details	View error information about the selected item
Properties	View information about the selected file

Library screen menu

On the Playback screen, select [Menu→ Library] to enter the library screen, shown in the figure below:



When you are viewing the Library screen, press the Right Soft Key *** <Menu> and you can:

Options	Allows you to
Queue Up	Add the selected item to the end of the current (Now Playing) playlist.
Delete from	Delete the selected item from

Library	the library.
Now Playing	Display the Now Playing playlist.
Library	Switch between libraries, such as between [My Device] and[Storage Card].
Update Library	Add new items to the library by searching your phone or storage card.
Open File	Find and play files that are stored on your phone or storage card but are not in the library.
Open URL	Play a file on a network, such as the Internet.
Properties	View information about the selected file.
Player	Enter the playback screen

Player setting

Select [Menu→ Options] from the playback screen and you can set the player, as shown in the image below:



❖ **Playback:** With this function, you can set according to the different situations during playing files.

➢ **Show time as:** You can set the time display format while playing files.

➢ **Pause playback while using another program:** You can set whether to continue

to play the file when the phone is operating the other programs (except call function).

➤ **Resume playback after a phone call:** If you receive a call while playing a file, you can stop playing the current file and set whether or not to continue to play the file after ending a call.

❖ **Video:** You can set the screen status while playing video files.

➤ **Play videos in full screen:** You can set this option to [Never], [Only when Oversized] or [Always].

➤ **Scale it to fit window:** In case the size of video file is over that of the screen, you can zoom out of the video window to play.

❖ **Network:** To achieve better video and audio quality, you can change the Internet connection speed according to Internet link manner. (See figure on the next page.)



Library

With this function you can set whether to start player on library screen.

Skins

Displays Player appearance.

Buttons

With this function you can redefine the buttons of Windows Media Player.

■ Shop music

Select [Start→More→AT&T Music→Shop]

Music] from the Home Screen to launch the browser and access a music storefront/website where you can purchase music.

This is system dependent feature. Contact your service provider for more details. As a default, Shop Music automatically launches to <http://music.shop>. The menus and settings are similar to those of "Internet Explorer"; please refer to "Internet Explorer" on page 82.

Music ID

Selecting Music ID from the AT&T wireless music screen launches a preinstalled application. The application allows the user to sample a selection of unknown music and to receive the applicable information about the title, artist, and album.

XM Radio Mobile

Selecting XM Radio Mobile from the AT&T Music screen launches a preinstalled application. The application allows the user to listen to streaming

audio (e.g. Mobile Radio)

The Buzz

Select [**The Buzz**] from the AT&T wireless music screen to launch a preinstalled application (e.g. Billboard). The application allows the user to obtain relevant music industry news and information.

Community

Select [**Community**] from the AT&T wireless Music screen to launch the browser to access one or more of the hot user communities (e.g. myspace.com). The application allows the user to contact with their friends and the community.

This is system dependent feature. Contact your service provider for more details. As a default, when you select Community the browser launches to <http://music.community>. The menus and settings are similar to those of "Internet Explorer"; please refer to "Internet Explorer" on page 82.

Music apps

Select [**Music Apps**] from the AT&T wireless music screen to launch the browser to an area where the user can purchase music related applications for download.

This is system dependent feature. Contact your service provider for more details. As a default, when you select Music Apps the browser launches to <http://music.apps>. The menus and settings are similar to those of “Internet Explorer”; please refer to “Internet Explorer” on page 82.

17. Entertainment

To enter the Entertainment screen from the Home Screen, select [Start →More→Entertainment].

■ Get TeleNav

TeleNav GPS Navigator is the next-generation GPS navigation system that works directly on your AT&T wireless mobile device. Get TeleNav GPS Navigator and you will always have driving directions available on your mobile phone — by voice and onscreen.

Tell TeleNav GPS Navigator where you want to go by inputting an intersection or an address, and instantly get detailed information regarding your trip.

With the easy-to-use TeleNav GPS Navigator, you get:

❖ **Turn-by-turn driving directions:** Get turn-by-turn driving directions by voice and

onscreen.

- ❖ **Biz Finder:** Find restaurants, coffee shops, hotels, and more from over 10 million points of interest.
- ❖ **TeleNav Traffic:** Alerts and intelligent rerouting.
- ❖ **Full-color maps:** Find full-color maps nationwide.

Caution:

TeleNav GPS Navigator is network dependent. You can get it by purchasing it online or via any AT&T wireless retail store. For more details, please consult with your local network service provider.

■ Internet Explorer

The SMT 5700WOC allows you to access the Internet or applications through Internet Explorer. To connect to Internet Explorer:

- ❖ Ensure that your SIM card supports the network function. For additional details, check with your network service operator.
- ❖ Contact your network service provider for opening and ordering data service or GPRS service.

Make sure you have the correct settings for Internet Explorer on your phone. For more details, please refer to "Options" on page 86.

 **Caution:**

The function of accessing WAP network is network dependent. For more details, please consult your local network service provider.

Activating Internet Explorer

To access Internet Explorer from the Home Screen, select [Start → More → Entertainment → Internet Explorer].

After entering the Internet Explorer screen, you can select [Search Bar], [Favorites] or [History], and the following appears



- ❖ **Search bar:** Input the network address which you want to visit. Press the Navigation Key  to the right to select the  icon and you can search for all relative web pages. Press the center of the Navigation Key  to access and visit

your desired webpage.

❖ **Favorites:** Stores your most commonly visited websites. You can select from five default network addresses in [Favorites], or you can also press the Navigation Key  down to select [More Favorites], and then press the center of the Navigation Key  to visit more Web Pages.

➢ **More Favorites:** After entering the Favorites screen, it will display all the network addresses you have stored. Press the Navigation Key  up or down then press the center of the Navigation  to quickly connect to these web pages, as shown below



➢ Or you can select [Menu→ Address Bar] to enter your desired network address then press the Left Soft Key *** <Go>. You will connect to your desired web page, as shown below



- While browsing, press the Back/Clear Key  to return to the last web page that you visited.
- To stop browsing, press the Left Soft Key  or press the END Key . The Internet will still be connected. To disconnect from the Internet completely, you must access [Task Manager]. For more details, please refer to "Task Manager" on page 94.
- ❖ **History:** Stores the network addresses you've visited recently and displays in list form. You can select your desired network address and visit it.

The menu when Internet Explorer is off line

When Internet Explorer is offline, press the Right Soft Key  and you can access the following options. For more details, please see the below figure:



- ❖ **Address bar:** Enter your desired network address.
- ❖ **Add favorite:** Add favorite website to [Favorites].
- ❖ **Add folder:** Create new folders in [Favorites] to better manage your favorite websites.
- ❖ **Edit:** Edit the currently selected web page.
- ❖ **Delete:** Delete the current selected web page.
- ❖ **Options:** Access additional Internet Explorer settings. For more details, refer to "Options" on page 86.

The menu when Internet Explorer is on line

When Internet Explorer is online, press the Right Soft Key *** <Menu> to access the following options. For more details, please see the following figure:



- ❖ **Home page:** Enter your home page.
- ❖ **Address bar:** Enter your desired network address.
- ❖ **Favorites:** With this function, you can enter Favorites screen.
- ❖ **Add to favorites:** Add your favorite website.

❖ **Forward:** Enter the next web page that you have visited in [History].

❖ **Refresh:** Refresh the current Web page.

❖ **History:** View and access the latest network pages you have visited.

❖ **View:** Determine the screen display settings for browsing a web page.

❖ **Tools:** Select this option and press to access the following options:



- **Send link via E-mail:** Send out the current web page address via E-mail.

- **Properties:** View the details of the current selected Web page.
- **Options:** Access additional settings for Internet Explorer. For more details, please see "Options" below.

Options

Select [Menu→Tools→Options] from the Internet Explorer screen and press  to enter Options screen. The details include:



- ❖ **General:** After entering [General], you can change the download and network display manners. The phone provides you with the

following options: [Play sound], [Warn when changing to an unsecured page], [Allow cookies], [Encoding] etc. You can select or cancel these options by pressing .

- ❖ **Connections:** After entering [Connections], you can change the connection manner for the web page. By using the [Automatically detect settings] function, the system can select a proper connection manner according to the network address.

- ❖ **Memory:** After entering [Memory] function, you can view the memory status of the system. On the Memory screen, press the Right Soft Key *** <Clear> and you can clear temporary files, Cookies and history.

Caution:

While searching or browsing a web page, select the correct coding manner in [Encoding] on the General screen, so the phone can properly access and display the web page.

MobiTV

With MobiTV function, your phone becomes a portable TV. Watch your favorite channels right in the palm of your hand. See channels you watch at home, made for mobile programming, and the latest primetime shows from NBC, like Friday Night Lights. The Emmy® Award winning service is available through your wireless carrier and offers over 100 TV channels worldwide, such as MSNBC, ABC News Now, CNN International, FOX News Channel, Fox Sports, ESPN 3GTV, NBC Mobile, Bravo To Go, Sci Fi Pulse Mobile, Telemundo Mobile, Discovery Channel, TLC, The Weather Channel and others that deliver the latest music videos, cartoons, comedy, and more.

To access MobiTV from the Home Screen, select **[Start→More→Entertainment→**

MobiTV]

 **Caution:**

Mobile TV function is network dependent. For more details, please consult your local network service provider.

Pictures & Videos

With this function, you can view the pictures stored in the phone or storage card and you can set the pictures as wallpaper or forward to others.

Pictures

On the Home Screen, select **[Start→More→Entertainment→Pictures&Videos]** and press the center of the Navigation Key .

After entering this function, all pictures stored in the phone and storage card will be displayed on the screen.

❖ Press the Navigation Key  up, down, right or left to view your desired picture. To view the picture, press the Left Soft Key  **<View>** or

Entertainment

press the center of the Navigation Key  .

❖ While viewing a picture, press the Navigation Key  up or down to browse the last or the next picture.

The functions in picture list

On the Picture list screen, press the Right Soft Key ***** <Menu>** to access the following options:

Options	Functions
Send	Send the pictures to other recipients with MMS or e-mails.
Beam	Send the pictures via Bluetooth to other handset devices with Bluetooth function.
Save to Contact	Set a picture as a contact image and later the picture will

	appear in the detailed information of the selected contact
Delete	Delete the pictures
Edit	Edit the pictures, such as [Cut] , [Copy] , [Paste] and [New folder] ,
Play Slide Show	Preview the pictures in slide show manner, and you can set the visual effect in [Options] .
Folders	You can select to view the pictures stored in [My Device] folder.
Options	You can set viewing manner for the pictures, set slide show effect, etc.

The functions during browsing

From the Picture list screen, select the picture and press the Left Soft Key ***** <View>** to view the picture then press the Right Soft Key ***** <Send>** to send the picture as an Outlook e-mail attachment or MMS attachment. Press the Right Soft Key ***** <Menu>** to access the following options:

- ❖ **Zoom:** Zoom in or zoom out of the picture to adapt the screen size and view.
- ❖ **Play Slide Show:** Preview the pictures in slide show.
- ❖ **Use as Home Screen:** Set the picture the Home Screen background.
- ❖ **Beam pictures...:** Send the pictures through Bluetooth to other handset devices with Bluetooth function.
- ❖ **Edit:** Edit the picture the following ways: **[Rotate], [Crop], [Auto Correct]** and others.
- ❖ **Save:** Save the picture the following ways: **[Save**

to Contact] or **[Save As...]**.

- ❖ **Properties:** View the picture name, type and some other information.
- ❖ **Options:** Set picture viewing options.
- ❖ **Send via MMS:** Send the selected picture via MMS.
- ❖ **Send via E-mail:** Send the selected picture via E-mail.
- **Beam:** Send the captured photo to other Bluetooth-enabled handset devices via Bluetooth.
- **Use as Home Screen:** Set the captured photo as Home Screen background.
- **Edit:** After entering the Editing screen, select **<Menu>** and you can access **[Rotate], [Crop]** and **[Auto Correct]**. Select **[Save as]** to rename the captured photo.

- **Properties:** View or modify detailed information about the current photo, including name, file type, dimensions, file size, etc.
- **Options:** Set general content, such as the picture size when sending pictures or rotation for editing pictures, or you can set [Slide show], [Video] options.
- **Send via MMS:** Send the selected picture via MMS.
- **Send via E-mail:** Send the selected picture via E-mail.

The storage location of photos and videos

As a default, the captured photos and videos are stored in the phone. You can view them by entering [My Stuff] and [Photos & Video].

In order to make sure there is enough memory in your phone, it is advisable to store the photos and

18. Call History

Call History includes the entries for [Incoming Calls], [Outgoing Calls] and [Missed Calls]. You can only view Call History if you are subscribed to the service.

You can enter the Call History Screen from the Home Screen by the following two methods:

- ❖ On the Home Screen, select [Start→More→Call History].
- ❖ Press the SEND Key  to view the latest Call History.

Call list

Different icons appear for different types of calls. For more details, see the following table.

Icon	Introduction	Icon	Introduction
	Incoming		Missed Calls

	calls		
	Outgoing calls	—	—

Caution:

If a phone number in the Call History is saved to your Contact List, the name and the number will display. If it is not in your Contact List only the phone number displays.

Options in call list

Saving a contact

Press the Navigation Key  up or down to move to your desired number then press the Left Soft Key *** <Save> to save it. At this time, you can select to save the number as a new contact or add it to the other contacts.

Call History

❖ If you want to save the number as a new contact, after choosing your desired storage position, press the Left Soft Key ***** <Save>** to insert the number and enter other relative information, and then press the Left Soft Key ***** <Done>** to save the number in contacts.

❖ If you want to add the number to other contacts, after choosing your desired storage position, you can press the Left Soft Key ***** <Insert>** to insert.

Select the desired number, and press the Right Soft Key ***** <Menu>** to access the following options

Option	Function
Find Contact	Displays the name, number and some other relative information about the contact
Send Text Message	Enter text message screen, edit and send a text message to the contact.

E-mail	Send an e-mail to the contact.
View Timers	View the time of last call, all calls, incoming calls, outgoing calls, etc.
Delete	Delete the selected entry
Delete List	Clear Call History
Save to Contacts	Save the current number to contacts.
Filter	Filter missed calls, incoming calls and outgoing calls.

19. Organizer

■ Calculator

The calculator function can perform standard mathematical operations such as addition, subtraction, multiplication, and division.

On the Home Screen, select [Start→, More→Organizer→Calculator].

Using methods

- (1) After entering Calculator screen, enter numbers and press  repeatedly or press the Navigation Key  up, down, left or right to select your desired operation symbols (+, -, /, X).
- (2) Press  to enter a decimal and press the center of the Navigation Key  to get the

answer. Press the Back/Clear  to clear last digit entered, and press the Left Soft Key *** <Clear> to clear the display.

■ Clear

Master Clear deletes all your saved data, and resets all settings to the manufacturer default.

Caution:


1. Use this function carefully.
2. Back up the materials on the phone before restoring to factory value. UT Starcom will take no responsibility for material loss due to using the restore factory setting function. Data stored on the SIM card will not be influenced.

Select [Start→More→Organizer→ Clear] from the Home Screen.

Enter “1234” in the inputting box then press the Left Soft Key *** <Yes>. The Master Clear

Organizer

operation begins as detailed in the following image.

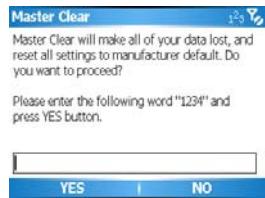

■ Download agent

In this function, you can view the current download status of the phone.

To access from the Home Screen, select [Start→More→Organizer→Download Agent]

■ Task manager

When the system operates slowly, this menu can help you quickly end the current tasks and free more phone memory.

To enter Task Manager from the Home Screen, select [Start→More→Organizer→Task Manager].

After entering Task manager screen, you can store the operated function options. Press the Right Soft Key *** <Menu> to access the options in the figure below:



❖ **Stop:** End the selected task.

❖ **Stop all:** End all operating tasks.

❖ **Stop all but select:** End all other tasks except the selected tasks.

❖ **Refresh:** Enter the current screen again.

❖ **Service process:** Display the process list for the current tasks.

❖ **Exit:** Quit this screen.

For the above options, after entering the screen, select <Back> and you can return to the Task manager screen again.

■ Task

[Tasks] is used to keep track of things you need to do. The information in [Tasks] mainly comes from Microsoft Outlook software after finishing synchronization between the phone and PC.

To access from the Home Screen, select [Start→More→Organizer→Tasks]

The synchronization task on PC


You can synchronize the Microsoft Outlook tasks on PC to your phone.

 **Caution:**

Before synchronizing, you need to use the attached disc and install ActiveSync software according to the prompts on the screen.

After installation, please activate ActiveSync software on PC and use USB cable to connect your phone with PC. As a default, the system will synchronize the tasks on PC to [Tasks] of your phone automatically.


After synchronization, the following [Tasks] screen will appear:

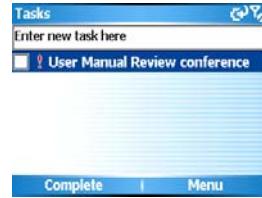

Press the Navigation Key  up or down to select your desired task and press the center of

Organizer

the Navigation Key  to view the following:

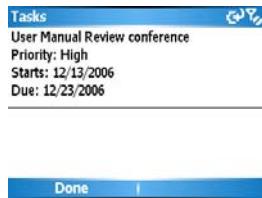

Creating a task on the phone

To enter Tasks from the Home Screen, select [Start→More →Organizer→Tasks].

Enter a new task on the screen and press the center of the Navigation Key  to finish creating. Press the Navigation Key  up or down, so you can move to the new task and press the Left Soft Key *** to activate the task.



Notice:

If you need to set the details (such as data, priority

etc) in Tasks, you need to first synchronize the phone with the PC, and set the details in Microsoft Outlook on your PC.

After entering [Tasks], press the Right Soft Key *** <Menu> to access the following options

❖ **Beam task:** Send the current selected task to another Bluetooth-enabled handset device through the Bluetooth function.

❖ **Delete task:** Delete the currently selected task.

❖ **Sort by:** Sort tasks by selecting a sort option.

❖ **Filter:** Filter the tasks by the category you want to be displayed

Voice notes

To access Voice Notes from the Home Screen, select [Start→More→Organizer→Voice Notes] then press  to enter.

Recording voice notes

After entering the Voice Notes screen, press the Left Soft Key ******* <**Record**> to begin recording, and select <**Stop**> to stop recording. The recorded files will automatically be saved to the [**My Stuff**→**Notes**] folder.



Playing

In the Voice Notes list, press the Navigation Key up or down to select the recording, then press the center of the Navigation Key to play or you can select [Menu→Play]. In addition, you can access the following options: [Record], [Rename], [Delete], and [Set As Ringtone]. See details in the following image.

20. Tools

[Tools] provides access to convenient services.

■ Internet sharing

When you connect your phone to a PC or laptop computer, Internet Sharing allows you to use your phone as an external modem for the computer.

Activating Internet sharing

- (1) Select [Start → More→Tools→Internet Sharing] from the Home Screen, then press the center of the Navigation Key  to enter Internet sharing screen.
- (2) Select the PC connection manner – either [USB] connection or [Bluetooth PAN] connection, then press the center of the Navigation Key .
- (3) Select network connection type. The phone defaults to [MEdia Net], or you can set it by

referring to “Multiple network connection setting” on page 116. To modify the network connection type, select <Menu> then select [Connection Settings]. For additional details, refer to “Connections” on page 110, and see the image below.



After selecting the network connection manner, select <Connection>. If you selected [USB], the PC will automatically check the USB cable connection until the screen displays “Connected” and recognizes your phone as a modem. You are now ready to access the Internet on your PC using your phone.



Notice:

In order to use the phone as a modem, your SIM card must support this function. For more detailed information, please contact with your service provider.



Caution:

If you select [USB] as the PC connection manner, you must install Microsoft ActiveSync version 4.2 on your PC. If you select [Bluetooth PAN] as the PC connection manner, you must first activate and finalize the personal local network setting of Bluetooth on the PC. For more detailed information, please refer to Windows help and support software.

and you can install the USB RNDIS drive on the Getting Started CD.

- (2) While connecting the network line, select [Network Neighborhood] on PC then select [Properties→Local Connection→Forbidden] with the Right Soft Key *** to disconnect the current network.
- (3) After finishing installation, confirm that the RNDIS network card has been added to the network adapter in the Device manager of your PC. If it has, then the drive has been installed successfully.
- (4) At this time, the phone can be used as an external modem for PC, and you can access the Internet.

To activate Internet sharing:

- (1) Use the USB data line to connect your phone with your PC. The PC will automatically detect that your phone has been connected,

Caution:

Please make sure you have selected [Tool]→Internet Options→Connection] on your PC. Click “Never dial-up to connect,” then select [Local Network Setting]. When the screen appears on your PC, select [Cancel Proxy Server].

If you haven't downloaded any Java games on your phone, the phone screen will display “**No applications installed**”. At this time, press the Left Soft Key ***** <Download>** to download games and the Right Soft Key ***** <Menu>** to set Java games or view the relative information about Java. See details in the figure below.



Deactivating Internet sharing

On the Internet sharing screen, select **<Disconnected>**.

Caution:

Before using ActiveSync, confirm that Internet sharing is deactivated.

Java

To enter the Java screen from the Home Screen, select **[Start]→[More]→[Tools]→[Java]**.

❖ **Application:** Manages the Java programs or games that have been installed in the phone. You can delete, set permission and view the detailed information for each Java program.

❖ **Arrange icon by:** Arrange the order of installed Java programs or games by **[Install Order]**, **[Name]** or **[Size]**.

- ❖ **Java settings:** Set whether to activate the [Backlight Always on] function, or select the network type for the current Java program.
- ❖ **Java info:** You can view some relative information about the current Java program.
- ❖ **Exit:** Quit Java game screen.

■ SIM manager

With this function, you can better manage SIM card contacts and the contacts of the phone.

Select [Start→More→Tools→SIM Manager] from the Home Screen and press the center of the Navigation Key  to enter.

After entering the SIM manager screen, the following options are available:

- ❖ **Copy all SIM contacts to phone:** After selecting <OK> and <Yes>, all SIM contacts will be copied to the phone.
- ❖ **Copy some SIM contacts to phone:** After

selecting <OK> and selecting the SIM contacts to move, press the center of the Navigation Key  to confirm your choice. Or you can select <Menu>, and access options including [Mark All], [Unmark All] and [Reverse]. If you select [Mark All] and press the center of the Navigation Key , all SIM contacts will be copied to the phone. Select [Cancel] to exit the screen.

- ❖ **Copy all phone contacts to SIM:** After selecting <OK> and <Yes>, all contacts of the phone will be copied to the current SIM card. Select [Menu→Settings] from SIM manager screen, and press the Navigation Key  up or down to configure copy priority from [Mobile Phone], [Work Phone] and [Home Phone], then select <OK> to finish setting. See details in the figure below.

Tools



- ❖ **Copy some phone contacts to SIM:** After selecting <OK> and selecting the phone contacts to move, press the center of the Navigation Key to confirm your choice. Or you can press the Right Soft Key *** <Menu>, and access options including [Mark All], [Unmark All] and [Reverse]. If you select [Mark all] and press the center of the Navigation Key , all phone contacts will be copied to the SIM card. Select [Cancel] to exit the screen.
- ❖ **Delete all SIM contacts:** After selecting <OK> and <Yes>, all the SIM contacts will be permanently deleted.
- ❖ **Delete some SIM contacts:** Select <OK> and

select your desired SIM contacts, then press the center of the Navigation Key to confirm your choice. For more details, please refer to “**Copy some SIM contacts to phone**”.

- ❖ **Delete all Phone contacts:** After selecting <OK> and <Yes>, all the Phone contacts will be permanently deleted.
- ❖ **Delete some phone contacts:** Select <OK> and select your desired phone contacts, then press the center of the Navigation Key to confirm your choice. For more details, please refer to “**Copy some phone contacts to SIM**”.

When choosing [Copy some SIM contacts to phone], [Copy some phone contacts to SIM], [Delete some SIM contacts] and [Delete some phone contacts], press the center of the Navigation Key to enter the corresponding screen. Press the Navigation Key to the left to return to the last page and press it to the right to go to the next page. Press the Back/Clear Key to exit the screen.

SIM memory

This menu provides you with the total and used memory of the current SIM card.

Speed dial

In this function, you can manage your speed dial list.

Creating a speed dial number for a contact

To create a speed dial number for a contact, please refer to "Speed Dials" on page 47.

Creating a speed dial number for a menu

To create a speed dial entry for a menu item:

- (1) Select <Start> from the Home Screen to enter Main menu, then use the Navigation Key  to select the menu you want to create a speed dial for.
- (2) Select [Menu→ Add Speed Dial]

- (3) Press the Left Soft Key *** <Done> to save.

Using speed dial

Select [Start→More→Tools→Speed Dial] from the Home Screen.

❖ Enter the Speed Dial List then press the Navigation Key  up or down to select the phone number or menu that you want to access. Select [Menu→Run], then you can dial the number or directly enter the menu function. See details in the following image.



❖ From the Home Screen, press and hold the speed dial number keys. If it is a two-digit entry, press

Tools

the first digit and then press and hold the second digit. The system will dial the number or directly enter the menu function.

You can view information on creating a speed dial through the [**Help**] function on the speed dial list.

21. Settings

Use this menu to personalize your phone by changing the display settings, call settings and phone settings.

To enter the Settings screen from the Home Screen, select [Start→More→Settings]. Select [More] from the Settings screen to access additional menus.

■ Phone

On the Home Screen, select [Start → More → Settings→ Phone] to enter the Phone settings screen, where you can set [Caller Barring], [Call Forwarding] and other options.

Caution:

The following functions need to be supported by your network. For more details, please check with your service provider.

Call barring

This network service allows you to restrict your calls. Before using this function, you have to enter a password obtained from your service provider.

Caution:

1. If you input the wrong restricted password three times in a row, the call barring function will be locked and disabled.

2. Call Barring needs to be supported by your network. For more details, please check with your service provider.

Call forwarding

Call Forwarding allows you to divert incoming calls to another number. The following image displays the Call Forwarding options.



 **Caution:**

This function needs to be supported by your network and must be activated before using it. For more details, please check with your service provider.

Call options

With call options you can view your phone number, your voice mail access number and other information about your phone.

Call waiting

This network service informs you when someone is trying to reach you while you are on another call.

Caller ID

This network service allows you to hide your phone number from the person you are calling.

Channels

This option can set whether to enable channels or to receive the channel list. Press the Right Soft Key *** <Menu> to edit the number or to cancel the operation.

Fixed dialing

You can set whether or not to enable the fixed dial function. On this screen, press the Right Soft Key *** <Menu> to edit the number or to cancel the operation.

 **Caution:**

This function needs to be supported by your network service provider. For more details, please check with your service provider.

Networks

To view the current network name and set a network connection manner, press the Right Soft Key *** <Menu>.

In Networks you can also change the Band Selection for your device for when you travel to another country. Options include [North America(850/1900)], [Europe(900/18000) and], [Default(850/1900/900/1800)]

Service dialing

Press the center of the Navigation Key  to select [Service Dialing Numbers]. If a “√” symbol appears before it, you can dial the service center. Press the Right Soft Key *** <Operation> to access the [Browse] or [Edit]

operations, then press the Left Soft Key *** <Done> to save.

TTY mode

You can press the Navigation Key  left or right to enable or disable TTY mode. Press the Left Soft Key *** <Done> to finish setting and press the Right Soft Key *** <Cancel> to cancel setting.

Sounds

Select [Start→More→Settings→Sounds] from the Home Screen to enter the sounds screen. You can set sound alerts for all relative phone functions.

To specify the sound for an event

- (1) On the Home Screen, select [Start →More→ Settings→ Sounds].
- (2) For the desired event, select a sound. Select [None] if you do not want to hear a sound.

(3) When finished, press the Left Soft Key *** <Done>.

 **Caution:**
SMT 5700WOC only supports audio files with MIDI, MP3 or WMA formats. The audio files with the other formats can't be played.

 **Notice:**
After selecting a sound, the sound plays. To hear it again, select [Menu→Play].

To copy a sound to your phone

You can connect your phone to your PC with a USB data cable to download your favorite ringtones from your PC. You can then use the sound for various phone functions. To copy a sound from your PC:

(1) Connect the phone to your PC by using a USB connection.

(2) On your PC, copy the sound file you want.

(3) In ActiveSync on your PC, select [Explorer] and double-click [My Windows Mobile-Based Device].

(4) Do one of the following:

To save the sound file on your phone, double-click [Application Data], double-click [Sounds] and paste the file into that folder.

To save the sound file on your storage card, double-click [Storage Card], and paste the file into the folder you want.



Profiles

With this function, you can set different user profiles to adapt to different environments.

To enter Profiles from the Home Screen, select [Start→More→Settings→Profiles] then select the profile to edit.

Select [Menu→Edit] and you can modify the

settings for each profile. To cancel without saving changes, press the Right Soft Key *** [Cancel]. See detailed information in the following image:

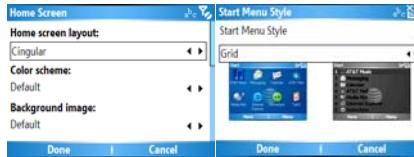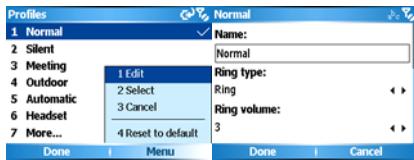

Caution:
The background image of the main screen must be in a GIF, JPG, BMP or PNG format.

Display

From the Home Screen, select [Start→More→Settings→Display] to enter the display screen to set [Home Screen] or [Start Menu Style] settings. In the [Home Screen] option, use the Navigation Key to set the layout, color scheme, background image of the Home Screen and the time for the phone to automatically return to the Home Screen in standby mode. In the [Start Menu Style] option, use the Navigation Key to select the [Grid] or [List] option.


In this option, you can edit the time and date of your phone and set alarms. To enter the Clock & Alarm screen from the Home Screen, select [Start→More→Settings→Clock & Alarm]

Date and time

With this function, you can select your time zone and edit the time and date. See detailed information

Settings

in the image below:

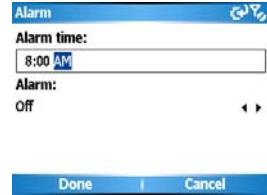

Alarm

After setting an alarm, it will ring to alert you at the set time everyday. The phone must be on for the alarm to work. See the following figure for detailed information.

Connections

This function allows you to establish various connections between your phone and outer devices via **[Wireless Manager]**, **[Beam]**, **[Bluetooth]**, **[Dial-up]** and others.

To enter the Connections screen from the Home Screen, select **[Start]→[More]→[Settings]→[Connections]**.

Wireless manager

[Wireless Manager] acts like a central switcher that lets you enable or disable phone features as

well as easily manage your data connections.

Simply select the corresponding button to enable or disable a function. When you enable a function, its button gets highlighted. The button appears gray when the corresponding function is disabled, shown in the figure below



Press the Navigation Key up or down to select [All] then press the center of the Navigation Key to turn off, Bluetooth and the phone function will be locked. Other phones won't be able to access the phone. Repeating this operation will turn on Bluetooth and the phone function.

Press the Navigation Key up or down to

select between [Bluetooth] and [Phone], and press the center of the Navigation Key to activate or lock it

- ❖ If you have activated the Bluetooth function, the icon will appear on the screen and the indicator will flash.
- ❖ While switching off the phone function, the signal icon on the Home Screen displays and other people can not get through your phone.
- ❖ If you are unable to make a call after inputting a phone number, “The phone is currently off. **Would you like to turn on the phone?**” will appear on the screen. Press the Left Soft Key *** <Yes> to activate the phone function.

Caution:


Follow the above instructions to switch off your phone in places where it is prohibited to use your phone.

Press the Right Soft Key ******* <Menu> then select [Bluetooth Settings] and [Phone Settings] to enter the relative setting screen.

- ❖ **Bluetooth settings:** For more details about Bluetooth settings, please refer to “Bluetooth” on page 112.
- ❖ **Phone settings:** For more details about phone settings, please refer to “Phone” on page 105.

Beam

This function must be activated to receive data beamed from other devices. See details in the following image.

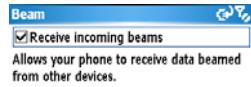

Bluetooth

Bluetooth is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 meters without requiring a physical connection. You can even beam information to a device in a different room, as long as it is within the Bluetooth signal coverage range.

- (1) To enter Bluetooth from the Home Screen, [Start→More→Settings→Connections→Bluetooth].



- (2) In this function, you can select whether to turn on the Bluetooth function, or you can set to make your phone discoverable.
- (3) After you activate **[Make this device visible to other devices]** option, a "√" symbol will appear before the option. Your phone can now receive the connection request of all Bluetooth-enabled devices. At this time, all other Bluetooth devices are allowed to connect with your phone, so it is advisable to think carefully before activating this function.

- (4) Select **[Menu→Devices]** or select **[Menu→COM ports]** to create or modify Bluetooth devices and COM port.

Searching Bluetooth devices

- (1) To enter Bluetooth from the Home Screen, **[Start→More→Settings→Connections→Bluetooth]**.
- (2) Press the Right Soft Key *** <Menu> and select **[Menu→Devices]** to enter the Bluetooth devices screen.
- (3) On the Bluetooth device screen, select **[Menu→Add new device]**.
- (4) The system begins to search for Bluetooth devices within 10 meters, as detailed in the following image.



Bluetooth partnerships

Matching the found device

A Bluetooth partnership is a relationship that you create between your phone and another Bluetooth-enabled device in order to exchange information in a secure manner. To create a Bluetooth partnership:

- (1) After the phone has searched for other Bluetooth-enabled devices and lists them, you can select your desired device name in the list. Select <Next> and enter a passcode (the passcode must be between 1 and 16 characters

long), then select <Next> to establish a secure connection

- (2) Wait for the paired device to accept the partnership.
- (3) On your phone, a message will appear, indicating that your phone has connected with the paired device. Select <OK>.
- (4) The name of the paired device is then displayed. You may edit and enter a new name for that device and the devices which have created partnership with your phone will be saved in "Add Devices" list.

Bluetooth stereo headset

For handsfree phone conversations, you can use a Bluetooth handsfree headset such as a car kit with your phone.

If you want connect to a Bluetooth handsfree or stereo headset, you must first search for it. Refer to "Searching Bluetooth devices" on page 113.

After matching successfully, the following screen appears:



Just like when connecting to any Bluetooth device, you also need to enter a passcode when connecting to a Bluetooth handsfree or stereo headset. The passcode is fixed and cannot be changed on a Bluetooth headset.



Caution:

For the above screen, each Bluetooth earphone device will have a different display name.

Press the Right Soft Key ***** <Menu>** to access

options including **[Add new device]**, **[Edit]**, **[Delete]**, **[Set as Hands-free]** and **[Set as Wireless Stereo]**.

If you select **[Set as Hands-free]**, the  icon will appear on the Home Screen, which means you can make a call through the Bluetooth earphone. If you choose **[Set as Wireless Stereo]**, the  icon appears on the Home Screen, and you can then enter **[Windows Media]** to select the desired file to play via the Bluetooth stereo. You can also use the Bluetooth earphone to listen to the audio file.



Notice:

If you choose [Set as Hands-free] and [Set as Wireless Stereo] simultaneously, the icon  will appear in standby mode.

Sending files by using Bluetooth

To send a file to another device, enter **[My Stuff]** or the folder where the file is saved, select the file then select **[Menu→Beam]**. While establishing the FTP

link between other Bluetooth-enabled devices and your phone, the system will prompt you whether or not to save a file to the phone. If you select <OK>, the other Bluetooth-enabled devices can visit any folder in [My Stuff] of your phone and you can send files to another matching device as well. You can also access the [Upload], [Download], [Delete], and [Create new folder] options.

Receiving files by using Bluetooth

To receive files via Bluetooth function, you must first activate it by selecting [Start→More→Settings→Connections→Beam] from the Home Screen. After you activate it, the “√” symbol appears and you can receive files from another Bluetooth-enabled device. The received files (images or audio) will be saved in the [My Stuff→My Document] folder.

Multiple network connection setting

With wireless connection, the Internet and WAP network, your phone provides you with various

network connection manners, including [Dial], [GPRS], [Proxy server], [VPN] and others.

To add a new network connection scheme or modify a network connection manner, select the [GPRS] or [Proxy Server] option then press the center of the Navigation Key  to enter the GPRS or Proxy server screen. Press the Right Soft Key *** <Menu> to access [Add], [Edit] or [Delete].


Caution:

You phone includes the default network connection settings, so you do not need to modify this setting. In case you modify any setting, you can restore it using the restore factory setting function. For more details, please refer to “Clear” on page 93.

Advance

Select [Menu→ Advanced] from the connections screen to enter the advanced screen of network connection. In this option, you can press the

Navigation Key  left or right to set Internet connection manner, work connection manner and others. See details in the following figure:

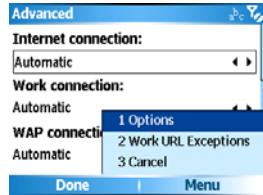

 **Caution:**

You phone includes the default network connection settings, so you do not need to modify this setting. In case you modify any setting, you can restore it using the restore factory setting function. For more details, please refer to "Clear" on page 93.

More

❖ **SMS service:** You can set SMS service as

[Circuit-switched preferred], [GPRS] or [GPRS preferred], [Circuit-switched] as required.

❖ **VPN:** Press the Right Soft Key  <Menu> and you can add, edit or delete VPN.

❖ **USB to PC:** Press the center of the Navigation Key  to select "Enable advanced network functionality, so you can change the type of USB connection to help with problems while connecting ActiveSync.

❖ **WAP push message:** Use the Navigation Key  to enable or disable WAP push message function.

Security

By setting and modifying the passwords and options of Security, you can protect your phone from unauthorized use by other people and restrict phone use.

To enter Security from the Home Screen, select

[Start→More→Settings→More...→Security]

Device lock

If you set the phone's lock function, it will automatically lock after remaining dormant for some time. After activating the phone lock function, you need to input the password each time you switch on the phone. Only by inputting the correct password can you use the phone normally. See details in the following figure.



Enable SIM PIN

In this option, you can protect your phone from unauthorized use by entering a type of password called a PIN (personal identification number) in

order to make calls. Your first PIN will be given to you by your network service provider.

Change PIN2

Be sure to make a note of your PIN, when the SIM PIN is enabled, you must provide this new PIN to unlock the phone.

Certificates

The certificate is the indispensable file of the phone that keeps the software operating normally. If you delete it, the program can't be operated normally. You can restore the deleted certificate by restoring the factory function. For more details, please refer to "Clear" on page 93.

Caution:


[Enable SIM PIN] and [Change PIN2] only appear when the SIM card has been inserted.

■ Remove programs

To free up memory on your phone, you can delete the programs. From the Home Screen select **[Start→More→Settings→More...→ Remove programs]**. In the program list, press the Navigation Key  up or down to select the program(s) you want to remove then select **[Menu→Remove]** to delete them.

■ Power management

In this option, you can view the battery power, and set a time limit for the background light and screen. From the Home Screen, select **[Start→More→Settings→More...→Power management]**, and the following screen appears:

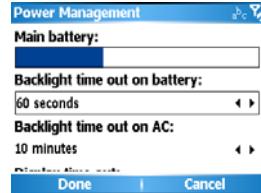


- ❖ **Main battery:** Indicates the amount of battery life remaining.
- ❖ **Backlight time out on battery:** Select the amount of time for the phone to be idle before the backlight turns off.
- ❖ **Backlight time out on AC:** Select the amount of time for the phone to be idle before the backlight turns off when using AC power.
- ❖ **Display time out:** Select the number of minutes for the phone to be idle before the screen turns off.

■ Accessibility

In this option, you can set the system font size, the time for Multipress time out and confirmation time out and the alert volume while in-call.

To access Regional settings from the Home Screen, select , [Start →More→Settings→More...→Accessibility]. The following screen appears:

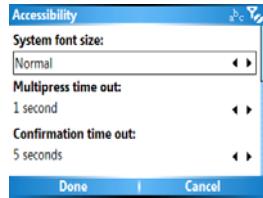

- ❖ **System font size:** Set the size of the font that is displayed on the screen.
- ❖ **Multiple press time out:** Set the length of time between key presses when entering text in

Multipress mode.

- ❖ **Confirmation time out:** Set the delay before an unconfirmed action times out.
- ❖ **In-call alert volume:** Set the volume of sounds that play when you are in a call

■ Regional settings

In this option, you can press the Navigation Key left or right to set [Language], [Locale], [Short date style], [Long date style], [Time format] and more.

Select [Start→More→Settings→More...→Regional settings] from the Home Screen and the following screen appears:



■ Owner information

To add your name, telephone number, email address and other information, from the Home Screen select **[Start → More → Settings → More → Owner information]**.

■ More

Phone information

In this option, you can view the detailed information of the software version, hardware version and IMEI number of the phone.

Backlight level

In this option, you can set the backlight intensity level and choose from 5 different settings.

System information

In this option, you can view some information about the system.

About

In this option, you can view the basic configurations of the phone and software version information, but you can't modify their contents.

Error reporting

When enabled, the phone will automatically send system error reports to Microsoft. Sending error reporting from your phone is fully voluntary and confidential.

22. Phone Maintenance

Mobile phones are very exact electronic devices and must be looked after carefully. The following advice can help you to look after your phone and prolong its life.

- ❖ The phone and its spare parts should be put out of the reach of children.
- ❖ Keep the phone dry. Rain, moisture or water will corrupt its electronic circuitry. If your phone does get wet, remove the battery immediately and take the phone to the nearest UT Starcom authorized service center.
- ❖ Don't put the phone in dusty places or this will affect the everyday use of the phone.
- ❖ LCD is a part of the phone which could be easily damaged, so try to avoid dropping the phone on the ground or any other form of shock. Do not touch the screen with a sharp object.
- ❖ Don't put the phone in a high temperature

environment. High temperatures will shorten the life of electronic devices, destroy the battery and destroy or melt a phone's plastic shell.

- ❖ Don't put the phone in a low temperature environment. Otherwise, when the temperature rises to normal temperature, there will be moisture in the phone and this will destroy the phone's electronic circuitry.
- ❖ Don't throw, knock or shake the phone intensely as this could damage the electronic circuitry and structure of the phone.
- ❖ Use soft cloth with soap water to clean the phone. Do not use rough chemical or abrasive cleaners to clean the phone as these could damage the phone.
- ❖ Don't paint your phone, for fear the parts which can be taken down will be pasted and affect its normal use.
- ❖ If you have to replace the phone's antenna, please only do so with a suitable replacement. Using an unsuitable antenna or spare parts will

damage the phone and radio system.

Troubleshooting

23. Troubleshooting

Please check to see if any problems you have encountered while using your phone are described below. If you were unable to find the solution to a particular problem, please contact one of our maintenance centres.

The phone is switched off automatically

Possible reason	Solution
Low battery power	Charge the battery

The phone can't be switched on

Possible reason	Solution
You are not holding down the Power Key  for long enough	Press and hold for at least 2 seconds.
The battery power is used up	Charge the battery
Incorrect battery installation	Install battery correctly

PIN/ PUK code lock

Possible reason	Solution
Enter wrong PIN Code(Personal Identification Code) or PUK Code (Personal Unlocking Key)	Enter correct password

 **Caution**

1. If you enter an incorrect PIN code three times in succession, many SIM and phone functions will be locked. For more details, please refer to "Safety Precautions".
2. If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.

Bad call quality

Possible reason	Solution
The signal changes suddenly	Maybe you are moving at high-speed (e.g. on a train or bus). Observe the signal strength and select the place with the strongest signal to make a call and ensure better call quality.
The area does not have a good signal	Move to a more open area.

Troubleshooting

■ Can't answer a call

Possible reason	Solution
The call forwarding option has been set	Cancel call forwarding according to requirements.
The call barring option has been set	Cancel the function of incoming call barring or roam incoming call barring.

■ Can't make a call

Possible reason	Solution
The phone is switched off	Turn on the phone.
You are outside the network service area	Check the network area.

network service area	
The SIM card has been incorrectly inserted	Check whether your SIM card can be used normally.
The keypad locks automatically	Press the Left Soft Key  *** and hold down  to unlock your keypad
Use the phone during call rush hours and cause line jam	Try to avoid using the phone during call rush hours
Call barring has been set	Cancel the call barring option according to your requirements.

■ The call volume is too low

Possible reason	Solution
The call volume has been set too low	Increase the call volume.

■ The incoming call doesn't ring

Possible reason	Solution
The phone selects silent mode	Reset the ring type in [Profiles] to [Ring] or [Vibrate and Ring] , for more details, refer to “ Profiles ” on page 108.
The ring volume is set too low	Increase the volume

■ The person you are calling cannot hear your voice

Possible reason	Solution
Call status is set to mute	Turn off the mute function on the call menu.
The microphone is too far from the sound source	Put the phone's microphone closer to your mouth.

Troubleshooting

 The battery can't be charged		to charge
Possible reason	Solution	
The battery is worn out and the charging time takes too long	Charge when the phone prompts low battery.	Battery or charger has been damaged
The battery doesn't connect well to the phone	Ensure the battery has been inserted correctly.	The surrounding temperature is too low or too high
The charger doesn't connect to the phone	Ensure that the interface between the charger and the phone is correctly connected, and the charger icon should appear on the screen.	
The battery power is empty, so charge with USB data cable	When the battery power is empty, you mustn't charge with USB cable, Use UT Starcom standard charger	

Can't display network

Possible reason	Solution
The SIM card has been incorrectly installed	Refer to the SIM card installation method.
The contact between the SIM card and phone is dirty	Ensure the contact between the SIM card and phone remains clean.
The SIM card does not work	Check whether the SIM card is out of date.
The network is very weak	Move to a place with a strong signal to use the phone

■ The phone does not recognize the storage card

Possible reason	Solution
The storage card has been incorrectly inserted	Insert the storage card correctly according to instructions in the user manual.
The storage card has been damaged	Replace the storage card

Troubleshooting

■ Browser can't connect to Internet normally

Possible reason	Solution
The network service provider don't provide the service or you haven't apply for this service	Contact with your network service provider and consult information about how to apply for and use these services
Haven't set correctly	About more details about setting, refer to "Options" on page 86.

■ Lack of space

Possible reason	Solution
The resource manager file is taking up too much space	Delete unnecessary files.
The browser's history records are taking up too much space	Delete unwanted history records.
Multi-message, e-mail etc. are taking up too much space	Delete unwanted messages and e-mails.

24. Safety Precaution

■ Usage environment

- ❖ Please remember to obey the necessary rules and regulations whenever use your phone. This will help keep you safe and respect your environment.
- ❖ Switch off your phone when close to petrol stations, bunkers, chemical factories or explosive areas and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Using the phone in plane can cause interference and danger to an aircraft navigation system and network. You must switch off your phone before boarding and make sure your phone is switched off during the whole flight.
- ❖ Please place the phone somewhere safe and don't put it on a seat or in places where it could fall and break. In order to ensure safe driving and avoid road accidents, please don't use the phone

when driving. If you must use it, please use the phone's hands-free or park at roadside before making or answering a call.

■ Medical devices

Please switch off your phone in areas near the electronic medical equipments that obviously desire to switch your phone off (.such as heart pacemakers, hearing aids etc). Most medical devices can shield the phone's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or medical device manufacturer.

Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker to be at least 6 inches (15.3 cm), or the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the followings:

- ❖ ALWAYS keep the phone more than six inches

Safety Precaution

from your pacemaker when the phone is turned on.

- ❖ Do not carry the phone in a breast pocket.
- ❖ Use the ear opposite the pacemaker to minimize the potential for interference.
- ❖ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

 **Caution:**

If you are unsure as to the level of interference, please switch off the phone at once and consult a doctor immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Emergency calls

As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid)

Making an emergency call

- (1) If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.
- (2) Input the local first aid number correctly (such as 120), different areas have different first aid numbers.
- (3) Please press the call key to call.

 **Caution:**

While making an emergency call, you should try

to provide all important information correctly. At this time, the phone may be the only communication tool, so don't end the call without permission.

Password access

Your phone and SIM card can be protected by a password, to prevent others using it illegally.

Phone password

This protects your phone from unauthorised use by other people. The preset password is 0000. After using it, please modify your phone password as soon as possible and keep it secret.

PIN code

This is personal identification code which is used to protect the SIM card from unauthorised use by other people. Generally, the PIN code and SIM card are provided together. After activating the PIN code,

you can use the phone normally by correctly inputting your password each time.

Caution:

If you input your PIN code incorrectly three times in succession, the SIM card will be locked. You will need to input the PUK code to unlock it. (If you don't have a PUK code, please contact your operator and SIM card provider for this information. Please input all characters).

PIN2 code

This is the password which activates the special SIM card functions. Usually, the PIN2 code and the SIM card will be provided together. If you incorrectly input the PIN2 code three times in succession, it will be locked and you will need to input PUK2 to unlock it again.

PUK code

This is used to unlock the PIN code. If you

Safety Precaution

incorrectly input the PUK code ten times in succession, then the SIM card cannot be used again. Usually the PUK code and SIM card are provided together. If you lose PUK code or it isn't supplied with SIM card, please contact with your network operator or SIM card provider.

PUK2 code

This is used to unlock the PIN2 code. Usually the PUK2 code and the SIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in succession, you will not be able to access some of the functions. Please apply to your operator for a new card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.

Note about charging the battery

The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

❖ Please use the battery and charger provided by the UT Starcom Company. UT Starcom will take no responsibility for damage caused by using the wrong battery or charger.

Caution:

Generally, the charging time is 2-5 hours according to the current status of the phone (whether switch on the phone, make a call etc)

❖ Don't use wet hands to touch the phone battery or charger while charging.

Caution:

To make the new battery achieve the best capacity, please charge and discharge the phone for twice or three times. As for the first several times, you should charge the battery for at least 10 hours in succession. Please charge the phone due to no power and switch off the phone automatically.

Battery information and care

- ❖ Never use any battery that has been damaged.
- ❖ While using the phone near network station, the power consumption is very little. Therefore, the call and standby time depends on greatly by the signal strength of honeycomb network and the parameters set by network operator.
- ❖ The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- ❖ Only use batteries that are compatible with your phone and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- ❖ Improper battery use may result in a fire, explosion or other hazard. Do not disassemble or open, crush, bend or deform, puncture or shred the battery.
- ❖ Do not connect the anode and cathode of a battery the wrong way round.
- ❖ Do not leave the battery in places with too high or too low temperature or the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.
- ❖ Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery. Accidental short-circuiting may occur when a metal object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. Therefore, please store the battery carefully and on its own.
- ❖ Don't burn your phone battery or treat it as

Safety Precaution

common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.

- ❖ If your phone, battery or other charging device leaks due to carelessness, you must not put it inside any piece of equipment that heats up (such as drier, microwave etc.). The phone or other products may go wrong, or this could even cause the phone, battery or other charging device to burn, expand and explode.
- ❖ Please deal with the useless old battery according to the relative introduction.

UT Starcom will take no responsibility for any direct or indirect damage caused by user error.

Note about using spare parts

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children, in case danger occurs.

- ❖ Please do switch off the phone and disconnect the phone and charger before you removing the battery from the phone.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, ally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

Other safety information

- ❖ When you are not using your phone, it is advisable to switch it off, remove the battery to save energy and avoid radicalising the phone.
- ❖ If you use earphones to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.

- ❖ You can't disassemble the terminal and battery of the phone unless the technical personnel.

25. 12 Month Limited Warranty

UTStarcom Personal Communications (the Company) warrants to the original retail purchaser of this UTStarcom handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada

and it is not transferable or assignable.

This Warranty does not apply to:

- ❖ Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- ❖ Product, whose mechanical serial number or electronic serial number has been removed, altered or defaced;
- ❖ Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- ❖ Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- ❖ Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- ❖ Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions,

battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to UTStarcom Personal Communications for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, UTStarcom Personal Communications is not responsible for and

does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to UTStarcom Personal Communications for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED

12 Month Limited Warranty

ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING

THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: UTStarcom Personal Communications

555 Wireless Blvd.

Hauppauge, NY 11788

(800) 229-1235

IN CANADA: UTStarcom Canada Company
5535 Eglinton Avenue West
Suite# 234
Toronto, ON M9C 5K5
(800) 465-9672

Index

ActiveSync

Error information, 59
Setting up, 52
Synchronization information, 56

AT&T Mall, 71

AT&T music

Community, 81
Music apps, 82
Music ID, 81
Shop music, 80
Streaming music, 81
The buzz, 81

Windows media, 73, 74

Battery

Charging, 12
Power display, 13

Calendar

New appointment, 44
Settings, 44
Viewing, 43

Call

Additional dialing information, 23
Functions, 24
History, 96

List, 96

Making, 18
Options, 21, 96
Receiving, 21

Contacts

Beaming, 49
Copying, 50
Creating new, 47
Creating new SIM, 48
Deleting, 51
Editing, 46
Finding, 49
Speed dials, 48

Viewing, 45	Input modes	Outlook E-mail, 34
Documents to go	Character, 26	My stuff
PDF to go, 62	Numeric, 27	Folder operation, 69
Sheet tp go, 63	Switching, 26	Folder use, 69
Slideshow to go, 64	Installing	Organizer
Word to go, 66	SIM card and battery, 9	Calculator, 98
Zip to go, 67	T-flash card, 11	Clear, 98
Entertainment	Media net, 70	Download agent, 99
Get TeleNav, 83	Menu	Task, 100
Internet Explorer, 84	Entering, 28	Task manager, 99
MobiTV, 89	Messaging	Voice notes, 102
Pictures & Videos, 89	Folders, 41	Phone Maintenance, 128
Games, 60	Messages, 29	Power on/ off, 13
Home Screen, 3	New account, 40	Program, 6
IM & Email, 61	Options, 41	

Index

Safety notice, *IX*

Safety Precaution, *137*

Settings

- Accessibilty, *125*
- Clock & alarm, *114*
- Connections, *115*
- Display, *114*
- More, *126*
- Owner information, *126*
- Phone, *110*

 Power management, *124*

 Profiles, *113*

 Regional, *125*

 Remove programs, *124*

 Security, *123*

 Sounds, *112*

Status icon, *5*

Tools

- Internet sharing, *103*
- Java, *105*

 SIM manager, *106*

 Speed dial, *108*

Troubleshooting, *130*

Using

- Quick list, *14*
- Shortcut keys, *15, 17*

Your phone

- Front view, *2*
- Rear view, *3*
- Side view, *2*