# FLYMUG SAUCER WIRELESS

## päster

### CONTENTS

- 1.Thrust Transmitter
- 2.Launch Platform
- 3.AC Adaptor
- 4.Instruction Manual

## EXCITEMENT IN THE AIR !

Contains NiMH battery, battery must be recycled or disposed of properly.



- 7.2V 120mAH Ni-MH Rechargeable Battery(included).
  Thrust Transmitter:
- 9V Alkaline Batteries(not included).
- Launch Plat form:
- 8 Size"C"(LR14)1.5V Alkaline Batteries(not included).

#### **WARNING!**

- -Keep face, eyes, fingers, hair, body parts etc. away from the propeller and other moving parts.
- -Always fly within 10 feet (3 meters) of open space.
- -Do not expose your flying saucer to rain or moisture.
- -Do not fly in a crowded environment.
- -Do not fly in a dusty area.
- -Do not fly in complete darkness.
- -Ensure people know that you are flying.
- -Use only your controller included in this package.
- -Always turn your "OFF"when not in use.