 


FLYING SAUCER

WIRELESS 

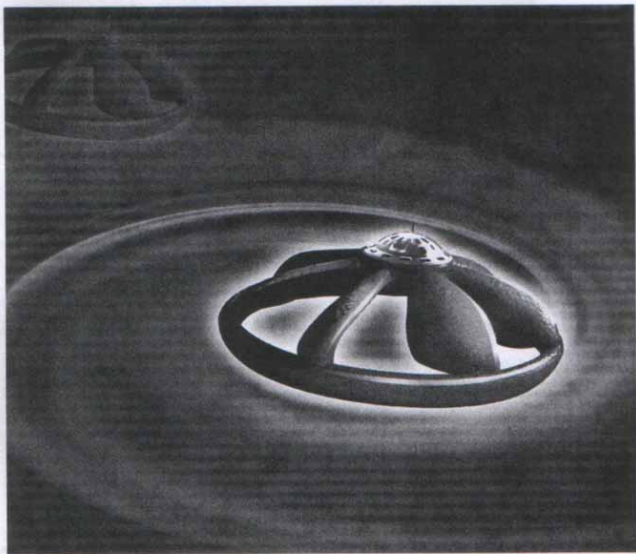

EXCITEMENT **IN THE AIR!**

The next generation of flying toys has arrived.
The Smallest Wireless Flying Saucer!
You control the altitude with your thrust transmitter.
Just charge the battery and it is ready to fly, hover and dive!

INSTRUCTION MANUAL

WARNING

- CAUTION:Electrically operated product. Not recommended for children under 10 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.
- Keep face, eyes, fingers, hair, body parts etc. away from the propeller and other moving parts.
- Always fly the UFO with 10-33 feet (3 -10 meters) of open space.
- Do not expose your UFO to rain or moisture.
- Do not fly in a crowded environment.
- Do not fly in a dusty area.
- Do not fly in complete darkness.
- Ensure people know that you are flying the UFO.
- Use only your UFO controller included in this package.
- Always turn your UFO "OFF" when not in use.

General

- Your UFO must not be used if there is any damage to the AC adaptor, charging cord, charging socket, rechargeable battery, propeller, ring or other parts of the UFO.
- Do not attempt to lift objects with your UFO.
- UFO is a high tech precision instrument and is unable to misuse. Protecting all components is an essential part of flight maintenance.

AC Adaptor Important Information

- This toy is not intended for children under 3 years old.
- The instruction manual contains important information and must be kept.
- This toy only operates with supplied AC adaptor.
- The use of the AC adaptor should be supervised by an adult and examined regularly.
- This toy must not be used if there is any damage to the power cord, plug and other parts of transformer.
- The AC adaptor must be disconnected before cleaning.

Battery Safety From Guidelines

- To prevent battery from leaking: Be sure to insert batteries correctly.
- Batteries should be replaced by adult.
- Never dispose of batteries in fire as this may cause them to explode.
- Do not mix old and new batteries (replace all batteries at the same time).

- Do not mix Alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-Cadmium) batteries (or equivalent). Only batteries of the same or equivalent type as recommended are to be used.
- Non-rechargeable batteries are not to be recharged.
- Always remove exhausted or dead batteries from product. Remove batteries from product which is not going to be used for a long time. Otherwise the batteries may leak and cause damage.
- The supply terminals are not to be short-circuited.
- Make sure battery compartment is secure.
- Do not immerse battery operated toys. Wipe clean only.

Battery Safety

- Your UFO is only to be charged under adult supervision.
- Never expose the UFO battery pack to direct sun, hot areas, or fire as it may explode.
- The UFO Charger and battery may become warm during charging.
- The UFO charging cord must be disconnected from the UFO when it is fully charged.
- Never leave your UFO connected to the AC adaptor overnight.
- Never overcharge the UFO as it can damage the rechargeable battery.

Battery Care

- For maximum performance, always allow your battery of the UFO to drain before recharging.
- Never charge a second time without discharging first. This will affect or damage the battery.

 
Battery Disposal

- Do not dispose of the battery in your regular household waste.
- Contact your local waste management officials for information on environmentally sound disposal of rechargeable batteries.
- If a battery leak develops, avoid contacting with leaking fluid. Place the damaged battery in a plastic bag for proper disposal.
- If fluid comes in to contact with skin and eyes, wash with cool water for at least 15 mins, or go to hospital if necessary.

Battery Removal

- Remove the 3 screws on the top of the UFO with a screwdriver, disassemble the unit and remove the rechargeable battery.

Contents

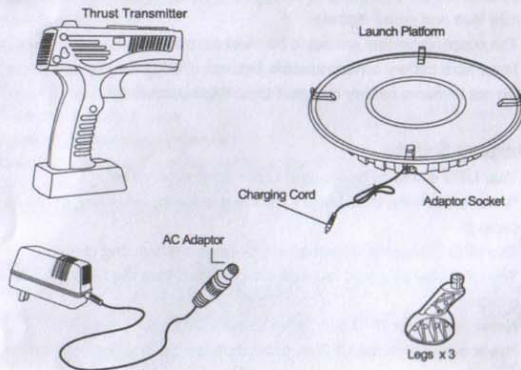



1. Thrust Transmitter

- 1) Open or close the cover with a screwdriver.
- 2) Insert 2 size "AA" (LR6) 1.5V batteries.

2. Flight Preparation

IMPORTANT: Ensure the AC Adaptor voltage and plug are suitable for your area.

  - 1) Insert the legs into the launch platform.
- 2) Connect the AC Adaptor to the charging socket and to the wall outlet.

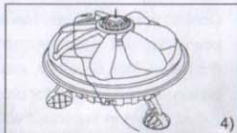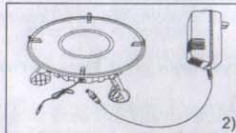

- 3) Place your UFO on to the launch platform.
- 4) Ensure your UFO is switched OFF, then connect the charging cord to your UFO.

- 5) The UFO can also be charged with 8 size "C" 1.5V batteries. Open and close the cover with a screwdriver and insert the batteries with the correct polarity.

NOTES: When your UFO is new or has not been flown for a long time, it will take several charge/discharge cycles for the battery to reach its full flight time.

WARNING: Never recharge your UFO a second time without having flown first. Continuous recharging without discharging first will damage the UFO battery.
IMPORTANT: Do not use the AC Adaptor together with batteries in the launch platform. Remove your AC Adaptor from the wall outlet after use. If you are using batteries with the launch platform, remove them after use.

3. Flying, Hovering and Landing Your UFO

IMPORTANT: Ensure your UFO is fully charged for first time use and that you have enough clear area.

- 1) With your UFO on the launch platform, unplug the charging cord.
- 2) Switch on your UFO.



- 3) Point the thrust transmitter to your UFO.
- 4) Press the trigger slowly to allow your UFO to take off.
- 5) Adjust and hold the trigger to allow your UFO to hover.
- 6) Release the trigger to allow your UFO to descend or land.

TIPS:

- For your first flight, ensure there are no strong air currents from fans, air conditioners.
- Adjust the trigger to find the correct position so your UFO will hover, preventing it from flying too high or too low. It will take some practice to get the hang of it.
- Always point the thrust transmitter towards your UFO to ensure a steady controllable flight.
- Do not try to land your UFO on to the launch platform. Try to land on any open floor area.

- Your UFO can also take off from any smooth flat surface. Do not try to take off from deep pile carpet or soft furniture. This may jam the propeller before taking off.

Troubleshooting

Problem	Possible Cause	Solution
No power to the propeller	Your launch platform's batteries are empty preventing it from charging the UFO.	Replace 8 size "C" (LR14) 1.5V Alkaline batteries.
	Your launch platform batteries are inserted improperly.	Check and reinsert the batteries with the proper polarity as per the marking in the launch platform.
	Power switch is not turned on.	Slide the power switch to the ON position.
	Your UFO battery is not charged.	Charge your battery fully before flying.
	The battery power is low.	Recharge the battery fully.
	Your UFO is not placed properly onto the launch platform.	Place your UFO properly sitting in the middle of the launch platform.
	The trigger is not depressed far enough on the thrust transmitter.	Depress the trigger at least half way.
Your UFO does not respond to the thrust transmitter.	The thrust transmitter batteries are inserted improperly.	Check and reinsert the batteries with the proper polarity as per the marking in the holder.
	Your UFO is out of range.	Move closer to your UFO.

Learning More About Your UFO

Technical Specifications

	Recommended Age	10 and UP
UFO	Flying Range	33 ft. (10 m)
	Rechargeable Battery Type	7.2 V 120mA Ni-MH
	Working Voltage	5 V
UFO Controller	Batteries	5F22 9V
	Power Consumption	0.3W (Peak)
UFO Charging	Charge Duration	10 minutes (max)
Devices	1) AC Adaptor Output	DC 12 V
	AC Adaptor Input	1000mA 220V~
	2) Batteries	8 size "C" (LR14) 1.5V Alkaline Batteries

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by Guangzhou Walkera Technology Co., Ltd. could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.