Wireless Speaker System with Subwoofer

User's Guide for Model HB36B v1543-01

FCC WARNINGS

FUCC WARTININGS Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to installation. If this equipment does cause harmful interference to Instalation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

- Connect the equipment into an outled on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

ADDITIONAL WARNINGS

Caution and marking information is located at the rear or bottom

- Caution and marking information is located at the rear of bottom of the apparatus. WARNING: Shock hazard Do Not Open. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely. CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

- enter field of enter the sequence of the sequence of the field of the sequence of the





WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




ATTENTION


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

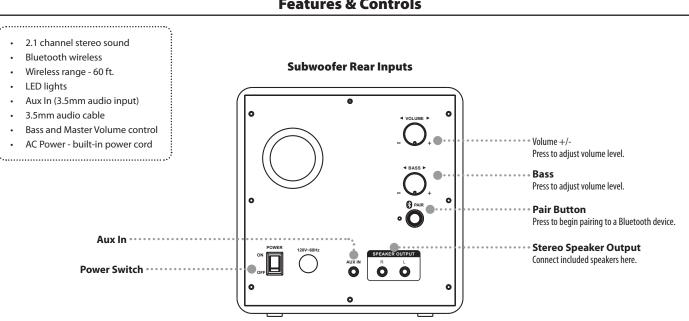


Subwoofer & Speakers Connected (front)

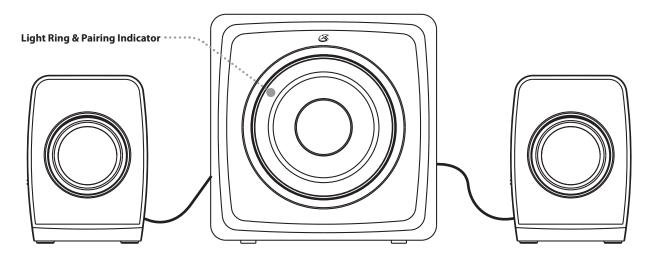

Power

Connect the power cord to a standard wall outlet.

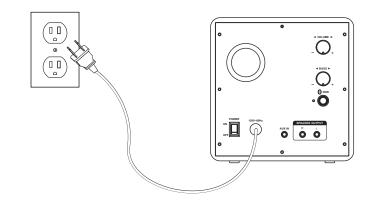

Bluetooth Wireless Audio


After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the steps listed here.

- Power on the unit by adjusting the POWER Switch to the ON position and press the Pair button to begin pairing. The front light ring (pairing indicator) will quickly flash blue as it searches for nearby devices. When pairing, remain within 3 feet of the unit.
- 2. Using the controls on your Bluetooth device, scan for and select **HB36** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0000**. *Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
- 3. When successfully paired, the **front light ring (pairing indicator)** will turn solid and an audible chime will sound from the speaker.
- Use the controls on the connected device to select and play audio. Audio played through the connected Bluetooth device should now be heard through the speaker.

Aux In

Requires a 3.5mm audio cable (included)

- 1. Connect a 3.5mm audio cable to the **Aux In** on the rear of unit and the **audio output/headphone jack** on a media player or smartphone.
- 2. Power on the unit by adjusting the **POWER Switch** to the **ON** position.
- 3. Use the controls on the connected device to select and play audio.

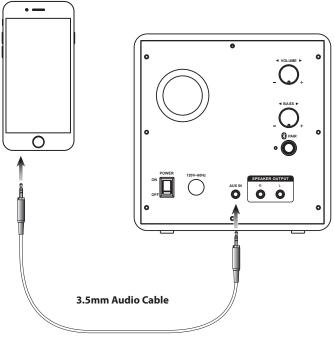

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **www.gpx.com**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.gpx.com**

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2016 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

