Wireless Speaker System with Subwoofer

User's Guide for Model IHB26B v1616-01

IMPORTANT SAFETY INSTRUCTIONS

Read these Instructio

- Read these Instructions. Keep these Instructions. Heed all Warnings. Follow all instructions. Do not use this apparatus ne: Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instruction
- Do not noice any ventuation openings, instai in accordance with the manufacture's instruction.
 Do not instain linear any host success such as radiations, heat registers, stowes, or other apparatus (including amplifies) that produce heat.
 Do not define the safety purpose of the polarized or grounding type plug. A polarized plug has blades with one wider than the other. A grounding type plug has two blades and a third grounding prome. The wide blade or the third prong are provided for your safety. When the provided plug not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 Protect the power cond from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they cuit from the apparatus.

- convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments'accessories specified by the manufacturer.
 12. Use only with a cart, stand, ripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tin-pover.
 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, flagid has been spilled or objects have fillen in the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain WARNING: The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

This equipment is a Class II or double insulated electrical app It has been designed in such a way that it does not require a sa connection to electrical earth.



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

FCC Warnings

ng: Changes or modifications to this unit not expressly approved by the party re mpliance could void the user's authority to operate the equipment. for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part I 5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential insullation. This equipment generates, uses, and can radiate radio frequency energy and, front installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is a ong againstee that interference will not occur in a particular installation. If this equipment does cause automation direction is not explore the view of the second second second generation of the following messares: encouraged to usy to correct the interference by one or . Baroint en trading to home to home on them.

- Reorient or relocate the receiving antenna
- REGISTERE OF REFORT THE RECEIVING AND REAL AND RECEIVER. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

Overview


- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. WARNING: Shock Inzard Do Not Open. Caution and marking information is located at the rear or bottom of the apparatus.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus
- Orgeris mice with rupture, since as vises, small not be pinces on the apparatus WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or ensistive finish. As with any rubber compound made with oils, the feet could cause marks or starting where the feet reade. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and or starting. WARNING: This product may contain chemicals known to the State of California to cause thind defects, or other reproductive harm (California Prop 65). Wash hands after handling,
- This product meets and complies with all Federal regulations




- 2.1 channel stereo sound
- Built-in amplifier .
- 3 speakers: left, right, and subwoofer
- . LED light effects
- Supports Bluetooth
- Bluetooth Wireless range: 60 ft
- Analog volume control
- Bass and Treble controls
- Aux In 3.5 mm audio input
- USB port for device charging .
- AC power: built-in AC power cable

Includes

- 3.5mm audio cable
- User's guide

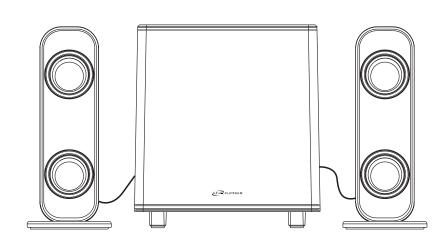

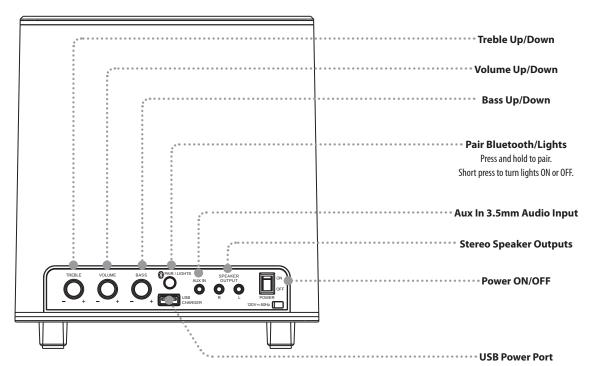


Rear View




Power & Charging

Connect the power plug to a standard power outlet.

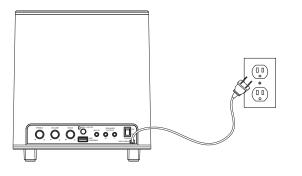


Connect Speakers

Connect the left and right speaker cables to the left and right **audio outputs** on the subwoofer.

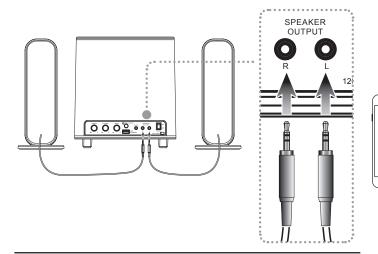

Charge Devices

Using an appropriate USB power cable (not included), connect your device to the **USB Power Port** on the rear of the subwoofer.

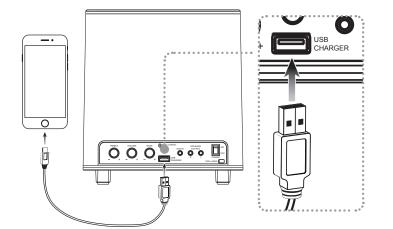

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.iLiveElectronics.com**

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2016 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Bluetooth Wireless Audio

Pairing to a Device & Playing Audio

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the steps listed here.

- 1. Power ON the unit and press and hold the **Pair button** to begin pairing. The **LED lights** will begin flashing quickly. *The lights will always flash during the pairing process, even if they are set to OFF. Once the pairing process is complete, the lights will return to OFF. When pairing, remain within 3 feet of the unit.*
- Using the controls on your Bluetooth device, search for and select IHB26 in your Bluetooth settings to pair. If your device requests a password, enter the default password 0000. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
- 3. When successfully paired, the **LED lights** will turn solid and an audible chime will sound from the speaker. Use the controls on the connected device to select audio, play, pause, skip, and adjust the volume.

Aux In

Requires a 3.5mm audio cable (included).

- 1. Connect a 3.5mm audio cable to the Aux In **Input** on the unit and the **audio output** on an audio device.
- Use the controls on the connected device to select audio, play, pause, skip, and adjust the volume.

