EUT – Cover-off View




EUT – Component View with Transceiver



EUT – Component View without Transceiver




EUT – RS232 Component View

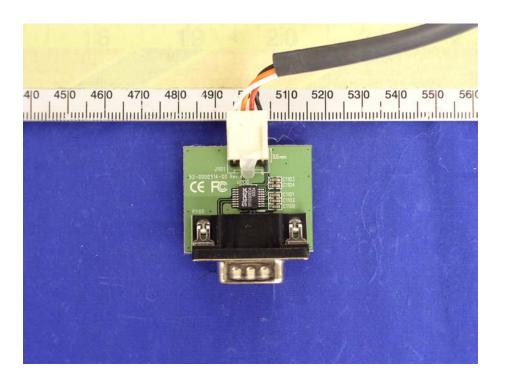


FCC ID: RZ9AEROGUARD

EUT – Transceiver Component View with Shielding

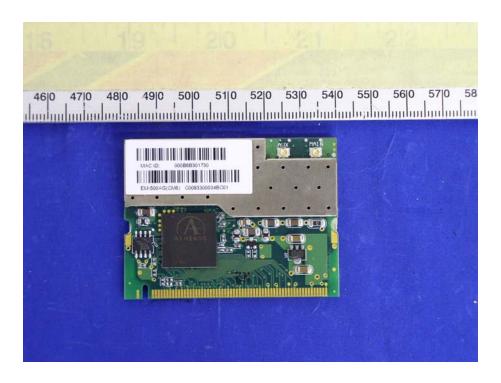


EUT – Transceiver Component View without Shielding

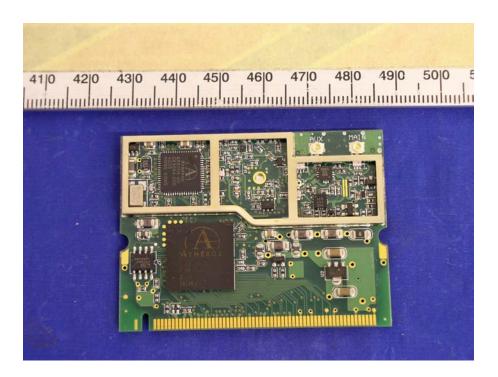


SOHOware Inc FCC ID: RZ9AEROGUARD

EUT – Transceiver Solder View with Shielding

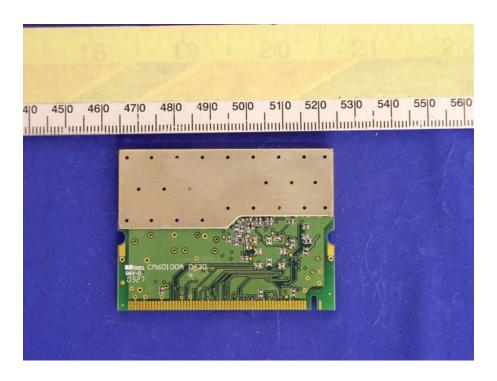


EUT – Transceiver Solder View without Shielding

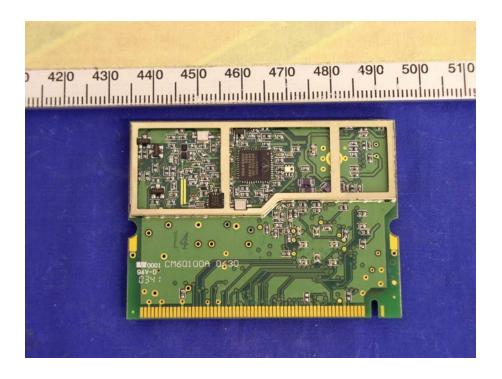

EUT – Main Board Solder View




EUT – RS232 Solder View

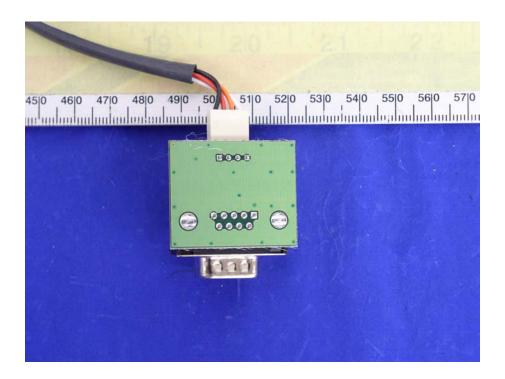


SOHOware Inc

EUT – Transceiver Solder View with Shielding

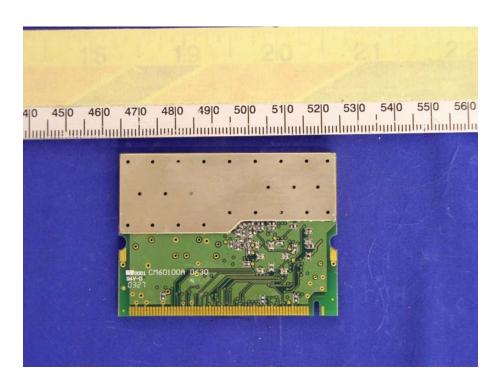

EUT – Transceiver Solder View without Shielding

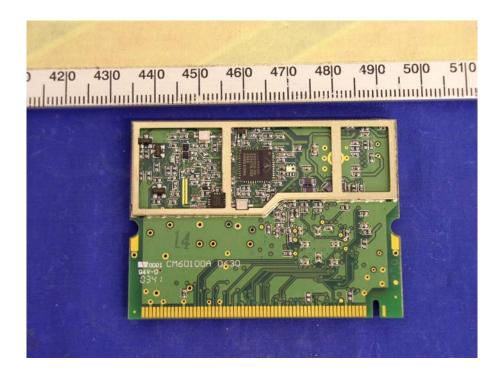

SOHOware Inc FCC ID: RZ9AEROGUARD

EUT – Antenna View (Model: FCF-004)



EUT – Port View



EUT - RS232 Com Port View

