

NR-103 User Manual

Size: 260 x 86mm

Double sided printing



OUTDOOR Wireless Speaker NR-103




USER MANUAL

Dear Customer:

Thank you for choosing our product. Please read all the instructions carefully and retain the manual for future use.

DESCRIPTION OF PARTS

- 1 ON/OFF Switch
Model(s) Switch : Wireless / FM / USB / USB / Micro SD(TF) Card modes switch
- 2 Short Press: Pause / Play / Hands free Call
Long press: TWS Connection
- 3 Short press: Previous song
Long press: Volume decrease
- 4 Short press: Next song
Long press: Volume increase
- 5 LED Indicator
- 6 Charging port
- 7 USB Flash Drive Slot
- 8 Micro SD (TF) Card Slot
- 9 AUX Input

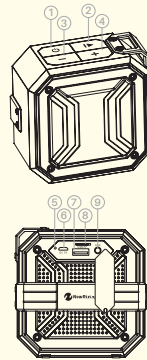

INSTRUCTIONS FOR USE

Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery, Operation method:

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. It needs 2-3 hours to complete charging. Once the speaker is fully charged, LED Light would turn OFF.

IMPORTANT REMINDERS

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, or the lithium battery inside would be aging quickly.
- In the FM Radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

Listening to Music Wirelessly

Please ensure that your device (Mobile Phone, Tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. Once it is paired, play music from your device.

Music Mode	Function	Operation buttons
Playing music	Increase Volume	Long press + key
Playing music	Decrease Volume	Long press - key
Playing music	Play	Short press ▶ key
Playing music	Pause	Short press ⏸ key
Playing music	Previous song	Short press ◀ key
Playing music	Next song	Short press ▶ key

Note: The above functions can be used in all models, such as Wireless mode, USB Drive Play mode, TF Card Play mode, as well as FM Radio mode. In AUX input mode, you need to control the medias through the media source devices, you need to operate with the source devices for previous / next track.

Hand free Calling Function

Please ensure your mobile phone is paired with the wireless speaker

Handsfree Mode	Function	Operation buttons
Incoming Call	Answer incoming call	Short press ▶ key
Incoming Call	Reject incoming call	Long press ▶ key 3 seconds
Incoming Call	End the Call	Short press ▶ key
ON the line	Increase Volume	Long press + key
ON the line	Decrease Volume	Long press - key
Standby mode and connected to a device	Redial last number	Short press ▶ key 2 times

TWS Connection

- Turn ON two speaker.
- Long press the **▶** button on any one of the wireless speakers and you will hear "Ding Dong", then the speakers are connected successfully in TWS mode.
- Search for "NR-103" in your mobile phone and pair it with this device.
- Enjoy your music.
- If you don't need TWS mode, please long press the **▶** button, you will hear "Ding Dong" voice then the speakers are not in TWS mode.

Stream music from Micro SD (TF) Card or USB Flash Drive

- Turn ON the speaker.
- Insert the Micro SD (TF) Card or USB Drive preloaded with songs, into the Micro SD (TF) Card Slot or USB Card Slot of the speaker correspondingly, sound message "Play by USB drive" or "Play by TF card" respectively will be heard. Speaker would automatically start playing songs from the Micro SD(TF) Card or USB Drive.

Listening to FM Radio

- Turn ON the speaker.
- Insert the Micro USB end of the included USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM Antenna while in FM Radio mode.
- Short press **⊕** button each time until it reaches FM radio mode, sound message "The Radio Mode" will be heard.
- To AUTO-SCAN the stations, press **▶** button once.
- It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Press **-** or **+** to skip selected stations.
- Long press **+** to increase the volume or **-** to decrease the volume.

Play Music Through "Auxiliary" Mode

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, sound message "AUX Input Mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tabletetc).
- Select your favourite song at the source device to play.
- Long press **+** to increase the volume or press **-** to decrease the volume.

Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

Tips!!

Between Wireless Play / FM Radio / AUX In / USB / Micro SD (TF) Card, When the speaker is not in use, turn it OFF in order to save the battery power.

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Low battery or Battery dead	Low battery or Replace battery
Sound distorted	Low battery or Battery nearly dead	Low battery or Replace battery.
No sound at all	Source (Tablet, Mobile Phone, Laptop, etc.) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Media paused on source.	Play media from source.
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Product has been connected with other devices	Disable Wireless BT of other source devices and search for Wireless BT again

SPECIFICATIONS

Wireless Version	5.0 + EDR
Wireless Distance	up to 10 Metres
Output Power / Horn Type	1 x 3 Watts / 4 Q 52mm
FM Frequency Range	87-108MHz
Unit Size	L109 x H106 x D60mm
Power Input	DC 5V (1A)
Charging Time	3 hours
Play time	up to 20 hours
Built-in Rechargeable Battery	3.7V / 1200mAh
Micro SD (TF) Card/USB Drive	Support up to 32GB
Multiple Functions	Wireless Play / FM Radio / USB Drive / Hands-Free Call / TF card / AUX Input / TWS Connection

SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

CARE & MAINTENANCE

Read the following recommendations before using the Wireless Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.



MADE IN CHINA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment